


USER'S MANUAL

LCD Screen

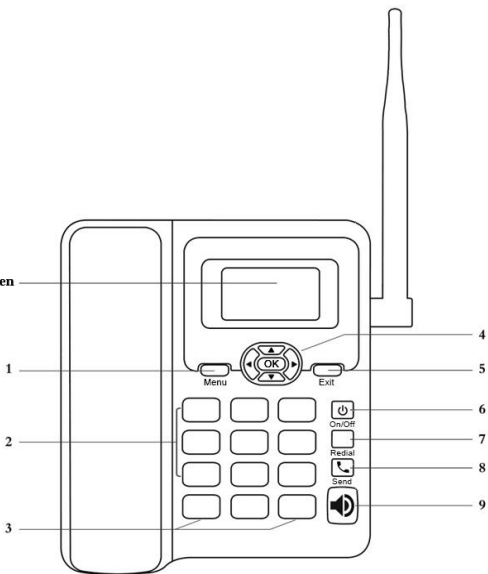

Key Instruction







Key	Description
1,Menu	1,Enter main menu. 2, Performs the function indicated i the left bottom of the screen.

	Description
2. Number	• Use these keys to enter numbers and characters.
3. # , *	• Perform different functions under different conditions.
4. Scrolling	<ul style="list-style-type: none"> • Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items. Shortcut key in standby mode Left key= Message Inbox Right= Write new message Up=Browse Missed Calls Down=Browse Received Calls
5. Exit	• Performs the function indicated at the right bottom of the screen.
6.On/Off	<ul style="list-style-type: none"> • 1, End an active call or reject calls. 2, Power on/power off the phone.
7.Redial	• On stand-by state, when press the redial key, LCD will show the history number list, you can press up /down key to select the number you want to call, then press the redial key again to dial out the selected number.
8. Send	• When phone has been talking mode, if press mute key, then far would can't hear anything from your phone termination, it would re-back when press the mute press again,
9.HANDS-FREE	transfer the call to the speakerphone, press this key and hang up the handset to put conversation on the speakerphone. Press this key to end a hands-free call.

Notes:

In this manual, "press a key" means to press the key one, "hold a key" means to press the key for 2 or 3 seconds.

Installation

Icon	Description	Icon	Description
	Signal strength		New message
	Silent		Unconditional divert
	Power indicator		Alarm clock

1. Handset

Connect phone and handset via the phone cord.

2. External power adapter

Plug the external power adapter to the external AC socket.

Plug in one terminal of USB cord into USB socket of external power adaptor

Plug the other end of the USB cord into external power socket of wireless phone

3. SIM card

Always switch the phone off before removing or inserting SIM card.

Open the bottom cover of the battery. Remove the battery, slide the SIM card into the SIM card slot. Make sure that the contact area of the card is facing down, and the beveled corner matches with the SIM card slot. Put in the battery and install the bottom cover.

How to Power on/off

- ◆ To power on the phone, connect phone and external power outlet with the power adapter and then hold the On/Off key till the phone is powered on.
- ◆ To power off the phone, at standby mode, hold the On/Off key till the phone is powered off.

Notes:

It is strongly recommended to connect the phone to external power outlet, and use internal battery to power your phone only when external power fails or is not available. The phone will charge the internal battery automatically when it is connected to external power outlet.

How to Make a call

There are two methods for making a call.

■ The first method:

1. Pick up the handset or press the **HANDS-FREE** key.
2. Enter the phone number, press **SEND** key to make the call.

■ The second method:

Enter the number or select recipient's number from Contacts, or press **SEND** key to select a number from the Dialed calls list, then press **SEND** key to make the call.

Notes:

Add the international prefix, country code and area code (without the leading "0") before the number when making an international call.

Message

Select **Messaging in Menu**.

- Select **Write message** to write message, Press Options select **Send** or **Save** as draft.
- Select **Inbox** to view messages received.
- Select **Outbox** to view the failure messages.
- Select **Drafts** to view the draft messages.
- Select **Sent messages** to view the successfully sent messages.
- Select **SMS Templates** to View the template messages.
- Select **Message settings** to make some necessary short message settings.

Phone Code

Phone code could prevent your phone from unauthorized use. The default phone code is 1122. Change it to your own as soon as possible.

If you change the default phone code to a new one, remember it or place it at secure place.


PIN Code and PUK Code

- **PIN code:** PIN code could prevent your SIM card from illegal use. When PIN code is enabled, you should enter the PIN code when powering on the phone again. Change the default PIN code to your own as soon as possible.
- **PUK code:** The SIM card will be locked if you enter a wrong PIN code consecutively for three times. To unlock it, you need PUK code.

Notes:

PIN code and PUK code may be offered together with the SIM card . If not, contact your service provider.

Text Input

Operation	Method
Burmese character	Mya , press the needed key till the character appears.
Input digits	123 , press the Number keys to input the digits you want directly.
Input letters	Abd , abd , ABC , press corresponding letter key till the letter appears.
Pref. input method	Setting→Phone Settings→Pref. input method
Input symbol	Press # key, and then select corresponding symbol by using Scrolling keys.
Input space	Apart from Numbers input mode , press  key to add space.
Erase character	Press NAMES/CLR/BACK key, Hold NAMES/CLR/BACK key until the cursor before the character be erased.
Move the cursor	Press Scrolling keys.
Change input mode	Menu→Messaging→Write MessageOptions→Input Method

Menu Function

Function	Description	Selection
Create message	Create message and send to others.	Menu — Messaging — Write message
Read message	Read message in Inbox, Outbox, Drafts, Sentbox.	Menu — Messaging — Inbox/Outbox/Drafts/Sent Messages
Message settings	Make some necessary short message settings.	Menu — Messaging — SMS settings
Recent calls	View or dial all recent calls.	Menu — Call center — Call history → Missed calls/Dialed calls/Received calls → Options -- View
Call duration	Check the Last call, Received calls, Dialed calls or Call history duration.	Menu — Call center — Call history → Missed calls/Dialed calls/Received calls → Options -- View
Browse contact	View contacts	Menu — Phonebook
Add contact	Save phone number.	Menu — Phonebook — Options Select To SIM X/Phone
Speed dial list	Set and view speed dial list.	Menu — Phonebook — Options — Phonebook Settings — Speed dial

Function	Description	Selection
Call divert	Specify the conditions under which the call types should be diverted to another number.	Menu → Call center Call settings → SIM X call setting → Call divert
Call waiting	Put the current call on hold to answer the other incoming call.	Menu → Call center Call Settings → SIM X call setting → Callwaiting
Call barring	Restrict the dialing or receiving of certain calls.	Menu → call center → call Settings → SIM X call Settings → Call settings → Call barring
Minute beep	Set Minute beep	Menu → Call center → Call Settings → Advanced → Settings → Call time reminder/Off/Single/Periodic
Language	language of your phone (Total 5 language)	Menu → Settings → Phone settings → Language
Post-dialing delay	Set the switch or time, when enter the Post-dialing delay.	Menu → Call center → Call Settings → Advanced Settings → Delay dial
Time and date	Set the date and the time, and the date and time format.	Menu → Settings → Phone settings → Time and date

Function	Description	Selection
Answer mode	Press any key to answer the incoming call	Menu→Call center →Call Settings→Advanced Setting→Answer mode→on/off
Display Contrast	Set/change LCD display contrast	Menu Settings — Phone settings Contrast
Backlight	Set the backlight time, when using the phone.	Menu Settings — Phone settings → LC D Backlight
PIN code	Set or change the PIN code	Menu — Settings — Security settings → SIM security → PIN Pin — lock/Change Pin
Phone code	Set or change the phone lock code.	Menu Settings — Phone — Security → Phone lock Change password
Restore factory settings	Switch to the factory default settings. The phone will clew input password, the password default 1122.	Menu — Settings — Restore factory settings
Profiles	Set profiles of your phone.	Menu User profiel s
Network Settings	Set the way of searching network.	Menu Settings — Network settings
Calculator	Execute basic math calculation	Menu — Organizer — Calculator

Function	Description	Selection
Alarm clock	Set alarm clock.	Menu — Organizer → Alarm
FM radio	Listen to FM radio.	Menu — FM radio
MP3 Playe Sound recorder	Listern music in MP3 mode the function of record all talking record,	Menu — List — Option — Add Menu — Options New record _ list _ Settings

Warning and Maintenance

- Some electronic devices are susceptible to electromagnetic interference sent by the phone if inadequately shielded. Keep using the phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating the phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the

manufacturer of the medical device before using the phone.

- Be aware of the usage limitation when using the phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling, Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

- Do not put other things on the terminal to avoid overlaying radiator.
- Use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- As your phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Do not expose your phone to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Disconnect external power supply and do not use your phone during thunderstorm.
- Unplug the external power adapter or remove battery when your phone is not in use, esp. for a long period of time.
- It is highly recommended to charge the battery before initial use. The battery might have been discharged during storage and delivery.
- Do not unplug the connector of the data cable from the phone, and not install or remove battery, when the power is on.
- Do not attempt to disassemble the phone by yourself, Non-expert handling of the devices may damage them.
- The phone is non-waterproof, keep it dry and store in shady and cool place.
- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean your phone, such as alcohol, dilution agent and benzene. Power off your phone before you clean it.

Troubleshooting

If your phone appears following phenomenon in the process of application, read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts enter "PIN "	Input your PIN code which offered with SIM card together, If you have changed PIN code, input the new PIN code.

Problem	Check Point
When switching on the phone, it prompts "Emergency".	Check whether valid SIM card is inserted or not.
When switching on the phone, it prompts enter "password".	Enter lock code you set already to unlock the phone.
No ring tone prompt for a incoming call.	Check volume setting of ring tone. And check whether "mute" is set in Profiles.
No display on screen when disconnect external power supply.	Check whether the battery has electricity, or it is damaged; or power on the phone again.
Press CALL/REDIAL key, but no number is sent.	Check whether you have set call barring.
Certain call cannot be received.	Check whether the number is restricted.
Cannot send short messages.	Check the network condition, or message enter setting.
Other abnormal phenomenon.	First refer to the user manual, and then check whether the power is connected correctly or not. If there is no problem, restart the phone.

FCC Warning

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This GSM FIXED WIRELESS PHONE meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Desk66 (FCC ID: 2AGE2-DESK66) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 2.42W/kg and when properly worn on the body is 9.86W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.