



AquaCheck

AC-ROVER

User Guide for AquaCheck ROVER wireless OEM interface
Module

Version 2.01
12 Oct 2014

AquaCheck (Pty) Ltd

All rights reserved

Neither whole nor any part of the information contained in this publication may be reproduced, transcribed or translated in any form, written or electronic for any purpose whatsoever without prior written consent of AquaCheck (Pty) Ltd.

This publication is intended only to assist the reader in the use of the product. AquaCheck (Pty) Ltd shall not be liable for any loss or damage arising from the use of any information contained in this publication, or any error or omission in such information, or any incorrect use of the product.

“...then anyone who leaves behind him a written manual, and likewise anyone who receives it, in the belief that such writing will be clear and certain, must be exceedingly simple-minded...”

Plato (423-347 BC).

STATEMENT OF COMPLIANCY

ELECTRO-MAGNETIC COMPLIANCE

The AquaCheck AC-ROVER has been tested and found to comply with the limits for this Class digital device, pursuant to the requirements of the CE rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to other radio communications.

EMC APPROVALS

The AquaCheck AC-ROVER has been tested and found to comply with the following EMC guidelines:

EMISSIONS:

- ✓ ETSI EN 300 220-2 V2.4.1
- ✓ 47 CFR 15C - RSS 210
- ✓ 47 CFR 15C – 15.247 (a)(2), (b)(3), (d), (e)
- ✓ 47 CFR 15C – 15.31(e)
- ✓ 47 CFR 15B – 15.109 (Class B)
- ✓ AS/NZ 4268 (2012)

IMMUNITY TESTING: ETSI EN 301 489-3 V1.4.1 / ESTI EN 302 489-1 V1.9.2

- ✓ Radiated Immunity - EN 61000-4-2

Table of Contents

CREDITS	5
OVERVIEW AND OPERATIONAL DESCRIPTION	5
LABELLING REQUIREMENTS	5
USERS MANUAL STATEMENT REQUIREMENTS	6
ANTENNA	7
PHOTOS AND DRAWINGS OF THE ROVER MODULE	9
COMMUNICATIONS INTERFACE OPTIONS AND SETTINGS	9
COMMUNICATION INTERFACE	11
SDI PROTOCOL	11
AQUACHECK DATA APPLICATION PROTOCOL.....	11
<i>Data Command (or DATA H Command)</i>	12
<i>DELETE Command</i>	14
<i>DATE Command</i>	14
<i>PING Command</i>	15
<i>PROBE LIST Command</i>	15
<i>ERASEEE Command</i>	17
<i>STATUS Command</i>	17
<i>LOG INT Command</i>	17
<i>CCTHR Command</i>	18
<i>CHANNEL Command</i>	18
<i>Digesting data</i>	18
PRE INSTALLATION CONFIGURATION	19
INSTALLING THE ROVER MODULE IN A RS300 MODEM	19
USING THE ROVER MODULE WITH OTHER 3RD PARTY EQUIPMENT	21
FIRMWARE UPGRADE	22
SPECIFICATIONS	24

Credits

AC-ROVER OEM module supports the Ranch Systems RSEXP command line protocol over SPI making it "plug and play" compatible with Ranch Systems telemetry and other OEM systems. The RSEXP protocol is referred to as "*AquaCheck Data Application Protocol*" in this document. For more information about Ranch Systems, the RSEXP protocol and their OEM telemetry programs, please visit www.ranchsystems.com

Overview and operational description

The AC-ROVER is a wireless interface that can establish a short range link to AquaCheck Wireless soil moisture probes. This is intended as a "cable replacement" option as well as a "node" or repeater that can service 10 probes.

The AC-ROVER is supplied as a bare board module that can be integrated into the housing of any 3rd party equipment using UART, SPI or SDI communications. Alternately it is available in a weather-proof enclosure with a serial SDI style communication cable connection to any 3rd party equipment.

The AC-ROVER incorporates an ISM band low power transceiver in the 868 to 868.6 MHz (EU), 902 to 928 MHz (US and Canada) and 916 to 928 MHz (Australia, NZ) bands. The module has an output power of 10mW maximum, employs GMSK (wide band) modulation with a maximum packet length of 6.3 mSec and overall duty cycle less than 1%. Range is approximately 300 meters.

Labelling Requirements

Any OEM (host manufacturer) using the AC-ROVER module must adhere to the following labelling requirements:

if (1) the module's certification numbers are not visible when installed in the host, or (2) if the host is marketed so that end users do not have straightforward commonly used methods for access to remove the module so that the certification numbers of the module are visible; then a permanent label referring to the enclosed module must be placed on the exterior of the finished enclosure. (other permanent methods of marking are also acceptable, such as engraving). The following or similar text must be used; the FCC ID and IC Certification numbers must be exactly reproduced.

Contains Transmitter Module FCC ID: YFF-ACROVER

Contains Transmitter Module IC: 8996A-ACROVER

Alternately, if the certification numbers of the module are visible or easily accessible by the end user without the use of special tools, then the host OEM user manual must

contain clear instructions on how end users can find and/or access the module and view the certification numbers.

Location of the ID label on the ROVER module is shown in Fig 1. The label is placed on the cover screen of the radio.

Unless the OEM host is too small (approximately <4x4 inches), the final host must include this statement on the exterior:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Users Manual Statement Requirements

The following statements apply to this module. All of the following statements must be included in the finished product's users manual.

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and*
- 2. this device must accept any interference received, including interference that may cause undesired operation.*

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Changes or modifications made to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.*
- Increase the separation between the equipment and receiver.*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- Consult the dealer or an experienced radio/TV technician for help.*

This section needs to be contained only in the instruction manual for the main control unit.

Antenna

If the OEM host employs an antenna connector which allows user access, then all of the following statements apply and must be included in the finished product's users manual. If the OEM host employs a dedicated antenna (e.g. permanently attached) which does not allow user access to change or modify the antenna, the following statements are not required.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication

This radio transmitter IC: 8996A ACROVER has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio IC: : 8996A ACROVER a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-

dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

The AC-ROVER module must be used in conjunction with only the following antennas

- Approved antenna 1: Dual band antenna ANT-GSM-ST-SM-M5
- Approved antenna 2: Skywave 868 or 916 band antenna.




<- left is shown the dual band antenna

Right is shown the Skywave antennas for 868 or 916Mhz (Note the Skywave has a bulkhead connector) ->


Both the dual band antenna and the Skywave bulkhead have MMCX connector to attach to the ROVER module.

Use only the antennas specified. Modifications to the antenna tails, or use of alternate antennas is not permitted.

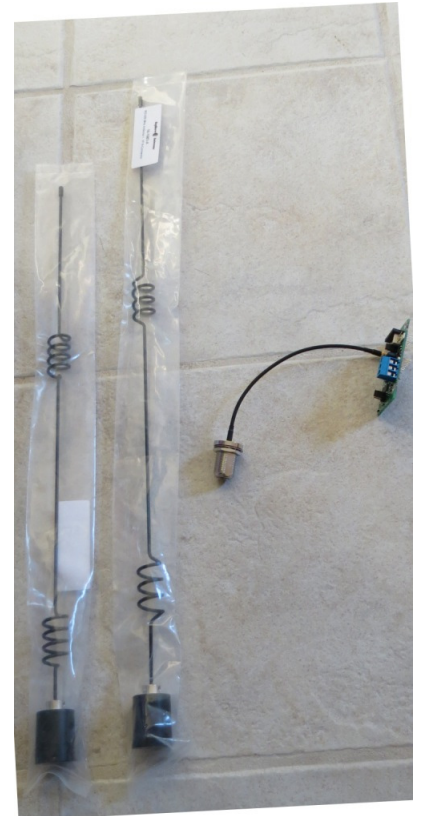


Photos and Drawings of the ROVER Module

OEM Rover Module – Fig1

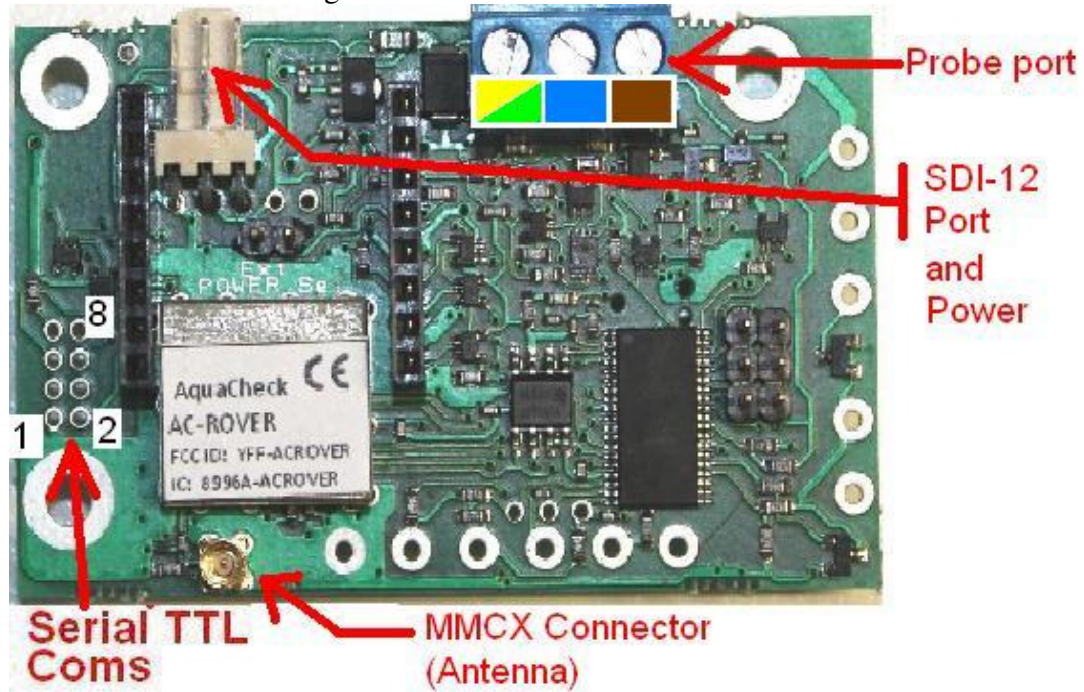


Board dimensions

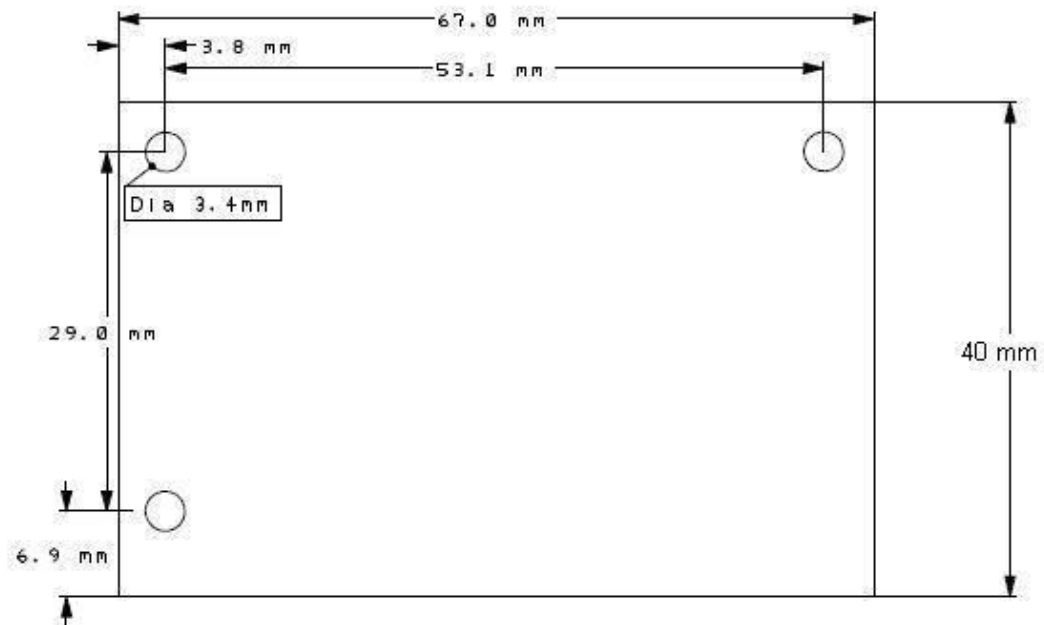

Communications interface options and settings

Jumper settings

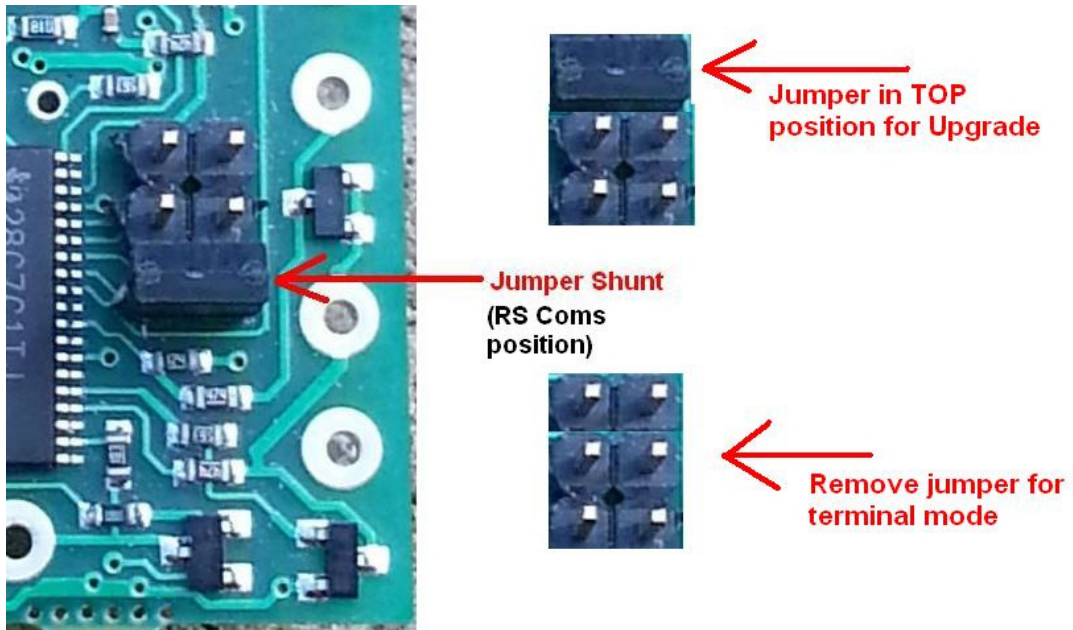

Note: When the ROVER module is installed in the RS300 modem, the “Ext Power Sel” jumper must be removed.

Communication interface

Communication to the ROVER module can be established via a comprehensive command set that should address most of the needs to enable data transfer to various OEM equipment vendors.

The command set is broken down into various levels – commands are only available via the serial interface. Please refer to the chart detailing the JUMPER positions. The JUMPER selection will determine the communication mode as well as the certain baud rates.

SDI protocol

SDI-12 protocol is available on the AC-ROVER, however SDI has very limited functions. Please contact AquaCheck for detail on how to implement the SDI interface commands.

AquaCheck Data Application Protocol

The “AC-DAP” protocol is available on the UART, SDI and SPI communications interface. This protocol provides a high level communication to the Rover. It is used to retrieve logged data and manage user settings on the Rover. Since the Rover is able to log data it would be advantageous to use this level of interfacing to retrieve data, set the clock, and manage probe lists on the Rover module. Even if the SDI or MODBUS protocols are chosen, this application protocol will need be used on a terminal emulator (like “HyperTerminal”) to manage settings on the Rover. It would be advantageous if the OEM supplier can implement a communication “pipe” via the upstream equipment (eg via the internet) so the Rover can be managed remotely.

The data is exchanged in simple ASCII text format, so all communication over this protocol is human readable. Every “Field” or “Line” is terminated with a carriage return-line feed combination (in both directions). The Rover will terminate a sequence with the caret character (>) without the CR-LF. Users should avoid sending data to the Rover while it is busy with a reply and until the > is received. When the Rover sends data there may be a maximum of 100ms delay between lines, if this time is exceeded the host may assume an error and retry. There is about a one minute time limit between receiving characters before the Rover will time-out, so typing commands to the Rover is possible. The “enter” key will normally signal to the Rover that you have entered a complete command.

Commands are non case-insensitive, but will always return text in upper case.

Data Command (or DATA H Command)

Syntax

DATA [<records>]
or DATA H [<records>]
Example: DATA 10

Description

Transmits a specified number of data records from the Rover module memory to the host. The specified number of <records> will determine the number of DATA Records to be returned. If less records than requested are available, only the number of available records will be returned. If no number is supplied the Rover returns ONE record. The DATA H command is only used for diagnostic purposes. The DATA H will return previously DELETED data. The number of records requested at a time will need to be optimized by the host, requesting say one record per digest will increase the time to load the data. A larger number of records in the request may improve efficiency, but may also lead to inefficiency should the host need to reload the data due to errors (eg checksum did not work out)

The reply from the Rover as the following form:

<I-record>
{ <A0-record> }
{ <AD-record> }
{ <An-records> }
<EOF-record/checksum >

Each record is formatted as follows:

I-record:

Defines the reference time stamp for this data digest:

I,<reftimestamp>

Where:

<reftimestamp> is the absolute time in seconds since 00:00:00 on January 1st 1980. This is the current clock time of the Rover's internal clock.

A0-record:

Defines the information specific to the logged data record:

A0,<index>,<Serial Number>,<timestamp>,<volts>,<Analogue value>,<count1>,<count2>

Where:

<index> is a number from 1 to 13 corresponding to the probe position in the list of probes in the Rover. This can be used as an alternate unique identifier in combination with the Host ID, rather than using the probes serial number.

<Serial Number> is the serial number of the probe.

<timestamp> is the absolute time (seconds since 00:00:00 on January 1st 1980) of the data. Note: should the probe (or Rover) have suffered a reset (new installation, battery change, etc.) this time will reflect a value that is unreasonably old. In this case the data may be ignored.

<volts> the probe battery voltage at the time of the log.

<analogue value> is the data from the analogue input channel.

<count1>,<count2> are the rolling count values of the on module counter. The counter values count 0-65535 then roll back to 0. Should an unreasonable difference occur between logs, the counter may have suffered a reset and restarted at 0. In that case substitute zero for the previous value when doing the difference calculation.

AD-record (DATA H command only):

This record is inserted for debugging purposes.

Ad,<text date>,<RSSI-R>,<RSSI-L>,<other debug info>

Where:

<d> is either D or d. lower case d indicates this record has been deleted (by a previous data digest)

<text date> is the date in readable format YYYY/MM/DD HH:MM in 24-hour time

<RSSI-R> the RSSI (remote) value the probe experienced when the log was captured by the Rover.

<RSSI-L> the RSSI (local) value the rover experienced from the probe. RSSI values are in dBuV (dB Micro-volts). Reasonable values range from about -100 (weak signal) to about -30 (very strong signal).

<other debug info> is diagnostic info to assist post analysis diagnostics. This record may be ignored, or recorded where communication problems arise so as to assist in identifying possible causes.

An-records:

These are the actual DATA records. The range of An (A1, A2, A3 etc.) depend on the type of probe. A1 is reserved for Soil Moisture Values. A2 is reserved for TEMPERATURE Values, and A3 for EC Values. Not all "A" values may be present in the data record, the host should not be designed to expect all values. The An values will however be in ascending sequence.

Any An-record has the following format:

An,<count>,<value1>,<value2>.....<value count>

Where count is the number of values following, and each value refers to the data depending on the actual An record:

A1 are SOIL MOISTURE values. The first value is the uppermost sensor, and goes downwards. To get a relative % value use the formula: Scaled value = (data value – 1600) / 320.

A2 are Temperature Values. The Temperature in Degrees C = (value/256) – 50.0.

A3 is reserved for future EC values.

EOF-record:

Defines the end of the data, and provide checksum protection.

EOF <checksum>

Where:

<checksum> is the simple (not CRC) decimal sum (32 bit) of all bytes in digest starting with I record (ie. the "I") and ending with the last record before EOF record (including the CR,LF before EOF).

Note: not all the An records will necessarily be present, for example if the data only contains the analogue or counter info, then there would be no A1, A2 records. The host must take this into account when digesting data. If the host is digesting data it is recommended that record containing out of range or unexpected data be deleted, else these record will prevent further data from being digested by the host.

DELETE Command

Syntax

DELETE

Description

Will delete the exact number of data records retrieved in previous data command. This command must be issued by host when data digest has been received correctly (via [data command](#)).

The Rover parses for the string "DELETED" as confirmation that command has executed. Retrieving data from the rover involved alternate DATA and DELETE commands. If two DATA commands are issued without a DELETE the Rover will resend the same data. This would happen if the data record was not received properly by the host the first time.

DATE Command

Syntax

DATE

DATE <seconds>

Description

Date without parameter will return the current date and time setting.

Date with parameter should update the expansion module on-board real-time clock. Note that the date/time is specified as seconds since 00:00:00 on January 1st 1980. A value less than 1/1/2010 will be ignored.

This command must be issued with current host time with poll session immediately before data commands.

The host parses for the string "time is:" as confirmation that command has executed.

Example:

```
>date 1000000000
```

```
Time is: 1000000000 (2011/09/09 01:46:40)>
```

```
>date 1000000060
```

```
Time is: 1000000060 (2011/09/09 01:47:40)>
```

Notice how the last command moves clock forward 60 seconds relative to the previous date command.

Note: the ROVER will not start calling probes or logging data if the date has not been set. Note on setting the date: the date should be set on every data digest. Further the date should not vary by more than +- 5 seconds from the target value each time it is set.

PING Command

(This is a management command and would not be used during ordinary operation)

Syntax

```
PING <index>
PING <serial number>
```

Description

The ping command will transmit in an attempt to wake the probe.

<index> is a number between 1 and 13, and will look up the probe serial number in the probe list.

<serial number> will look for a probe matching that serial number.

The command may take as long as 40 seconds to complete.

Example

```
ping 2
PINGING...00256>>>>>>>>>>>>Found:256,19,10,02,07,11,3.62,-77.5,-82.0
Meaning after about 9 seconds the probe serial numbered 256 was found, the probe "type ID" is 19, 10 sensors having 2 values each (moisture and temperature), CPU voltage of 3.62V, and signal strength of -77dBuV on the probe side and -82 on the Rover side. (See the "AD" record above for more information about the RSSI).
```

NOTE: if the ROVER is in sync with the probes the PING command will not contact the probe. Use the ping command before the probe is added to the probe list OR before the date is set, else the probe may not respond.

PROBE LIST Command

(This is a management command and would not be used during ordinary operation)

Syntax

```
PROBE LIST <n>
or PROBE LIST <n> <Serial number> <Cx>
or PROBE LIST <n> <Serial number> <R> <Cx>
or PROBE LIST <n> <Serial number> <Sdi-Address>
```

Description

The probe list command queries or sets the serial number at the specified list index <n> is a number between 1 and 13. (This is the index to the probe list table, it is also the value returned in the [A0](#) record "index" of the data command.)

Example(s)

PROBE LIST 1

Responds with the probe serial number at index 1

PROBE LIST 1:256,ON,10,00,00,-10.5,-138.0>

PROBE LIST 3

Responds with the serial at index 3 (in this case it is empty)

PROBE LIST 3:Empty>

Adding a probe (to slot 1 with serial number 123):

PROBE LIST 1 123

PROBE LIST 1 :123,ON....

Remove a probe from the list:

PROBE LIST 1 0

Responds with

PROBE LIST 1:Empty>

For adding a slave ROVER, use the suffix <R> after the serial number:

PROBE LIST 1 12345 R

This will indicate that that the slave is a ROVER instead of a probe

If the probe or slave rover is at the extreme edge of the range, one can optionally increase the probes Rx gain by adding the C suffix with a value of 1 to 7.

PROBE LIST 1 5678 C3

or

PROBE LIST 1 5678 R C3

Values are C=1 (default) up to C=7 (most sensitive)

Note this MAY improve the sensing of the signal at the probe, BUT it may also increase the power consumption due to the receiver triggering on background noise. Consult AquaCheck for advice using this option.

For adding SDI-12 probes to the ROVER use the SDI address

PROBE LIST 1 1 0

Where the SDI address is 0. You can just use 1 as the serial number here, the ROVER will update this on the first contact with the probe. The valid SDI address range is 1 to 9 – *do not use any other addresses.*

For adding Counter and analogue only logging, use the SDI option with address “A”

PROBE LIST 1 1 A

This should only be done if there is no SDI probe connected. All counter and analogue values are logged with the first SDI-12 probe in the probe list, so it is not necessary to use the “A” option if there are any SDI-12 probes connected.

NOTE FOR RS300 and other systems using the SPI interface to the ROVER: the SDI-12 options are no available in this mode since the port is occupied by the SPI communication interface.

NOTE: when using a ROVER as a slave, please enter the slave ROVER serial number to the master ROVER probe list. The slave ROVER must have its own probe list settings according to the probes attached to it. DO NOT enter a probe serial number in both a master and slave ROVER probe list, choose the one that is located appropriately closest to the probe.

ERASEEE Command

(This is a management command and would not be used during ordinary operation)

Syntax

eraseEE (note the last 2 “E”’s must be in uppercase)

Description

Use this as a diagnostic or commissioning command only. This command wipes the log memory clean. It takes a few seconds to complete and responds with the same information as the status command

STATUS Command

(This is a management command and would not be used during ordinary operation)

Syntax

STATUS

Description

This command can be used to determine the current status of the probe list and the status of the probe data

STATUS DATE,1,16,0,0,00,<some debug info....>,

01:1234,ON,RF

02:000256,ON,x1,x2,x3,other debug info

The first value after the DATE represents the number of logs in the memory, the balance of the response if useful for debugging purposes only. The HOST should not use the STATUS command to determine the amount of logs in the memory, it should only use the “set time, data, delete” sequence of commands for normal operation.

LOG INT Command

(This is a management command and would not be used during ordinary operation)

Syntax

LOG INT <n>

Description

This command can be used to determine or set the interval that the system wakes up to retrieve data from the probe. In the RS300 this should be set to the same as the “MESH” interval.

CCTHR Command

(This is a management command and would not be used during ordinary operation)

Syntax

CCTHR <n>

Description

Sets the ROVER Rx sensitivity. Normally this should be left at default of 1. If any probes connected to this ROVER have a “C” value other than default (see PROBE LIST), then this rover should have the same value in this setting.

CHANNEL Command

(This is a management command and would not be used during ordinary operation)

Syntax

CHANNEL <n>

Description

Sets the RF channel. The following channels are available

- EU models the available channels are 1 to 10
- AU/NZ channels 168 to 254
- USA/Canada channels 100 to 254

Consult Aquacheck technical representative for help and advice on selecting an appropriate channel.

Digesting data

The normal data digest sequence from the host would be

- DATE (set the clock)
- DATA x (get x number of data points)
- DELETE (delete the same data points)
- DATA x (repeat the data/delete sequence until all the data is digested)
- done

The ROVER operates on a 15-minute cycle as follows:

- Minute 4 the ROVER collects SDI-12 data
- Minute 5 the ROVER collects probe data
- Minute 13 the ROVER collects slave ROVER data

Consequently it is preferred that the LOG INT be set at 15 minute multiples. Further it is recommended that the host does a data digest between minute 14 and minute 17. Doing regular data digest requests may interfere with the performance while the ROVER is collecting data.

Pre installation CONFIGURATION

The Rover module needs to be configured prior to commissioning. These settings include:

- Setting the correct channel
- Setting the logging frequency
- Adding Probes and slave ROVER's in the probe list
- Clearing the log memory

It is advised to use a terminal emulator (like HyperTerminal) to manage the settings on the ROVER module. Set the communications settings as follows:

- Bits per second 2400
- Data bits 8
- Parity None
- Stop bits 1
- Flow control None

In the "Ascii-Setup" (found in the "Settings" tab) select the option "send line ends with line feeds".


Connect a SDI to USB bridge to the SDI port of the ROVER module and supply the module with power. (An "Upgrade kit" is available from AquaCheck, this kit supplies the 5V USB power to the SDI connector). Place a "Jumper Shunt" to the "Ext Power Sel" pins to power the module. Remove the communications mode jumper.

Press "Enter" in the HyperTerminal program and you will get the "AC-NODE>" prompt. Set the required settings on the ROVER module using the commands as given earlier in this document.

Once you have set the channel and probe list you can "Ping" Probes and slave ROVER's (provided they are also setup and powered). To ping a probe in the probe list you can use the command PING 2 – this will for example ping the probe in probe list position 2).


Installing the ROVER Module in a RS300 modem

Please follow the instructions from Ranch-Systems in addition to this guide. Make sure bulkhead connectors are water-proof according to Ranch-Systems specifications.

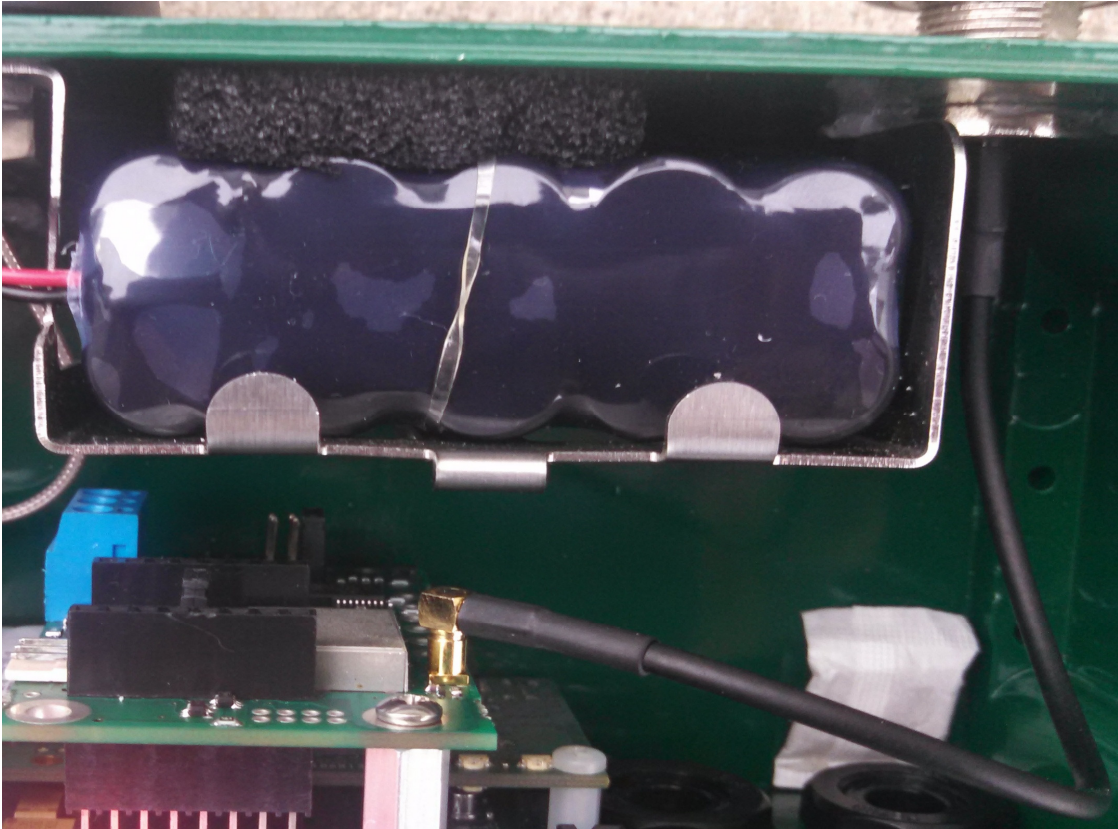

ROVER module is shown mounted above the cell modem in the RS300. Fit the bulkhead connector as shown and attach the MMCX connector to the ROVER antenna connector. Note the location of the shunt jumper for the communication mode, and remove the shunt jumper for the “Ext Power Sel”.

Below is the RS300 modem with the “Skywave” antenna installed.

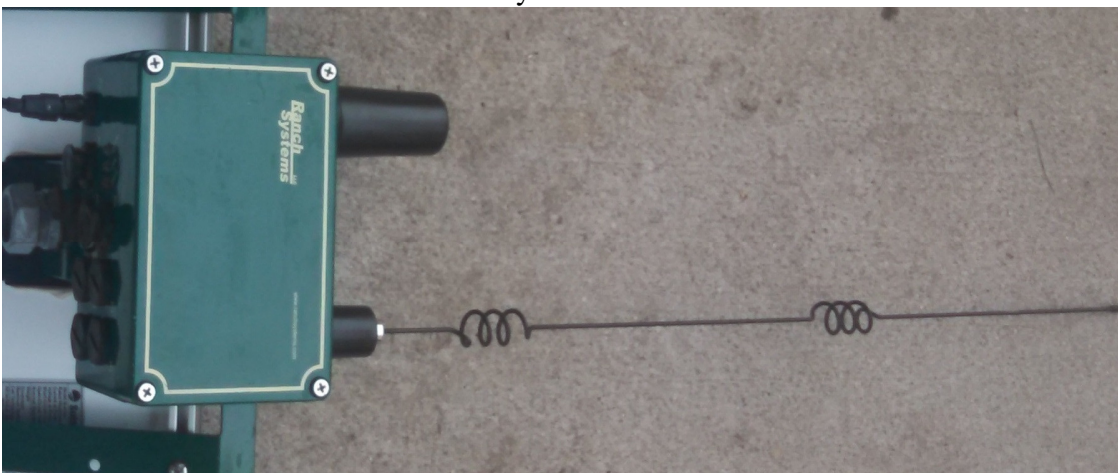


Using the ROVER module with OEM 3rd party equipment

When ordering the ROVER module for use in OEM equipment please consult an AquaCheck representative for assistance about ordering the correct product. The module is supplied in various configurations for use in OEM enclosures. The module can be ordered with appropriate board-to-board connectors. Alternately the ROVER can be ordered as a “stand alone” unit – where it is mounted in a weather-proof enclosure. A 3-way cable can connect the ROVER to the host system.

SDI interface

When using the ROVER module with OEM equipment it is advised to use the SDI communication port to manage the ROVER. The SDI port has built in ESD protection. One can also drive the SDI port from a RS232 interface (consult AquaCheck for appropriate circuit for connecting to RS232, for short cable runs less than 5m)

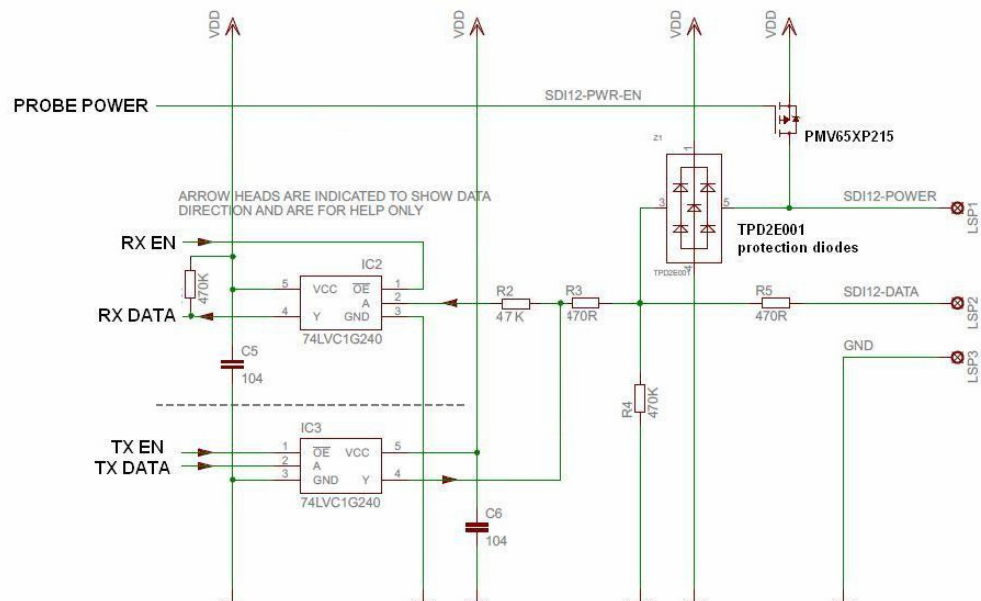

For reference this diagram shows a typical implementation for the SDI port. The exact implementation may differ, this is shown for understanding of the SDI port electrical implementation.

Use the SDI port to manage the ROVER data logger in the same way as described in the [“Configuration”](#) section.

The ROVER is also equipped with a UART (TTL) style interface. This is intended as a board-to-board interface and is not suitable in a stand alone mode (there is no ESD protection on the UART interface).

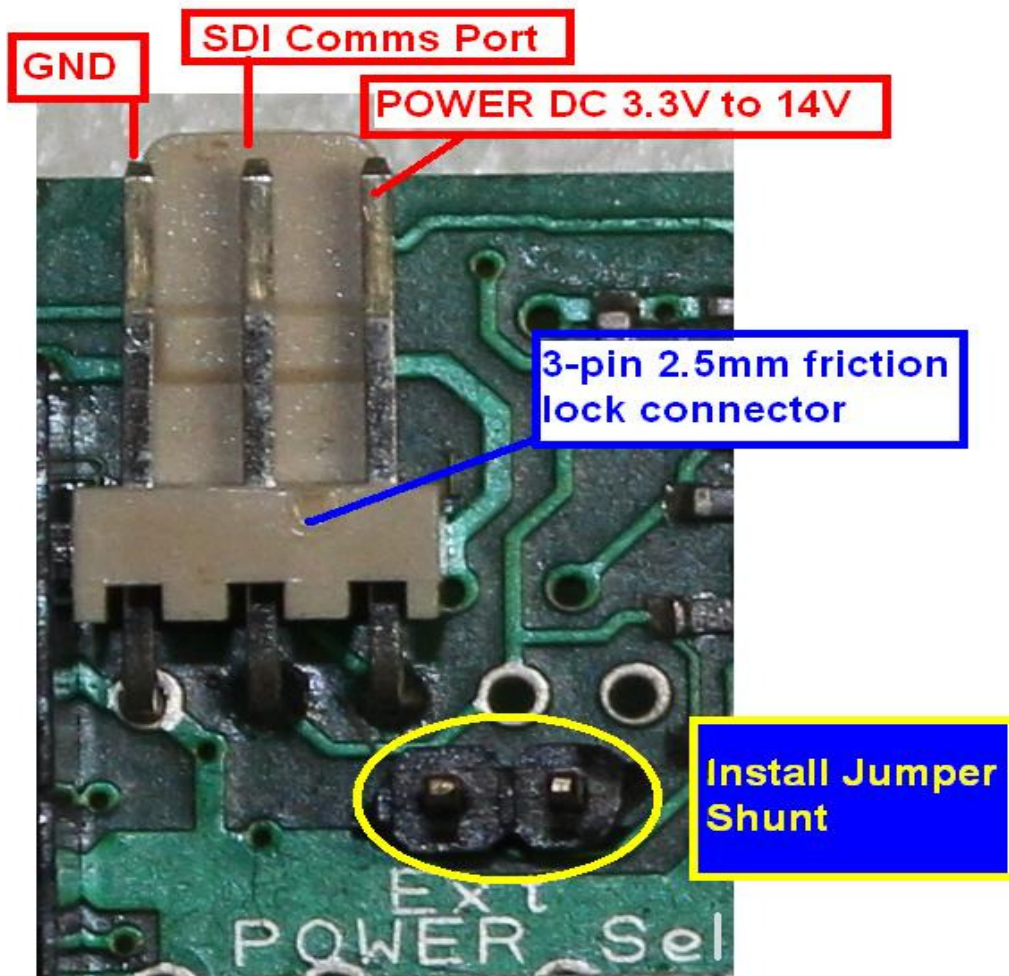


Diagram showing the SDI port. Note when using the SDI port the jumper shunt must be installed. When the ROVER module is supplied potted in the weather-proof case, the only interface available will be this SDI interface, and the power jumper will be permanently enabled.

NOTE on the implementation of the SDI electrical interface:

SDI specification call for 12V supply and 5V data line levels. This is not “friendly” to low power and low voltage systems. To this end AquaCheck implements the SDI interface so as to work on 3.3V up to 14V. When power lower than 5V is applied – the SDI data line “tracks” the supply voltage. For example if the supply voltage is 4V, then the SDI data line will swing between 0V and 4V. For input voltages above 5V the SDI data line will swing between 0V and 5V.

Firmware Upgrade

From time-to-time it may be required to upgrade the firmware to take advantage of new feature that may be implemented. For upgrading the firmware – remove the module from the equipment and set up a connection to the PC as described in the “[Pre Installation CONFIGURATION](#)”. Follow the instructions for upgrading as supplied with the firmware file, or as supplied or directed by your AquaCheck representative.

Specifications

Parameter	Value or Meaning
Supply Voltage SPI port (RS300)	3.0V to 3.3V
Supply Voltage SDI port	3.3V to 14V
SDI communication port	ESD protection fitted
Baud rate SDI port	2400bd
Supply Current Active	23mA
Supply Current idle	0.01mA
RTC *2	Software – recommended to be set on every cycle
Active times *1	SDI-12 Probes: Scans at 3 minute slot Probes: Scans at 5 minute slot Slave Rover: Scans at 13 minute slot
Active duration	SDI-12 probes: about 10 seconds Probes/Rovers: in sync about 4 seconds Probes/Rovers: out of sync up to 40 seconds
NOTE: for correct function continuous power must be supplied to the ROVER	

*1 – the internal logger of the ROVER cycles around a 15minute interval. It is advised that the “[LOG INT](#)” be set to 15, 30 or 60 minutes only. Further it is recommended that the host collects data from the ROVER 14 to 17 minute time slot (ie -1 up to 2 minutes). Continuous polling of the ROVER is not recommended, since the data for each time slot will be available after the 13 minute slot.

*2 – the internal logger will not function until the date is set. To avoid the time going out of sync with the host, it is recommended to set the clock on every data digest.

Last modified on 12 Oct 2014.