Remote Control Functions Timer Sets the Cycle Time. Pressing the Timer button displays the Cycle Time on the Power Supply. Each press of the Timer button changes the Cycle Time to the next Cycle Time option: 3, 5, 7, 9 or 12 hours. Changes the Robotic Cleaner's current direction of motion. Change Direction > If the Robotic Cleaner is currently moving forward, pressing the Change Direction button causes the Robotic Cleaner to move backward. > If the Robotic Cleaner is currently moving backward, pressing the Change Direction button causes the Robotic Cleaner to move forward. Turn Left Turns the Robotic Cleaner to the left for as: long as the Turn Left button is pressed. Turns the Robotic Cleaner to the right Turn Right for as long as the Turn Right button is: Delay Resets the Delay Time to 0 (no delay). After the Delay Time has been reset to 0, another press of the Delay buttons sets the Delay Time to 2 hours (default)... Changes the Robotic Cleaner's current R/C Operating Mode: Manual Mode or Automatic Mode. > If the Robotic Cleaner is currently in Manual Mode, pressing the R/C button changes the Robotic Cleaner

Note: Pressing the Remote Control Delay Button



resets the programmed Delay Time values to "0".

to Automatic Mode. > If the Robotic Cleaner is currently in Automatic Mode, pressing the R/C button changes the Robotic Cleaner

to Manual Mode.

Operator Manual



Remote Control Unit Ultramax

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance (Aquatron Robotic Systems Ltd.) could void the user's authority to operate the equipment.

Using the Remote Control

Matching the Remote Control Unit to the Power Supply

It is vital that the Remote Control unit becomes matched to the Power Supply. This process assures that the Robotic Cleaner will be controlled only by the specified Remote Control unit.

The original remote control provided with your robot is matched to the power supply.

To match the Remote Control Unit to the Power Supply:

On the Remote Control unit, simultaneously press the Delay button and the R/C button; the Remote Control ID appears on the Power Supply display and the Remote Control unit is matched to the Power Supply.

Programming is to be active only while the RC-ID is dispalyed in the information page