


Table of Contents

Setup - Calibration - Cleaning	Page 3 - 6
Entering Setup Calibration Cleaning Touch Screen Programming	
Assembly diagrams	
Lower assembly	Page 7
Monitor assembly	Page 8 - 9
Back Door assembly	Page 10
Bottom plate assembly	Page 11 - 12
I/O board assembly	Page 13
Jamma Harness Pinout	Page 14
Parts list	Page 15

Setup

Located inside the coin door are the coin and ticket meters, volume up and down buttons, service button, and test button. You can lower or raise the volume by pressing the UP and DOWN VOLUME buttons or set the volume through settings. To test play your game without adding to the coin meter, press the SERVICE button. To enter programming options, press the TEST button.

To navigate through the menus, press volume up and down to move to different options and press test to select that option.

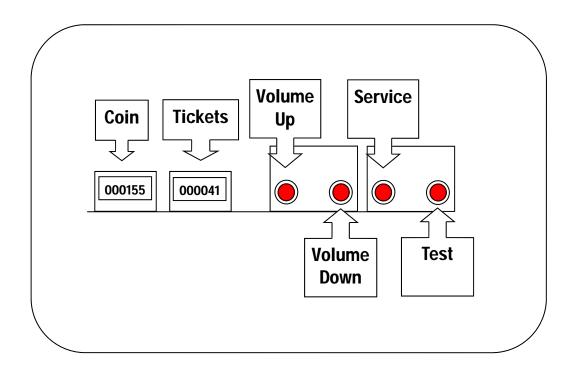

Touch Screen - Calibration and Cleaning

When you have installed your game on location it is a good idea to entering programming and adjust the calibration. Doing so will ensure reliable operation at that location. If at anytime you upgrade the software to a newer version you should also enter programming and perform a calibration.

When cleaning your touch-screen monitor it is important to never use a ammonia based cleaner. Any non-ammonia based glass cleaner can be used to clean the screen. Always spray the glass cleaner on the cloth or towel and then clean the touch-screen.

Setup - Programming

Software version 1.00.01

Main Menu

Operation Adjustments

Game Adjustments Invert Touch Input Use Bonus Bar Bonus Payout Amount	<i>Default</i> Off On Small	Options On/Off Off/On Small/Medium/Large
Ticket Adjustments Minimum Tickets Ticket Value (in cents) Credit Value (in cents)	1 .01 .25	0 or 1 0 - 100 0 - 100
Coin Settings Free play Currency Type Currency Unit Value Coin 1 Value Coin 2 Value Coin 3 Value/DBV Pulse Maximum Credits	Off Dollar .25 .25 .25 .25 .25	On/Off Country or Coins
Player Cost/Payout Cost to Play Target Payout Percentage	.25 40%	25 - 50
Volume Game Volume Attract Volume Attract Sounds	8 6 occasionally	1-32 1-32 off/always/occasionally

Setup - Programming

Software version 1.00.01

Main Menu

General Audits

Game Audits

Games played Average game time

Ticket Audits

Total tickets dispensed
Average tickets per play
Current payout percentage
Total tickets (500 games)
Average tickets (500 games)
Payout percentage (500 games)
Tickets owed

System Audits

Playtime
Up time
Watch dogs
Exceptions
Bad traps

Coin Audits

Total Coin 1
Total Coin 2
Total Coin 3 (DBV)
Lifetime coin count
Service credits

Setup - Programming

Software version 1.00.01

Main Menu


Reset Menu

Reset game audits
Reset credits
Reset tickets
Reset coin counters
Reset adjustments
Factory reset


System Tests

Version list
Switch test
Screen tests
Sound test
File test
Coin meter test
Ticket dispenser test
Dipswitch settings
Watchdog test

Screen Calibration

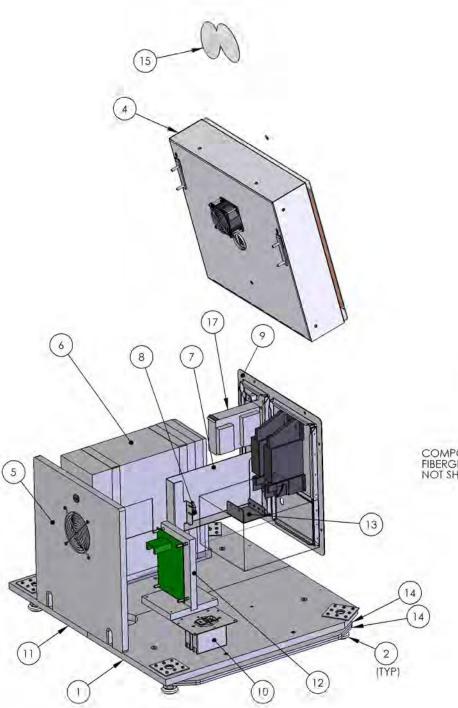

ITEM NO.	PART NUMBER	DESCRIPTION	QTY		
1	BU3054X	MOUNTING PANEL - LEFT ASSY	1		
2	HR1019 LEVELING LEG SHORT				
3	BU3001	FIBERGLASS BUSTER SQUIRREL	1		
4	BU1001X	MONITOR HOUSING ASSEMBLY	1		
5	BU3052CX	LOWER REAR ACCESS DOOR ASY	1		
6	DN2000	DN COMPUTER	1		
7	WS1022	TICKET BIN (DOUBLE)	1		
8	211	SWITCH (LOW TICKET) V7-2B17D8	1		
9	WA5001	COIN DOOR (TRIPLE) DUAL MECH W/ TICKET	1		
10	BU2007X	ASY (POWER SUPPLY)	.1		
11	BU3055X	MOUNTING PANEL - RIGHT ASSY			
12	BU3060X	ASSY- PCB MOUNTING BOARD			
13	SX1013	COUNTER BRACKET	1		
14	BU1004	BASE PLATE	2		
15	BU7011 DECAL-EYES				
16	BU7009	DECAL-TICKETS			
17	HH5005	TICKET DISPENSER (ENTROPY)			
18	18 7989 DECAL-ICE WEB LOGO				

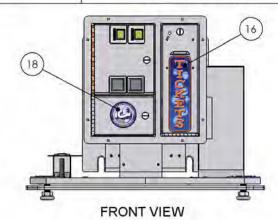



COMPONENTS DIAGRAM FIBERGLASS SHELL BODY (BU3001) NOT SHOWN





ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	BU1001	MONITOR FRONT HOUSING	
2	MONT19T	MONITOR (19" TOUCHSCREEN)	1
3	BU1002	MONITOR MOUNTING FRAME	1
4	BU7010	DECAL - MONITOR BEZEL	1
5	6433	BHCS, #8-32 x .50" LG. (ZINC)	8
6	6004a	8-32 KEP NUT	12
7	2764	SMALL AC FAN	1
8	E2364G	FAN GUARD (FG-8) METAL 80MM (ROHS)	2
9	3079	GROMMET (BP2 - PUNCHED)#853118	1
10	FP2007	SPEAKER (4" ROUND) 60-9240	2
11	SK624	6-32 KEP NUT	8
12	6146	6-32 x 2" LG. PPHMS	4
13	6002A	6-32 NYLOCK NUT	4
14	3030	SCREW CAP (SC-1BK)	6
15	6676	#8-32x.75" LG. PFHMS	6
16	16 BU3001 BODY- CHEST CUTOUT/HOLE PATTERN		1
17	BU3002	MONITOR SPACER	1
18	PX4001	GASKET (C)	
19	BU7010M	GRAPHIC BEZEL	1

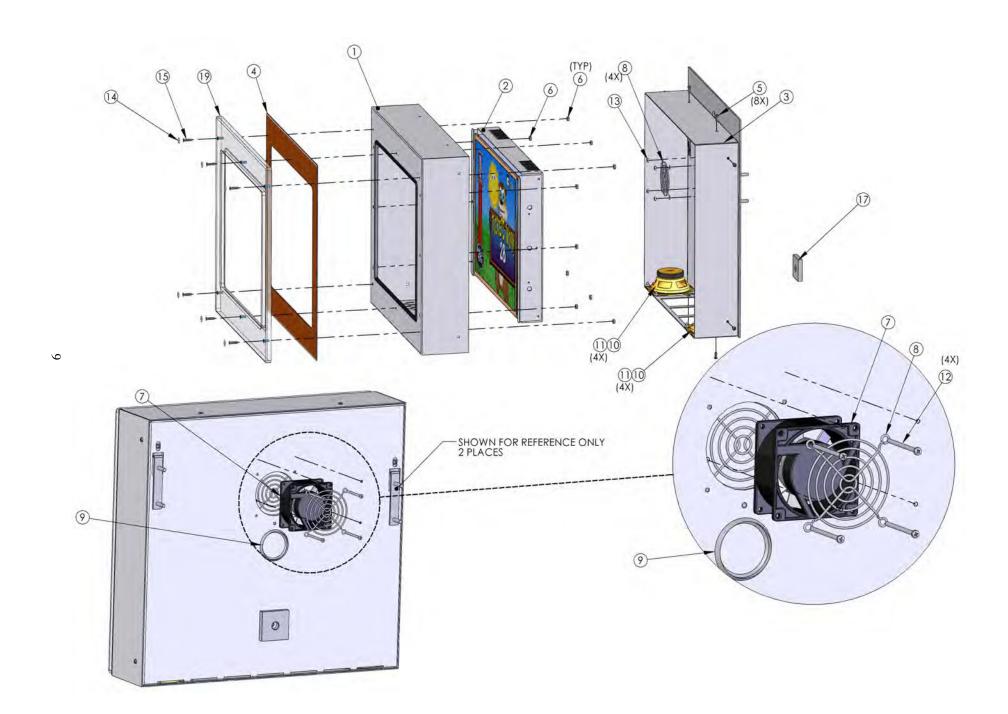


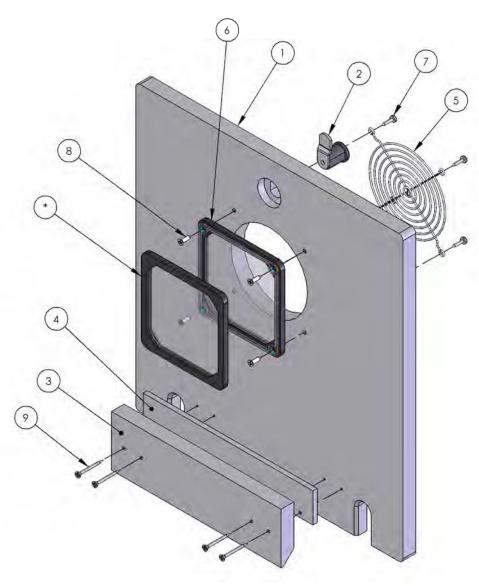


EXPLODED VIEW

ITEM NO.	EM NO. PART DESCRIPTION		QTY.	
1	BU3052			
2	5014	7/8" CAMLOCK		
3	BU3090	REAR ACCESS DOOR CLEAT	1	
4	BU3091	REAR ACCESS CLEAT SPACER	1	
5	E02027G	FAN FINGER GUARD		
6	E02027FL	FAN FILTER 120MM		
7	7 655S #8 x 5/8 SQ. DRIVE (SILVER)		4	
8	8 6267 #8 X 5/8 PHILLIPS FLAT HEAD (ZINC)			
9	6166 DRYWALL SCREW 1-1/2"			


BU3052CX	FEY A
1 of 1	1

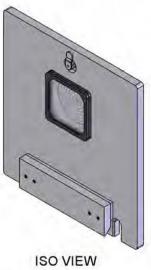


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BU3054	PC MOUNTING PANEL	1
2	FP1004	LEG'S MOUNTING PLATE	2
3	655	#8 x 3/4 SQ. DRIVE (BLACK)	16
4	6061	8-32 CAB INSERT (J-50111)	2
5	PC60631	025-20 CABINET INSERT (J50115)	2

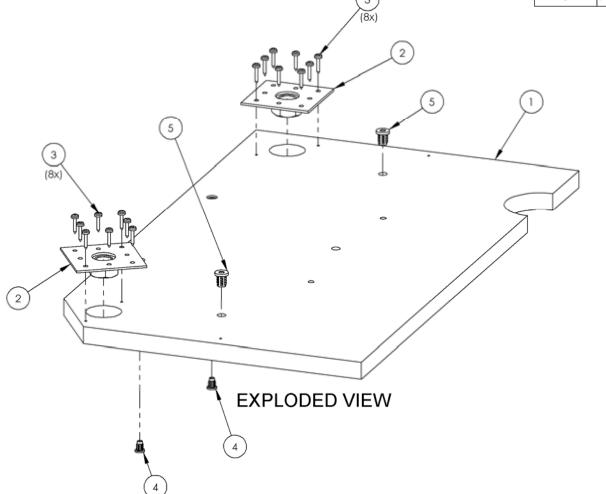




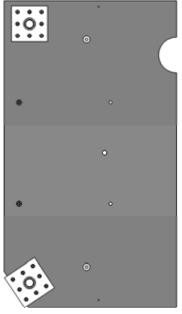

TOP VIEW

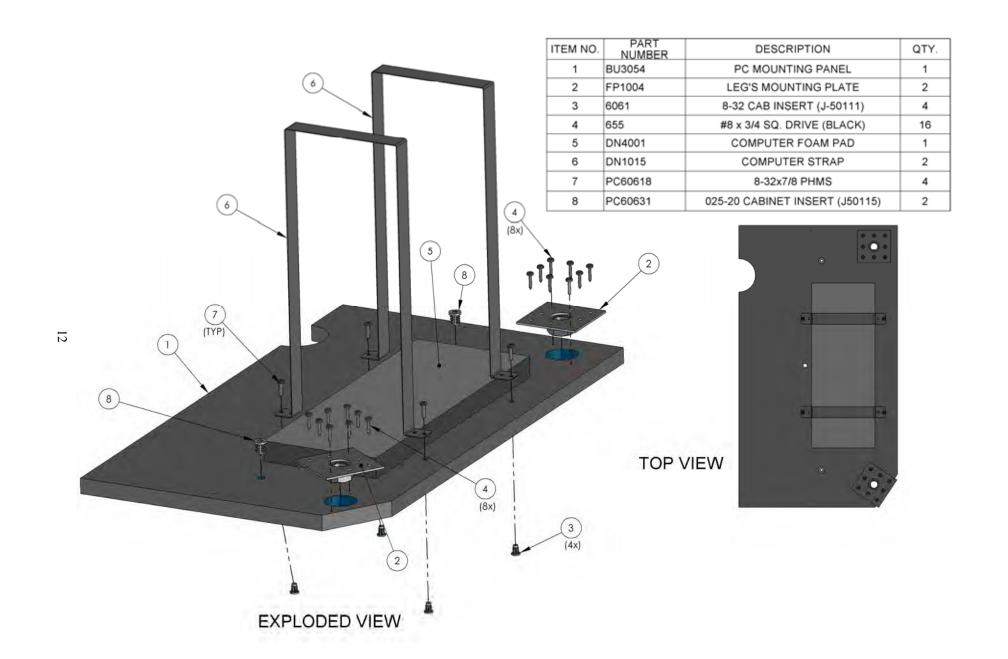

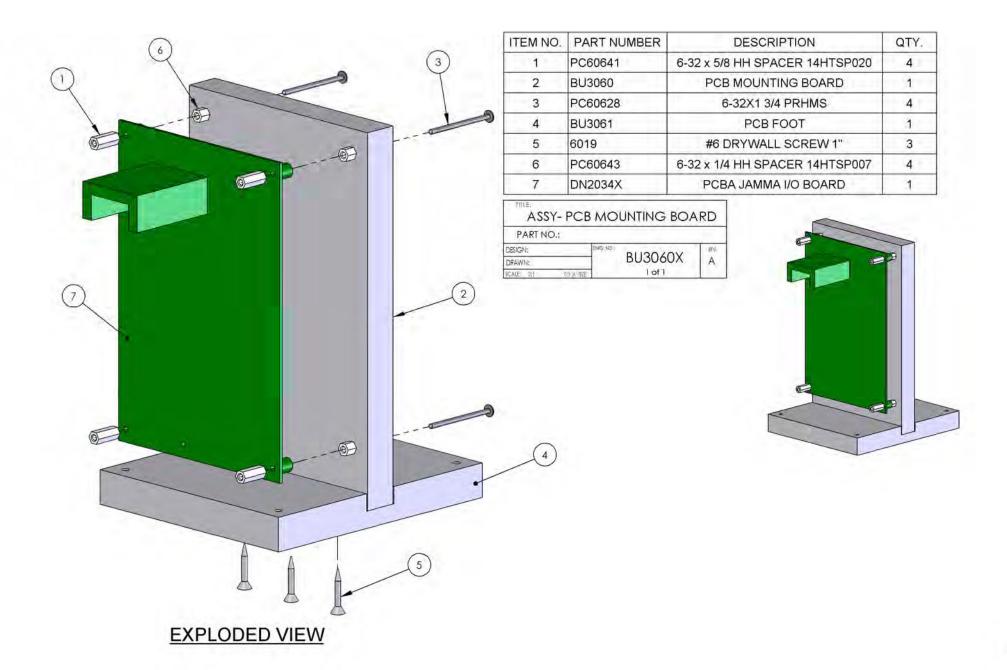

COM	PONEN	ΓSIDE	SC	LDER S	IDE
GROUND	1	BLACK	GROUND	Α	BLACK
GROUND	2	BLACK	GROUND	В	black
+ 5 VOLTS	3	RED	+ 5 VOLTS	С	DUMMY PIN
+ 5 VOLTS	4	DUMMY PIN	+ 5 VOLTS	D	DUMMY PIN
	5	DUMMY PIN		Е	DUMMY PIN
+ 12 VOLTS	6	ORANGE	+ 12 VOLTS	F	ORANGE
KEY	7	KEY	KEY	Н	KEY
COIN METER	8	white/yellow	TICKET ENABLE	J	violet/white
RESET	9	VIOLET	TICKET METER	K	white/green
L SPEAKER +	10	red/grey	L SPEAKER -	L	brown/grey
R SPEAKER +	11	red/white	R SPEAKER -	М	brown/white
VIDEO RED	12	DUMMY PIN	VIDEO GREEN	N	DUMMY PIN
VIDEO BLUE	13	DUMMY PIN	VIDEO SYNC	Р	DUMMY PIN
VIDEO GROUND	14	DUMMY PIN	SERVICE SWITCH	R	white/grey
TEST SWITCH	15	white		S	DUMMY PIN
COIN 1	16	white/brown	COIN 2	Т	white/red
TICKET NOTCH	17	violet/blue		U	DUMMY PIN
	18	DUMMY PIN		V	DUMMY PIN
	19	DUMMY PIN		W	DUMMY PIN
	20	DUMMY PIN		Х	DUMMY PIN
	21	DUMMY PIN		Υ	DUMMY PIN
	22	DUMMY PIN		Z	DUMMY PIN
	23	DUMMY PIN		а	DUMMY PIN
VOLUME UP	24	white/blue	VOLUME DOWN	b	white/violet
PROGRAM	25	DUMMY PIN		С	DUMMY PIN
	26	DUMMY PIN		d	DUMMY PIN
GROUND	27	black	GROUND	е	DUMMY PIN
GROUND	28	black	GROUND	f	DUMMY PIN

Parts List

Electronics:

1029WSX Asy Reset Button

BU2007X Asy (Power Mod 4 Amp)

E00038 Fuse 4 Amp 250v Slow Blow

E02062 Fuse 5A E02258 Fuse 2A

E00211 Switch (Low Ticket)

E02027FL Fan Filter BU2000X Computer

DN2034x PCBA Jamma I/O Board

FP2007 Speaker 4" Round HH5005 Ticket Dispenser

MON19T Monitor (19" Touch screen)

MS2764X Asy (Small Fan)

Decals:

7989 ICE Website Logo
BU7009 Decal – Tickets
BU7010 Monitor Bezel
BU7011 Decal – Eyes


BU9001 BU Service Manual

Mechanical:

BU3001 Squirrel Fiberglass BU3052 Rear Access Door DN4001 Computer Foam

WA5001 Coin Door (Triple) Dual Mech

WS1022 Ticket Bin (Single)

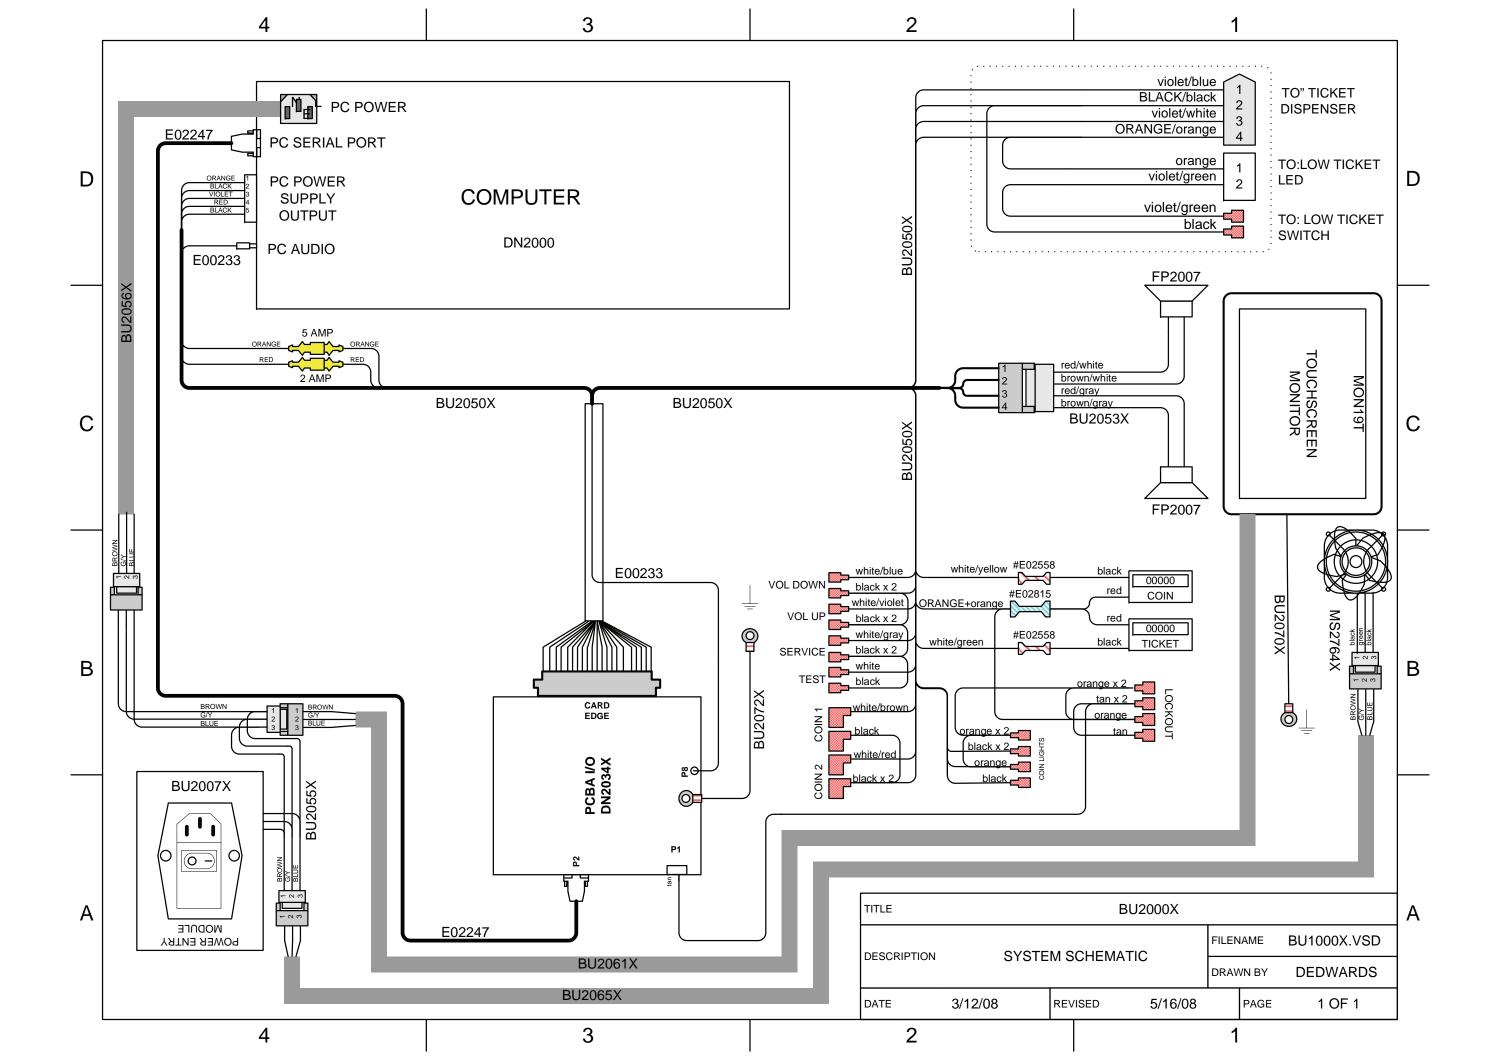





Machine Sales

Telephone: +44 (0) 208 391 8090

Fax: +44 (0) 208 391 8099

www.sega-amusements.co.uk



SEGA Spares

Telephone: +44 (0) 208 391 8060

Fax: +44 (0) 208 391 8096

www.segatotalsolutions.com

Customer Services

Telephone: +44 (0) 208 391 8065

Fax: +44 (0) 208 391 8096