 


AKAI

Bluetooth Speaker with Speakerphone

INSTRUCTION MANUAL

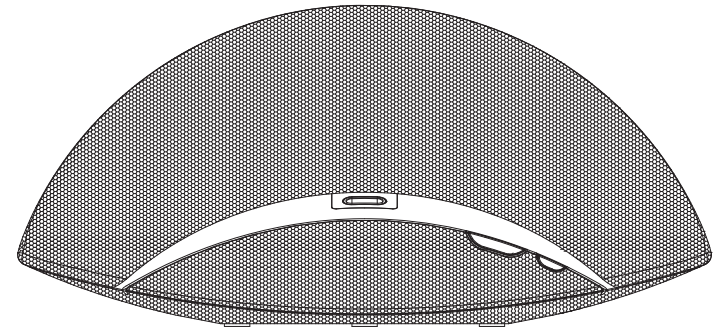

CE7200

Thank you for purchasing this Bluetooth Speaker. Please read this instruction manual carefully before using this product to ensure proper use. Keep this manual in a safe place for future reference.

 
WHAT'S IN THE BOX

Contents


1. CE7200 Bluetooth Speaker




2. AC/DC Power Adaptor

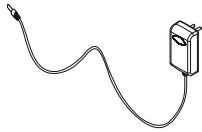

 3. Instruction Manual

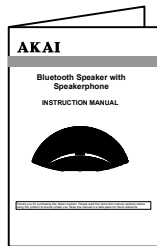

 4. Warranty Card

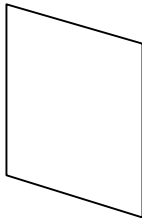

If you are missing any parts above, please contact ADT Digital LLC.

Tel: 561 922 6886

Fax: 561 922 6159

WARNINGS

WARNING: TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

DRIPPING WARNING

The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING

The normal ventilation of the product shall not be impeded for intended use.

Class II equipment symbol



This symbol indicates that the power adaptor has a double insulation system.

FCC IMPORTANT

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux Partie 15 des règlements de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This class[B] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installer must ensure that 20 cm separation distance will be maintained between the device (excluding its handset) and user.

DECLARATION DE LA FCC RELATIVE A L'EXPOSITION AU RAYONNEMENT

Cet appareil est conforme aux limites d'exposition au rayonnement RF stipulées par la FCC et IC pour une utilisation dans un environnement non contrôlé. Les antennes utilisées pour cet émetteur doivent être installées et doivent fonctionner à au moins 20 cm de distance des utilisateurs et ne doivent pas être placées près d'autres antennes ou émetteurs ou fonctionner avec ceux-ci. Les installateurs doivent s'assurer qu'une distance de 20 cm sépare l'appareil (à l'exception du combiné) des utilisateurs.

FCC AND CANADIAN ICES

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television (which can be determined by turning the equipment off), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced / TV technician for help.

NOTE: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions** - All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow instructions** - All operating and use instructions should be followed.
5. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning the exterior only. Do NOT attempt to clean the inside.
6. **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like.
8. **Accessories** - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



10. **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.

IMPORTANT SAFETY INSTRUCTIONS

11. **Power sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
12. **Grounding or Polarization** - This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. **Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
15. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. **Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. **Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. **Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following condition:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
19. **Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
21. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
22. Unplug this apparatus during lightning storms or when unused for long periods of time.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTANT SAFETY INSTRUCTIONS

 
24. Children should be supervised to ensure that they do not play with the appliance.
25. Ensure children and babies do not play with plastic bags or any packaging materials.

WARNINGS:


- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
Avertissement: pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- The MAINS plug / power adaptor is used as the disconnect device, it should remain readily operable during intended use.
In order to disconnect the apparatus from the mains completely, the main plug / power adaptor should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.
Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.




CONTROL LOCATION

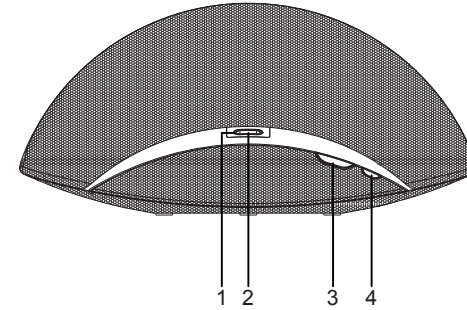FRONT SIDE

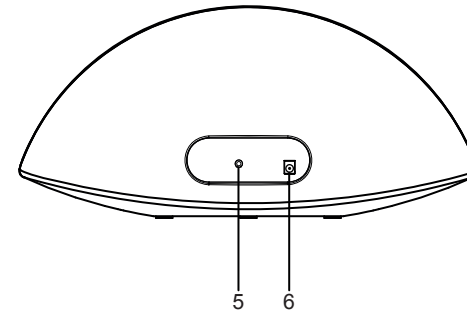 

BACK SIDE



 
- 1 STATUS indicator light
- 2 PAIR / ANSWER / END   button
- 3 VOLUME +/- buttons
- 4 POWER  button
5. AUX IN jack
6. DC IN jack

CONNECTING TO AC POWER

Before using your Bluetooth speaker, you should connect it to AC (mains) power.

1. Plug the AC/DC adaptor into the AC (mains) power socket outlet.
2. Plug the DC power cord on the AC/DC adaptor into the DC IN jack of the unit.

When the unit is not operated by the AC power or unused for long periods of the time, please remove the power adapter from the wall outlet and unplug from the main unit.

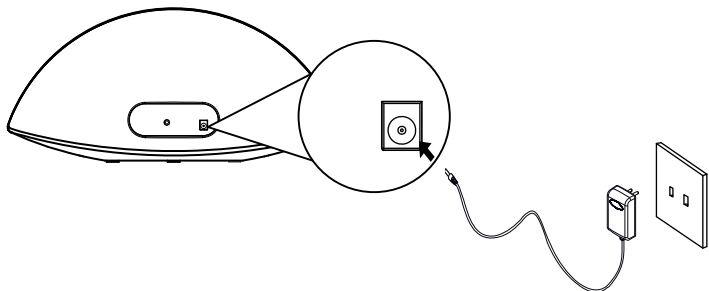

POWERING ON/OFF THE UNIT

1. After connecting the AC Power, the STATUS indicator would light up in RED to indicate the unit is in standby mode.
2. Press and hold the “⏻” button for 2 seconds to turn on the unit.
3. After using the unit, pressing and holding the “⏻” button for 2 seconds to switch the unit to standby mode.

NOTE:

If the unit is idle for 2 minutes after being powered on, it will be switched to standby mode automatically.

PAIRING YOUR BLUETOOTH DEVICE

To begin pairing with a Bluetooth device

1. After powering on your unit, you can start pairing process to connect to your Bluetooth device.
2. If it is the first time setup after purchasing, the STATUS indicator will flash RED and BLUE alternatively to ask for pairing. BLUE / RED flashing indicates pairing attempt is in process.
3. Turn on Bluetooth functionality on your device and make it discoverable (see your device's instructions to add or setup a Bluetooth device).
4. Select CE7200 on your Bluetooth device to make the pairing when it is found. If your device asks for a password, enter 1234 on the keyboard of your device. If no device is paired till 2 minutes, the unit will power off (switch to standby mode) accompanying by a long beep. If this occurs, retry step 1 - 4.

5. Once paired with a device, a blue light on the STATUS indicator will glow steadily and two beep sound confirms that pairing is completed. On some devices, you must then select “use as a stereo audio device” or similar on the device's Bluetooth menu. Once paired, your device should connect to the CE7200 whenever within the range.

To connect previously paired Bluetooth device

1. Your Bluetooth speaker can store one previously paired device for quick pairing during power on.
2. To connect a previously paired device after power on, if the previously paired device is found with the range, the unit will pair the device automatically and the STATUS indicator will turn to BLUE steadily. Two beeps will confirm the pairing is completed.

To connect a new Bluetooth device

1. If no previously paired device is found with the Bluetooth range (10 metres) after power on, the STATUS indicator would continue to flash in BLUE for 2 minutes before switching to standby mode.
2. During this period, you can pair a new Bluetooth device. You can start the pairing process manually by pressing and holding the **⌘** **▶||** button on the unit until STATUS indicator would flash in RED and BLUE alternatively again to indicate pairing attempt is in process. Please follow step 3 - 5 in “To begin pairing with a Bluetooth device” section to complete the pairing of a new Bluetooth device.

NOTE:

- The pairing time might be longer for the first time pairing or pairing a new Bluetooth device.
- Due to different operating system of Bluetooth devices, the time taken by pairing process might be different. If the pairing cannot be successful in the first time, please try to restart the pairing process by pressing and holding the **⌘** **▶||** button again until the indicator light flashes red and blue alternatively.
- Make sure you have the latest firmware for your Bluetooth mobile devices.
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.

PLAYING MUSIC VIA BLUETOOTH

To listen to music streamed wirelessly from your paired Bluetooth device.




1. Following the “pairing your bluetooth device” section to connect your Bluetooth device.
2. Start the audio playback and adjust the volume output on your Bluetooth device.
3. Press and release the **⌘** **▶||** Button to pause the audio playback from your Bluetooth device and press and release this button for resume the playback. You may also pause and resume the playback on your Bluetooth device.

NOTE: It is not recommended to pause the audio playback by press and release the **⌘** **▶||** Button on the unit and then resume the playback on your Bluetooth device as it may have abnormal response for some Bluetooth devices.



4. Use the Volume +/- Buttons on the unit to adjust volume.
5. When done listening, press and hold the **⏻** Button for 2 seconds to turn the unit off (switch to standby mode).

USING THE SPEAKERPHONE

To use your Bluetooth speaker as a speakerphone for receiving a phone call from a Bluetooth enabled phone.

1. Following the “pairing your bluetooth device” section to set up the bluetooth connection.
2. When a call is received during music is playing, music will be muted to hear the ringtone. STATUS indicator will flash in RED color to indicating the incoming call. Press the   Button to answer the call, or press the  Button to ignore the call.

 

NOTE: The voice from the unit will be in “MONO” mode when the Speaker phone is being used and only the right hand side speaker will sound.

3. Use the Volume +/- Buttons to adjust the desired volume level.
4. When the call is completed, press the   Button to end the call and resume previous function or music playback.



NOTE:

- The position of the built-in microphone of the unit is on the central of the front side. You are recommended to face the front side of the unit and at a short distance in order to have good voice quality and clarity.

USING THE AUX IN JACK

1. Plug one end of the audio cable (not included) into the headphone jack of your audio device (or audio out) and the other end into the AUX IN jack of the unit.
2. Press and hold the  Button for 2 seconds to turn on the unit (release when blue light appears).
3. Use your audio device to control music playback and volume through the unit.
4. Use the Volume +/- Buttons to adjust the desired volume level.
5. When done listening, press and release the  Button for 2 seconds to turn the unit off (switch to standby mode) and unplug the audio cable from the unit. Remember to turn off your audio device, too.

NOTE:

- Play/Pause control   only works in Bluetooth mode. It does not control the plugged-in device.
- When you plug in the AUX cable during Bluetooth playback, the Bluetooth playback will be interrupted and switched to the AUX mode. After unplugging the AUX cable from the unit, the music may be or may not be resumed depending on different Bluetooth devices. If the music has been paused on your device, please restart / resume playback on your device manually. Alternatively, you can restart Bluetooth playback following the “playing music via Bluetooth” section.
- Using audio cable with standard stereo 3.5mm plug (not mono plug).

CARE AND MAINTENANCE

PLACING THE UNIT

Place the unit on a level surface away from sources of direct sunlight or excessive heat. Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.

CLEANING THE UNIT

Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
No power when POWER is on	AC/DC adaptor is not plugged into a wall outlet or the connector is not plugged into the power supply jack on the back of the unit.	Plug the AC/DC adaptor into a wall outlet and plug the connector into the supply jack on the unit.
No power when plugged in	The AC outlet may not have power.	Check the outlet with a working lamp or other electrical appliance.
No sound when playing audio via Bluetooth	Your Bluetooth device has not been paired properly.	Pairing your Bluetooth device according to the "pairing your bluetooth device" section.
	The volume control of your Bluetooth device is set at too low.	Increase the volume of your Bluetooth device.
	The volume control of the Bluetooth speaker is set at too low.	Increase the volume of the Bluetooth speaker by pressing the Volume "+" button.
No sound when playing audio via Aux	Audio cable has not been connected properly.	Check the connection of audio cable at the Bluetooth cable and the audio device.
	Audio cable has breakage.	Use another audio cable for connection.
	The volume control of your Bluetooth device is set at too low.	Increase the volume of your Bluetooth device.
	The volume control of the Bluetooth speaker is set at too low.	Increase the volume of the Bluetooth speaker by pressing the Volume "+" button.
Sound comes from only one speaker when playing audio via Aux	Mono audio cable is used.	Make sure the audio cable is a stereo type.
	The audio cable was damaged.	Replace the audio cable of stereo type.
The person whom you call via speakerphone cannot hear your voice clearly.	You are not facing to the front side of the Bluetooth speaker.	Face to the front side of the Bluetooth speaker.
	You are too far from the Bluetooth speaker.	Close to the front side of the Bluetooth speaker.

SPECIFICATION

Power Supply Rating (AC/DC Power Adaptor)	Input: 100 – 240VAC, 50/60Hz, 0.5A Output: 9VDC, 2A
Power Consumption	Working Mode : 15W Standby Mode : < 0.5W
Audio Section Output Power Output Impedance	5 watts + 5watts (RMS) 8 ohms
Dimensions	15.1"L x 7.0" W x 7.4"H (384mm x 178mm x 187mm)
Weight	3.36 lb. (1.525 kg)
Bluetooth QD ID	B019905

The Bluetooth® word mark and logo are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Arts Digital Technology for AKAI is under license.