


AKAI

Table-top Bluetooth Speaker System

INSTRUCTION MANUAL

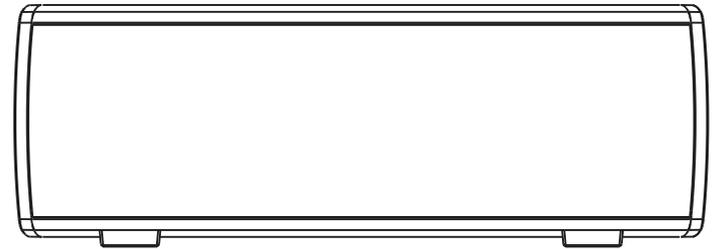

CE7001-BT

Thank you for purchasing this Bluetooth Speaker System. Please read this instruction manual carefully before using this product to ensure proper use. Keep this manual in a safe place for future reference.

WHAT'S IN THE BOX

Contents

1. CE7001-BT Table-top Bluetooth Speak System



2. AC/DC Power Adaptor



 
3. USB Connection Cable



4. Line In Connection Cable



5. Remote Control



6. Instruction Manual



7. Warranty Card



If you are missing any parts above, please contact ADT Digital LLC.

Tel: 561 922 6886

Fax: 561 922 6159

WARNINGS

WARNING: TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CAN ICES-3(B)/ NMB-3(B)

CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

DRIPPING WARNING

The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING

The normal ventilation of the product shall not be impeded for intended use.

Class II equipment symbol



This symbol indicates that the power adaptor has a double insulation system.

FCC AND CANADIAN ICES

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television (which can be determined by turning the equipment off), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced / TV technician for help.

NOTE: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions** - All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow instructions** - All operating and use instructions should be followed.
5. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning the exterior only. Do NOT attempt to clean the inside.
6. **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like.
8. **Accessories** - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
10. **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.



IMPORTANT SAFETY INSTRUCTIONS

11. **Power sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
12. **Grounding or Polarization** - This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. **Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
15. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. **Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. **Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. **Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following condition:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
19. **Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
21. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
22. Unplug this apparatus during lightning storms or when unused for long periods of time.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTANT SAFETY INSTRUCTIONS


- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.

WARNINGS:

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
Avertissement: pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- The MAINS plug / power adaptor is used as the disconnect device, it should remain readily operable during intended use.
In order to disconnect the apparatus from the mains completely, the main plug / power adaptor should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.
Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.


CONTROL LOCATION

SIDE PANEL

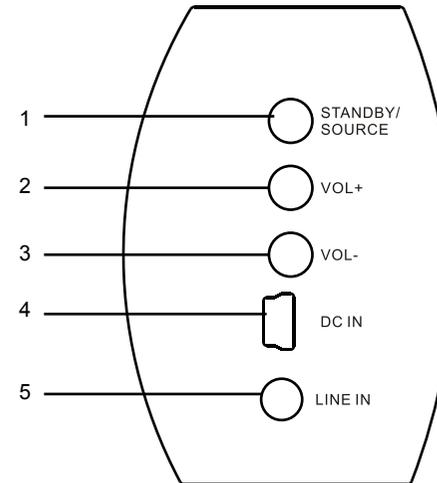

- STANDBY button:** Press and hold 3 seconds to turn the unit On (Status Indicator will light in blue) or Off (Status Indicator will light in red)
SOURCE button: Press once to select either Bluetooth or LINE in mode
- VOL (Volume) +:** Press to increase volume
- VOL (Volume) -:** Press to decrease volume
- USB port (For DC IN)**
- LINE IN jack**

REMOTE CONTROL

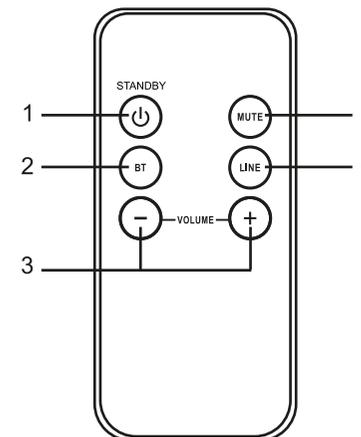


- STANDBY button:** Press to turn the unit On or Off.
- BT (Bluetooth) button:** Press to switch to Bluetooth mode.
- VOLUME +/- buttons:** Press to adjust the volume.
- MUTE button:** Press to mute the sound, press again to resume.
- LINE button:** Press to switch to LINE In mode.

CONNECTING TO AC POWER

Insert the USB plug of the USB Connection Cable to the socket of the AC power adapter and the mini USB Jack to the DC IN Jack (mini USB Port) on the unit. Insert the AC power adaptor to wall outlet having AC 120V, 60 Hz. This power unit is intended to be correctly orientated in a vertical or floor mount position.

Note: When the unit is not operated by the AC power or unused for long period of time, please remove the power adapter from the wall outlet and unplug from the main unit.

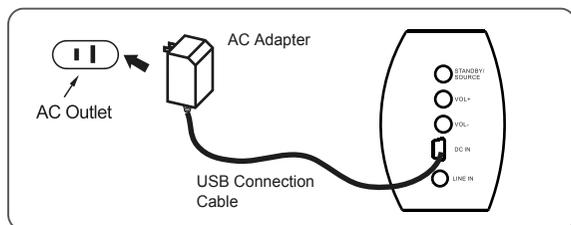


POWERING ON/OFF THE UNIT

1. After connecting the AC power, the STATUS indicator would light up in RED to indicate the unit is in standby mode.
2. Press and hold the STANDBY/SOURCE button for 3 seconds to turn on the unit.
3. After using the unit, press and hold the STANDBY/SOURCE button for 3 seconds to switch the unit to standby mode.

BATTERIES INSTALLTION (REMOTE CONTROL)

To replace the button cell:

1. Push the tab and then slide out the battery tray as the figure shown on the right.
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Replace the old button cell by a new CR 2025 button cell as the polarity markings on the remote control.
4. Close the battery tray.

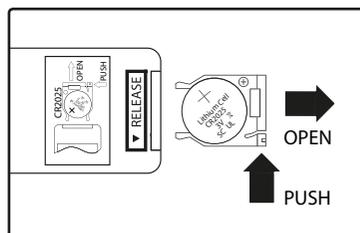


BATTERY WARNING

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different type of batteries together (e.g. Alkaline and Carbon Zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged, they can overheat and rupture (Follow battery manufacturer's directions).
6. Rechargeable batteries are to be removed from the product before being charged.
7. Rechargeable batteries are only to be charged under adult supervision.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

EFFECTIVE DISTANCE OF REMOTE TRANSMITTER

NOTES:

- When there is an obstacle between the unit and the transmitter, the transmitter may not be operated.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

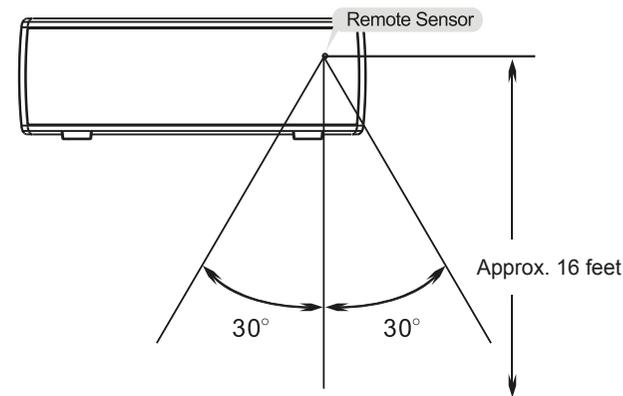

BLUETOOTH PAIRING AND PLAYBACK

1. Power on the unit as previous procedures.
2. Press the BT (Bluetooth) button on the remote control to switch to BT mode. Blue indicator will turn on and blink.
3. Turn on the BT function in the external BT player and wait a few seconds until the external BT player and the speaker were paired. Play the music in the external BT Player as usual.


NOTES:

In first time use, pairing the external BT Player to the unit as below:

1. Switching the unit to BT mode as previous procedures, the blue indicator will turn on and blinking.
2. Power on the external BT player and enter to BT searching mode. Start pairing as the on screen instructions on the external BT Player (For details pairing procedures, please refer to the user's manual of your BT player.).
3. When the external BT player searched the unit, our model number "CE7001-BT" will appear on the display of external BT player.
4. Pairing code "0000" or "1234" may need to enter.

LISTENING FROM LINE IN JACK

1. Connect the Headphone/Earphone; Line out jacks from the external audio player (such like MP3 player; Discman ... etc.) to the LINE IN jacks on the unit by the supplied "Line In connection cable" as the figure on right.
2. Power on the unit as previous procedures. Press STANDBY/SOURCE button to turn it to Line In mode. The STATUS indicator would light up in PURPLE.
Note: If the unit is in BT (Bluetooth) mode, the status indicator will light in blue. Press the LINE button on the Remote Control to switch to Line In mode.
3. Power on the connected external player and start playback as usual.
4. Press the volume buttons to adjust volume level.
5. Press the MUTE button to turn off the sound, press again to resume.
6. When finished listening, press and hold STANDBY button for 3 seconds on the unit or press STANDBY button on the remote control to power off (Standby Mode) the unit. (The status indicator will light in red.)

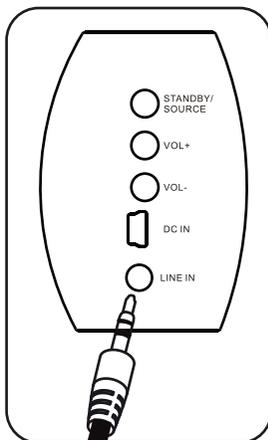

NOTE:

To saving electric power, unplug the AC/DC Power Adaptor from wall outlet if long period of time will not use the unit.

CARE AND MAINTENANCE

1. Place the unit on a level surface away from sources of direct sunlight, excessive heat caused by heating equipment, humidity, rain or sand.
2. Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
3. Do not clean your unit by water directly. Clean the unit with a soft, clean cloth slightly moistened with plain lukewarm water only.
4. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.
5. Do not attempt to disassemble your product.
6. Do not paint your product with lacquer or aerosol.
7. Do not drop, throw or try to bend your product.
8. Do not expose your product to open flames.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
No power when POWER is on	AC/DC adaptor is not plugged into a wall outlet or the connector is not plugged into the power supply or the DC IN jack of the unit.	Check the connection of the AC/DC adaptor between the unit and wall outlet.
No sound	Volume control is set at minimum or mute.	Check that the volume control is NOT at minimum. Check that it is not set to mute.
	The volume control of external BT player (or audio player) is too low.	Increase the volume of external BT player (or audio player).
The remote control does not work	Obstacles obscure the front of the unit.	Make sure there is no obstacles obscuring the front of the unit.
No sound in Bluetooth (BT) mode	The pairing had not been done properly.	Check if you have pairing or not. It needs to pair the external BT player and the speaker with password "0000" or "1234" before 1st time listening.

SPECIFICATION

Power Source (AC/DC Power Adaptor)	Input: AC100 - 240V, 50/60Hz, 0.3A Output: DC 5V, 1A
Power Source (Remote Control)	DC 3V, 1 x CR 2025 Lithium Battery (Included)
Power Consumption	Working Mode : 6W (max.)
Audio Section Output Power Output Impedance	3 watts + 3 watts (RMS) 4 ohms
Dimensions	11.81" L x 2.76" W x 3.90" H 300mm x 70mm x 99mm
Weight	1.72 lb. (0.78 kg)

The Bluetooth® word mark and logo are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Arts Digital Technology for AKAI is under license.

IMPORTANT: Due to the continued functioning of revisions and improvements in the design of our products, specifications are subject to change without notice.