

Brookstone®

Bop Wireless Speaker 2.0

WIRELESS SPEAKER THAT STICKS



Fold

LITHIUM-ION BATTERY WARNINGS

This device contains a non-removable lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Fold

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.

Fold

Fold

LOCATION OF PARTS AND CONTROLS

1. Dust Cover
2. Power Switch
3. Micro USB Port
4. Volume Up Button
5. Volume Down Button
6. Play/Pause Button
7. Mic
8. Suction Cup
9. LED indicator
10. Micro USB Charging Cable (not shown)

Fold

Brookstone®
A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire, USA 03054
800-846-3000 • Brookstone.com

Fold

CHARGING THE SPEAKER

1. Connect the USB Cable (included) to the Micro USB Port on the speaker.
2. With the speaker's Power Switch off, plug the other end of the USB Cable into a USB Port on your computer.
3. The LED Indicator will illuminate red while charging, and the light will go out when the speaker is fully charged. Charges in approximately 2.5 hours for up to 9.5 hours of listening enjoyment.

PAIRING YOUR DEVICE

1. Prepare your device to pair using Bluetooth®, making sure you are within 33 feet of the speaker. Refer to your device's owners manual for details if necessary.
2. Slide the Power Switch to ON. The LED Indicator light will flash quickly and the speaker will sound beeps to enter auto-pairing mode.
3. The speaker will wait for a connection in pairing mode for 4 minutes. If it does not pair with a device, it goes into sleep mode. To enter pairing mode again, power the speaker off and then on.
4. Once the speaker is in pairing mode and your device is ready to

pair, select "Bop 2.0". If prompted, use 0000 as a PIN for the pairing code. Once the speaker is selected, the LED Indicator will flash slowly and beeps will sound to confirm pairing complete.

LISTENING TO YOUR AUDIO DEVICE

1. Play your audio device as you normally would,
2. Volume may be adjusted on your audio device or by pressing the '+' or '-' buttons.
3. Press and hold the '+' or '-' button will advance to the next track or go back to the previous track.
4. To pause audio, press the '>' button on the Bop Speaker. To resume audio playback press the '>' button again.
5. Slide the Power Switch to OFF. The LED will go out.

Fold

BASIC CELLPHONE OPERATION

1. When you have an incoming call, the speaker sounds an incoming call tone. Both the speaker and your cellphone may ring, depending on your cellphone settings.
2. To answer an incoming call, short press Play/Pause Button to answer the call.
3. To reject an incoming call, long press Play/Pause Button to reject the call.
4. To end a call, short press Play/Pause Button once.
5. If, while you are listening to music, your phone rings and you answer the call, the music selection will then continue from where it had stopped.

CARE AND STORAGE

1. Store the speaker in its compact form in a cool, dry place.

Fold

SPECIFICATIONS

Power Supply: 5V, 500mA
 Total Output: 3W
 Range: Class 2, up to 33 ft (10 m)
 Li-ion Rechargeable Battery: 400mAh
 Speaker: 1.50 inch, 4 Ohm
 Charging Time: Approx. 2.5 hours
 Battery Life: Approx. 9.5 hours
 Compatibility: Bluetooth® 2.0 or above device with A2DP/AVRCP/HFP/HSP

The Bluetooth® word mark and logos are registered trademarks owned of Bluetooth SIG, Inc. and any use of such marks by Brookstone is under license.

Fold

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own

Fold

warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.