

Find thousands more  
great ideas online

**Brookstone**

897153

Merrimack, New Hampshire, USA 03054 • 800-846-3000 • Brookstone.com



**Brookstone**

**TimeSmart**

APP-CONTROLLED ALARM CLOCK



## TABLE OF CONTENTS

Warnings and Cautions.....	1
FCC Information.....	6
Location of Parts and Controls (Clock).....	8
Location of Controls (App).....	10
Pairing Your Device.....	14
Downloading Free App.....	15
Setting the Clock.....	16
Setting Alarm 1.....	18
Setting Alarm 2.....	20
Activating and Deactivating Alarm 1.....	23
Activating and Deactivating Alarm 2.....	25
Adjusting the LCD Display Backlight.....	27
Listening to Audio.....	29
Charging with USB.....	29
Installing the Back-Up Battery.....	30
Reset.....	31
Care and Maintenance.....	31
App Compatibility.....	32
Specifications.....	33
Troubleshooting.....	34
Warranty.....	36

Warranty does not apply to any non-Big Blue Audio products. Manufacturers or suppliers other than Big Blue Audio may provide their own warranties to the purchaser, but Big Blue Audio, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Big Blue Audio; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BIG BLUE AUDIO SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BIG BLUE AUDIO DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BIG BLUE AUDIO CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

## ONE (1) YEAR LIMITED WARRANTY

Big Blue Audio LLC warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Big Blue Audio will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Big Blue Audio, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Big Blue Audio's property. When a store credit is given, the original product must be returned to Big Blue Audio and becomes Big Blue Audio's property.

**Obtaining Service:** To obtain warranty service, call Big Blue Audio Limited Warranty Service at 866-577-8955. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Big Blue Audio that can be identified by the "Big Blue Audio" trademark, trade name, or logo affixed to them or their packaging. The Limited

### CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER.  
THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

### IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

## SAFETY AND HANDLING INFORMATION

For maximum product life, do not drop, throw, or crush the speaker. Do not expose it to humidity, dust, or operating temperatures outside 32°F to 113°F (0°C to 45°C).

## SAVE THESE INSTRUCTIONS

## TROUBLESHOOTING (CONTINUED)

ISSUE	SOLUTION
Can not hear alarm sound when tap icon in app.	Turn the VOLUME DIAL clockwise on the clock to increase the volume.
App is no longer syncing clock to device clock.	If the time setting was changed on the clock, the app setting was changed to Manual Set. To change to SYNC TO DEVICE CLOCK, go into the app and tap the CLOCK SET icon or the clock. The clock set window will come on screen. Select SYNC TO DEVICE CLOCK.

## TROUBLESHOOTING

ISSUE	SOLUTION
Bluetooth® disconnection.	Ensure your device is within 33 feet of the clock and reconnect your device to "TimeSmart Alarm Clock."
Clock does not play audio.	Confirm device is paired to clock. <b>Note:</b> The clock remembers the last device paired. If you would like to use another device, pair that device manually. Please refer to page 14 for pairing instructions.
Clock and app settings do not sync.	The clock may have auto-paired to another device in the immediate area. If "TimeSmart Alarm Clock" is shown as a Bluetooth® connection on a device other than your own, turn Bluetooth® off on the other device.

## DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for a unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

## WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.

3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload the electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by its cord or use the cord

## SPECIFICATIONS

Power Supply (input)	AC 100V~240V, 50/60 Hz
Power Supply (output)	DC 5V, 2A
USB Port (output)	DC 5V, 1000mA
Power Output	3W
Range	Class 2, up to 33 ft (10 m)
Speaker	1.5", 4 Ohm (1)
Clock Compatibility	Bluetooth® 2.0 or above with A2DP/AVRCP
App Compatibility	Bluetooth® 4.0/Bluetooth® Smart Ready
Weight	Approx. .7lbs
Dimensions	5.9" (w) x 2.8" (d) x 3.5" (h)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Brookstone is under license.

© Brookstone 2015

## APP COMPATIBILITY

iPhone 6 Plus	iPad Air 2
iPhone 6	iPad Air
iPhone 5s	iPad mini 3
iPhone 5c	iPad mini 2
iPhone 5	iPad mini
iPhone® 4s	iPad® (4th generation)
iPod touch® 5th generation	iPad® (3rd generation)
Apple® iOS: 6.0 and later	

Android 4.3 and later, CPU: 800MHz, RAM: 512M

App is only compatible with select Bluetooth® 4.0 and Bluetooth® Smart Ready devices.

Visit [Brookstone.com](http://Brookstone.com) for compatibility updates.

as a handle.

11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when the unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the outlet by pulling the power cord.

## FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician

## RESET

Insert a pointed object in the RESET PINHOLE to reset the clock.

## CARE AND MAINTENANCE

Wipe the clock with a soft, dry cloth.



## INSTALLING THE BACK-UP BATTERY

When the back-up CR2032 battery (included) is running low, the low battery icon appear on the LCD display, indicating that the battery should be replaced.

Note: To avoid manually resetting your clock, replace a spent battery while the clock is plugged into an outlet.

1. Remove screw on the door of the BATTERY COMPARTMENT and lift cover.
2. Place 1 new CR2032 button cell battery into the BATTERY COMPARTMENT according to the polarity indicator.
3. Replace the BATTERY COMPARTMENT door and secure screw.

for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.


Modifications not authorized by the manufacturer may void the user's authority to operate this device.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

FCC ID: TZI-CN897153

## LOCATION OF PARTS AND CONTROLS (CLOCK)

 1. Clock Set Button
2. Alarm 1 Button
3. Volume/Set Dial
4. LCD Display
5. Clock
6. Bluetooth® Icon
7. Alarm 1 Time
8. Alarm 1 Wake-To Icon
9. Alarm 2 Wake-To Icon
10. Alarm 2 Time
11. Low Battery Indicator
12. Alarm 2 Button
13. Snooze/Pairing Button

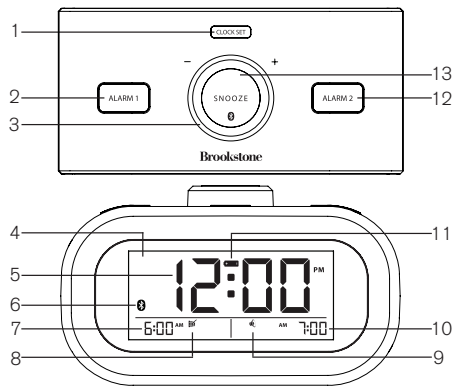

## LISTENING TO AUDIO

1. Turn the VOLUME DIAL clockwise to increase audio volume.
2. Turn the VOLUME DIAL counter-clockwise to decrease audio volume.

## CHARGING WITH USB

Plug one end of a USB cable (not included) into the USB OUTPUT 1A port and the other end into your mobile device to charge.



 
 
Tap High, Low, Medium, Dim or Off in LCD DISPLAY BRIGHTNESS to change the LCD display brightness setting.

**Note:**

- If your device is connected to the clock, the clock settings will be updated with the TimeSmart app settings.
- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.

## LOCATION OF PARTS AND CONTROLS (CLOCK)

- |                         |                |
|-------------------------|----------------|
| 14. USB Output 1A       | 17. Adapter    |
| 15. Reset Pinhole       | 18. DC 5V Jack |
| 16. Battery Compartment |                |

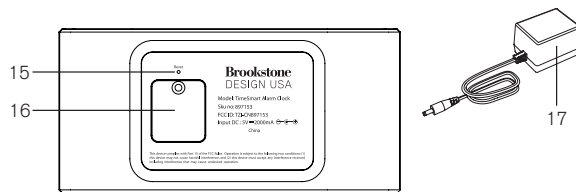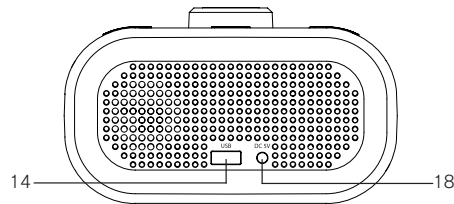

## LOCATION OF CONTROLS (APP MAIN SCREEN)

1. Alarm 1 On/Off
2. Alarm 2 On/Off
3. Clock Set
4. LCD Display Brightness
5. Tutorial
6. Bluetooth® Icon
7. Clock
8. Alarm 2 Time
9. Alarm 2 Wake-To Icon/Snooze Setting
10. Alarm 1 Wake-To Icon/Snooze Setting
11. Alarm 2 Time

## ADJUSTING THE LCD DISPLAY BACKLIGHT



Press the CLOCK SET button repeatedly to change the LCD display backlight setting to High, Low, Medium, Dim or Off.

### Note:

- If the LCD display backlight setting is Off, the LCD display backlight will be Dim when the alarm sounds or during an alarm snooze.
- If your device is connected to the clock, the TimeSmart app settings will be updated with the clock settings.
- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.

to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.

 


1. Tap ALARM 2 ON/OFF to activate Alarm 2.
2. Tap ALARM 2 ON/OFF to deactivate Alarm 2.

**Note:**


- If your device is connected to the clock, the clock settings will be updated with the TimeSmart app settings.
- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.

## LOCATION OF CONTROLS (APP MAIN SCREEN)

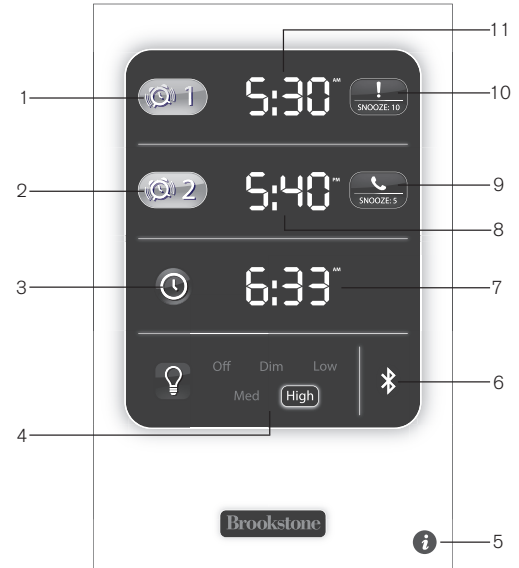

## LOCATION OF CONTROLS (APP ALARM SET)

 1. Alarm Time Selector
2. Alarm Snooze Setting
3. Alarm Wake-To Setting

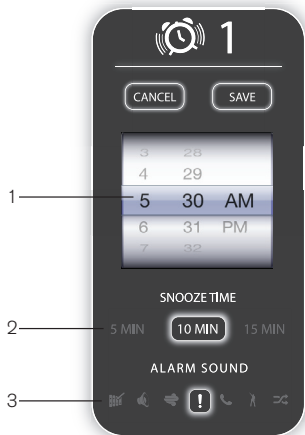

Note: The control layout may not appear exactly as shown, depending upon your device.

## ACTIVATING AND DEACTIVATING ALARM 2



1. Press the ALARM 2 button to activate Alarm 2. The Alarm 2 time and Wake-To sound settings are on the LCD display.
2. Press the ALARM 2 button to deactivate Alarm 2. The Alarm 2 time and Wake-To sound settings are not on the LCD display.
3. When Alarm 1 sounds, press the ALARM 2 button to turn the alarm off or press the SNOOZE button to snooze the alarm. Alarm 2 will snooze up to 6 times. Alarm 2 will sound for 20 minutes if it is not turned off.

### Note:

- The alarm sound incrementally increases in volume reaching it's loudest setting in 30 seconds.
- If your device is connected to the clock, the TimeSmart app settings will be updated with the clock settings.
- If your device is disconnected and then reconnected

to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.



 
1. Tap ALARM 1 ON/OFF to activate Alarm 1.
2. Tap ALARM 1 ON/OFF to deactivate Alarm 1.

**Note:**

- If your device is connected to the clock, the clock settings will be updated with the TimeSmart app settings.
- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.

## LOCATION OF CONTROLS (APP CLOCK SET)

1. 12/24 Clock Display Selector
2. Manual Set/Sync to Device Clock Setting
3. Time Selector

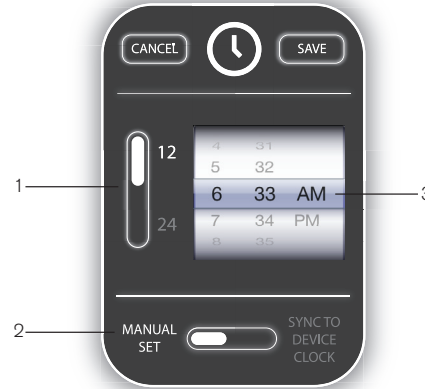

Note: The control layout may not appear exactly as shown, depending upon your device.

## PAIRING YOUR DEVICE

1. Prepare your device to pair using Bluetooth<sup>®</sup>, making sure the device is within 33 feet of the alarm clock. Refer to your device's owners manual for details if necessary.
2. Press and hold the SNOOZE/PAIRING BUTTON until the BLUETOOTH<sup>®</sup> ICON on the alarm clock LCD starts flashing to put the alarm clock in pairing mode.
3. Select "TimeSmart Alarm Clock" on your device. If prompted, use 0000 as a PIN for the pairing code. The alarm clock will wait for a connection in pairing mode for up to 2 minutes.
4. When "TimeSmart Alarm Clock" is selected, the BLUETOOTH<sup>®</sup> ICON will stop flashing and the pairing successful tone will sound to confirm pairing is complete.

### Note:

- To cancel pairing mode, wait 2 minutes for the speaker to cancel pairing automatically. The BLUETOOTH<sup>®</sup> ICON will no longer be displayed on the LCD.
- The Bluetooth<sup>®</sup> icon in the TimeSmart app is blue when

## ACTIVATING AND DEACTIVATING ALARM 1



1. Press the ALARM 1 button to activate Alarm 1. The Alarm 1 time and Wake-To sound settings are on the LCD display.
2. Press the ALARM 1 button to deactivate Alarm 1. The Alarm 1 time and Wake-To sound settings are not on the LCD display.
3. When Alarm 1 sounds, press the ALARM 1 button to turn the alarm off or press the SNOOZE button to snooze the alarm. Alarm 1 will snooze up to 6 times. Alarm 1 will sound for 20 minutes if it is not turned off.

### Note:

- The alarm sound incrementally increases in volume reaching it's loudest setting in 30 seconds.
- If your device is connected to the clock, the TimeSmart app settings will be updated with the clock settings.
- If your device is disconnected and then reconnected



2. Use the ALARM TIME SELECTOR to select the alarm time.
3. Select the Snooze time.
4. Select the Wake-To sound.
5. Tap Save to save the alarm settings.

**Note:**

- If your device is connected to the clock, the clock settings will be updated with the TimeSmart app settings.
- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.

the clock is connected to your device. The Bluetooth® icon is gray in the TimeSmart app when the clock is not connected to your device.

### DOWNLOADING FREE APP

Go to the iTunes® App Store<sup>SM</sup> (for Apple devices) or Google Play™ (for Android devices) to download the TimeSmart Alarm Clock App, "TimeSmart".



## SETTING THE CLOCK



1. Press and hold the CLOCK SET button until "12 H" flashes on the LCD display.
2. Turn the VOLUME/SET DIAL to choose 12-Hour or 24-Hour clock display.
3. Press the CLOCK SET button to save the clock display setting. The hour will flash on the LCD display. Turn the VOLUME/SET DIAL to select the hour.
4. Press the CLOCK SET button to save the hour setting. The minutes will flash on the LCD display. Turn the VOLUME/SET DIAL to select the minutes.
5. Press the CLOCK SET button to save the clock settings. If the CLOCK SET button is not pressed, the clock settings will be saved after 5 seconds.

### Note:

- If your device is connected to the clock, the TimeSmart app settings will be updated with the clock settings.

3. Press the ALARM 2 button to save the Minutes setting. The Wake-To icon will flash on the display. Turn the VOLUME/SET DIAL to select the Wake-To sound.
4. Press the ALARM 2 button to save the alarm settings. If the ALARM 2 button is not pressed, the alarm settings will be saved after 5 seconds.

### Note:

- If your device is connected to the clock, the TimeSmart app settings will be updated with the clock settings.
- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.



1. Tap the ALARM 2 WAKE-TO ICON/SNOOZE SETTING or the ALARM 2 time. The Alarm 1 set window will come on screen.

4. Select the Wake-To sound.
5. Tap Save to save the alarm settings.

Note:

- If your device is connected to the clock, the clock settings will be updated with the TimeSmart app settings.
- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.

## SETTING ALARM 2



1. Press and hold the ALARM 2 button until the Hour flashes on the LCD display. Turn the VOLUME/SET DIAL to select the hour.
2. Press the ALARM 2 button to save the Hour setting. The minutes will flash on the LCD display. Turn the VOLUME/SET DIAL to select the minutes.

- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.



1. Tap the CLOCK SET icon on the clock. The clock set window will come on screen.
2. Select MANUAL SET or SYNC TO DEVICE CLOCK. If SYNC TO DEVICE CLOCK is selected, the clock will sync to your device's clock.
3. If MANUAL SET is selected, choose 12-Hour or 24-Hour clock display and use the TIME SELECTOR to select the time. Tap Save to save the clock settings.

Note:

- If your device is connected to the clock, the clock settings will be updated with the TimeSmart app settings.

- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.

## SETTING ALARM 1



1. Press and hold the ALARM 1 button until the Hour flashes on the LCD display. Turn the VOLUME/SET DIAL to select the hour.
2. Press the ALARM 1 button to save the Hour setting. The minutes will flash on the LCD display. Turn the VOLUME/SET DIAL to select the minutes.
3. Press the ALARM 1 button to save the Minutes setting. The Wake-To icon will flash on the display. Turn the VOLUME/SET DIAL to select the Wake-To sound.
4. Press the ALARM 1 button to save the alarm

settings. If the ALARM 1 button is not pressed, the alarm settings will be saved after 5 seconds.

### Note:

- If your device is connected to the clock, the TimeSmart app settings will be updated with the clock settings.
- If your device is disconnected and then reconnected to the clock, or if the TimeSmart app is quit and re-opened, the TimeSmart app will be updated with the current clock settings.



1. Tap the ALARM 1 WAKE-TO ICON/SNOOZE SETTING or the ALARM 1 time. The Alarm 1 set window will come on screen.
2. Use the ALARM TIME SELECTOR to select the alarm time.
3. Select the Snooze time.