### PRSPEL.

### **SAFETY WARNINGS!**

- Improper use of batteries may lead to overheating, breakage or leaking.
- -Do not mix old and new batteries.
- -Do not mix different battery brands.
- -Install batteries with correct polarity. The flat side (negative terminal) of the battery should rest against the spring.
- -Remove dead batteries immediately.
- -Avoid liquids, which can short circuit the batteries.
- -Never try to charge batteries that are not rechargeable.
- -The vehicle or remote will become unresponsive when batteries are low, at which point you should replace all batteries with new ones.
- -Remove the batteries if you will not use the vehicle for a long time.
- Avoid using near furniture or glass to prevent damage to these objects.
- Do not use vehicle on roads where real cars are in use, serious physical harm or death may
- Do not use vehicle in areas crowded with people as this may result in harm to vehicle and/or people, choose a safe location free of people and real cars.
- Do not use vehicle during a storm or when lightning or thunder are present.
- Do not use in a wet, sandy or muddy environment as vehicle may become damaged.
- Do not bend the antenna, It may break, exposing sharp metal that can cause injury.
- Do not pull on any wires that are part of the vehicle. Such action may cause the wires to break and the vehicle to malfunction.
- Keep fingers, hair and clothes away from the car's spinning tires. Failure to do so may result in physical injury.
- Never aim the vehicle at other people.
- Do not throw the vehicle or purposely hit it with any object.
- Store vehicle in a cool environment, away from high-temperature sources such as fires, stoves, radiators, etc.
- This vehicle has no user-serviceable parts. Do not attempt to modify components or circuit

### <u>PREPEL</u>

### CARE AND MAINTENANCE

- Remove the batteries from the transmitter when it is not used for extended
- Gently wipe the controller and truck with a damp cloth to clean. Do not use soap or solvents as they can damage the surface.
- Keep the truck and transmitter away from direct heat or strong sunlight.
- Do not submerge the truck or transmitter into water, they will both be
- damaged beyond repair. • Parental guidance is recommended when installing/replacing the batteries or charging.

### FCC Part 15 B Notice

**CAUTION**: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Jeep® and the Jeep® grille design are registered trademarks of Chrysler Group LLC. Jeep® Rescue and its trade dress are used under license from Chrysler Group LLC. © Chrysler Group LLC [2010.]

©2010 Rooftop Brands TM All rights reserved Patent Pending Conforms to safety requirements ASTM, CPSIA and FCC.


Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference,

including interference that may cause undesired

operation of the device.

Tel: + (1) 949-566-9573 • www.rooftopbrands.com



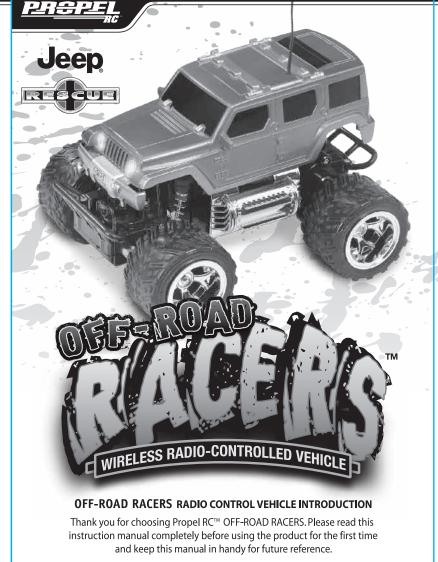





- Radio-controlled 4X4 style monster truck for wireless driving action inside and outside
- Real working front and rear shocks Real working LED headlamps


# SET-UP


1. Installing the batteries into the vehicle. Always use fresh batteries. Alkaline or rechargeable batteries are recommended for best performance.

Open the battery cover on the vehicle (see diagram A). Insert four (4) 1.5 V AA batteries (not included) into the battery components and replace the cover (see diagram B).

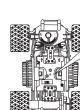

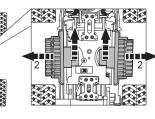

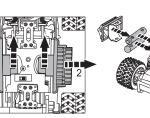


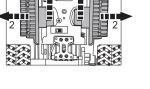



2. Installing the battery into the remote control.


Unscrew the safety screw on the battery cover and remove the battery cover (see diagram C). Insert one (1) 9V battery (not included) into the battery component, ensuring to match polarity and replace the battery cover.

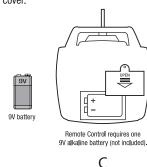

# REMOTE CONTROL SPECIFICATIONS AND FUNCTIONS

- 1. Remote control functions:
- Forward straight - Forward left
- Forward right - Backward straight

THROTTLE CONTROL FORWARD BACKWARD

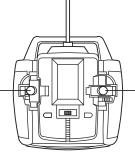

Backward left

- Stop

- Backward right

DIRECTION CONTROL TURN LEFT TURN RIGHT

## **OPERATING YOUR OFF-ROAD RACER**

## Turn your vehicle on:

- Pick-up your vehicle and turn over the vehicle, so the under carriage is facing you. Make sure the batteries are properly installed and the battery compartment door is properly closed
- You will see an ON/OFF on the underside of the vehicle between the battery compartments. Move switch to the ON position and gently set the vehicle on the ground.

## **DRIVING YOUR VEHICLE**

- Move the Throttle Control up to make the vehicle move forward. Move the Throttle Control down to make the vehicle move backward.
- Move the Direction Control left to turn the vehicle left.
- Move the Direction Control right to turn the vehicle right.
- To break or quickly stop simply pull or push the Throttle Control in the opposite direction.

## **WARNING** DO NOT USE YOUR VEHICLE IN FOUL WEATHER!









## **TROUBLESHOOTING**

Prior to calling the help line, please check for a solution below.

Problem	Possible cause(s)	Solution
Vehicle will not move	weak batteries; no batteries	Install new batteries in remote control and in vehicle
Vehicle does not respond properly to remote control	Antenna missing or improperly installed Another RC vehicle may be transmitting on the same radio frequency	Refer to SETUP section to correctly install antenna Move to a new location where no other RC vehicle are present
Vehicle loses connection to remote control	Using vehicle in a small enclosed area Using vehicle indoors Antenna improperly installed Low batteries in transmitter or vehicle	Move outdoors to a large open area.  Correctly install antenna. Install new batteries in remote control and in vehicle.
Vehicle has new batteries, but slower than normal	Driving vehicle for too long at high speeds, causing motor to overheat	Let vehicle sit still for 10-15 minutes