

SPECIAL STUNTS

90° POP-UPS!

When the vehicle is moving backwards at a moderate speed, quickly press the upper part of the left control pad (to move forward) and the vehicle will jump up 90° on its rear tires! When the vehicle is 90°, if you move backwards, it will return to normal 4-wheel operation.

360° Spins!

When the truck is in the 90° position you can spin left and right 360° degrees. To make a "left 360° spin" you must simultaneously press on the forward and left turn pads. See **Diagram B** below. To make a "right 360° spin" you must simultaneously press on the forward and right turn pads. See **Diagram C** below.


SWAY LEFT AND RIGHT!

Make your vehicle dance to music when it is riding 90° by pressing the right control pad left and right.

LIGHT SHOW!

Create a multi-colored light show when using your vehicle in a dimly lit area.

 Diagram B




360° Left Spin



Stands up 90° on its Back Wheels!



 Diagram C



360° Right Spin



Blazing Fast Spins



Sway to Music

WARNING!

- Choking/Cutting Hazard. Small parts not suitable for children under 8 years of age.
- Keep hands, hair, jewelry and loose clothing away from the wheels any time the transmitter power is turned to the ON position.
- Turn off the transmitter when not in use.
- New alkaline transmitter batteries are recommended for maximum performance.
- Parental supervision recommended at all times.
- To avoid interference with each other, do not use remote control vehicles with the same frequency in the same area.
- Do not break the antenna and be careful not to point it near your eyes or the eyes of others as serious injury may result.

CARE AND MAINTENANCE

- Remove the batteries from the transmitter when it is not used for an extended period of time.
- Gently wipe the controller and car with a damp cloth to clean. Do not use soap or solvents as they can damage the surface.
- Keep the car and transmitter away from direct heat or strong sunlight.
- Do not submerge the car or transmitter into water, they both will be damaged beyond repair.
- Parental guidance is recommended when installing/replacing the batteries or charging.
- Always select a safe place to play. Never operate your vehicle in the street.
- Do not operate your vehicle on sand as damage to the vehicle may result.

FCC Part 15 B Notice

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

©2010 Rooftop Brands™ All rights reserved. Patent Pending
Conforms to safety requirements of ASTM, CPSA and FCC.



FCC Prequal RC
15054-PPL

FCC ID: VLE15054-PPL-2
This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Tel. + (1) 949-566-9573 • www.rooftopbrands.com



THE ORIGINAL
CRAZY DANCER
R/C ACTION STUNT TRUCK
User Guide

90 DEGREE FLIPS!
AGES 8 AND UP

DANCES LEFT AND RIGHT TO MUSIC!

Crazy Dancer™ Remote Control Stunt Vehicle
Please read this instruction manual as it contains valuable information on how to properly drive and care for your Crazy Dancer™

Styles and colors may slightly vary.

 
NOTE: READ BEFORE USE

Please read this instruction manual prior to using your Crazy Dancer™ Stunt Truck in order to familiarize yourself with the product functions. Be sure to follow all battery warnings and charging instructions to ensure proper and safe operation of your product.

CHARGING YOUR CRAZY DANCER™ RC STUNT TRUCK

Be sure to properly charge the battery pack before play. Proper charging will ensure maximum battery life and hours of exciting play with your Crazy Dancer™ RC Stunt Truck.

Battery Charging Diagram

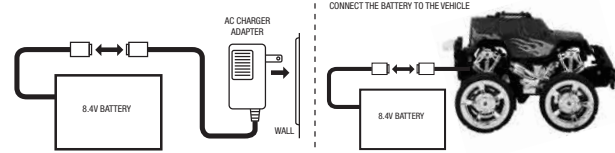

NOTE: Be sure to use the included battery charger to charge the included rechargeable battery otherwise damage to your product may occur.

 
1. Connect the battery-charging adapter to the connector on the rechargeable battery.
2. Plug the charger into a standard 110V electrical outlet that is properly installed and grounded.
3. Before using your vehicle for the first time, charge the battery for 5 hours. On subsequent charges, allow the battery to charge for 3 hours.
4. To disconnect the battery pack from the charger, first unplug the wall adapter, then disconnect the adapter from the battery by pressing the battery release button on the plastic connector.

NOTE: Battery life depends on how the vehicle is used. The Crazy Dancer™ RC Stunt Truck operates for approximately 20 minutes per charge. The 8.4V nickel-cadmium battery should be charged with adult supervision.


BATTERY WARNINGS

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (refer to included diagrams).
- Do not dispose batteries in a fire as batteries may leak or explode.

TRUCK DIAGRAM

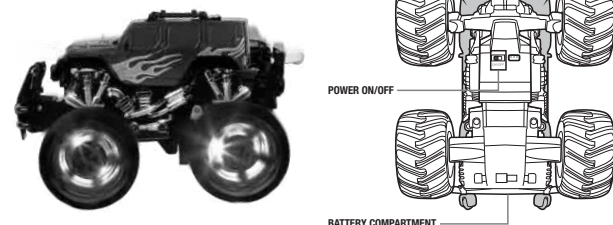

REMOTE CONTROL DIAGRAM

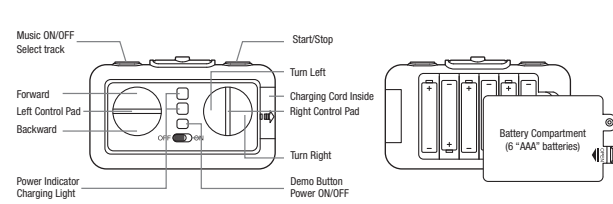 

BASIC CONTROL FUNCTIONS

Turn on the power switch on the bottom of the vehicle first, and then turn on the power switch on the back of the controller. Press the START/STOP button to start your vehicle.

Press the upper part of the left control pad to move the vehicle forward.

Press the lower part of the left control pad to move the vehicle backward.

Press the left part of the right control pad to turn the vehicle left.

Press the right part of the right control pad to turn the vehicle right.

To rotate the vehicle left, press the upper part of the left control pad while pressing the left part of the right control pad.

To rotate the vehicle right, press the upper part of the left control pad while pressing the right part of the right control pad.

Normal control distance is approximately 80 feet in a non-interference area.

OPERATING YOUR CRAZY DANCER™ RC STUNT TRUCK

1. Charge the included 8.4V rechargeable battery as described in **Battery Charging Diagram** on page 1.
2. Insert the rechargeable battery into the battery compartment on the backside of the vehicle and properly close the battery compartment door. See **Diagram A** on page 1.
3. Insert one 9V battery (not included) into the bottom of the wireless controller. NOTE: the battery compartment is designed so that the 9V battery must be placed in the proper direction or it will not fit correctly. Please study the diagram inside the battery compartment and do not force the battery. Hint: If having difficulty, try turning the battery in a different direction.
4. Install the included antenna into the top of the wireless controller. When installing the antenna, turn or "screw" the antenna clockwise until it stops moving. Never force the antenna once it stops turning. Hint: Remember to extend the antenna for maximum performance and control distance.
5. Turn on the wireless controller by placing the power switch on the backside of the remote to the ON position. You will notice a red LED light turn on in the front of the controller.
6. Turn on the vehicle by placing the "ON/OFF" switch at the bottom of the vehicle to the "ON" position, you will hear a "beep" sound and see the running lights, light up. The lights will always stay on until you turn the power switch at the bottom of the vehicle to the "OFF" position.
7. Press the START/STOP button on the upper right edge of the remote control unit to start the vehicle. You can begin to play after you hear the vehicle "ignition start sound".
8. Operate the vehicle and do crazy stunts by using the left/right and forward/back control pads.
9. Turning off your vehicle: Make sure to first turn off your wireless controller, then turn the switch on bottom of the vehicle to the "off" position. When your vehicle is powered off, there will be no more flashing lights.

NOTE: THE VEHICLE WILL NOT OPERATE UNLESS THE START/STOP BUTTON IS PRESSED.

OTHER BUTTON FUNCTIONS

1. **HORN:** Tap the START/STOP button to sound the vehicle's built-in horn.
2. **PLAY MUSIC:** Press the MUSIC button on the upper left edge of the remote control to listen to the built-in sound tracks. Press the MUSIC button again to cycle through the 3 sound tracks.
3. **TURN OFF MUSIC:** While playing a music track, tap the START/STOP button to turn off the music.
4. **DEMO MODE:** To familiarize yourself with various functions of the vehicle, press the DEMO button to watch the vehicle dance by itself along to music! Press the DEMO button again to watch the vehicle dance to the next included sound track. There are 3 built-in sound tracks.
5. **STOP DEMO MODE:** Under the DEMO mode, tap the START/STOP button to stop the demo mode.
6. **LOCK THE VEHICLE:** Hold down the START/STOP button for approximately 3 seconds to lock the vehicle. You will hear the words "bye-bye" and the motor will turn off. NOTE: When the vehicle is locked the lighting system will flash a repeating pattern until you unlock the vehicle and start the vehicle again. To unlock the vehicle, hold down the start button.