

## 4 STEP 3: USING YOUR AMPHIBIOUS TANK

Once you have fully charged your Amphibious Tank you are now ready to control it to go anywhere on land or on water!



Fig. 6



Fig. 7

### ● TO USE THE HEADLIGHTS

1. Press the right-hand power switch in behind in car. (see Fig. 7).
2. Press the car behind to open On/Off, the headlamp is bright. (see Fig. 6).

### ● TO USE YOUR AMPHIBIOUS TANK ( Land Only )

1. Extend the antenna behind the cockpit on the vehicle.
2. Press the On/Off to turn the vehicle on (see Fig.7)
3. Control from a distance the automatic conversion in car ocean with the land ( see Fig.8)
4. Press and hold the Deploy button to release the wheels until the wheels are fully wxtended. ( see Fig.9 )
5. You will hear a clicking sound when the wheels are fully extended and in the full down position .When you hear the clicking sound. Release the Deploy burton.
6. Press the Left & Right control buttons to control the Amphibious Tank to move forward, backward, left & right on land. (see Fig.13 )

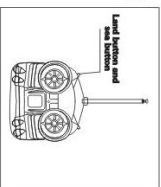


Fig. 8

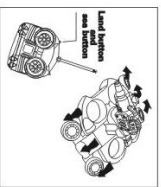


Fig. 9

### ● TO USE YOUR AMPHIBIOUS TANK (On the ocean)

1. Extend the antenna behind the cockpit on the vehicle.
2. Controlling from a distance the car will convert automatically (see Fig.9)
3. Make sure your vehicle is turned on .Place your Land Sea 2 R/C into water.
4. Press and hold the retract Burton to retract the wheels until the wheels are fully retracted,(see Fig.9)
5. You will hear clicking sound when the wheels are fully retracted and in the full up position .When you hear the clicking sound , release the Retract burton(see Fig.12)
6. Press the left & Right control burton to control the land Sea 2 R/C to move forward. Backward , left & right in water.(see Fig.13)
7. The built-in safety switch forbids the wheels from spinning when fully retracted.(see Fig.10)

▲ **NOTE:** Although water-resistant,do not submerge your R/C Handset underwater for more as it may cause damage.

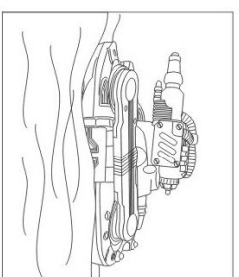


Fig. 10

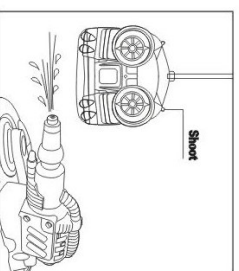


Fig. 11

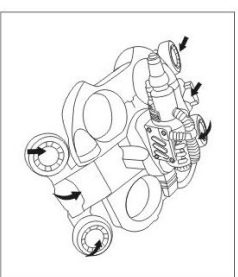


Fig. 12

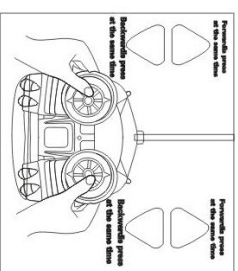


Fig. 13

### ● How to squirt water on the land/water

1. Make sure the water bottle is full of water before pressing the squirt button. (Fig. 11)
2. The casemate should be level while launching.
3. Make sure the ambient is safe.
4. The squirting distance can reach 3 to 5 meters.
5. If the amphibious tank is to be used on the water, install the water pipe on it for it to absorb water automatically.

Amphibious tank can easily make the transition from water land in just seconds! Here's an example for non-stop R/C fun:

1. Turn your amphibious tank on ,pres the MODE burton to engage land mode .
2. Control your vehicle to go in any direction with the full-function Handset.
3. When you come upon a body of water ,simply drive you vehicle into the water until it begins to float.
4. Press the MODE burton to engage Sea Mode and press and hold the Retract burton until your wheels are fully retracted.
5. Control your vehicle to go anywhere on water with the full-function Handset.
6. When you come upon a body of land, simply ride your vehicle onto the turf until it stops.
7. Press hold the Deploy burton until your wheels are fully extended.
8. Once again, control your vehicle to go anywhere on land with the full-function Handset.