

IV. INSTRUCTIONS OF CONTROL PANEL

1. There are two control switches on the motorcycle's right side, one is "POWER SWITCH / VOLUME", another one is "NORMAL / DEMONSTRATE", please see PICTURE 5 show.
2. There are many function control on the controller (as PICTURE 4 show):
 - A. OFF/ON: power switch
 - B. LEFT LEVER: Push to operate the motorcycle goes forward, and the headlight will be lighting at the same time. Pull back to make the motorcycle stop, and the stoplight will be lighting at the same time.
 - C. RIGHT LEVER: to operate the motorcycle turns left/right, and the turn light will be lighting at the same time.
 - D. HORN: press it to make the simulated horn sound.
 - E. ELECTRONIC LOCK: press it to make the simulated electronic lock sound.
 - F. START/FLAMEOUT: press it to make the start-up sound, and activate the other functions.
The motorcycle will be dead when repress this button.
 - G. GUN: press it to make the simulated gun sound.

CAUTION: 1. Firstly press the "START/FLAMEOUT" to start the motorcycle and activate the other functions.
2. The motorcycle can be control goes forward, but can not go backward.

V. INSTRUCTIONS OF DEMONSTRATION

THIS PRODUCT ESPECIALLY INSTALL THE FUNCTION TO DEMONSTRATE THE SIMULATED SOUND & LIGHT.

1. Turn on the motorcycle, and adjust a fit volume.
2. Turn the "NORMAL ←→ DEMONSTRATE" to "DEMONSTRATE".
3. Turn on the controller, then press the "START/FLAMEOUT" to make the start-up sound, and the other functions will be activated at the same time.

CAUTION: 1. The sound volume adjust by the knob of "ON/OFF/VOLUME";
2. The "LEFT LEVER" & "RIGHT LEVER" cannot control when demonstrating.

VI. TO CHARGE THE BATTERY

1. Let the charger to connect with the battery by the plastic connection-peg;
2. Take the charger to connect with the household power socket directly, then it will begin to charge battery
3. Please take off the charger and the connection-peg after finished charge.

CAUTION:
A. It must by adult to charge the battery;
B. The input voltage should be according to the instruction label on the charger;
C. The "CHARGE INDICATOR" will be lighting when charging.
D. It is natural that the charger will be warm when charging;
E. For prolong useful life of the battery, please to charge it after poor of power.

VII. SAFETY CAUTIONS & PRODUCT MAINTENANCE

1. Please keep all the accessories to avoid children swallowing;
2. Please change another place to play if there is severe wave interference in where you're playing;
3. Please keep the operation distance in 50 meters;
4. Please to change/charge the batteries when the product is poor of operation;
5. Please don't put the useless batteries into the fire, water or dismantle it to avoid accident;
6. Please don't throw the packing optionally to avoid polluting the circumstance;
7. Please don't keep this product in where is hot or humid;
8. Please clean the battery with dry cloth if it's wet;
9. Please turn off the power and take out the batteries after playing.

VIII. TROUBLE SHOOTING

PROBLEMS	SOLUTIONS
Cannot fully charge the battery.	1. If the charger or battery was damaged. 2. If the charge socket was damaged or loose connection. 3. If the anode and cathode contacted wrong direction.
Poor operation or goes slowly.	1. If the battery is poor of power. 2. If use the unsuitable battery. 3. If the antenna pull out enough.
Does not work at all.	1. If not turn on the power switch on product/controller. 2. If the battery was installed wrong ways or flat of power. 3. If the operation distance go beyond 50 meters. 4. If there is severe wave interference or the same frequency in where you're playing. 5. If the connection sheet of the controller was distorted and loose connection.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: This product contains tiny parts. Do not give it to children under 3 years to avoid choking danger.
It's the better way to playing this product by adult guidance.