



Preparation:


1. Press the release button and open the clear cover.

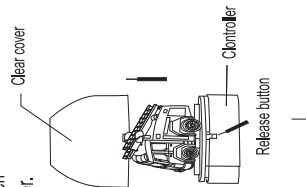

2. Take out blister from the controller and obtain the antenna. Then unscrew the car from the blister to obtain the car.

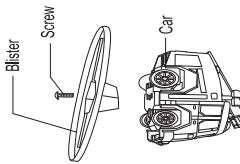


4. Unscrew and lift up the battery door which located on the controller. Place 3 "AA" batteries (not included) into the battery car. Then relocate the battery door and tighten the screw.

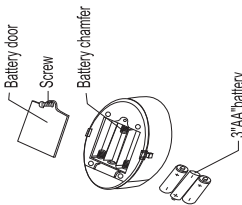


CHARGE:

Remove the socket cover of charger, press the charging position in the car into the charging jack of the charger properly, the charging LED in on, about 60 seconds, the LED goes out automatically, the car is fully charged.

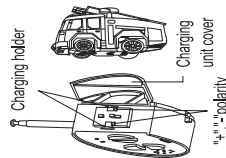


OPERATION:

1. Fully extend the antenna when playing.
 2. Remove the socket cover of charger, press the charging position in the car into the charging jack of the charger properly, the charging LED in on, about 60 seconds, the LED goes out automatically, the car is fully charged. When the horn switch is push on "forward/backward" button, the horn will send out "hooter" sounds, otherwise, it will not send out any sounds.

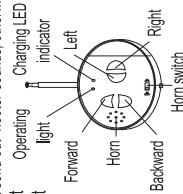

3. For best results operate on a smoothdry surface. Radio waves control this toy and can easily be interrupted. Avoid using near phones, electrical lines or Cb's.

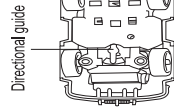

CAUTION:

- a). Do not touch the antenna during operating, or the controlled distance may be affected.
- b). If the car becomes apparently slower during operation, it might due to insufficient power, please charge the car follow the illustration.
- c). The car should decelerate when turning rapidly or reversing, or the car may turn over.
- d). Replace the new batteries of the controller if they lack of power, the car can't be charger or the indicator lamp turns dim.
- e). Pay attention to the direction of the car head & the charge position when charging.
- f). Please remove the battery of the controller when it is not used for a long time.
- g). Do not put the car on the charge base, or the fastener will be out of shape; but if the car is not fastened, it can not be charged.
- h). When the horn switch is push on "forward/backward" button on the controller, the horn will send out sounds.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.