



INSTRUCTION MANUAL

Please read through this instruction manual carefully before starting to operate. Please be sure to remove all accessories and components from the packaging.


BATTERY REQUIREMENTS

Alkaline batteries are recommended for best performance.
 Transmitter: 4 x "AA" size batteries

BATTERY INSTALLATION


Transmitter

1. Remove battery cover located at the back.
2. Insert 4 x "AA" alkaline batteries following the + / - marking (batteries not included).
3. Replace battery cover.

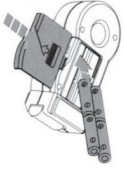


CHARGING YOUR MICRO MONSTER

1. Open the transparent cover and pull out the charging cable.
2. Insert the charging plug into the charge input at the rear of the vehicle. The input LED will light to indicate the vehicle is charging.
3. When the vehicle is fully charged the LED light will go out. The charge will last for up to 5 minutes.

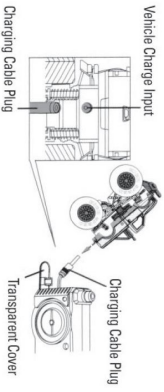


HOW TO PLAY

1. Turn the Micro Monster's switch to "ON" position.
2. Fully extend the antenna on the transmitter.
3. Turn the transmitter's switch to the "ON" position. You are ready to play!

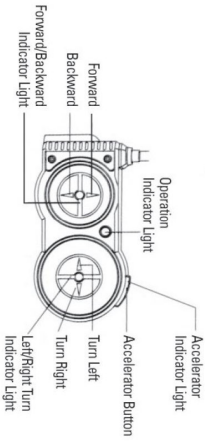

- The headlights operate only when the vehicle is moving forward.
- The vehicle will automatically decelerate when turning to prevent roll over.
- If your vehicle veers to the left or right you can correct the steering by turning the trim adjustment on the underside of the vehicle.

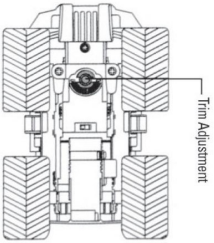

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

MAINTENANCE AND CARE

- To avoid damage to vehicle, never drive it on a wet surface, sand, mud, or snow.
- Do not expose the vehicle to extreme temperatures.
- Be sure to remove the batteries from the transmitter when storing the product.
- Periodically remove dust and debris from vehicle's wheel mechanism using a small brush, toothpick, or tweezers.
- To clean vehicle, use a damp cloth and then wipe dry. Do not use chemical cleaners.
- Keep this instruction manual for future use.
- Avoid holding the wheels when rotating as this may cause the electronic components to short-circuit, overheat, or malfunction.
- Long periods of play time can generate high heat level which causes wear and tear. To extend product life, allow 10 minutes to cool down before installing new batteries.


HELPFUL HINTS

- If vehicle does not respond to the transmitter, move closer to the vehicle.
- If vehicle loses power or you experience a loss of performance, charge the battery. If problem persists, check wheel mechanism for debris. If there is no debris, replace transmitter batteries.
- When the transmitter range decreases, replace the batteries.
- Occasionally, interference from other electronic devices may occur. If so, move vehicle away from other electronic device and resume play.

CAUTION

- Do not expose vehicle or transmitter to electric shock.
- Do not play in thunderstorms.
- To avoid injury, do not touch the wheels when the vehicle is turned ON.
- Do not leave vehicle or transmitter near sources of heat or direct sunlight for extended periods of time or damage to electronic components may occur.
- Do not operate the vehicle near small children.
- Do not mix old and new batteries together. Do not mix battery types or brands.
- Always select a safe place to play. Never drive your vehicle in the street.
- Do not attempt to recharge non rechargeable batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Be sure to insert batteries with the correct polarity. Failure to do so may short out the batteries and damage the transmitter.
- Exhausted batteries are to be removed from the toy.
- Do not touch the motor after play as it may be hot.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

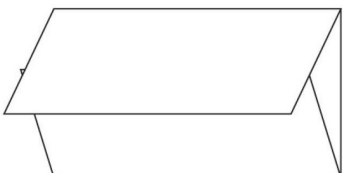

Instructions fold inward