



Asiatelco Technologies Co.
WCDMA Wireless Cordless Phone
AGP-KW125 User Manual

R1.2

Author	Revision	Changes	Date
Tim	R1.0	Initial version	2013-07-31
NJXU	R1.1	Modify	2013-08-13
Mabel	R1.2	Modify	2014-8-17

Confidential Material: This document contains information that is proprietary and confidential, reading and copying this document is prohibited without permission from AsiaTelco Technologies Co.

Table of Contents

Asiateco Technologies Co.	-----	1
WCDMA Wireless Cordless Phone	-----	1
AGP-KW125 User Manual	-----	1
R1.2	-----	1
Table of Contents	-----	2
Safety and Maintenance	-----	6
Your Phone	-----	11
1.1.	KEY DESCRIPTIONS	11
1.2.	STATUS ICONS	14
1.3.	LCD BACKLIGHT	15
1.4.	ADJUST THE VOLUME	16
1.5.1.	During a call.....	16
1.5.2.	During MP3/FM playing	16
Instructions before Use	-----	17
2.1	POWER ON/OFF	17
2.1.1.	Power on	17
2.1.2.	Power off	17
2.2	SECURITY PASSWORD	17
2.2.1.	PIN code	17
2.2.2.	PUK code	18
Basic Functions	-----	19
3.1	DIAL PHONE	19
3.1.1.	Direct dial.....	19

3.1.2.	Quick dial from contacts list	19
3.1.3.	Quick dial from All calls list.....	19
3.2	ANSWER INCOMING CALL	20
3.3	TERMINATE CALL	20
3.4	MAKE EMERGENCY CALL	20
3.5	MAKE INTERNATIONAL LONG-DISTANCE CALL	21
3.6	TALK OPTIONS.....	21
3.6.1.	Hold/release talk state	21
3.6.2.	Dial second number	21
3.6.3.	Answer second incoming call.....	22
3.6.4.	Select current phone number.....	22
Menu Functions	-----	24
4.1	MESSAGES	24
4.1.1.	Write Message.....	24
4.1.2.	Conversations.....	25
4.1.3.	Inbox.....	25
4.1.4.	Drafts	25
4.1.5.	Outbox.....	25
4.1.6.	Sent messages	25
4.1.7.	Archive.....	26
4.1.8.	Delete messages	26
4.1.9.	Email.....	26
4.1.10.	Broadcast message	26
4.1.11.	Templates.....	27
4.1.12.	Message settings.....	27
4.2	FILE MANAGER	27
4.3	PHONEBOOK.....	27

4.4	FUN & GAMES.....	29
4.5	CALL CENTER.....	29
4.5.1.	Call history.....	29
4.5.2.	Call settings.....	30
4.6	MULTIMEDIA.....	32
4.6.1.	Image Viewer.....	32
4.6.2.	Media Player.....	32
4.6.3.	Photo editor.....	33
4.6.4.	Sound Recorder.....	33
4.6.5.	FM Radio.....	33
4.7	ORGANIZER.....	34
4.7.1.	Calendar.....	34
4.7.2.	Tasks.....	35
4.7.3.	Alarm.....	35
4.7.4.	World clock.....	36
4.7.5.	Notes.....	36
4.8	SETTINGS.....	36
4.8.1.	Phone settings.....	36
4.8.2.	Network settings.....	37
4.8.3.	Security settings.....	38
4.8.4.	Restore Factory Settings.....	38
4.9	USER PROFILES.....	38
4.10	EXTRA.....	38
4.10.1.	Calculator.....	39
4.10.2.	Unit Converter.....	39
4.10.3.	Currency Converter.....	39
4.10.4.	Stopwatch.....	39

4.10.5.	Ebook Reader.....	40
4.11	SERVICES.....	40
4.12	CONNECTIVITY	41
4.12.1.	WLAN	41
4.12.2.	Bluetooth	42
4.12.3.	Data account.....	42
4.12.4.	Internet tethering.....	42
4.12.5.	Connection management.....	43
FAQ	-----	44

Safety and Maintenance

■ While using the phone, please observe following points

- Before use please read instruction manual carefully.
- Do not power on the phone when use of the phone is prohibited or it may cause interruption or danger.
- Please keep your phone off when you are on airplane. If functions that will automatically power on your phone, such as alarm clock or calendar, are setup, please check and cancel the configuration before boarding the plane.
- While using the phone, please keep away from heat source and high voltage environment, such as electric appliances or electric cooking devices. Please use the phone under normal temperature. Using it under temperature above 55°C or below -10 °C may damage the device.
- Pay attention to fire prevention. Power off the phone while is near to the flammable materials, such as gas-filling station and fuel storage.
- Do not hold the phone in your hand while driving. Do not put the phone above air bag or within reach of airbag so as to prevent damage when airbag is inflated.
- Original battery, charger and accessorie should be used.
- Phone may cause interference to nearby electronic devices, so keep it away from electronic devices such as radio, PC, pacemaker and hearing aid, etc. Do not place the phone near credit card or magnetic field. Please power off your phone in hospital and other special places according to specific regulations there.

- Keep the phone away from mechanic vibration or shaking. Do not hit the screen of your phone with sharp tool.
- If plastic cover or case is used for phone, surface coating may be damaged.
- Do not disassemble the phone boldly.
- Do not use benzene or alcohol to clean the cover of your phone. Keep your phone away from corrosive chemicals such as detergent. Use clean and soft cloth instead and wipe gently.
- Prevent your phone from insulation or places with excessive smoke or dust.
- Your phone is not water-proof, so please keep it dry. Do not use it in damp environment, such as bathroom. Keep it away from rain and moisture.
- When you are to pull the charger away from your phone or cut off power supply of charger, please hold the connector tightly and then pull out. Do not drag the power cable.
- Do not rely on phone only as communication device for emergency, such as medical rescue.
- Keep the phone out of reach of children so as to avoid danger.
- **While using battery, please observe following points**
- Before use, please read instructions for use and as well as label on the surface of battery.

- Please charge the battery in a cool and well-ventilated room. Otherwise, high environment temperature may lead to overheat, smoking, burning, distortion or even explosion of battery.
- There are special protection circuits and devices inside battery, so do not open the battery; Otherwise it may lead to short circuit or electrolyte leak. If electrolyte enters eyes, there is danger of blindness. In such case, immediately wash eyes with clean water (Do remember not to rub the eyes with hands) and then go to hospital for treatment.
- Do not squeeze the battery and keep it away from mechanical vibration and shaking. Do not short connect the battery, for this may damage the battery and components connected to it. Short circuit may be caused by coin or clip directly connecting anode and cathode of the battery, so do not put the battery together with metal objects.
- Please keep the metal contact points and battery clean.
- Do not use damaged or depleted battery.
- The battery should be replaced when it can not meet the requirement for performance. Battery can be charged hundreds of times before it should be replaced. Battery belongs to consumables. Though it can be charged hundreds of times, its quantity of electric charge may decrease gradually. When service time (talk time and standby time) is found to have decreased, the battery shall be replaced.
- Prevent the battery from exposure to places with excessive smoke or dust. Do not use it in damp environment, such as bathroom. The battery is not waterproof; so keep it away from rain and moisture.

- Do not put the battery in places that are too hot or too cold. Temperature above 55 °C or below 0 °C may affect performance.
- Do not put the battery in fire so as to avoid explosion.
- Do not put the battery in water so as to avoid short circuit inside, resulting in battery overheat, smoking, distortion, damage or even explosion.
- Treat battery according to local regulations (for example, recycling). Do not treat battery as domestic garbage so as to avoid explosion and pollution.
- Special charger should be used for this battery for charging, and charging time should not exceed 12 hours.
- Keep battery out of reach of children to avoid danger.
- Do not place the battery in fire; follow local laws and ordinances in disposing used battery.

Using other types of battery, charger and accessories may violate the certification or warranty terms of equipment and may result in danger.

■ **While using charger, please observe following points:**

- Before use, please read instructions for use and as well as label on the surface of the charger.
- Do not disassemble or modify the charger or use it when power cable is damaged; otherwise there will be electric shock or fire, or the charger may be damaged.
- Do not touch the charger with wet hands. If the charger contacts water or other liquid, please immediately cut off the power supply.

- Do not short connect the charger and keep it away from mechanical vibration or shaking and direct sun shine. Do not use it in damp environment, such as bathroom. The charger is not waterproof; so keep it away from rain and moisture.
- Do not use the charger near electric appliances such as TV set and radio.
- When to pull out the plug, hold the charger instead of dragging the power cable so as to avoid damage of power cable.
- Keep the charger out of reach of children so as to avoid danger.

Your Phone

1.1. Key descriptions

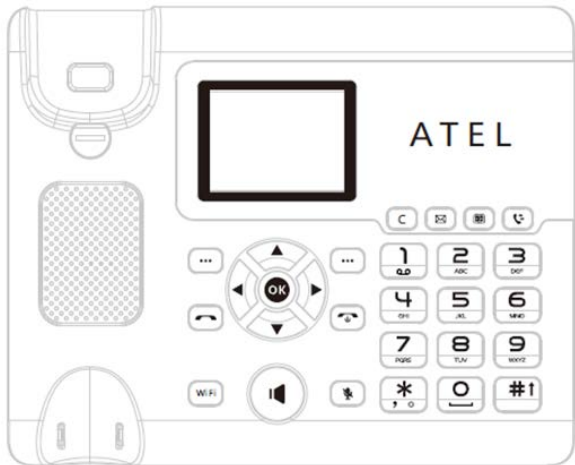









Figure 1 Keypad Definition






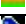 


1	LEFT SOFT KEY	Press to go into the main menu in idle screen;
2	RIGHT SOFT KEY	In idle screen, press it to enter phonebook; In other screen press it to back to the last menu
3	UP KEY	Shortcut to access the Media player menu in idle screen; You can scroll up the cursor through the UP key
4	DOWN KEY	Shortcut to access the Alarm menu in idle screen ; You can scroll down the cursor through the DOWN key
5	LEFT KEY	Shortcut to access the Profile menu in idle screen; You can scroll the cursor to left through the LEFT key
6	RIGHT KEY	Shortcut to access the contacts menu in idle screen; You can scroll the cursor to left through the RIGHT key
7	OK	Press it to enter main menu in idle screen; Press it to access the submenu

8	<p>Power key</p> 	Press to delete the characters you've entered
9		Shortcut to access the SMS menu in idle screen
10		Shortcut to access the phonebook menu in idle screen
11		Shortcut to access the Call Logs menu in idle screen
12		Press it to switch MUTE mode during call
13		Long press for seconds to power on/off the phone; Or press it to end phone call or back to the idle screen
14		Make phone call :input the phone number and press it to dial out
16	0~9 Numeric Keys	To input numbers and characters

17	*	In idle screen, press to enter *,+,P,W. In message editing screen, press to enter the special symbol mode.
18	#	In idle screen, press to enter # In message editing screen, press to switch the input method.
19	Speaker Key	Make hand-free operation(speaker icon)

1.2. Status icons

<Icons on the screen: >

	Signal strength indicator.
	You can use the 3G network services.
	New Email received
	Receives new MMS.
	Receives new SMS.
	Missed call.
	Ring only
	Open slient mode.

1.3. LCD backlight

LCD backlight can illuminate the screen. When you power on the phone, LCD backlight will turn on for a certain period. If no key is pressed during the specified time it will turn off automatically so as to save battery.

To setup the brightness and time :

- 1) [Menu]→[Settings]→[Display]→[LCD backlight].

1.4. Adjust the volume

1.5.1. During a call

1. Press [Up Key] to increase the volume.
2. Press [Down Key] to decrease the volume.

1.5.2. During MP3/FM playing

1. Press [#] key to increase the volume.
2. Press [*] key to decrease the volume.

Instructions before Use

2.1 Power on/off

2.1.1. Power on

The device can work on both single battery mode and single charger mode.

1. Press and hold [Power key] until boot screen appears.
2. If screen prompts for PIN code, please input your PIN code and then press [OK] key.

Please contact with the operator for the default PIN.

After power on, if SIM card inserted is valid, your phone will automatically search available network.

2.1.2. Power off

To power off, please press and hold [Power key] until power off screen appears.

2.2 Security password

You can use security password to avoid unauthorized use of your SIM card.

2.2.1. PIN code

PIN code is used to prevent illegal use of user's SIM card. If your phone has enabled PIN code protection, there will be prompt for entering PIN code. If wrong PIN code is entered for three times, SIM card will be automatically locked. You have to enter PUK code so as to unlock it. PIN code is related to SIM card instead of the phone, and is provided by network service operator.

2.2.2. PUK code

PUK code, referring to personal unlock code, is used to unlock SIM card that is locked because of wrong input of PIN code. If wrong input of PUK code amounts to ten times, SIM card will lose efficacy. PUK code is provided by network service operator.

Basic Functions

3.1 Dial phone

3.1.1. Direct dial

1. In standby state, press the number keys to enter the phone number and then press [Send key] to call.
2. Press [CLR] to clear the last digital or long press it to clear all. If the phone number being dialed out can be recognized by phonebook, name and icon of contact person will be displayed on dialing screen, and calling animation is displayed at the same time.
3. Press [Power key] to end a call.

3.1.2. Quick dial from contacts list

1. In standby state, press [Right soft key] to enter the phonebook.
2. Slide the scroll bar to choose a contact, or select **Search** to search out the contact you want to call, either by name or by number.
3. Press [Send key]→[Left soft key] to dial out.

3.1.3. Quick dial from All calls list

1. In standby state, press [Send key] to enter [All calls] list.
2. Slide the scroll bar to select the person you want to call or the number you want to dial.
3. Press [Send key] to dial out the number.

3.2 Answer incoming call

When there is an incoming call, incoming call animation will be displayed together with special ringtone.

1. Press [Send key] to answer calls.
2. Press [Power key] directly to reject the incoming call.
 - If phone number of the caller can be recognized, the number will be displayed on incoming call screen.
 - If information about the number is stored in contacts, caller's name and icon will also be displayed. At the same time, specified ringtone will be played or play music according to current settings.
 - If caller hides his/her number or the network bans call indication, the incoming call is displayed as *****.

3.3 Terminate call

1. When there is an incoming call, press [Power key] to reject the call.
2. During the call, press [Power key] to terminate current call.
3. Call that has just been dialed can be cancelled by pressing End key.

3.4 Make emergency call

As long as you are within coverage of network, you can make emergency call even you have not registered to local network or do not have SIM/UIM card. Enter local emergency number and then press [Send key] to make an emergency call.

3.5 Make international long-distance call

1. Press [0] key until “+” sign appears before international phone number can be dialed. “+” sign tells the network you are making an international call.
2. Input country code, area code (without 0) and phone number
3. Press [Send key] to call.

Note: Some networks do not allow “+” for dialing international numbers.

3.6 Talk options

The phone provides some talk control functions in the process of call.

- During the call, press [Left soft key] to enter [options] menu to access the talk control functions.

3.6.1. Hold/release talk state

If network supports, you can hold current talk.

1. During the call, press [Left soft key] and select [Hold single call] in the [Options] menu.
2. To activate held talk, Press [Left soft key] and select [Retrieve single call] in the [Options] menu.

3.6.2. Dial second number

During a call you can dial another number.

1. Directly enter the second number and press [Send key] to call
2. Or press [Left soft key]→[Main menu]→[Phone book] to select the number and press [Send key] to call .

When the second number is put through, the first call will be held automatically.

3.6.3. Answer second incoming call

Please make sure the network supports call waiting function and the status has been set to Enabled.

1. If there is a second incoming call in the process of talk, you'll hear the "Beep" tone and the screen will prompt.
2. Press [Left soft key] and select [Answer] in [Options] menu.
When the second call is put through, the first call will be switched to hold state.
3. Press [Power key] to terminate the second call.

3.6.4. Select current phone number

When the second call is answered, press [Left soft key] to [Options] menu:

Swap: to hold current call and activate the held call

Conference: Add held call to conference call.

End single call: Terminate current call.

End all calls: Terminate two calls.

Transfer: Transfer current call to another call. You can enter the number.

New call: To make another call.

Main menu: enter main menu screen

Sound recorder: Enter record state.

DTMF: Status to On/Off.

Note: It is not all networks provide the multi-party service.

Menu Functions

You can press [Left soft key] in standby state to enter the main menu. Press [Right soft key] or [Power key] to return to standby mode.

4.1 Messages

In standby state, enter [Menu]→[Messaging] menu.

4.1.1. Write Message

In the edit mode, you can select edit SMS or MMS.

When editing SMS, press the [Left soft key] to enter [options] menu, there're below options:

Send to: Send the message.

Insert symbol: Insert the symbol in the message.

Input method: Select input method you want.

Input method options: Select input mode.

Add picture: Add picture in the MMS from phone.

Add sound: Add sound from phone, and also you can record sound for the MMS.

Add video: Add video from phone.

Add subject: Add subject for the MMS.

Slide options: Add a new slide behind or before the MMS.

Switch to MMS: Switch SMS mode to MMS mode.

Advanced: You can insert text template, attachment, contact number, contact name or bookmark in MMS or SMS by This function.

Save: Save SMS or MMS to drafts.

Details: View details of the SMS or MMS.

4.1.2. Conversations

If [Conversations] is set to on, it will display the conversations folder in the menu list. To set the status:

1. [Menu]→[Messaging]→[Message settings]→[Coversations]
2. The status can be set to On or Off.
3. Once the status has been set to On, [Inbox]/ [Outbox]/ [Sent messages] folder will be replaced by [Conversation] folder in [Messaging] menu list.

4.1.3. Inbox

The SMS and MMS you received are all stored in [Inbox].

Open a SMS or MMS and press [Left soft key] to enter [Options] menu, there're options: View, Reply, Call sender, Forward, Delete, Delete all, Save to phonebook, sort by, move and mark the SMS or MMS and so on.

4.1.4. Drafts

SMS and MMS which are not sent out can be saved to [Drafts].

4.1.5. Outbox

SMS and MMS which fail to send out will be saved to [Outbox].

4.1.6. Sent messages

SMS and MMS which have been sent out can be saved to [Sent messages]. Please choose Save sent message in [Common settings] firstly.

4.1.7. Archive

You can move SMS and MMS to [Archive] from [Inbox], [Outbox], [Sent messages] or [Conversations].

4.1.8. Delete messages

Delete the messages from [Inbox], [Drafts], [Outbox], [Sent messages] or [Archive]. Also you can delete all messages once through This function.

4.1.9. Email

After setting Email accounts, you can send or receive e-mail.

The details as follows:

1. Start to create account: Input your email account address.
2. Select the email's protocol: select pop3 or IMAP4.
3. Select Data account: select data account from GPRS account.
4. Input receiver email's server.
5. Input send email's server.
6. Input your user name.
7. Input your user password.
8. Activate the account you set.
9. [Email accounts]→[Options]→[Edit]→[Advanced settings] → [Outgoing server]→[Authentication] →On.
10. In [Advanced settings] menu, you can set outgoing/incoming server, signature and account settings.
11. You can edit email and send or receive.

4.1.10. Broadcast message

There're options: Receive mode, Channel settings, Languages, Read messages.

4.1.11. Templates

There're some templates for SMS or MMS.

4.1.12. Message settings

There're settings for Text message, Multimedia message, Service message, Conversation.

1. Text message setting contains Profile settings, Voicemail server, Common settings, Memory status, Preferred conn.
2. MMS setting contains Profiles, Compose, Sending, Retrieval, Memory status.

4.2 File manager

In standby state, enter [Menu]→[File manager] menu.

1. You can open, create or format the file in phone memory.
2. When you format the file, phone password should be input, the default password is 1122.

4.3 Phonebook

In standby state, enter [Menu]→[Phonebook] menu.

1. Move the cursor to Add new contacts, you can choose to save the contact to SIM or Phone.

2. Press [Left soft key] to enter [Options] menu, there're options:

Select, Mark several, Caller groups, Phonebook settings.

Select: Save to SIM or Phone.

Mark several: You can mark or unmark multiple/all contacts, to delete or send SMS.

Caller groups: add the name、 picture、 ringtone and video of the groups then you can append the members, only contacts saved in phone can be added to groups.

Phonebook settings: there're following settings

- a) **Preferred storage:** Select priority storage location for a new contact, to SIM, Phone or Both.
- b) **Speed dial:** Set speed dial from phonebook, then you can dial the contact by pressing the corresponding numeric key in standby mode.
- c) **My number:** Set personal business cards which can be sent.
- d) **Extra numbers:** You can edit owner number and Fixed dial.
- e) **Memory status:** View memory status.
- f) **Copy contacts:** Use the menu to copy contacts between the SIM/UIM card and the phone.
- g) **Move contacts:** Use the menu to move contacts between the SIM/UIM card and the phone.
- h) **Delete all contacts:** Use the menu to delete all contacts from the SIM/UIM card or phone, and the phone password should be input, the default password is 1122.

- i) **Name display:** set the name display format.
3. Move the cursor to contacts list, press [Left soft key] to enter [Options] menu, there're options: View, Send message, Call IP dial, Edit, Delete, Copy, Move, Send business card, Add to Blacklist, Mark several, Caller groups, Phone settings.

4.4 Fun & Games

In standby state, enter [Menu]→[Fun & Games] menu.
Currently provides OperaMini, YahooMessenger, Facebook.

4.5 Call center

In standby state, enter [Menu]→[Call center] menu.

4.5.1. Call history

In standby state, enter [Menu]→[Call center]→ [Call history] menu, there're below options:

Missed Calls: press [OK] to view missed calls list

Dialed Calls: press [OK] to view dialed calls list

Received Calls: press [OK] to view received calls list

In the missed、dialed、received calls interface, press [Left soft key] to [options] menu, there're options:

- a) **View:** View the Type, Number, Call time, Times of call.
- b) **Call:** To call back.
- c) **Send message:** Send message to the call.
- d) **Save to phonebook:** Save the number to phonebook.

- e) **Add to blacklist:** Add the number to blacklist, then it can't reach your phone.
- f) **Edit before call:** enter the dial number screen, you can edit the phone number.
- g) **Delete:** Delete the call.

Delete Call Logs: You can delete all dialed calls, missed calls, received calls or all calls.

Call Timers: You can view the duration of last call, dialed calls, received calls or reset all time

Call Cost: This function requests network's support. Please contact your operator for details.

Text msg. counter: Count the number of send and received messages

GPRS Counter: Press [OK] to view GPRS Counter (Unit B), there're options: Last sent, Last received, All sent, All received, Reset counter.

4.5.2. Call settings

In standby state, enter [Menu]→[Call center]→ [Call settings] menu, there're below options:

Caller ID: If you choose [Hide ID]. Your phone number will not be sent when you calling out. This function requests network's support. Please contact your operator for details.

Call waiting: This function requests network's support. Please contact your operator for details.

- a) **Activate:** Activate the Call waiting function.
- b) **Deactivate:** Deactivate the Call waiting function.

- c) **Query Status:** Query the status of this function.

Call divert: Divert the incoming calls to other phone number. This function requests network's support. Please contact your operator for details.

Call barring: Use the menu to set the call barring. It contains outgoing calls, incoming calls, Cancel all, Change barring password. This function requests network's support. Please contact your operator for details.

Line switching: You can change the line 1 or line 2. This function requests network's support. Please contact your operator for details.

Advance settings: There're below options.

- a) **Blacklist:** Edit the blacklist numbers and activate blacklist mode, then you can't receive the calls in the list.
- b) **Whitelist:** Edit the whitelist numbers and activate whitelist mode, then the calls in the list can be auto-answered.
- c) **Auto redial:** Enable or disable this function.
- d) **IP dial:** To set the prefix code for IP dial, you can edit 3 numbers. After active IP dial, you can dial the saved number by IP dial. Choose the desired number in phonebook, press [Left soft key] to [Options] menu and select IP dial, then the pre-set prefix code will be added automatically.
- e) **Call time reminder:** Enable or disable this function, set a reminder with a warning tone during the call.
- f) **Auto quick end:** automatically end the calling as time is on.
- g) **Reject by SMS:** set on/off.
- h) **Connect notice:** After set the status to on, you can hear a "Beep" tone when the outgoing call is connected.

- i) **Answer mode:** You can choose to answer the call by Any key or Auto answer when headset mode.

4.6 Multimedia

In standby state, enter [Menu]→[Multimedia].

4.6.1. Image Viewer

1. [Menu]→[Multimedia]→[Image viewer], it will display photo list.
2. Press [Left soft key] to enter [options] menu, there're options: View, image information, Edit, Browse style, Send, Use as, Rename, Delete, Sort by, Delete all files.

4.6.2. Media Player

1. [Menu]→[Multimedia]→[Media Player], there're options: Now playing, All songs, All videos, Music playlist, Streaming URL.
2. Enter the Media Player interface, you can see player interface and press [Left soft key], there're options:

Current playlist: Display all songs list. In the [Options] menu there're options: Play, Refresh, Add to playlist, Delete, Send, Use, Details.

Go to library: Go to Media player menu.

Settings: There're below settings.

- a) Player settings: Set the Skin, Shuffle, Repeat, Background play, Sound effects, Bass enhancement.
- b) Audio settings: Set Audio play speed, Display style.

Details: You can view the detailed information of current file.

4.6.3. Photo editor

You can edit photos stored in phone.

4.6.4. Sound Recorder

You can make record and set the sound recorder. Press [Left soft key] to enter [Options] menu, there're following options:

New Record: Start a new recorder

List: View the list of files. Press [Left soft key] to enter [Options] menu, there're options: Play, Append, Rename, Delete, Delete all files, Use as and Send.

Settings: Set file format and Audio quality.

4.6.5. FM Radio

In the FM playing interface, press [Left soft key] to enter [Options] menu, there're below options:

Channel List: Channel the new FM form the list.

Manual Input: You can manual the FM

Auto Search: Preset the FM by auto search.

Settings: there're below options.

- a) **Background Play:** This phone supports background play mode. When you selected "On", you can do other operation when music is playing.
- b) **Skin:** Set the display style of FM playing screen.

- c) **Loud Speaker:** you can select On/Off.
- d) **Recorder format:** you can select AMR, WAV.
- e) **RDS settings:** Set RDS parameters.

Record: Record sound of current playing channel.

Append: Choose one record file first and continue to make record.

File list: Record list.

4.7 Organizer

In standby state, enter [Menu]→[Organizer] menu, there're below functions.

4.7.1. Calendar

1. You can set calendar for Reminder, Meeting, Course, Date, Call, Anniversary.
2. In calendar screen, press [Left soft key] to enter [Options] menu, there're below options:

View: View the events for current day.

View all: View all events.

Add event: You can set the Type, Start time, End time, Subject, Alarm, Repeat, Location, Details.

Delete event: You can delete All, Overdue or Specific period.

Jump to date: Jump to the day you desired.

Go to today: Jump to today.

Go to weekly (monthly) view: The calendar is displayed by week or month.

4.7.2. Tasks

1. If there's no pre-set task, press [Left soft key] to add a new task, you can set date, time, subject, alarm, repeat, priority, details, status.
2. In the task list, press [Left soft key] to enter [Options] menu. There're options:

View: View current task.

Add: Add a new task.

Edit: Edit current task.

Search: You can search task by time or subject.

Delete: Delete current task.

Delete overdue: Delete the tasks which are overdue.

Delete all: Delete all tasks.

Jump to date: Jump to the day you desired.

View uncompleted: Display the tasks which haven't done.

Send vCalendar: You can send out the task by SMS, MMS or Email.

Save as file: Save the task as a file.

- a) Choose a folder in phone memory, press [Left soft key] to [Options] menu.
- b) Choose Select option, it will enter the filename edit screen.
- c) Enter the file name and press [OK] key.

4.7.3. Alarm

You can set five alarm clocks.

1. Choose one pre-set alarm to edit.

2. You can set the status to on, time, Repeat, Alarm tone, Snooze time, Alert type.
3. After finishing edit, press [Right soft key] to save.

4.7.4. World clock

You can check the time of various countries.

4.7.5. Notes

You can Add, Edit or Delect Notes.

4.8 Settings

In standby state, enter [Menu]→[Settings] menu, there're below settings.

4.8.1. Phone settings

Time and Date: Set time zone, time/ date, format or Update with time zone.

Schedule Power On/Off: Schedule the time to automatically power on or power off.

Language: Set the preferred display language.

Pref.input methods: Choose the preferred input method for the editor.

Display: You can set below items.

- a) **Wallpaper:** You can select the wallpaper from system or user defined.
- b) **Show date and time:** select off not to display the data and

time in standby mode.

- c) **Screen switch effect:** Select None, Normal or Best.
- d) **Clock type:** You can select Digital, Analog.

Themes: You have three theme options.

Greeting Text: You need choice the status on/off firstly, then edit the greeting text.

Shortcuts: Setting shortcuts options

Delicated key: You can set the shortcut key for [Up key], [Down key], [Left key], [Right key].

Auto update time: Set the status to on or off.

Flight mode: Set Flight mode.

Misc Setting: Set the time and Brightness of the LCD Backlight.

4.8.2. Network settings

Network selection: There're below settings.

- a) New search: Search the network.
- b) Select network: Choose one network from the network list.
- c) Selection mode: Set the mode to Automatic or Manual

Preferences: Select the preferred network.

Preferred mode: You can set the mode to GSM only, WLAN only, GSM preferred, WLAN preferred.

Service selection: You can select to register only on GSM or WCDMA, or automatic selection by phone.

Network information: Display the information of registered network currently.

GPRS connection: Set GPRS connection When needed or Always.

GPRS transfer pref.: You can select Data prefer or Call prefer.

HSPA preference: You can select HSPA off, HSDPA on or HSDPA/HSUPA on.

4.8.3. Security settings

SIM security: You can set PIN lock to on or off, change PIN or PIN2. The default PIN code is 1234.

Phone lock: Set the phone lock or change password. The default password is 1122.

Certificate manager: Check the certificate information.

4.8.4. Restore Factory Settings

Enter the password then the phone will restore factory setting. The default password is 1122.

4.9 User profiles

In standby state, enter [Menu]→[User profiles] menu, the phone only provides General mode.

You can set Ring type, Incoming call, Ringtone volume, Message, Message volume, keypad, keypad volume, Power on, power off, System alert.

4.10 Extra

In standby state, enter [Menu]→[Extra] menu, there're below functions.

4.10.1. Calculator

In this menu, you can do basic calculations of addition, subtraction, multiplication and division.

Key operations:

[UP key]: Press once for Addition; Press twice for M+

[Down key]: Press once for Subtraction; Press twice for M-

[Left key]: Press once for Multiplication; Press twice for MC.

[Right key]: Press once for Division; Press twice for MR.

[Left soft key]: Equal to "=", press to display the calculation result.

[Right soft key]: Press to clear contents that have been entered.

[#]: press to enter "."

4.10.2. Unit Converter

You can converter Weight and Length units.

4.10.3. Currency Converter

1. Input the rate first and then press [OK].
2. Input Local currency amount and press [OK], the result will displayed in Foreign bar.

Notice: Press [#] to enter "."

4.10.4. Stopwatch

There're two type stopwatch: Typical stopwatch and nWay stopwatch You can save the timing record for future reference.

Typical stopwatch: You can use Split timing or Lap timing, also can view the record.

nWay stopwatch: there're four way, press [Up]/ [Down]/ [Left]/ [Right] key for corresponding way.

4.10.5. Ebook Reader

1. In the Bookshelf screen, move the cursor to the book you saved, press [Left soft key] to enter [options] menu, there're options: Open E-Book, Clean up bookshelf, Global settings, Book info, Delete, Delete all files, Sort by, Apply global settings, Help.
2. During the reading, press [Left soft key] to enter [options] menu, there're options: Find, Jump to, Go to bookmark, Add bookmark, Delete bookmark, Book info, Settings.

4.11 Services

In standby state, enter [Menu]→[Services] menu, enter Internet service there're below options:

Home page: Connect to the pre-set home page.

Bookmarks: Enter bookmarks where have five bookmarks.

Input address: You can directly input the address of desired web and connect.

Last web address: Open the last connected URL.

Recent Pages: Enter the history page

Stored pages: Go to the stored web list.

Settings: There're settings for Homepage, Data account, Browser options, Preferences, Security settings, Restore browser.

4.12 Connectivity

In standby state, enter [Menu]→[Connectivity] menu, there're below functions.

4.12.1.WLAN

There're options:

Connection management: To management connections

Data account: there're five pre-set data accounts, you can edit or delete them.

Internet tethering: You can set WLAN hotspot connection.

Notice: The same time, your phone can only work on either WLAN or WLAN hotspot mode.

1. In standby mode, enter [Menu]→[WLAN] menu, the phone will search and display available networks.
2. In the network list screen, press [Left soft key] to enter [Optional] menu, there're below options.

Connect: Connect with current network. If password is needed, please input to Pre-shared key.

Add: To add a network manually.

Edit: Edit the access point.

WLAN status: Check phone MAC address.

Disable WLAN: Disable WLAN function.

Power save mode: You can select Constantly awake, Power save mode, Max Saving Mode, CTIA TEST.

Refresh: Update the network list again.

4.12.2. Bluetooth

Power on: Set the status to On or Off.

Visibility: If set the status to On, then other Bluetooth device can search it.

My device: Search for the new device and display the list.

Search audio device: Search the audio device.

My name: You can edit your device name.

Advanced: There're Audio path, Storage, Sharing permission, My address options.

4.12.3. Data account

You can set the data account to access internet service.

4.12.4. Internet tethering

There're options: WLAN hotspot, Data account, Connection information, Help.

Note: For use WLAN hotspot function you have to insert valid SIM card firstly.

4.12.5.Connection management

In this menu you can check the information of current connections, also can select to disconnect the connections.

FAQ

If any problems are encountered while using the phone, please refer to below items. If the problems still exist, please contact dealers or service provider.

■ **“Enter PIN code” appears on the screen**

Enter valid PIN code of your SIM card. Please contact your operator immediately if you do not know the code.

■ **“Enter PUK code” appears on the screen**

Your SIM card will be locked if you enter wrong PIN code for three times. To unlock your SIM card, you have to enter PUK code. Please contact your operator for details.

■ **“Insert SIM card” appears on the screen**

Make sure SIM card is correctly installed. Check if SIM card works properly. It may have defects or faults. If so, please contact your operator for details.

■ **“Not in service area. Network failure.” is displayed**

Check signal intensity indicator. If there is no signal, you may be in the basement or network blind area in a building. Please move to other locations to receive signal. Or that situation is not covered by network. If so, please contact your operator for details.

■ **Poor sound quality, echo or noise makes communication difficult.**

Hang-up your phone and dial again. Network may connect the phone to a line with better communication quality.

■ **Standby time declines**

Signal at your location is weak so that the phone has to search signal for a long time. When you don't want to answer any call, please power off for a time being. It is also possible that the battery has been used for a long time and approaches its life-span. In this case, please replace the battery.

■ **Phone fails to boot**

Check battery volume or charge the battery. Maybe the battery is over discharge. Please charge your phone until the battery is restored, then try to power on again.

■ **Cannot send short message**

Please check the SMSC address if correct number has been set. Perhaps you have not open SMS service; Recipient of short message is invalid.

■ **Cann't charge**

There are three possibilities: 1. Charger of your phone does not work properly. You can contact nearest service provider or dealer; 2. Ambient temperature is not appropriate. Please change charging environment; 3. Poor contact. Please check plug of your charger.

■ **Can not add entries into phonebook**

Phonebook is full. Please delete some useless entries.

■ **Can not select some functions**

The service is not available or the location network does not support this service. Please contact your operator for details.

FCC Statement

This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR Warning Statements:

The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact is minimized during normal operation.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna should be minimized.

The minimum 10 mm distance between this device include its antenna and user body must be maintained during normal operations. Only the approved antenna can be used for this device. Any third party accessories which contain metal components without additional evaluations should be avoided.