

QUICK START GUIDE

7" LCD Real-Time Digital Wireless Monitor

AWS21R

Digital Wireless Weather Proof Camera

AWSC25

FACTORY DEFAULT SETTING

 
Press and hold the reset button on the power cable for 5 seconds and the system will start the reset process. The system will restore to factory default and you may start the Wi-Fi setup.

FCC and IC Note:

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES AND INDUSTRY CANADA LICENSE-EXEMPT RSS STANDARD(S). OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.


THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CONNECTION DIAGRAM

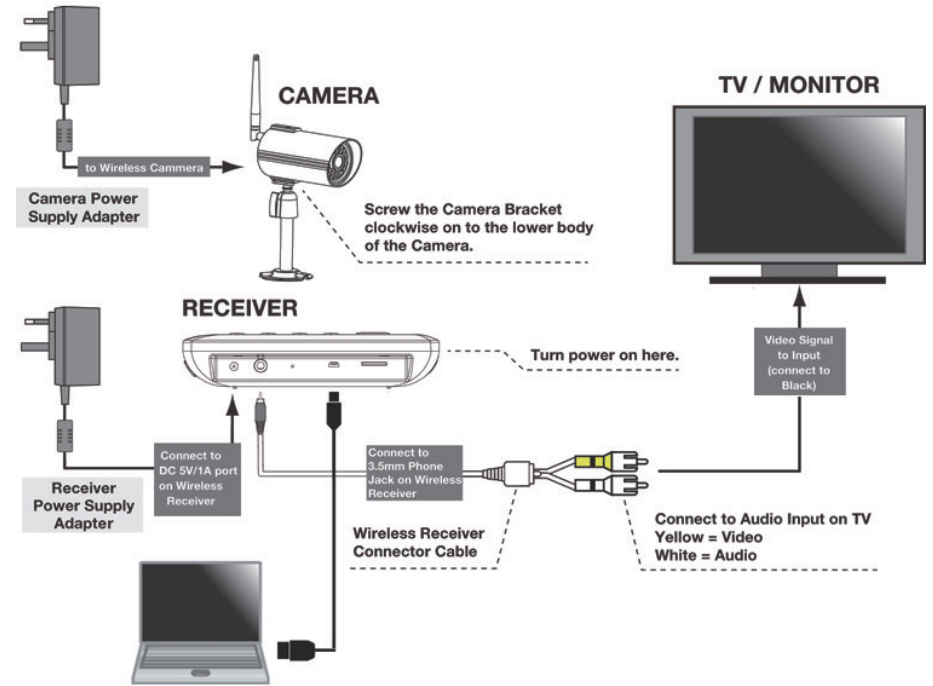

Powering on/off the System

 
Insert the memory card into the receiver if it's not inserted. Press and Hold the **POWER** button for one second to power on the system. Press and hold the **POWER** button for two seconds to power off the system. After the system powers on, adjust the camera's viewing position again if necessary.

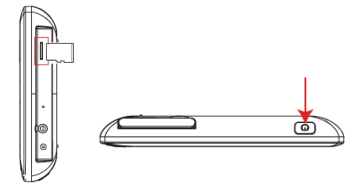

Pairing the Camera to Receiver (optional)

The camera is paired to preset channel by default. The system supports up to 4 wireless cameras. If you are adding another camera to the system, please ensure its channel is set to a different channel to the existing camera(s).

 
1. Go to the Main Menu > Camera Setup(specify channel 1/2/3/4)
> Press the Camera Pairing button
2. Press the pairing key ONCE on the camera

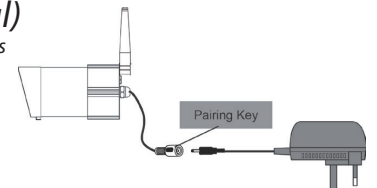


Setting the Camera Channel (optional)

The wireless camera is preset to channel 1 by default. You can also use the steps above to change the camera channel if necessary.

 
CAMERA INSTALLATION

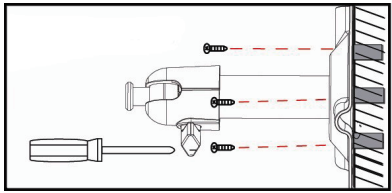

 1 Secure the camera stand on a stable surface

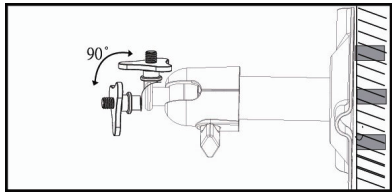

2 Loosen up the thumb screw

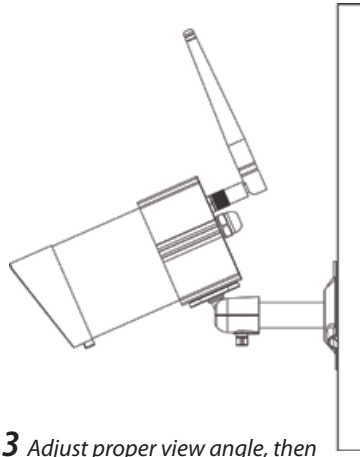 

3 Adjust proper view angle, then secure the joint with T-bolt.

OPERATION SCREEN

Main Menu



1. CAMERA SETUP
2. RECORDER SETUP
3. EVENT LIST
4. SYSTEM SETUP
5. ALARM BUZZER
6. PAN TILT ZOOM
7. SCAN ACTIVATED CAMERAS
8. MEMORY CARD OVERWRITE

Press the MENU button to enter the MAIN MENU. The system highlights EVENT LIST by default. Tap the screen to navigate through the menus; the system highlights the EVENT LIST by default. The system will automatically exit the Main Menu when it is idle for 2 minutes.

CAMERA SETUP



 
 
- Camera Pairing
- Camera Brightness Adjustment
- Camera Activation

RECORDER SETUP




- Record Schedule
- Motion Detection Sensitivity
- Format Memory Card
- Setup Masking Area
- Record Time

EVENT LIST

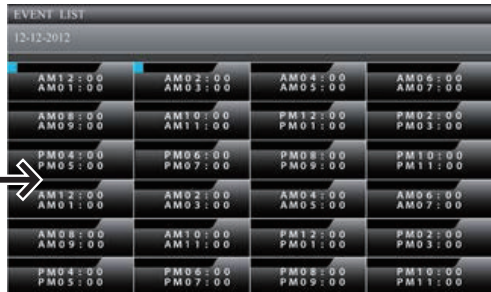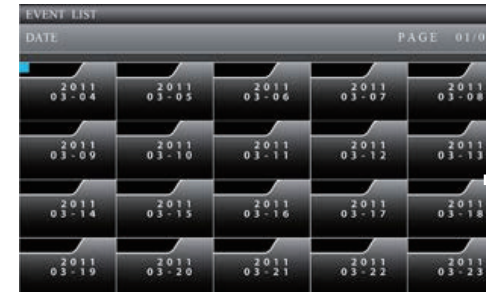

SYSTEM SETUP

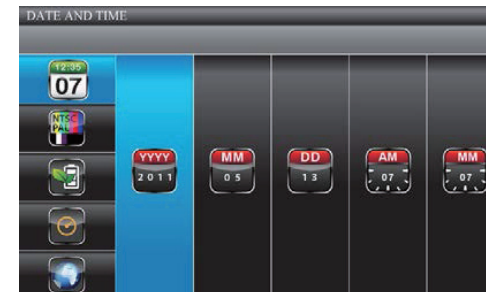 

- Date and Time
- TV Output
- Power Saving
- Multi Channels Idle Display
- Default