

# Go Radio



Portable Bluetooth/FM Speaker

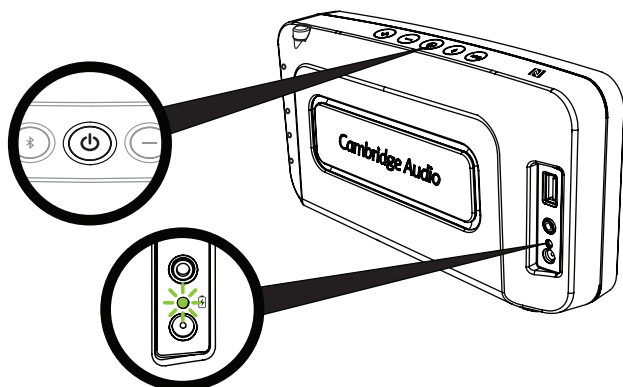 
# User's Manual


To enjoy Bluetooth audio, you must first ensure that the Go Radio is connected to mains power or its battery is charged.

Then pair the Go Radio with your Bluetooth enabled device.



- 1 Connect the charging adaptor to the Go Radio and charge for 4 hours before first use.

The charging LED will indicate Orange  whilst charging and Green  when fully charged.




- 2 Press and hold the power button  on the top of the unit for one second to turn it on.

## Bluetooth set-up

- 1 Press the  button to select the Bluetooth input. 



### Pairing Your Device Using NFC


1. Touch the  area of your NFC device against the logo on top of Go Radio.
2. Go Radio will enter automatic pairing mode and 'Go Radio' should appear on your device.




2  
OR

### Pairing Your Device Manually

1. Press and hold the  button to enter Bluetooth pairing mode .
2. Enable Bluetooth connectivity on your Bluetooth device (eg. phone, tablet etc) and pair with the Go Radio (you may need to consult your phone or tablet operating instructions).

- 3 Successful pairing will be signalled by a 'beep' from the unit and the  LED will turn solid blue.

 
 
## Pairing a second device

To pair a different device, press and hold the  button to enter pairing mode and pair your Bluetooth device as described in the Bluetooth instructions.

## Radio

Extend the FM aerial for best reception.

To switch to the FM Radio press one of the preset buttons 1-3.

Press and hold the  or  buttons to scan for an available station (a short press will change the frequency step by step).

## Storing and using FM presets

Pressing and holding preset buttons 1-3 will store the current radio station.

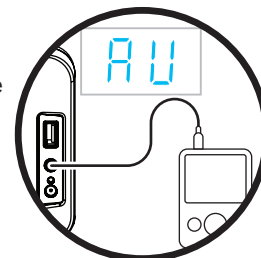 


A short press on buttons 1-3 will recall the stored station.

## Aux input

Press the **aux** button to select the Aux input.

There is an Aux input on the rear of the unit that allows any analogue device to be connected.



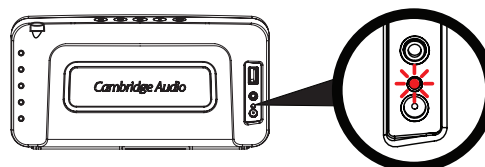 
## Top tips

### Auto power down

To save power, your Go Radio will automatically turn off after 30 minutes if no music is playing. Press the power button to turn the Go Radio back on.

### Low battery warning

A flashing Red LED indicates that the battery is too low and the Go Radio will enter a standby mode where no music can be played. This LED will continue flashing for 30 minutes after which the Go Radio will turn off.



### USB Charging

The Go Radio can be used to charge compatible mobile devices. If the charging adaptor is not connected this will drain the battery.

## Battery Safety

Your Go Radio contains a high performance battery and charging system that is designed to work in temperatures that do not exceed 50°C (122°F). Leaving this product in an automobile where temperatures may exceed this limit may result in permanent battery damage, fire or explosion. Do not leave your product in any location where temperatures may exceed this limit. If the Go Radio is not used for a long time, please recharge the battery every two months to maintain the battery in optimal condition.

**Cambridge Audio**

Your music + our passion