

# AUDIOVOX®

## VIDEO CASSETTE PLAYER

DC OPERATION W/SPECIALIZED TAPE MECHANISM

DLC COATED VIDEO HEAD

BACKLIGHTING OF FUNCTION BUTTONS



## AVP-7000 OPERATING INSTRUCTIONS

SPECIALLY DESIGNED FOR VAN, RV, MARINE,  
AND OTHER MOBILE APPLICATIONS

**ASA**

AUDIOVOX SPECIALIZED APPLICATIONS, L.L.C.

---

---

## **RECOMMENDED GUIDELINES FOR THE USE OF A VIDEO MONITOR/TV IN A MOTOR VEHICLE**

- A VIDEO MONITOR/TV is designed for rear passenger viewing only.  
This product may only be installed in the rear seat compartment of the vehicle, out of the driver's view.
  - Installation in any other area of the vehicle, including anywhere within the driver's view, is illegal in most states, provinces and countries and may lead to driver distraction resulting in an accident, injury and/or death. If you are unsure of regulations regarding this, please consult your local laws to determine how this applies to you.
  - Users should be aware of the possible noise distraction caused by the use of the product and should carefully monitor the volume so as not to interfere with the driver's attention to surrounding traffic conditions.
-

# CONTENTS

---

IMPORTANT SAFEGUARDS.....	....3	SPECIAL OPERATIONS...	12
IMPORTANT NOTES·	6	IDENTIFICATION	13
FEATURES	7	CONNECTION .....	17
MOISTURE CONDENSATION	8	BEFORE CALLING SERVICE PERSONNEL	20
VIDEO HEAD CLEANING	....9	TROUBLE SHOOTING	21
BASIC OPERATIONS ·	10	SPECIFICATION	23



Thank you for purchasing AUDIOVOX VCP, developed to provide advanced features and functions for high quality performance. To obtain the best results and to avoid malfunction, please read the following instructions carefully before using.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**AVERTISSEMENT:** POUR PREVENIR LES RISQUES D'INCENDIE ET D'ÉLECTROCUTION, NE PAS EXPOSER CET APPAREIL À LA PLUIE NI À L'HUMIDITÉ.

**CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE PLUG CAN BE FULLY INSERTED WITHOUT EXPOSING ANY PARTS OF THE BLADES.

**ATTENTION:** POUR ÉVITER LES CHOCS ÉLECTRIQUES, NE PAS UTILISER CETTE FICHE (POLARISÉE) AVEC UN CORDON PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTITE DE COURANT, SAUF SI LES BROCHES PEUVENT ÊTRE INSÉRÉES À FOND SANS QU'AUCUNE PARTIE NE RESTE À DÉCOUVERT.

	<p><b>CAUTION</b> RISK OF ELECTRIC SHOCKS DO NOT OPEN</p>	
<p><b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the VCP.

---

**Note to CATV system Installer:**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

**NOTE:**

This equipment has been tested and found to comply with the limit for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the VCP and keep this manual for future reference.

 
Carefully observe all warnings, precautions, and instructions on the VCP or the ones described in the operating instructions and adhere to them.

## USE

**Power Sources-** This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied at your home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.




**Water and Moisture-** Do not use power-line operated sets near water—for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

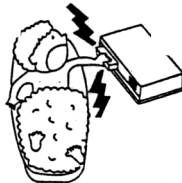

**Accessories-** Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart stand tripod, bracket, or table recommended by the manufacturer.




 **Object and Liquid Entry-** Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

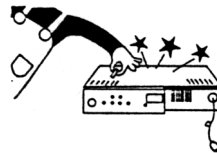


**Ventilation-** The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

 -Never cover the slots and openings with a cloth or other materials.

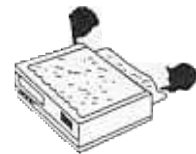

 
-Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.

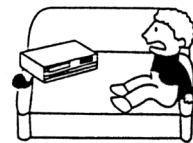

**Attachments-** Do not use attachments not recommended by the manufacturer, as they may cause hazards.

---

 **Cleaning-** Unplug the set from the wall outlet before cleaning it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.

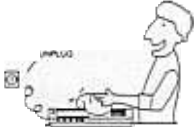


-Never place the set in a confined space such as a bookcase, or built in cabinet, unless proper ventilation is provided.



**Portable Cart Warning-** VCP and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the VCP and cart combination to overturn.



 - Do not place the unit near or over a radiator, heat register, or where it is exposed to direct sunlight.

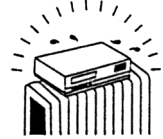

---

## SERVICE

**Damage Requiring Service**-Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

-When the power cord or plug is damaged or frayed.

FRAYED OR TAUT  
DC LINE



-If liquid has been spilled or objects have fallen into the set.



-If the set has been exposed to rain or water.



-If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.



 
-If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.



-When the set exhibits a distinct change in performance this indicates a need for service.

**Servicing**- Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

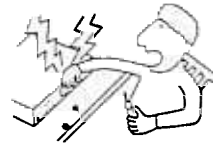

**Replacement parts**- When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

**Safety Check**- Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition.





# IMPORTANT NOTES

---

- Note that main voltage is supplied to the unit whenever the main plug is connected to the supply socket.
- To avoid the risk of fire or electric shock, do not expose the unit to rain or moisture.
- Do not attempt to open the cabinet. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
- Keep the unit away from radiators or other sources of heat.
- Do not operate or store the unit close to strong magnetic fields.
- Do not spill liquid of any kind onto the unit. If liquid is accidentally spilled onto the unit, immediately remove the main plug from the supply socket, and consult a qualified service engineer.
- Avoid places subject to strong vibration.
- Do not place anything heavy on the VCP.
- Use the video player in a horizontal (flat) position only.
- Before operating, remove any paper wrapping which may have been affixed to the VCP during manufacture.  
**DO NOT COVER VENTILATION OPENINGS ON TOP AND SIDES OF THE PLAYER DURING OPERATION.**
- When a cassette is inserted into the loading compartment, the power is switched on automatically as long as the power cord is plugged into a DC outlet. **DO NOT** force a cassette into the compartment when the power cord is unplugged.
- After playing a video cassette, remove it from the player.  
**DO NOT** move the player with a cassette in the compartment.
- Store video cassettes in their sleeve or case and position them vertically.

For your protection, record the model and serial numbers of your video cassette player here. In the event your player requires servicing or is stolen, you may need this information. You may also wish to clip or staple your sales receipt to this page.

Model Number: \_\_\_\_\_  
Serial Number: \_\_\_\_\_  
Date Purchased: \_\_\_\_\_  
Store's Name and Address: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

# FEATURES

---

## 1. DIGITAL AUTO TRACKING

This VCP plays clear pictures without special operations.

In the Auto tracking mode the play lamp will blink.

## 2. SELF PICTURE ADJUSTMENT

Since the HEAD DRUM rotates regularly independent of voltage change or tape condition, the picture is always stable.

 
## 3. AUTO START FEATURE

The VCP will automatically power on and go into PLAY mode when a cassette is inserted.

# MOISTURE CONDENSATION

- ① At room temperature, if you pour ice water into a glass, water vapour in the air will condense on the surface of the glass.

This is moisture condensation. The moisture condensation may occur inside of VCPs. If used in this condition, it will cause damage to the head and the tape.

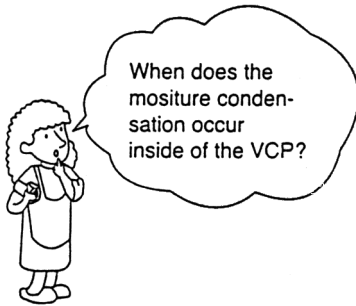

- ② Moisture condensation may occur when the VCP is moved from a cold place to heated place, the temperature of surroundings goes up due to the heat being switched on, or moving the VCP suddenly from air conditioned room to a place of high humidity.



- ③ When the moisture condensation occurs inside of the VCP, NEVER insert the cassette tape into the cassette compartment.

Remove the cassette, if loaded, by pressing the STOP/EJECT button. Only operate the VCP after the moisture condensation has completely dried out. This normally takes about 1 hour.




# VIDEO HEAD CLEANING

 ---

## VIDEO HEAD CLOGGING

The video heads are the means by which the VCP reads pictures from the tape during playback. In the unlikely event that they become dirty enough to be clogged, no picture will be played back. This can easily be determined if, during playback of a known good tape, there is good sound, but the picture is extremely snowy. If this is the case, have the video cassette player checked by qualified service personnel.

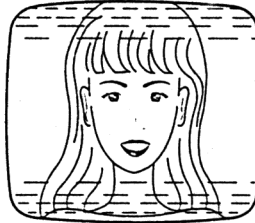

## VIDEO HEAD CLEANING

During normal operation of the VCP the video and audio heads can get dirty over a period of time, especially when using an old or poor quality tape. When the heads are dirty the picture can get snowy and the tracking control will not adjust the snow out of the picture. If this condition occurs, head cleaning cartridges may take care of this problem and restore normal picture. We recommend that head cleaning cartridges be used sparingly due to the fact that they can be very abrasive to the video heads. If the problem is not resolved with the head cleaning cartridge then the unit needs to be checked by a qualified service personnel.

 
**NOTE:** Video heads may eventually wear out and should be replaced when they fail to produce clear pictures. To help prevent video head clogging, use only good quality VHS tapes. Discard worn out tapes.

# BASIC OPERATION

## CASSETTE LOADING/UNLOADING


### LOADING

- Push the cassette into the cassette compartment gently.  
(Arrow mark at the top)

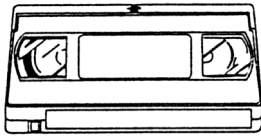

\* An inverted cassette cannot be inserted.

 - The cassette-in indicator lamp is lit up.

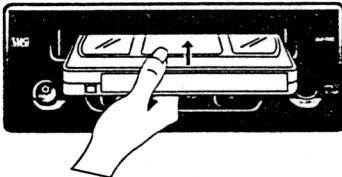


\* Upon inserting the cassette, the power turns on even if the power was off as long as the DC power cord is plugged in.

### UNLOADING

 - Press the STOP/EJECT key twice on the VCP (in the PLAYBACK mode). This first press will stop the tape. The second press will eject the tape. The cassette-in indicator lamp will be lit out.






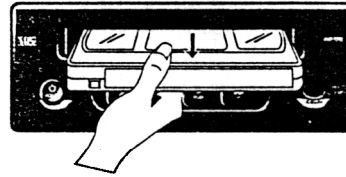


- Pull the cassette out gently.



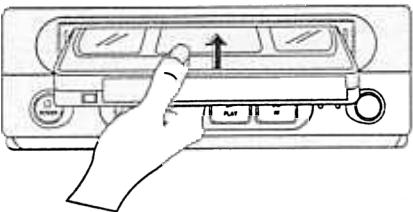 


\* When you press the STOP/EJECT key even if the power is off, the cassette will be ejected.

# BASIC OPERATIONS

<p>① <b>LOADING</b></p>  <p>The power is on automatically when the cassette is inserted even if the power is off.</p>	<p>② <b>PLAYBACK</b></p>  <p>Press the PLAY key and the picture will appear in approximately 8 seconds. When end of tape is reached then the unit will automatically rewind tape.</p>	<p>③ <b>STOP</b></p>  <p>Press the STOP/EJECT key once. The tape will stop.</p>
<p>④ <b>FAST FORWARDING</b></p>  <p>Press the FF key in the STOP mode. The tape advances at a high speed without any picture and sound.</p>	<p>⑤ <b>REWINDING</b></p>  <p>Press the REW key in the STOP mode. The tape is rewound at a high speed without any picture and sound.</p>	<p>⑥ <b>EJECTING</b></p>  <p>Press the STOP/EJECT key once more (in the STOP mode).</p>

 
# SPECIAL OPERATIONS

The VCP enters the playback mode during special operations as soon as the PLAY key is pressed. During special operations noise bars and loss of color may affect the picture. This is not a fault with this unit.

① TO VISUALLY SEARCH FORWARD	② TO VISUALLY SEARCH REVERSE	③ TO OPERATE RE-AUTO TRACKING
 <p>• Press the FF key once in the playback mode. And then the tape advances rapidly with the pictures. Press this key once more, the tape will advance at a high speed.</p>	 <p>• Press the REW key once in the playback mode. And then the tape is rewound rapidly with the pictures. Press this key once more the tape will rewind at a high speed.</p>	 <p>• Press the PLAY key during playback and then the VCP enters the Re-Auto Tracking mode.</p>

# IDENTIFICATION

## FRONT PANEL

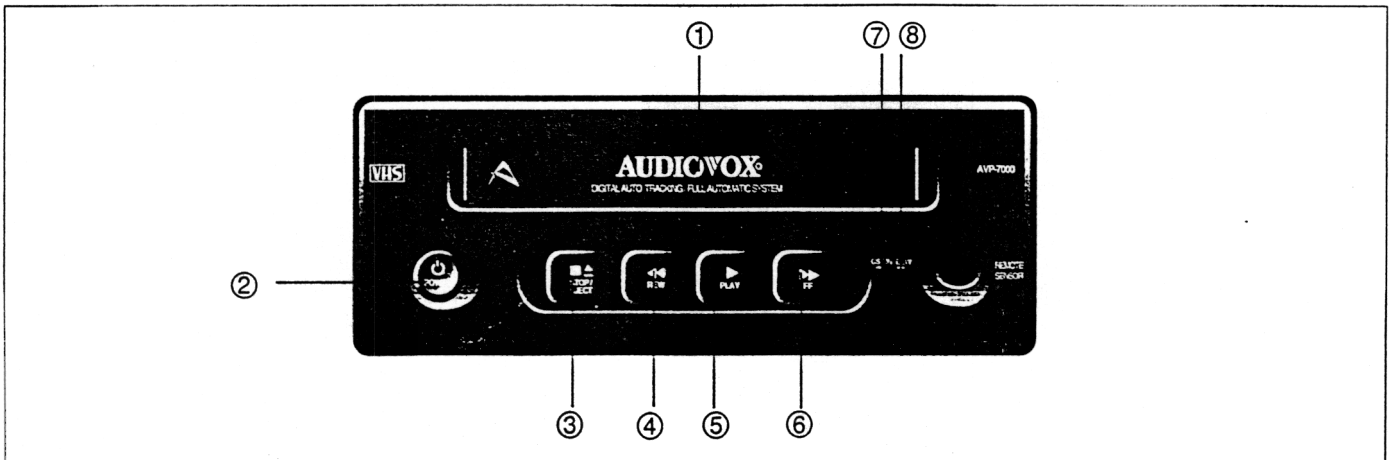

① Cassette Compartment

② Power key

When power is supplied to the set, the power indicator lamp will always light up in red.

The Power ON and Power OFF mode will be toggled by pressing this key.

When the POWER is switched on, the power lamp will light up in red and the other keys will light up in green.

③ Stop/Eject key

Press this key to stop tape and once more to eject tape.

④ Rewind/Review key

If this key is pressed in the PLAYBACK mode, the VCP enters the reverse picture search mode. If pressed in STOP mode, then the tape will rewind at high speed.

The REW indicator lamp will light up in orange.



---

**⑤ PLAY KEY**

Press this button to playback a recorded tape, or to release special operations such as the search modes.

In the playback mode the indicator playback lamp will be ON in orange, and in the AUTO Tracking mode this indicator lamp will blink.

**⑥ FAST FORWARD/CUE KEY**

If this key is pressed in the PLAYBACK mode the VCP enters the forward picture search mode. If FF is pressed while tape is in STOP mode then unit will fast forward at high speed.

When the FF key is pressed, the indicator lamp will light up in orange.

 
**⑦ CASSETTE-IN LAMP**

When the cassette is inserted, the CST-IN lamp will light up in green.

**⑧ DEW LAMP**

This indicator will flash (if power is on) to indicate excessive moisture has been inside of VCP. Unit will not operate till it dries out sufficiently (the tape can be ejected from unit). When DEW mode has been activated, leave unit on to allow it to dry out completely. This will take approximately 1 hour.

## REAR PANEL

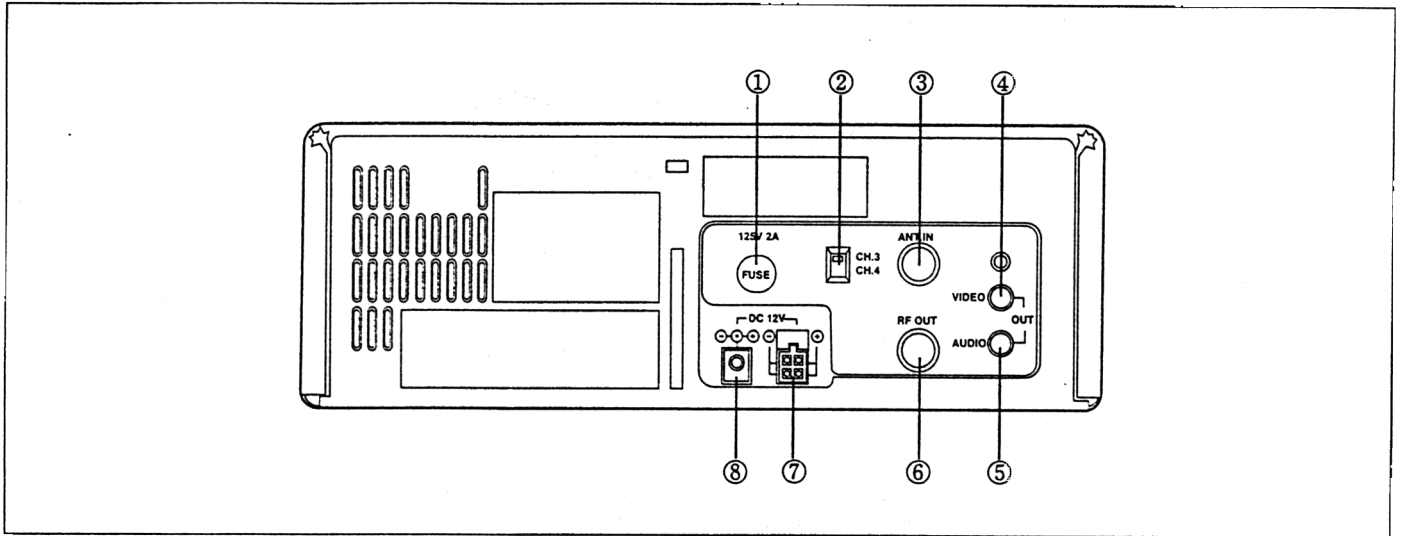

### ① FUSE HOLDER

The main line fuse is accessible with the external fuse holder simply by unscrewing the cap. If the main line fuse should blow then replace the fuse with a proper rated fuse (125V, 2A).

### ② RF OUT CHANNEL SELECTION SWITCH

Set to channel 3 or channel 4, whichever is not being broadcasted in your area.

---

③ **ANT. IN**

For connecting the TV antenna to this terminal.

④ **VIDEO OUT**

Connect this terminal to VIDEO IN terminal of your television, using the RCA cord provided.

⑤ **AUDIO OUT**

Connect this terminal to AUDIO IN terminal of your television, using the RCA cord provided.

⑥ **RF. OUT**

For connection to the antenna terminal of a TV receiver through the coaxial cable.

 
⑦⑧ **DC JACK IN**

Connect this jack to DC Source (DC 12V).

**NOTE:** This VCP is for 12V use only so do not use it in 24V vehicles.  
If you use this set in a 24V vehicle, all the lamps will blink. To avoid the malfunction of this set please disconnect the plug from the power source.

# VCP TO VEHICLE CONNECTION

- You can apply this method to DC 12V output only.
- Please connect to the vehicle only after making sure of the polarity of the cigarette lighter socket. (negative earth)

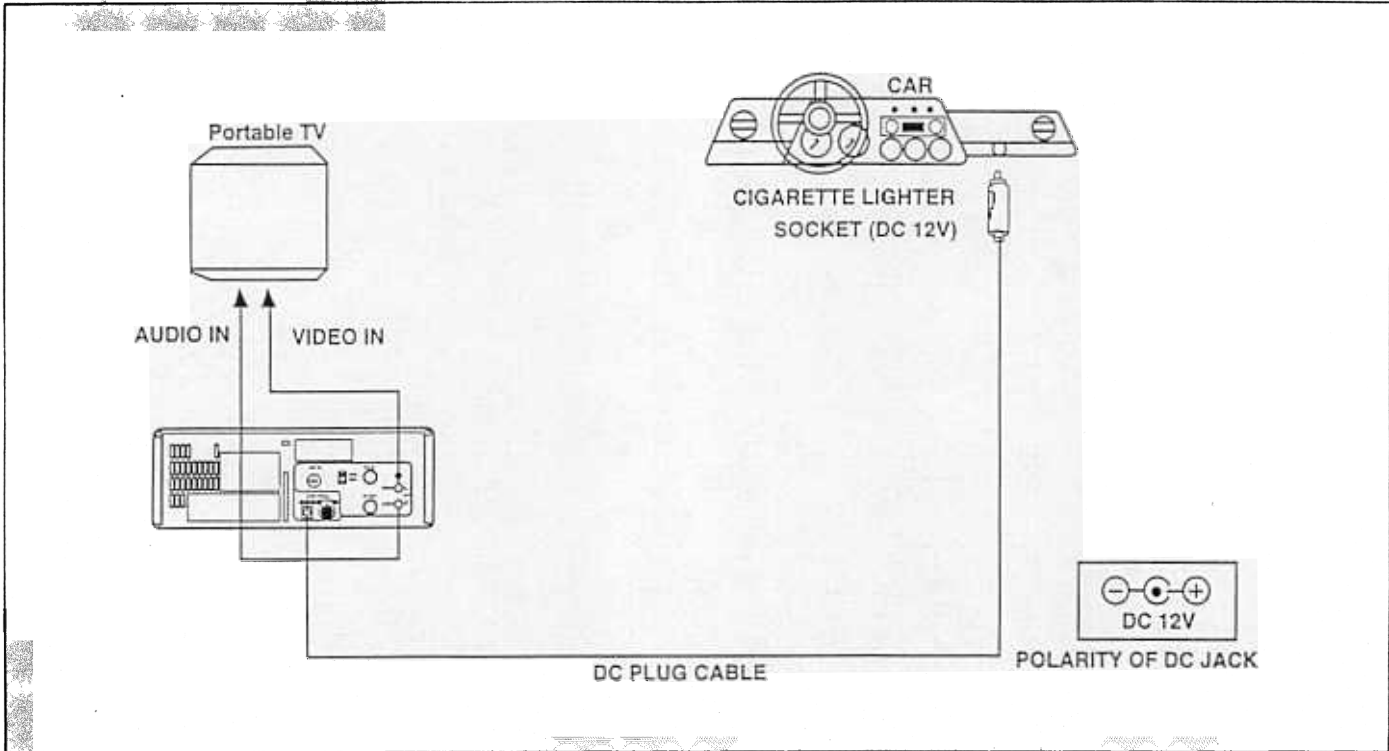

---

## HOW TO USE THIS METHOD

 
- You can apply this method to only DC 12V output.
- If you apply more than 18 volts then the power will automatically turn off.
- Please connect after making sure of the polarity of the cigarette lighter socket.
- If the polarity is reversed the unit will not operate.
- Use of this VCP is not recommended in excessive heat.
- If inside temperature of vehicle is over 100 F do not use VCP. Allow VCP to cool before use.

### AUTO TRACKING ADJUSTMENT

- Since this VCP has the Auto Tracking Adjustment function, it can play clear pictures without special operations.
- Auto Tracking Adjustment operates automatically when the cassette is inserted.
- Playback indicator lamp blinks during auto tracking operation. If the tracking is completed, the playback indicator lamp lights on.
- If noise bars appear in the picture during playback, press the PLAY key to operate Re-Tracking function.

**NOTE :** This VCP has Auto Start Feature.

This VCP will automatically power on and go into PLAY mode when a cassette is inserted.

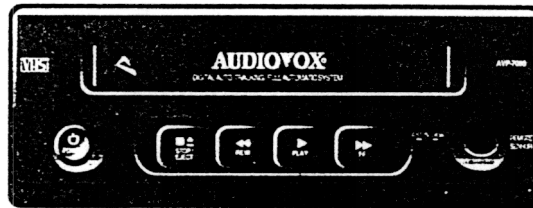

PLAY key

## BEFORE CALLING SERVICE PERSONNEL

SYMPTOMS	CAUSE	POSSIBLE SOLUTIONS
<b>POWER</b>		
NO POWER	<ul style="list-style-type: none"> <li>• The power cord is not connected.</li> <li>• The polarity of power cord is not correct.</li> </ul>	<ul style="list-style-type: none"> <li>• Connect the power cord.</li> <li>• Change the polarity of power cord.</li> </ul>
<b>PLAYBACK</b>		
No picture on screen when playing back a recorded tape.	<ul style="list-style-type: none"> <li>• The TV is not set to the video channel, 3 or 4.</li> </ul>	<ul style="list-style-type: none"> <li>• Set your TV to the video channel, 3 or 4.</li> </ul>
Noise bars on screen.	<ul style="list-style-type: none"> <li>• Tracking is not adjusted.</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the picture to be clear by pressing the PLAY key.</li> </ul>
<b>OTHERS</b>		
Operation keys do not work.	<ul style="list-style-type: none"> <li>• If the cassette or the VCP is not in normal condition, every indicator LED/LAMP is lit up and the VCP does not work.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn off the power and turn on the power again by pressing the POWER key.</li> <li>• Unplug and replug the power cord.</li> </ul>
Cassette is ejected upon inserting.	<ul style="list-style-type: none"> <li>• Safety device works to protect the cassette when it is inserted incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>• Pull the cassette out (unloading) and insert it firmly into the cassette compartment.</li> </ul>

# TROUBLE SHOOTING

SYMPTOMS	CAUSE	POSSIBLE SOLUTIONS
NO POWER		Check CH Video Switch is in ON position.
No backlighting at power button.	NO 12VDC	<ul style="list-style-type: none"> <li>• Check circuit fuse at source of power (see vehicle/converter manual).</li> <li>• In-line fuse of power cord (in lighter plug).</li> <li>• VCP (2 amp *20X 5mm) fuse located on rear of unit.</li> <li>• Power cord unplugged from 12V outlet or at rear of unit.</li> </ul>
Power indicated with backlighting-unit will not operate.	(Unit in dew mode) Dew feature activated (see owners manual)	• Retain power to player and allow unit time to rid moisture. (After 30minutes if dew indicator still on, completely switch power off from unit and re-supply after a minute. This can reset dew indicator if moisture eliminated.)
	No tape in Unit.	• Insert tape
	Low Voltage	• Start Vehicle, if not running.
Mode indicators flashing unit will not operate.	Unit in emergency mode.	• Contact dealer for service to player.
Play mode indicated no audio or video to TV.	VCP connected to AV Input jack, RCA patch cables set in TV mode.	• Switch TV to video mode with remote or switch behind control door of TV.



SYMPTOMS	CAUSE	POSSIBLE SOLUTIONS
Play mode indicated no audio or Video to TV.	VCP connected by (75 OHM coax) antenna coax to TV. Set in "monitor mode"	<ul style="list-style-type: none"> <li>• Switch to TV mode</li> </ul>
	VCP connected to AV output jacks. (AVT-1400 or 1475)	<ul style="list-style-type: none"> <li>• Change connections from AV output to AV input.</li> </ul>
Play mode indicated-No audio or video to TV. (continued from previous page)	Output of VCP AV RCA cables or coax not connected to TV input.	<ul style="list-style-type: none"> <li>• Check connectors between VCP and TV.</li> </ul>
	Switchable input device used between TV and VCP (game prep).	
	Poor connection between VCP output and TV input.	<ul style="list-style-type: none"> <li>• Check connection(a)</li> </ul>
	Reversed AV inputs to TV.	<ul style="list-style-type: none"> <li>• Check connection(b)</li> </ul>
	Shorted Coax cable between VCP and TV.	<ul style="list-style-type: none"> <li>• Check cable/by pass or continuity test.</li> </ul>
Poor Video/Snowy picture or lines on screen.	Dirty Heads	<ul style="list-style-type: none"> <li>• Clean head using tape cartridge cleaner. We recommend using cartridge with cloth or paper tape and cleaning drops included.</li> <li>• These are readily available at retail stores.</li> </ul>

# SPECIFICATION

MODEL	AVP-7000
POWER SUPPLY	DC 12V
POWER CONSUMPTION	12W
DIMENSION	265 × 89 × 295 (W × H × D)mm
WEIGHT APPROX.	3.4kg
VIDEO SIGNAL SYSTEM	NTSC COLOR
VIDEO SIGNAL, OUTPUT(RF) VHS	75Ω unbalanced AVX.
TAPE TYPE	VHS TYPE
TAPE SPEED	SP 33.35mm/sec, LP 22.23mm/sec, SLP 11.12mm/sec
FF/REW TIME(T-120)	Approx. 5MIN
VIDEO SIGNAL OUTPUT(LINE)	1Vpp 75 Ω unbalanced NEGATIVE SYNC
AUDIO SIGNAL OUTPUT(LINE)	-5dBm 10k Ω MAX
OPERATING CONDITION HUMIDITY	85% RHmax TEMPERATURE : 5℃~35℃ (41°F~95°F)
OPERATING POWER VOLTAGE	12~14V

**AUDIOVOX SPECIALIZED APPLICATIONS, L.L.C.**  
**ACCESSORIES LIST**

DESCRIPTION	PART NUMBER
AVT-597 5" Color Television with remote (12 Volt)	08000597
AVT-975 9" Color Television with remote (12 Volt)	08000975
AVT-1475 13" Color Television with remote (12 Volt)	08001475
AVP-7000 Video Cassette Player (12 Volt)	09006750
BPA-501-12-4 amp Adapter for use with AVT-975 9" and AVT-1475 13" Televisions	0891412
AC2A-2 amp Adapter for use with AVT-597 5" TV and AVP-7000 Video Cassette Player	0891436
Unified Remote Control	0893225
VAC-21-12 Volt Corded Vacuum	4185998
VAC-32-12 Volt Rechargeable Vacuum	4110032
AVF-1 Rechargeable Flashlight	4130001
HP-175 Headphones with Pivoting Ear Cup	4120175
HP-275 Headphones with Volume Control on Cord	4120275
HP-375 Studio Quality Headphones	4120375

Unlike household electronics, all of our products have been specifically designed and tested for the mobile environment and are only available through ASA. To order any of these products please call **Audiovox Specialized Applications** at **219-264-3135** or **800-688-3135**

**AUDIOVOX SPECIALIZED APPLICATIONS, L.L.C.**  
**ACCESSORY PART LIST**

Rechargeable Vacuums	PART NUMBER
<b>Vac-21</b> Comes with cigarette plug, 13ft. Curly cord, includes surface mounting bracket which also stores cord, high velocity blower and filter element	4110021
<b>Vac-32</b> Recharges in one hour, slow trickle charge, mounting bracket designed to withstand high vibration, high velocity blower and filter element	4110032
Headphones	
<b>HP-175</b> High Quality, lightweight, pivoting ear cup design for flexible movement and storage, 8ft. Straight cord.	4120175
<b>HP-275</b> High quality, volume control on cord, 6ft. Curly cord.	4120275
<b>HP-375</b> Studio quality, contemporary design, high velocity element for excellent sound, 6ft. Curly cord.	4120375
Adaptors (Convert 120V AC to 12V DC)	
<b>BPA-501-12</b> For use with AVT-975 9" and AVT-1475 13" Televisions	0891412
<b>AC-2A</b> For use with AVT-575 5" Televisions and AVP-7000 Video Cassette Player	0891436
12Volt DC Cord	0893000
Remotes	
<b>Unified Remote</b> For use with AVT-975 9" and AVT-1475 13" Televisions along with the AVP-7000 Video Cassette Player	0892325
<b>AVF-1</b> Rechargeable Flashlight Operates for over an hour on full charge, charging stand included, built-in charge indicator, magnetic mount for "hands free" operation, reflector assembly can be angled DC charging cord included.	4130001

To Order Call : 800-274-1886  
 Payment Method : Visa, Master Card, Cashiers Check, or Bank Money Order



AUDIOVOX SPECIALIZED APPLICATIONS, L.L.C.  
 The Mobile Electronics Company  
 23319 Cooper Drive, Elkhart Indiana 46514

**90 DAY/12 MONTH LIMITED  
WARRANTY**

Applies to Audiovox Video Product

**AUDIOVOX SPECIALIZED APPLICATIONS, L.L.C.** (the company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 days from the date of original purchase, such defect (s) will be repaired or replaced (at the company's option) without charge for parts and repair labor. After the initial 90 day period and for a period of 12 months from the date of original purchase, the Company will supply at no charge a replacement for any defective part (s), but will charge for the labor to repair the product.

To obtain repair or replacement within the terms of this warranty, the product is to be delivered with proof of warranty coverage (e.g.: dated bill of sale), specification of defect (s), transportation prepaid, to an approved warranty station, or the Company at the address shown below.

This warranty does not extend to the elimination of externally generated static or noise, to the correction of antenna problems, to costs incurred for removal or reinstallation of the product, or to damage to any tapes, speakers, accessories, or electrical systems.

This warranty does not apply to any product or part thereof which, in the opinion of the company, has been damaged through alteration, improper installation, mishandling, misuse, neglect, or accident. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE, AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THE PRODUCT.

This warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 30 DAYS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**AUDIOVOX SPECIALIZED APPLICATIONS, L.L.C.**  
23319 COOPER DR, ELKHART, IN 46514  
For Service Information Call : 1-800-688-3135