AUGUST®

User Manual

Model No.: MS625

FCC ID:2AFCMMS625



Bluetooth Wireless Stereo Speakers
Casque Stéréo Sans-fil Bluetooth
Kabellose Bluetooth Stereo Kopfhörer
Cuffie Stereo Senza Fili Bluetooth
Auriculares de Diadema Abiertos Bluetooth

August International Ltd United Kingdom

www.augustint.com

User Manual

Thank you for purchasing this August product. This user manual is designed to familiarize you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

Safety

To ensure the safety of you and others, please read the Safety Instructions before using this device. Please do not disassemble this product, it can be unsafe and will invalidate the manufacturer's warranty.

Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environment agency and any other relevant authorities for current disposal regulations.

Customer Service

You can contact us by phone on: +44 (0)845 250 0586 or by email at: service@augustint.com should you require further technical support or customer service.

Quick Start Guide MS625

- 1.Before first use, please ensure that both speakers are fully charged. To charge, use the USB charging cable to connect both speakers to a powered USB port. Whilst charging, the LED lights red and turns off once fully charged.
- 2. Switch the parent speaker on, then press and hold the multi-function switch button until a two tone notification sounds to indicate pairing mode. In pairing mode, the LED will quickly flash blue.

Note: Do not turn on the child speaker at this stage. This will prevent you pairing to your source device.

- 3. Pair your source device with "MS625" using its Bluetooth settings, if you are unfamiliar with the Bluetooth feature of your source device, refer to its user manual for detailed instructions.
- 4. Once paired to your source device, the LED on the parent will light constant blue. You can then turn on the child speaker which will automatically pair to the parent. Once paired, the LED on the child will light constant blue.

Contents

1. Safety Instructions	4
2. Main Features	5
3. Accessories	5
4. Part Names and Functions	5
5. Operation	6
6. Charging	9
7. Specification	9
8. Troubleshooting	10
9 Warranty	11

1. Safety Instructions

■ Storage and Use



Do not store or use this device in extreme temperatures.



Do not store or use this device in wet or damp environments.



Do not expose this device to dust, oil or smoke.



Do not drop or strike this device.



When transporting this device store securely to avoid impact damage.



Do not scratch this device with sharp objects.

■ Maintenance

Please unplug all leads before cleaning this device.



Wipe the device and buttons with a soft cloth.



Never wipe this device with an abrasive cloth or apply detergent, alcohol or chemical based cleaning products.

2. Main Features

- Stereo Speaker System for Mobile Phones
- Wireless Audio from any Bluetooth Device
- Speakers for Stereo Sound on Your Home TV
- Audio-In Socket for Non Bluetooth Devices
- Long Life Built-in Rechargeable Batteries

3. Accessories







USB charging cable

3.5mm audio cable

User manual

4. Part Names and Functions





- 1. USB Charging Socket
- 2. 3.5mm Audio-in Socket
- 3. Multifunction Switch
- 4. Power Switch

5. Operations

5.1 Switch Speakers On/Off

The power switch for both the parent and child speakers is a slider switch located on the rear of each unit.

5.2 Bluetooth Connection

5.2.1 Connection to the Parent Speaker

Switch the parent speaker on, then press and hold the multifunction switch button until a two tone notification sounds to indicate pairing mode. In pairing mode, the LED will quickly flash blue.

Note: Do not turn on the child speaker at this stage. This will prevent you pairing to your source device.

■ For mobile phones

- 1) Scan for available Bluetooth devices on your mobile phone (see your mobile phone user manual for instructions if needed).
- 2) Select "MS625" from the available devices.
- 3) Once successfully paired and connected, the status LED will light constant blue.

Note: Accessing Bluetooth settings on mobile phones varies for each phone. To find the information for your phone, please refer to its user manual.

■ For computers

- 1) Enable the Bluetooth function on your computer.
- 2) Select evices and Printersfrom the Control Panel and click dd a Device
- 3) Select S625 from the available devices, the system will install the driver automatically.
- 4) Once sucessfully paired and connected, the status LED will light constant blue.

■ For a TV or Set-Top Box with Integrated Bluetooth Connection

- Scan for available Bluetooth devices on your TV or Set-Top Box (see your TV or Set-Top Box user manual for instructions if needed).
- 2) Select "MS625" from available devices.
- 3) Once successfully paired and connected, the status LED will light constant blue.

■ For TV with No Bluetooth Connection

To connect to a TV or Set-Top box without a Bluetooth connection, you will require a Bluetooth Transmitter such as the August MR250.

- 1) Plug the transmitter into the headphone socket of your TV.
- 2) Switch the transmitter on and enter pairing mode (for more information, please refer to the transmitter user manual). Please ensure that no other Bluetooth device is available for pairing nearby.
- 3) The transmitter will automatically pair with the MS625. Once successfully paired and connected, the status LED will light constant blue

5.2.2 Connection to the Child Speaker

Once the parent speaker is paired with your source device, turn the child speaker on. It will automatically connect to the parent.

5.2.3 Reconnection

Switching the speakers off will disconnect them from the source device. The parent speaker will automatically connect with the last paired source device when switched on.

When the Bluetooth of the source device is switched Off and the speakers are left On, they will enter standby mode. To reconnect to the speaker using the same source device, go to your Bluetooth settings and select MS625 from the list.

Note: If the speakers are left On and the source device is disconnected, it will not be possible to auto-connect, but the reconnection can be done through the list of known Bluetooth devices on the source device.

5.3 Remote Control

The MS625 is able to control the music playing on either a mobile phone or a computer with a Bluetooth connection.

Press the multifunction switch to pause or resume playing music. Briefly move the multifunction switch to the Previous or Next position to select the previous or next track.

Move and hold the multifunction switch to adjust the volume on the source device from the speaker.

Note: The remote control is only compatible with devices that support A2DP, please refer to your devices user manual for its A2DP compatibility. For devices such as TVs, Set-top Boxes or Bluetooth transmitters the Volume control on the Parent Speaker will work independently.

5.4 Audio-In

To use the MS625 as a wired speaker, use the 3.5mm audio cable provided to connect the MS625 with your source device. Once the audio cable is connected, the device automatically switches to Audio-in mode and the status LEDs will light red.

6. Charging

To charge the MS625, connect the micro USB lead to the device's power socket, and the other end of the USB cable to a powered USB port. The LED lights red whilst charging and turns off once the battery is fully charged.

7. Specification

-	
Bluetooth Specification	Bluetooth V4.0,
Bluetooth Profile	A2DP, AVRCP, HSP, HFP
Operating Range	Up to 10m (Class 2)
Operating Range between speakers	Up to 5m
Frequency Response	90Hz – 20KHz
Speaker Output	5W x 2
SNR	≥80dB
Distortion	≤1.0% at 1kHz
Battery	3.7V/1600mAh Built-in Lithium Battery
Working Time	About 15 hours
Charging Time	About 5 Hours
Standby Time	30 Days
Weight of each speaker	Approximately 260g
Dimensions	106.5 x 74 x 69.4mm

8. Troubleshooting

Problem	Solution
Won't turn on	Please charge the MS625
Can't find the MS625	Confirm MS625 is in pairing status and within 10 meters from the device.
Can't install the driver for MS625	Update the driver of the Bluetooth module on your computer
The sound quality is intermittent in Bluetooth mode	Disable the Wi-Fi on your source device
No Sound	Check the volume on both source device and MS625
Can't connect to Bluetooth on Windows XP or Vista	Third party software may be required, please contact the manufacturer of your Bluetooth chip for more information
Can't connect to Bluetooth in Windows 7+	Download all updates for Windows and your Bluetooth driver, these may need to be manually downloaded from the Bluetooth chips manufacturers website

9. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- accordance to the instructions given in this user manual

 The product must be used solely for domestic purposes.
- The warranty only covers the main units, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufactures disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586 Email: service@augustint.com NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.