

Model: SK-M32

AUKEY International Ltd.  
www.aukey.com | support@aukey.com  
No.102, Building P09, Electronics Trade Center  
Huanan City, Pinghu Town, Longgang District  
Shenzhen, Guangdong, 518111, CN




Thank you for purchasing the AUKEY SK-M32 Wireless Speaker. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

### Package Contents

Wireless Speaker  
Micro-USB Charging Cable  
3.5mm Audio Cable  
User Manual  
Warranty Card

### Product Diagram

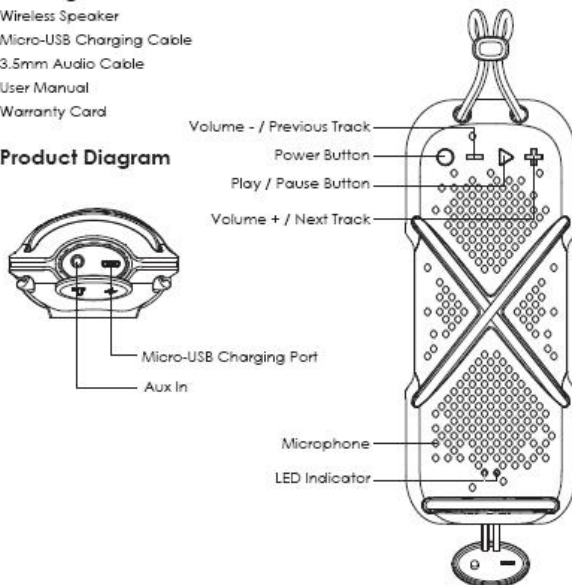

- 01 -

# AUKEY

## User Manual

### Wireless Speaker

### Specifications

Model	SK-M32
Technology	BT 4.2, A2DP, AVRCP, HSP, HFP
Audio Output Power	2 x 4.5W
Frequency Response	100Hz-18kHz
Signal-to-Noise Ratio	≥70dB
Input	DC 5V
Charging Time	3.5 hours
Play Time	6 hours (at 80% volume)
Battery Type	Li-Polymer (1800mAh)
Operating Range	Up to 10m / 33ft
Operating Temperature	-10°C - 50°C / 14°F - 122°F
Dimensions	181 x 73 x 47mm / 7.13" x 2.87" x 1.85"
Weight	282g / 9.95oz

### Charging

Fully charge this speaker before first use. Connect it to a USB charger or charging port with the included micro-USB cable to charge. When the blue LED indicator turns off, your speaker is fully charged and ready for use. Charging takes around 3.5 hours.



- 02 -

### Powering On / Off

- To power on, press and hold the power button for 2 seconds and the LED indicator will turn white
- To power off, press and hold the power button for 2 seconds and the LED indicator will turn off

### Pairing

1. When you turn on the speaker, the speaker will automatically enter pairing mode and the LED indicators will flash white and blue alternately
2. Activate the pairing function on your phone or other compatible device and select "AUKEY SK-M32"
3. If a code or pin is required for pairing, enter "0000"
4. When successfully paired, the LED indicator will stay white

### Notes

- The speaker will automatically shut down after 10 minutes in pairing mode if no devices are paired
- If your paired device is switched off or manually disconnected, the speaker will enter pairing mode and automatically shut down after 10 minutes
- If the speaker or connected device exceeds the operating range, the speaker will disconnect. The connection to the last successfully connected device will be re-established once you re-enter wireless range within 10 minutes. To connect to other devices, please repeat the previous "Pairing" steps

### Playing Audio via Aux Connection

Connect the SK-M32 to your PC, laptop, or other devices with Aux output using the included 3.5mm audio cable. Press the power button to turn on and the LED indicator will light up solid white.

- 03 -

### Notes

- The speaker will disconnect from your phone or other paired devices when an audio cable is plugged into the Aux in jack. Short-press the power button to switch back to Bluetooth mode
- When playing audio using the Aux in jack, long press the volume +/- to adjust the volume and short press play/pause to play or pause. Next/previous track control on the speaker is disabled in Aux mode
- For some computers, you may need to access the audio control panel to manually set the speaker as the default audio device

### Controls & LED Indicators

Functions	Instructions
Cancel pairing	When connected, press and hold play/pause for more than two seconds
Answer / End a call	Press play/pause once
Reject an incoming call	Press and hold play/pause for more than two seconds
Redial last-called number	Double press play/pause in standby mode
Adjust volume	Long press volume + / -
Next / Previous track	Short press volume + / -
Play / Pause	Press play/pause once

LED Indicator	Status
White and blue flashing alternately	Pairing mode
White	Connected
Blue flashing once every 2 seconds	Playing music / In call / Incoming call
Blue	Charging
Blue off (after charging)	Fully charged

- 04 -

### Product Care & Use

- Keep away from extreme heat and strong magnetic fields
- Do not use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss
- Adjust the hanging cord and its clip so it securely hangs on your backpack, bicycle, and more
- Firmly fit the port cover before use to protect against water and dust
- Protected against water, such as heavy rain, but not against immersion

### Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@aukey.com

Amazon EU orders: support.eu@aukey.com

Amazon CA orders: support.ca@aukey.com

Amazon JP orders: support.jp@aukey.com

\*Please note, AUKEY can only provide after sales service for products purchased directly from AUKEY. If you have purchased from a different seller, please contact them directly for service or warranty issues.

- 05 -

**FCC WARN**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**§ 15.21 Information to user.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**§ 15.105 Information to the user.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.