

# **AUKEY**

User Manual  
Clock Radio Wireless Speaker

Thank you for purchasing the AUKEY SK-M37 Clock Radio Wireless Speaker. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.


## Package Contents

Clock Radio Wireless Speaker  
Micro-USB Cable  
3.5mm Audio Cable  
User Manual  
Warranty Card

## Specifications


Model	SK-M37
Technology	BT 2.1, EDR, A2DP, AVRCP, HFP
Audio Output Power	2 x 3W
Frequency Range	80Hz - 20KHz
Signal-to-Noise Ratio	≥75dB
Input	DC 5V 1A
USB Output	DC 5V 1A
Charging Time	4 hours
Play / Talk Time	7 hours (at 50% volume)
Operating Range	Up to 10m / 33ft
Operating Temperature	-10°C - 50°C / 14°F - 122°F
Dimensions	145 x 97 x 96mm / 5.7" x 3.81" x 3.78"
Weight	600g / 21.16oz

## Product Diagram

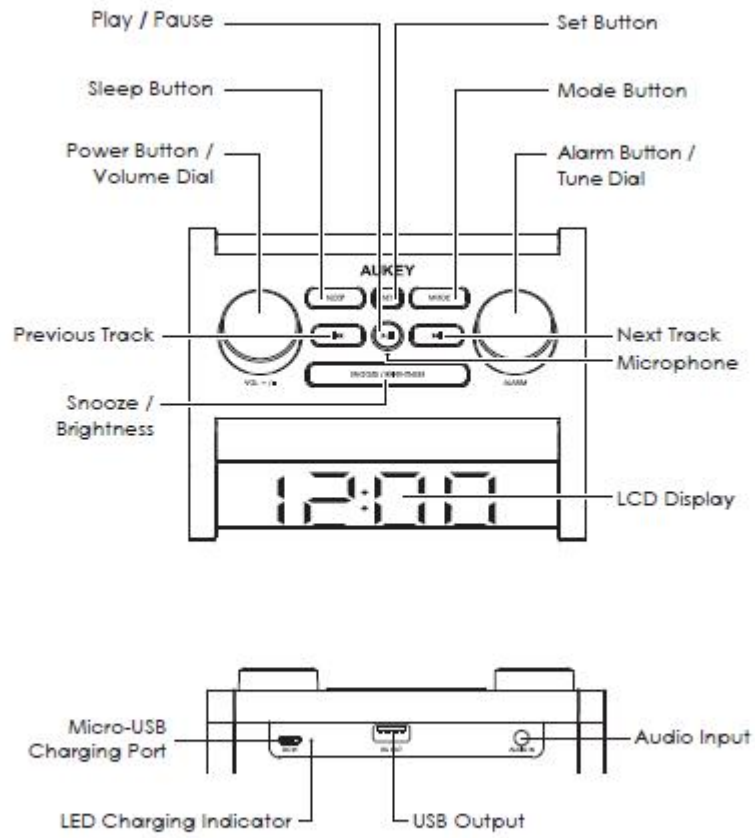

### Charging the Speaker

Fully charge this speaker before first use. Connect it to a USB charger or charging port with the included micro-USB cable to charge. When the red LED charging indicator turns off, your speaker is fully charged and ready for use. Charging takes around 4 hours.

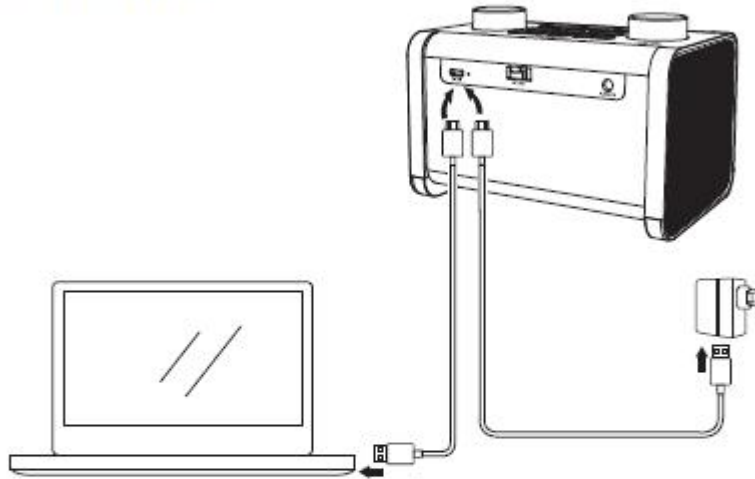

### Powering On / Off

- To power on, press and hold the power button for 2 seconds and the time will show on the display
- To power off, press and hold the power button for 2 seconds and the display will go off

### Setting the Clock

1. Press and hold the set button for 2 seconds until the hours start to flash
2. Rotate the tune dial to set the hours

3. Short-press the set button, and the minutes will start to flash
4. Rotate the tune dial to set the minutes
5. Press set button again to confirm time settings

### **Pairing**

1. When you turn on the speaker, press mode button once to enter pairing ('bt' will show on the LCD display and '📶' will flash in the bottom-left)
2. Activate the pairing function on your phone or other pairing-compatible device and select "AUKEY SK-M37"
3. If a code or pin is required for pairing, enter "0000"
4. When successfully paired, '📶' will stop flashing and stay on
5. To turn off Bluetooth, press set button to return to clock mode or press mode button to switch to FM radio mode

### **Notes**

- If your paired device is switched off or manually disconnected, the speaker will automatically enter pairing mode
- If the speaker or connected device exceeds the operating range, the speaker will disconnect. The connection to the last successfully connected device will be re-established once you re-enter wireless range within 10 minutes. To connect to other devices, please repeat the previous "Pairing" steps

### **Listening to FM Radio**

- Press mode button to switch to FM radio mode
- To automatically tune speaker, press and hold play/pause button for 2 seconds
- After tuning is complete, the radio stations will be saved to your presets (stores up to 40). Press previous / next track to toggle between radio stations
- To manually tune in an FM radio station, rotate the tune dial until the frequency is reached. Press and hold mode button for two seconds to store (screen will display the channel number if it's new or 'HAVE' if you already have it stored)

- To turn radio on or off, press the play/pause button
- FM radio mode will start with last-used radio station each time (even after switching the speaker off)

### **Playing Audio via Audio Input Connection**

Connect the SK-M37 to your PC, laptop, or other devices with audio output using the included 3.5mm audio cable. Press the mode button to switch to audio input mode.

#### **Notes**

- Audio cable must be connected to the speaker to enable audio input mode
- When playing audio using the audio input jack, turn the volume dial to adjust the volume and short press play/pause to play or pause. Next/previous track control on the speaker is disabled in audio input mode
- For some computers, you may need to access the audio control panel to manually set the speaker as the default audio device

### **Setting the Alarm**

Press the alarm button to turn on the alarm. 'ALARM' will appear on the display. Press again to turn off

1. Press and hold alarm for 2 seconds until the hours start to flash
2. Rotate alarm to set the hours
3. Short-press alarm, and the minutes will start to flash
4. Rotate alarm to set the minutes
5. Press alarm to confirm alarm time setting
6. Rotate alarm to select 'ALL' or 'ONE' (ALL – repeat mode that operates once every day; ONE – one-time alarm) and press alarm
7. Rotate alarm to select 'AL 0' or 'AL 2' (AL0 – default alarm tone; AL2 – FM radio as alarm) and press alarm to finish setting the alarm

When the alarm sounds, turn it off by pressing alarm or have it sound again after 10 minutes by pressing snooze. The alarm will automatically shut off after 1 minute if no button is pressed.

### Setting the Sleep Timer

Press sleep button to set speaker auto-off timer (0 to 120 minutes in 10-minute increments). 'SLEEP' will appear on the LCD display. To deactivate sleep timer, press sleep button repeatedly until 000 is reached and 'SLEEP' disappears from the LCD display.

### Setting the LCD Display Brightness

- Press brightness button to adjust brightness (four levels of brightness and screen off are available)

### Charging Other USB Devices

When the speaker is connected to a USB charger or charging port, it can supply up to 5V 1A to any USB-chargeable devices. Just connect your device to the DC OUT USB port on the SK-M37 via a USB cable.

### Controls & LED Indicators

Functions	Instructions
Adjust volume	Rotate the volume dial
Next / Previous track	Press next / previous track
Play / Pause	Press play/pause
Cancel BT pairing	When connected, press and hold mode button for more than two seconds
Answer / End a call	Press play/pause
Reject an incoming call	Press and hold play/pause for 2 seconds
Redial last-called number	Double-press play/pause

LED Indicator	Status
Red LED charging indicator on	Charging
Red LED charging indicator off (after charging)	Fully charged

### Product Care & Use

- Keep away from liquids, extreme heat, and strong magnetic fields
- Do not use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss

### Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

**Amazon US orders:** support.us@aukey.com

**Amazon EU orders:** support.eu@aukey.com

**Amazon CA orders:** support.ca@aukey.com

**Amazon JP orders:** support.jp@aukey.com

\*Please note, AUKEY can only provide after sales service for products purchased directly from AUKEY. If you have purchased from a different seller, please contact them directly for service or warranty issues.



### **Notice for US**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

### **FCC Rules**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

### **Caution**

Changes or modifications made to this device not expressly approved by AUKEY may void the FCC authorization to operate this equipment.