
Model: SK-S1

## **AUKEY**

User Manual Bluetooth Speaker

## Contents


English	01~04
Deutsch	05~08
Français	09~12
Español	13~16
Italiano	17~20
日本語	21~24

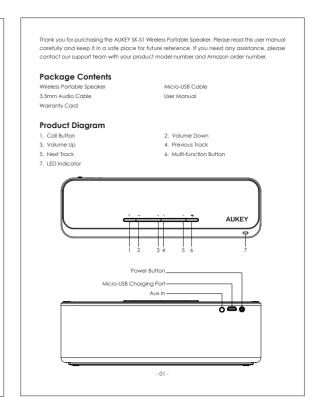

Shenzhen Aukey E Business Co., Ltd.

www.aukey.com | support@aukey.com No.102, Building P09, Electronics Trade Center

Huanan City, Pinghu Town, Longgang District Shenzhen, Guangdong, 518111, CN CE RoHS &

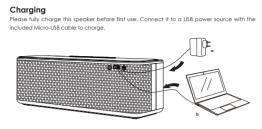

Power On / Off To power on, press and hold the Power Button for 2 seconds. You will hear a voice prompt and the LED indicator will turn blue.

- Notes

   The speaker will automatically shut down after 10 minutes in pairing mode if no devices are paired
- If your paired device is switched off or disconnected, the speaker will automatically shut down after 10 minutes

  If the speaker exceeds the operating range, it will disconnect and go into standby mode. The connection will be reestablished once you reenter wireless range within 10 minutes. The speaker will automatically reconnect to the last successfully paired device. To connect to other devices, please repeat the previous "Paliting" section

When connected, press and hold the Multi-function Button for 2 seconds

Short press the Call Button once Cancel pairing Reject an incoming call Press and hold the Call Button for 2 seconds Short press the Volume Up / Down once Adjust volume Next Track Short press the Next Track once Short press the Previous Track once
Short press the Multi-function Button once Pause / Resume

Notes

• The wireless connection on your speaker will be disconnected when an audio cable is plugged into the Aux port

When playing audio using the Aux connector, control buttons may be accessed from connected device only

For some computers, you may need to access the audio control panel to manually set the speaker as the default audio device

LED Indicator	Status	
Rapidly blinking blue	Pairing mode	
Blue on	Connected	
Rapidly blinking red	Low battery	
Red on	Charging	
Red off	Fully charged	
- 03 -		

**Specifications** Model Number SK-S1 v4.0, CSR8635, A2DP, AVRCP, HSP, HFP Speaker Output Po 2 × 8W Frequency
S/N
Charging Time
Play Time
Talk Time
Standby Time 160Hz-20kHz ≥80dB ~4 hours ~8 hours Up to 20 hours Up to 250 hours Operating Range
Battery Type
Working Temperatu
Dimensions Up to 10m / 33ft Li-Polymer (7.4V 2000mA 32°F - 104°F / 0°C - 4°C 200 × 60 × 64mm / 7.87" × 2.36" × 2.52"

**Product Care** 

Keep away from liquids, extreme heat, and strong magnetic fields

Warranty & Customer Support
For questions, support, or warranty claims, contact us at the address below that corresponds with
your region. Please include your Amazon order number and product model number.

Amazon US orders: support@aukey.com
Amazon EU orders: support.eu@aukey.com
Amazon CA orders: support.ca@aukey.com
Amazon JP orders: support.jp@aukey.com

**FCC Statement** This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference contains the readion retelevision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement
This modular complies with FCC RF radiation exposure limits set forth for an
uncontrolled environment. This transmitter must not be co-located or operating in
conjunction with any other antenna or transmitter.

To power off, press and hold the Power Button for 2 seconds. You will hear a voice prompt and the LED indicator will turn off. When you turn on the speaker, the speaker will automatically enter pairing mode and the LED indicator starts to flash blue rapidly.

 Activate the pairing function on your phone or other compatible devices and select "AUKEY". S.K.S1".

3. If a code or pin is required for pairing, please enter "0000".

4. When successfully paired, you will hear a voice prompt and the LED indicator will stay blue.

Playing Audio via Auxiliary (AUX)

Connect SK-S1 to your PC or laptop using the incli to turn on and the LED indicator will turn green.