


## 封面

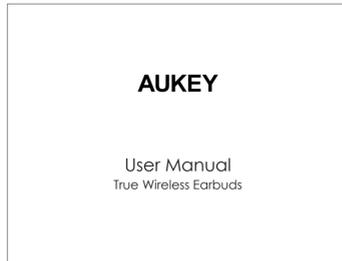

## 封底



## 目录页

Contents	
English	01~10
Español	11~20
繁體中文	21~30
العربية	31~40

材质: 80g 铜版纸  
尺寸: 85\*65mm  
装订方式: 骑马钉  
印刷颜色: 单黑  
封面背面留白

Thank you for purchasing the AUKEY EP-M15 True Wireless Earbuds. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number.

**Package Contents**  
True Wireless Earbuds  
Charging Case  
Silicone earbuds (S / M / L, M come attached to the earbuds)  
USB-A to C Cable  
User Manual

**Product Diagram**

- 01 -

**Specifications**

Earbuds	
Model	EP-M15
Technology	HFP, HSP, AZDP, AVRCP, SBC, AAC
Bluetooth version	5.2
Driver (Each channel)	1 x 10mm speaker driver
Sensitivity	105dB±3dB@1KHz
Frequency Range	20Hz-20KHz
Impedance	32Ω±15%
Microphone type	MEMS (microphone chip)
Charging time	1.5h

- 02 -

Battery Life	7h
Battery Type	Li-polymer (2 x 40mAh)
Operating Range	10m
Weight	8g (pair)

**Charging Case**

Charging Input	DC 5V
Charging Time	2.5 hours
Battery Type	Li-polymer (500mAh)
Number of Earbuds Recharges	3
Weight	32g

**Getting Started**

**Charging**  
Fully charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable to charge the charging case. When the LED charging indicator on the outside of the case changes from flashing blue to solid blue, the case is fully charged. Charging may take 2-3 hours, then case can offer fully charge to the earbuds 3 times. The earbuds should be stored in the case when not in use.

- 03 -

**Note**

- Remove the protective film from the earbuds when using for the first time.
- Using an adapter with an output voltage higher than 5V may not charge the battery or damage the device.

**Turning On / Off**

**Turn On**  
Open the lid of the charging case and take both earbuds out, the earbuds will automatically power on. To manually power on, tap and hold the touch-sensitive panels for 3 seconds until the LED indicator flashes blue and the voice guidance says "power on".

**Turn Off**  
Return both earbuds to the charging case and close the lid, the earbuds will automatically power off. To manually power off, tap and hold the touch-sensitive panel for 10 seconds until the LED indicator flashes red and the voice guidance says "power off". When the earbuds are not worn for about 5 minutes after being removed from the charging case, the earbuds turn off automatically.

**Pairing**  
Starting with the earbuds in the case:  
1. Open the lid of charging case and take both earbuds out, they will automatically turn on, indicators on both earbuds will flash red and blue alternately, and then enter pairing mode, the slave earbud indicator will be off.

- 04 -

- Turn on the pairing function via BT on the device you want to pair with the earbuds
- From the list of available devices, find and select "AUKEY Move Mini S". After the connection is successful, the master earbud indicator will be off

**Regular Use After Pairing**  
Once the earbuds are successfully paired with your device, they can be switched on and off as follows:  
1. Open the lid of the charging case and take both earbuds out, then both earbuds will turn on and connect with each other automatically  
2. To turn off, put the earbuds back in the charging case and close the lid, they will begin charging

**Using the Left / Right Earbud**  
Starting with the earbuds in the case:  
1. Take the left/right earbud out  
2. Turn on the pairing function on the device you want to pair with the earbud  
3. From the list of available devices, find and select "AUKEY Move Mini S"

- 05 -

**Note**

- When you turn on the earbuds, they will be automatically reconnected to the previous-paired device or enter pairing mode if no paired device is found
- Either left or right earbud can be used individually once connected to your device when you keep the other one inside the charging case
- The wireless operating range is 10m (328ft). If you exceed this range, the earbuds will lose connection with your paired device. The connection will be re-established if you re-enter the wireless range within 5 minutes. Or the earbuds will be switched off automatically after 5 minutes

**Reset the earbuds**

- Cancel the Bluetooth pairing of the phone or computer and the Earbuds.
- Quickly tap the touch keys on the left and right earbuds for 5 times, and this will clear the pairing records on the device.
- Put them back into the charging case to charge, then take out the earbuds for re-pairing and connecting.
- If the reset is unsuccessful, repeat the above steps.

- 06 -

**Controls & LED Indicators**

**Streaming Audio**  
Once paired, you can wirelessly stream audio on your device via earbuds. Music will automatically get paused when you receive an incoming phone call and will be resumed once the call ends.

Play or pause music	Tap the touch-sensitive panel once on either earbud
Skip to previous track	Double tap the touch-sensitive panel on the left earbud
Skip to next track	Double tap the touch-sensitive panel on the right earbud

**Taking Calls**

Answer a call	Tap the touch-sensitive panel once on either earbud
Reject an incoming call or End a call	Long-press the touch-sensitive panel on either earbud for 2 seconds
Activate Siri or other voice assistants	Triple-tap the touch-sensitive panel on either earbud

- 07 -

LED Indicator (for earbuds)	Status
Flashing blue	Earbuds charging
Off (after charging)	Charging case fully charged
Flashing red	Battery low

**LED Indicator (for case)**

Blue flashing 4 times, then off	75%-100% battery remaining
Blue flashing 3 times, then off	50%-75% battery remaining
Blue flashing 2 times, then off	25%-50% battery remaining
Red flashing 4 times, then off	0%-25% battery remaining

**FAQ**

**The earbuds are on, but not connecting to my device**  
For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the Pairing section of this manual.

**I've connected the earbuds with my smartphone but can't hear any sound**  
Double-check the volume level on your smartphone and the earbuds. Some

- 08 -

smartphones require you to set up the earbuds as an audio output device before the audio can be transmitted. If you're using a music player or other device, please make sure it supports the A2DP profile.

**The sound isn't very clear or the caller can't hear my voice clearly**  
Adjust the volume on your smartphone and the earbuds. Try moving closer to your smartphone to rule out the possibility of interference or wireless range-related issues.

**What's the wireless range of the earbuds?**  
The maximum range is 10m (328ft). However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 6m and make sure that there are no major obstacles (like reinforced steel walls) between the earbuds and your device.

**The earbuds won't turn on**  
Try cleaning the charging pins and then charging the earbuds for a while. If the earbuds still won't power on, please contact our support team at the email address given in Warranty & Customer Support.

**I put the earbuds back in the charging case, but the earbuds are still connected**  
The charging case is probably out of power. Try charging it.

- 09 -

**Product Care & Use**

- Keep away from liquids and extreme heat
- Don't use the earbuds at high volume for extended periods, as this may cause permanent hearing damage or loss
- Regular cleaning is recommended to prevent issues with charging.

**Warranty & Customer Support**  
For questions, support, or warranty claims, please contact your seller directly.

- 10 -

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
---Reorient or relocate the receiving antenna.  
---Increase the separation between the equipment and receiver.  
---Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
---Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.