

# AMG-Mercedes CLK DTM R/C REAL DRIVE

## USER'S MANUAL

### Attention

If batteries are misused, there is possibility of heat generation, explosion and battery leakage. Please be aware of the following:


- Charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts and that, in the event of such damage, the toy must not be used with the charger until the damage has been repaired.

#### 1 Specifications and functions

Maximum forward speed: turn left, turn right, stop: 1:10  
Frequencies: 27MHz, 40MHz, 48MHz

Maximum speed: 30km/h  
Battery: 3.6V rechargeable battery pack for remote control, 9V battery pack for remote control

#### 11 Parts illustration

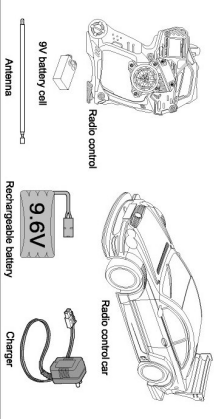

#### 12 How to charge the battery pack

##### 12.1 How to charge

- See diagram 1. Connect battery pack.
- Plug the charger into household socket.
- Diagram 2. Battery pack start charging (9.6V) or 3 hours (9V).
- Diagram 3. Remove the battery pack from the socket.
- Diagram 4. Disconnect the power cord of the charger cable and disconnect both ends below the charger shown.

##### 2. Usage guide

- For first time usage, charge up fully. If not in use for long time, please charge up the battery pack. Overcharging may result in shortening the life of the battery. (Battery should allow 350-400 times of charge/discharge cycle.)
- After usage, the battery pack will heat up and should wait for 5 to 10 minutes before charging.
- Keep the battery pack away from reach of young children.
- Never attempt to break up the battery pack.
- Never attempt to recharge the battery pack with the appropriate voltage for charging.

##### 3. Charging specifications

- Charging specifications: NiCd 9.6V
- Charging conditions: Input capacity AC 220V/240V 50-60Hz / Output capacity DC 9.6V
- Charging time: 3 to 5 hours.

This service complete with part of the FCC Rules Operation is subject to the following two any interference received, including interference that may cause undesired operation.

Thank you for purchasing our product - 1:10 Radio Control Race Car. Please read the user manual carefully before using the product, and retain the information for future reference.

#### IV Installation of batteries to the control

- See diagram 1. Remove the cover of the battery cabinet on the control in the order shown.
- See diagram 2. Install the 9V battery cell according to the correct polarity.
- See diagram 3. Close the cover of the battery cabinet on the control in the order shown.

#### V To install and remove antennas

- See diagram 1. Insert the antenna lighter II by turning it clockwise direction.
- To remove the antenna, turn I anti-clockwise.

#### VI To install battery to the car

- See diagram 1. Unlock and flip open the cover of the car.
- See diagram 2. Plug in the connectors of the battery pack into the car.
- See diagram 3. Insert the 9.6V battery pack into the cabinet. Close the cabinet cover properly by clicking tight the lock as shown in diagram 4.

#### VII Methods to operate

- Switch the power button ON/OFF. (Diagram 1.)
- Switch the power button ON/OFF. (Diagram 1.)
- When the car is in motion, pull the trigger backward. Push the trigger away from the center position. The higher speed of the car moving. R/C car will turn left or right in 7 variation of speed turn the steering wheel of remote anti-clockwise. For the middle of turning circle. Switch the power ON/OFF button of control to "on" position. Front wheel will turn up. When completing the car move forward, pull the trigger up and rear wheel turn left. Front left headlamp blinking. When the car turn right, front right headlamp blinking the car on the ground. (Diagram 2.)

#### VIII Regarding frequency and environment

- When there is another car of similar radio frequency operating nearby, the radio control may not function.
- Location or time. By slight adjustments, the control may not function. Try again at other locations.
- This product is designed to run on concrete and polished surfaces. If run on wet surfaces, the car may not function. Please avoid using the car on wet surfaces. When the tires and road surface and may also spin 180 degrees or pivot.

## CAUTION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries, new or used are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline batteries, standard(carbon-zinc) or rechargeable(Nickel-cadmium) batteries.

## WARNING:


**CHOKING HAZARD - Small parts  
Not for children under 3 yrs.  
HIGH SPEED-Not for children  
under 8 yrs.**

**Intellectual Property Rights Licensed  
by Daimler Chrysler AG**

All materials for fastening or packing purposes are not part of the toy and should be discarded for children's safety. Keep this related information to further review.



Packing has to be kept since it contains important information

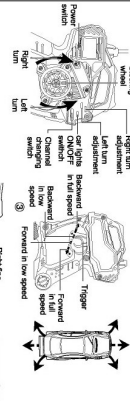

- When the car cannot run in left and right the adjustment switch the alignment of the car (Diagram 4). If this method could not achieve the proper driver to turn the alignment seat in the bottom of the car. (Diagram 5) Screw to the left to adjust right turn and screw to the right to adjust left turn.
- This product use advanced Motor frequency 3 different channel controlling technology. Each other. Before using, check the switch of changing channel in controller and both in the same control position. In wrong position, start part the switch to the right in channel "1". (Diagram 6) If the controller is in channel "1", then the car will run in channel "1". (Diagram 7) After finish the game, turn off the power of the car and the controller.



#### VIII To Consumers

- When playing the car indoor, avoid damaging furniture or glass surfaces.
- If it avoid accidents happen, please do not run the car in public. Only use this product when thundering while running the car outdoor, should stop immediately.
- Do not touch the antenna inoperably. Broken antenna may have sharp edges and causes injury. Be aware from the car unit. Before the play, must function falling.
- When the car is reversing, do not put your hand close to it, nor fall on the hair or clothing to avoid injury.
- Should not drop or bump the car.
- Store the car in cool places and not away from the fire.
- Please do not attempt to disassemble or alter the product.
- Please change the batteries.

- When there is another car of similar radio frequency operating nearby, the radio control may not function.
- Location or time. By slight adjustments, the control may not function. Try again at other locations.
- This product is designed to run on concrete and polished surfaces. If run on wet surfaces, the car may not function. Please avoid using the car on wet surfaces. When the tires and road surface and may also spin 180 degrees or pivot.