



RACE-TIN SERIES

User's Manual



Thank you for purchasing our product – Race-Tin Series Wild Ranger X. Please read the user manual carefully before using the product, and retain the information for future reference.

CAUTION

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult's supervision;
- Only batteries of the same or equivalent type as recommended are to be used;
- Different types of batteries, new or used are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short circuited;
- Do not mix old and new batteries;
- Do not mix alkaline batteries (standard/carbon-zinc) or rechargeable (Nickelcadmium) batteries.

I. Specifications and functions

1. Scale: 1:28;
2. Movements: Forward, backward, turn left, turn right, stop;
3. Frequencies: 27MHz, 40MHz, 49MHz;
4. Batteries: Four AA batteries for main device and two for remote control;
5. Speed: 9Kmh;
6. Operating range: No less than 20m.

II. Take Out and Use the Controller, Race Car and Antenna

1. See Diagram 1. Push down the button and lift the transparent lid.
2. See Diagram 2. Take out the controller.



(Diagram 1)




(Diagram 2)

3. See Diagram 3. Turn outside 90 degree the button that fix the packaging bottom on the car body and take out the car.
4. See Diagram 4. Take out the antenna.



(Diagram 3)

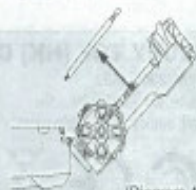

(Diagram 4)

III. To install antenna

See Diagram 5. Insert the antenna and twist it tightly clockwise.



(Diagram 5)

IV. To Install Controller Batteries

1. According to the directions of Arrow 1 and Arrow 2 on the diagram, respectively press down the battery cover buckle and push out.
2. Install two AA batteries at the correct polarity. (See Diagram 7)
3. Push close the battery cover and fasten it. (See Diagram 8)



(Diagram 6)




(Diagram 7)




(Diagram 8)

V. To Install Car Batteries

1. Turn the car, according to the directions of Arrow 1 and Arrow 2, respectively open the battery cover and remove it. (See diagram 9)
2. Install four AA batteries at the correct polarity and close the battery cover. (See diagram 10)

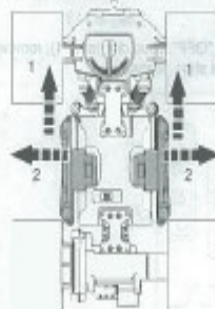


(Diagram 9)

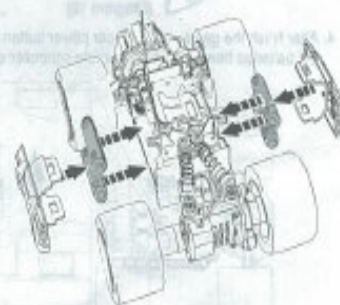

(Diagram 10)


V. Operation Method

1. Switch the power button on the car to ON and place it on the ground. (See diagram 11)

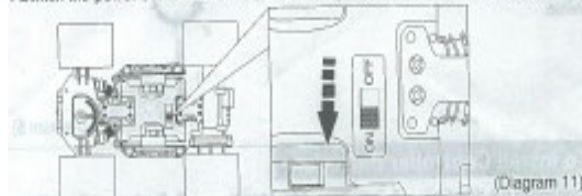

(Diagram 11)

2. Push the controller trigger backward, the car will run forward, and vice versa. Turn the controller rudder counterclockwise, the car will turn left, and vice versa. (See diagram 12). (The correct operate steps: hold the remote with your left hand and use fingers to control the trigger, at the same time control the steering wheel with your right hand.)

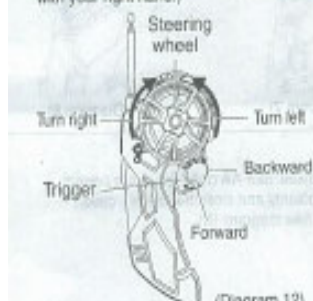


(Diagram 12)

3. To adjust the alignment of the car, use the adjuster at the tip of the bottom of the car. See diagram 13. ("R" for right, "L" for left)



(Diagram 13)

4. After finish the game, push the car power button to "OFF". (See diagram 14), remove the batteries from the car and remote controller and store separately.

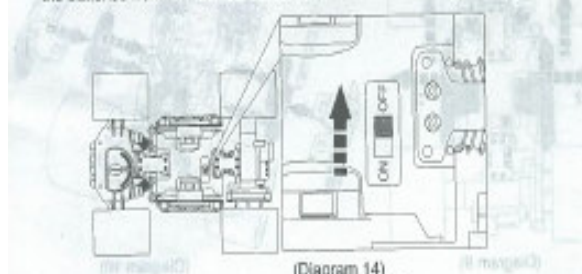

(Diagram 14)

VI. To Consumers

1. When playing the car indoor, avoid damaging furniture or glass surface.
2. To avoid accidents happen, please do not run the car in public. Only use this product in safe outdoor environment.
3. When thundering while running the car outdoor, please stop playing immediately.
4. Do not run the car on puddles or sand to avoid circuit failure.
5. Do not fold the antenna incorrectly. Broken antenna may have sharp edges and cause injury.
6. Do not pull the wires from the car unit. Broken wire may result function failure.
7. When the car is revolving, do not put your hand close to it, nor put it on the hair or clothing to avoid injury.
8. Do not run the car toward others.
9. Should not drop or bump the car.
10. Store the car in cool places and away from fire.
11. This product is composed of complicated electronic devices and original parts, please do not attempt to disassemble or alter this product.
12. When batteries are low in power, the car speed will slow down or out of control. Please change the batteries.
13. If the car is under pressure for a long time, the rear twist board may be deformed. Hold the rear motor and bend it to the opposite direction until the board is flat again.
14. Do not shake the tin vigorously to avoid drop out of the remote control.
15. To enable longer life of the batteries, please follow below:
 - + Please remove the batteries when not in use.
 - + Change all old batteries at the same time; otherwise, the car runs slowly and the life of the batteries will die very soon.

VI. Regarding frequency and environment

1. When there is another car of similar radio frequency operating nearby, the radio control may not function.
2. When interfered by other radio-waves, the control may not function. Try again at other location or time.
3. This product is designed to run on cement and sand polished surface. If run on wax polished surface, the car cannot move in straight line due to poor contact between the tires and road surface and may also spin 180 degree or pivot.



WARNING:

CHOKING HAZARD-Toy contains small parts. Not for children under 3 years.

تحذير:
خطر اختناق - اللعبة تحتوي على اجزاء صغيرة، غير مناسبة للاطفال تحت سن الثالثة.

AULDEY TOY (HK) CO.,LTD.

Tel: (852)2305 4882

Website: www.auldey.com

E-mail: auldey_ltd@auldey.com

For more information:
<http://www.auldey.com>
All rights reserved

MADE IN CHINA

Suitable for children of 3 above



AULDEY
© 2006 AULDEY

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.