


## CHANGING THE TRANSMIT/RECEIVE CHANNELS:

If a number of PC's are being remotely controlled in the immediate vicinity (within about 10 meters), interference may occur. This can be overcome by selecting different channels. **Only change the remote control in the event of interference.** To do so proceed as follows:

1. Press and hold the Setup key , until the LED goes out.
2. Release the Setup key. The LED flashes. Now enter the appropriate code using the numerical keys (1, 2, etc. up to 16).
3. Now press the Setup key briefly. The LED lights briefly, to indicate successful programming.
4. Now enter the appropriate code in the Power Cinema Setup program.

## BATTERY DISPOSAL

⇒ **Important:** Batteries are special category waste and must be disposed of properly. We will be happy to take back your old batteries. Replace the batteries only with batteries of the same or an equivalent type.

## FCC CAUTION

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, it may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control devices in accordance with the specifications in Sub-Parts B and C of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- \* Reorient the antenna of the radio/TV experiencing the interference.
- \* Relocate the equipment with respect to the radio/TV.
- \* Move the equipment away from the radio/TV.
- \* Plug the equipment into an outlet on a different electrical circuit from the radio/TV experiencing the interference.
- \* If necessary, consult your local dealer for additional suggestions.

NOTE: Modifications to this product will void the user's authority to operate this equipment.

## INSTRUCTIONS FOR PC REMOTE CONTROLLER

**MEDION®**

**Note:** This wireless remote control set can only be used to control the **Power Cinema** program on your PC. In order for it to work, the following conditions must be met:

- The PC must be booted up.
- Windows® XP must be fully loaded.
- The driver software must be installed\*.
- Power Cinema installed\*.
- Receiver connected to a USB port.

\* All these conditions are met in the delivered state.



## INSERTING BATTERIES

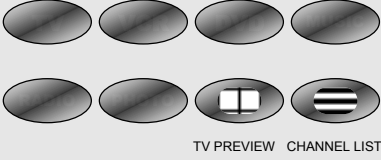 



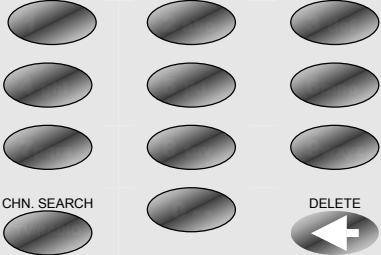 
1. Turn the remote controller upside down.
2. Open the battery compartment by carefully pulling the clip on the cover and lifting it at the same time.
3. Insert two batteries (type: AA, Micro) in the battery compartment. Ensure that the polarity corresponds to the illustration etched on the inside of the battery compartment (+ must correspond with + and - with -).
4. Close the battery compartment again.

 
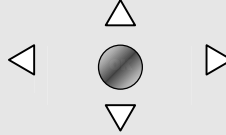 

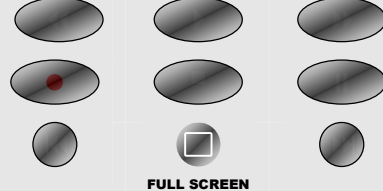 

## INSTALLING THE REMOTE CONTROL RECEIVER

It does not matter if the PC is switched on or off when you connect up the remote control receiver.

The necessary driver software is already installed on your computer. The driver is part of Power Cinema and is installed along with the program.

1. Boot up your PC and wait for Windows® to load fully.
2. Insert the USB plug of the remote control receiver in a free USB slot (refer to your PC operating manual). Your PC will automatically detect the new device and automatically integrate it provided that the driver has been installed (delivered state).
3. You can now use the remote controller to operate the **Power Cinema** program.

Key	Description
 <p>TV PREVIEW CHANNEL LIST</p>	<p>For selecting the corresponding application for TV, video, DVD, music, radio and photo. Once the channel has been selected use the <b>TV-PREVIEW</b> key to see a preview of the TV programs and the <b>CHANNEL LIST</b> key to call up a list of the saved programs.</p>
 <p>SETUP VIDEO DESKTOP</p>	<p>Use the <b>SETUP</b> key for remote controller channel programming. <b>VIDEO DESKTOP</b> allows you define a film that is currently being shown for your desktop wallpaper.</p>
 <p>VOL - CHAN + CHAN - VOL +</p>	<p>The <b>CHAN +/-</b> keys are used for program selection. <b>VOL +/-</b> increase or decrease the volume. The key in the middle mutes the sound.</p>
	<p>These keys are used to operate the Videotext.</p>
 <p>CHN. SEARCH DELETE</p>	<p>The keys with numbers on them are used for direct frequency input and for renaming files and channels. To enter text press the key repeatedly until the letter you want appears. Press OK, to confirm your choice. Use <b>DELETE</b> to clear the last input. If you wait for about 3 seconds the input is automatically confirmed.</p> <p>The <b>CHN. SEARCH</b> key starts the TV and radio channel search.</p>

Key	Description
 <p>RENAME SNAPSHOT</p>	<p>Use the <b>RENAME</b> key for renaming files. You can use <b>SNAPSHOT</b> to take a snapshot from a film or television program that is currently showing. This snapshot is automatically saved as an image.</p>
	<p>The arrow keys move the cursor of the mouse in the corresponding direction. This function only works in the <b>Power Cinema</b> program. Press OK to confirm your choice.</p>
 <p>ACQUIRE IMAGE EDIT IMAGE</p>	<p><b>ACQUIRE IMAGE</b> starts a dialogue for reading in images. <b>EDIT IMAGE</b> allows you to add effects to your images.</p>
 <p>FULL SCREEN</p>	<p>The <b>▶</b> key starts playback. Use <b>⏮/⏭</b> for fast forward or rewind. The <b>⏸</b> key pauses playback, while <b>■</b> ends it. <b>⏭</b> jumps to the end, <b>⏮</b> to the start. Start recording by pressing <b>●</b>. The <b>FULL SCREEN</b> key changes the size of the window.</p>
 <p>DVD MENU ON/OFF DVD AUDIO</p>	<p><b>DVD MENU</b> calls up the menu for DVD playback. Use <b>DVD AUDIO</b> for DVD sound control.</p> <p>The ON/OFF button starts and end the <b>Power Cinema</b> program.</p>

**Warning:** The remote control functions only work with the Power Cinema program. They cannot be used with the operating system or the PC itself.

**Note:** Some keys have no function or different functions in certain areas. So, for example, Videotext cannot be operated if the TV application has not been started. For more help, click the question mark in the relevant program area.