



24110



Universal Remote Instruction Manual





Table of Contents

Introduction	3
Button Functions	4
Initial Setup	6
Battery Installation	6
Battery Saver	6
Code Saver	6
Power-On default	6
Code Setup	6
Direct Code Entry	7
Code Search	7
Code Identification Feature	8
Setup	9
Programming Combo Device Codes	9
Controlling Combo Devices	9
Controlling Devices Requiring Separate Power On and Off Buttons	9
VCR/DVD/DVR Punch-Through Feature ..	10
Volume/Mute Control and Punch-Through Feature	10
Setting All Volume/Mute Control to any one Mode	11
Setting any Mode to use its own Volume/Mute Control	11
Sleep Timer	12
Find/Page Feature	12
Troubleshooting	13



Introduction

Congratulations on your purchase of this 24110 Universal Remote Control. It is one of the most unique looking, and easy to use remote controls available today. With the 24110 juggling multiple remote controls is a thing of the past! Your 24110 Universal Remote controls up to 5 devices, including the most popular brands of TV, VCR, DVD, SAT, CBL, and audio equipment.

The 24110 comes with a convenient base/stand that you can place the remote in when you're not using it. The base/stand also has a Find/Page feature, which lets you quickly find the remote if you've misplaced it. You simply press the Page key on the base and the remote sounds with a tone, making it easy to locate.


Other unique features for this remote are described in the remainder of this manual.

Note: Some functions from your original remote may not be controlled by the 24110 remote. Use the original remote, if available, to control such functions. Sometimes buttons other than described in these instructions may actually perform the function. For example, the CH and VOL buttons might be used to navigate through menu choices. We recommend you experiment with the remote to identify if such situations pertain to your equipment.

The 24110 Universal Remote is easy to use, easy to program, and it gives you total control—at the touch of your fingertips!



Button Functions

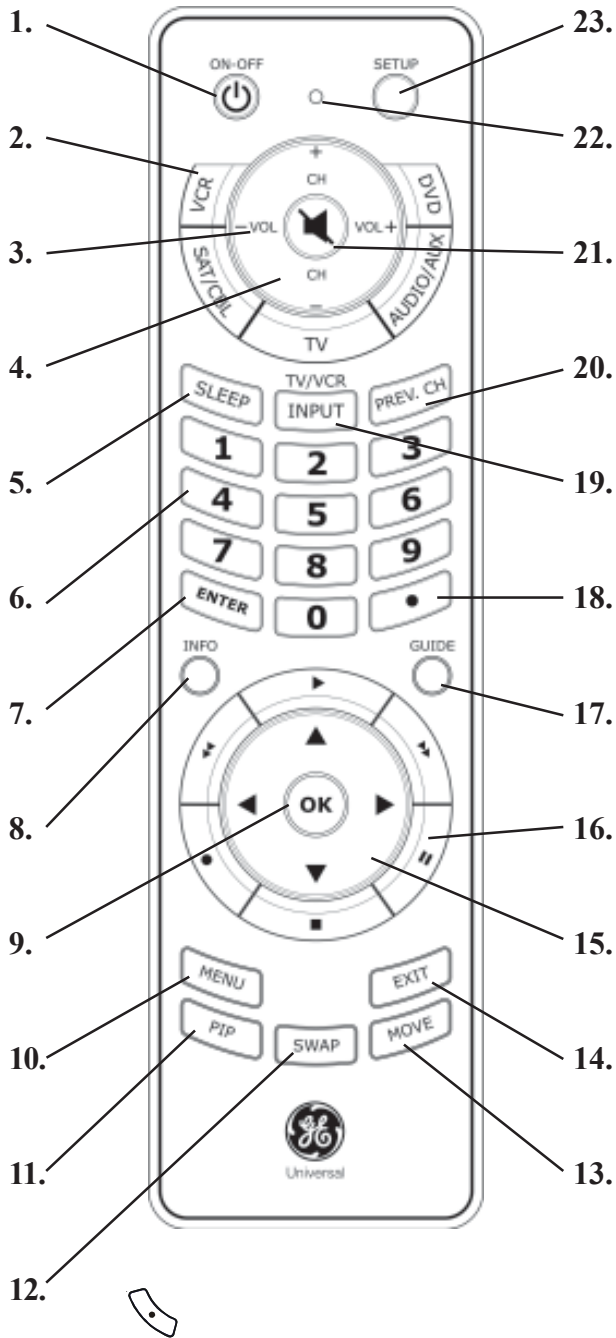

Note: The Record button must be pressed TWICE to record from your VCR. For some brands of VCRs, you might need to press the Record button once, then press it again for three seconds. Some buttons on the remote might have functions that are referred to by different names on the device you are controlling. E.g., **PREV.CH** may be called RECALL, or **ENTER** may be called DISPLAY. These differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your product. E.g., your product must have **PREV.CH** ability for the **PREV.CH** button to operate this feature.

Button Functions, cont.

1. **ON-OFF:** Turns device On or Off.
2. **TV, VCR, DVD, SAT/CBL, AUDIO/AUX:** Selects product to be operated.
3. **VOL UP/DOWN:** Changes the volume level of the product, normally the TV.
4. **CH UP/DOWN:** Changes the channels. Also controls DVD/CD CHAPTER +/- track selection, i.e., DVD/CD Track Skip Up/Down. Note the **VCR** buttons also control the DVD when in DVD Mode.
5. **SLEEP:** Turns off the TV after a period of 1 to 99 minutes.
6. **NUMBERS:** Enter numbers for direct channel selection. Some products require **ENTER** to be pressed after channel selection.
7. **ENTER:** Used after direct channel number entry to immediately change to the selected channel.
8. **INFO:** Displays on-screen channel information, etc.
9. **OK:** Selects menu items for the device you are controlling.
10. **MENU:** Displays the DVD disc menu screen. Use with the **UP, DOWN, LEFT & RIGHT** navigation buttons.
11. **PIP:** TV Picture-in-Picture control.
12. **SWAP:** Swaps TV PIP screens.
13. **MOVE:** Moves the position of the PIP screen.
14. **EXIT:** Exits On-Screen Menus and/or Returns to previous On-Screen selection.
15. **UP, DOWN, LEFT & RIGHT:** Navigation buttons.
16. **RECORD, PLAY, STOP, REW, FF, PAUSE:** VCR control buttons operate your VCR even when the remote is set to operate the TV. Also operates DVD Scan -/+.
17. **GUIDE:** Displays satellite or cable on-screen program guide.
18. **(●)** Used for digital channels, e.g., 2.3.
19. **INPUT** Selects the video inputs of your TV if equipped with that feature. **TV/VCR:** Operates the same as the TV/VCR or antenna keys on your original remotes.
20. **PREV CH:** Returns to the previously selected channel or DVD repeat toggle.
21. **MUTE:** Turns off the TV sound while the picture remains.
22. **Red Indicator:** Lights when any button is pressed.
23. **SETUP:** Used for setting up your remote.

Setup

Battery Installation

The 24110 Remote requires batteries for both the remote and the remote base. Do the following to install the batteries.

1. Push down on the tab on the back of the remote, and lift the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert 2 AAA alkaline batteries.
3. Press the battery cover back into place.
4. Open the battery door on the bottom of the base.
5. Match the batteries to the + and - marks inside the battery case, then insert 2 AAA alkaline batteries.
6. Press the battery door back into place.

Battery Saver

Your remote automatically turns off if the buttons are depressed more than 30 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).

Code Saver

You have up to 10 minutes to change the batteries in your remote without losing codes you have set up. However, do not press any buttons until batteries are installed in the remote. If buttons are pressed without batteries in the remote, all the codes will be lost.

Power-On Default

The remote powers on in TV mode.

Code Setup

The **SETUP** button is used to setup the remote. You can either setup the remote using the code for your brand of product, from the code tables (on separate sheet), or you can search through the library of codes until you find a code that works for your product.

Please refer to “Code Search” on page 7 for more information on using the code search feature to learn how to search through the library of codes for your products.

NOTE: You can store any kind of code under any mode (except TV). I.e., you can store a VCR code under the **CBL** button, or a DVD code under the **VCR** button, etc. However, you can only store TV codes under the **TV** button.

Direct Code Entry

1. Press and hold the **SETUP** button until the red indicator stays on, then release the **SETUP** button.
2. Press and release the desired mode button (**TV**, **VCR**, etc.). The red indicator blinks, then stays lit.
3. Enter the 4-digit code from the code tables (on separate sheet). Note: After a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
4. With your device on, press **CHANNEL UP**. If the device responds, no further programming is required. Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

Write your codes down here for easy reference later.

Type	Type stored	Code
TV	TV	
VCR		
DVD		
SAT/CBL		
Audio/AUX		

Code Search

If your product does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following these steps.

1. Manually turn on the device (**TV**, **VCR**, etc.) to be controlled.
2. Press and hold the **SETUP** button until the red indicator stays on, then release the **SETUP** button.
3. Press and quickly release the desired mode button (**TV**, **VCR**, etc.). The red indicator blinks off once.
4. Press the **CH UP** button repeatedly (up to 300 times) until the device to be controlled changes channel. The red indicator blinks off with each button press. If you accidentally overshoot the code required, press the **CH DOWN** button to backtrack through the library until the device changes channel. Pressing **CH UP** changes direction to forward again.
5. Press and release **ENTER** to install the code.



Code Search, cont.

Most users will store VCR codes under the **VCR** button, DVD codes under **DVD**, etc. If (for example) you want to store a VCR code under **DVD**, first follow the procedure for Direct Code Entry (previous page), and press **DVD** in step 2 of Direct Code Entry, then enter ANY VCR code in step 3 of Direct Code Entry. Then follow the steps for Code Search on the previous page. **Note:** If the device does not have a **CHANNEL UP** button, use **PLAY** (VCR only) or **ON-OFF** instead. Code Search starts from the currently stored 4-digit number under that mode.

Code Identification Feature

The Code Identification Feature allows you to identify the four digit library code stored under your device key. For example, if you want to find out what 4-digit code is stored under your TV device key, follow the six steps below:

1. Press and hold the **SETUP** button until the red indicator stays on. Release the **SETUP** button.
2. Press and release the desired mode button (**TV**, **VCR**, etc.). The red indicator blinks, then stays lit.
3. Press and release the **SETUP** button. The red indicator blinks off.
4. To find the first digit for the code stored under the mode key pressed in step 2, press each numeric key from **0-9** in turn. When the red indicator blinks off the number you pressed is the first digit for the code you are searching for.
5. To find the second digit, repeat step 4. This time when the red indicator blinks off this is the second digit.
6. Repeat step 4 to find the third and fourth digits.



Setup, cont.

Programming Combo Device Codes

Some Combo devices (e.g., TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the **TV** button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

Controlling Combo Devices

Some Combo devices (e.g., TV/VCR, TV/DVD, DVD/VCR, etc.) have separate buttons on the original remote to select the part of the Combo device to be controlled. For example, if your Combo device is a DVD/VCR then its original remote might have separate DVD and VCR buttons for selection of the Combo part you would control. The equivalent button functions can be found on your new remote by using the device Mode and **SETUP** buttons.

Referring to “Code Search” on page 7, setup a device Mode (e.g., **DVD**) with the correct code for your Combo device. Assuming the DVD/VCR Combo device is the example and its code is programmed under **DVD** Mode, press and hold the **DVD** Mode button for more than one second to send the DVD button command. To send the VCR button command, quickly press and release the **SETUP** button followed by pressing and releasing the **DVD** Mode button. This method can be applied similarly to all Combo devices (e.g., TV/VCR, TV/DVD, DVD/VCR, etc.) and is available for all Modes. Note this feature is not supported by all codes.

Controlling Devices Requiring Separate Power On and Off Buttons

Some devices (e.g., certain RCA TVs) require separate Power On and Power Off buttons to turn the device on and off. The equivalent button functions can be found on your new remote by using the device Mode and **ON-OFF** buttons. Referring to “Code Search” on page 7, setup a device Mode (e.g., **TV**) with the correct code for your device.

Assuming a TV device is the example and its code is programmed under **TV** Mode, to turn your TV on, press and hold the **TV** Mode button for more than one second to transmit the Power On button command.





Setup, cont.

Controlling Devices Requiring Separate Power On and Off Buttons, cont.

To turn the TV off, press and release the **ON-OFF** button to transmit the Power Off button command. This method can be applied similarly to any device and is available for all Modes. Note this feature is not supported by all codes.

VCR/DVD/DVR Punch-Through Feature

This remote allows the 6 VCR transport buttons (i.e., **PLAY**, **PAUSE**, **STOP**, **FF**, **REWIND**, and **REC**) to Punch-Through control from any Mode programmed with TV, SAT or Cable codes to the last **VCR**, **DVD** or **DVR** programmed Mode you used. Normally other types of remotes only punch-through (from another Mode) on the 6 VCR buttons to the device programmed under the **VCR** Mode button. This is not much use if you are using a DVD programmed under a Mode other than VCR. For example, if you have 3 DVD, VCR or DVR devices programmed into this remote, the last one you accessed on the remote will be the one that has control of the 6 VCR transport buttons when in any other Mode. This feature will not operate if the programmed TV, SAT or Cable code has its own VCR transport button control, e.g., a TV Combo, SAT/PVR, etc.

Volume/Mute Control and Punch-Through Feature

This remote lets you select which device Mode controls your Volume/Mute buttons. The remote is initially set (factory default) for all device Modes programmed with “**Visual**” codes (e.g., TV, VCR, DVD, DVR, SAT & CABLE) and “**Audio**” codes (e.g., CD & AUDIO) to use their own Volume/Mute control if present. If the programmed “**Visual**” code has no Volume/Mute operation of its own then those buttons will punch-through control to the **TV** Mode device without needing to change to **TV** Mode. Please refer to the next page for more information.



Setup, cont.

Any Mode chosen for Volume/Mute control MUST have its own Volume/Mute function or the Volume/Mute buttons will do nothing.

Setting ALL Volume/Mute Control to any one Mode

This routine can set all Modes to “punch-through” to any one chosen Mode for Volume/Mute button control without the needing to change to that Mode.

1. Press and hold the **SETUP** button until the red indicator turns on, then release the button.
2. Press and hold the **MUTE** button until the red indicator blinks off, then release the button.
3. Press and release the desired Mode button (**TV**, **VCR**, etc.) for Volume/Mute control, the red indicator blinks then stays on.
4. Press and release the **MUTE** button and the red indicator turns off. The red indicator will blink rapidly for three seconds if the Mode you have selected has no Volume/Mute control.
5. All other Modes will now punch-through to your chosen Mode for Volume/Mute control.
6. All “Visual” and “Audio” programmed Modes will now punch-through to the respective Modes you have chosen for Volume/Mute control.

Setting any Mode to use its own Volume/Mute Control

This routine can set any Mode to use only its own Volume/Mute control. Note - If your chosen Mode has no Volume/Mute functions of its own then the Volume/Mute buttons will do nothing.

1. Press and hold the **SETUP** button until the red indicator turns on, then release the button.
2. Press and hold the **MUTE** button until the red indicator blinks off, then release the button.
3. Press and release the desired Mode button (**TV**, **VCR**, etc.), the red indicator blinks then stays on.
4. Press and release the **VOL-** (Down) button, the red indicator blinks then stays on.
5. Press and release the **MUTE** button and the red indicator turns off.
6. All “Visual” and “Audio” programmed Modes will now punch-through to the respective Modes you have chosen for Volume/Mute control.



Sleep Timer

The **SLEEP** button enables the remote to turn off your TV after a period of 1 to 99 minutes as shown below. The remote must be in TV mode to set a Sleep Timer. This feature works even if your TV does not have a sleep feature.

1. Press and release the TV device button.
2. Press and hold the **SLEEP** button until the red indicator remains lit (about 2-3 seconds).
3. Release the **SLEEP** button.
4. Press and release the numeric buttons (**01-99**) for the time required. The red indicator will blink off to indicate button press acceptance.
5. TV Sleep Timer is set.
6. **Leave the Remote pointing towards the TV with an unobstructed path.**

To cancel the Sleep Timer, press and hold the **SLEEP** button until the red indicator blinks, or press and release the **ON-OFF** button in TV mode.

Find/Page Feature

The 24110 comes with a convenient base/stand that you can place the remote in when you're not using it. The base/stand also has a Find/Page feature, which lets you quickly find the remote from up to 20 feet from the base, if you've misplaced it. You simply press the Page key on the base and the remote sounds with a tone, making it easy to locate.



12

Troubleshooting

Remote does not operate your product.

- Press the mode button of the product you want to control.
- Program the remote with a new code.
- Install new batteries. (You might have to reprogram your remote after installing new batteries.)
- Remote may not be compatible with your product.

Remote does not operate some features of your product.

- Program remote with a new code.
- Remote may not be able to operate all features of your product or button names might be different than your product.

Red Indicator blinks after you program a product code.

- Remote did not accept the code.
- Try to program the code again or try a different code.

Lost Your Codes?

Enclosed with this remote is a sticker on which you should write the codes for each device you programmed. Apply the sticker to the back of the remote or somewhere convenient for future reference.

Also on the sticker is our website address which, should you lose your codes or programming instructions, you can find available on our website:
www.jascoproducts.com



13



FCC Caution

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, it may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control devices in accordance with the specifications in Sub-Parts B and C of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures:

- Reorient the antenna of the radio/TV experiencing the interference.
- Relocate the interface with respect to the radio/ TV.
- Move the interface away from the radio/TV.
- Plug the interface into an outlet on a different electrical circuit from the radio/TV experiencing the interference.
- If necessary, consult your local Dealer for additional suggestions.

NOTE: Modifications to any of the components in this kit will void the user's authority to operate this equipment.



90 Day Limited Warranty

Jasco Products Company warrants this product to be free from manufacturing defects for a period of ninety days from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Jasco Products Company
10 E. Memorial Road
Oklahoma City, OK 73114-2205



24110



Universal Remote Instruction Manual

Jasco Products Company
10 E. Memorial Road
Oklahoma City, OK 73114-2205

Made in China

24110-12/08