

ZoomPro™ Remote For use with Pan/Tilt/Zoom Camera

**Model
CR15A**

The CR15A Remote lets you move the position of an XC21A Pan/Tilt/Zoom camera from left to right (Pan) and up and down (Tilt) as well as Zoom in on the picture. You can store 4 positions for a camera and then use the remote to sweep between these positions. Install 4 AAA alkaline batteries (sold separately) in the remote's battery compartment.

Operation

Press a left or right "arrow" button at the top of the CR15A Remote to "Pan" the camera left or right. Press an up or down "arrow" button to "Tilt" the camera up or down. Press Zoom in and out. The camera auto-focuses but you can fine-tune the focus with the manual focus Up/Down buttons.

Storing positions:

Buttons 1 thru 9 are used to store 9 position settings for the camera.

1. Press C1 (default setting for the camera with power supply set to A1).
2. Press and hold Setup until C1 camera button lights green.
3. Move the camera to desired position using the Pan and Tilt arrow buttons, and zoom in or out to desired zoom then press button number 1 to store the first position and zoom setting.
4. Move the camera to the next position and zoom, then press '2' to store 2nd position (repeat for buttons 3 thru 9 for up to 9 positions).
5. Press Setup again to store and exit. (If setup is not pressed again the remote stores the positions and exits setup automatically after 1 minute).

To move the camera to a stored position press 0 through 9 to move to any of the 9 stored positions.

Press **Sweep (0)** to sweep through all 9 positions stored for the camera.


To stop sweeping or movement to a stored position:

Press any "arrow" button on the remote while the camera is moving to stop the movement.

Press **Center** to center the position for the camera.

To clear ALL stored positions for a selected camera (C1):

Press C1. Press and hold Setup until the green indicator stays on. Press the 0 button **twice**. Press setup again. Repeat for C2, C3, and C4.

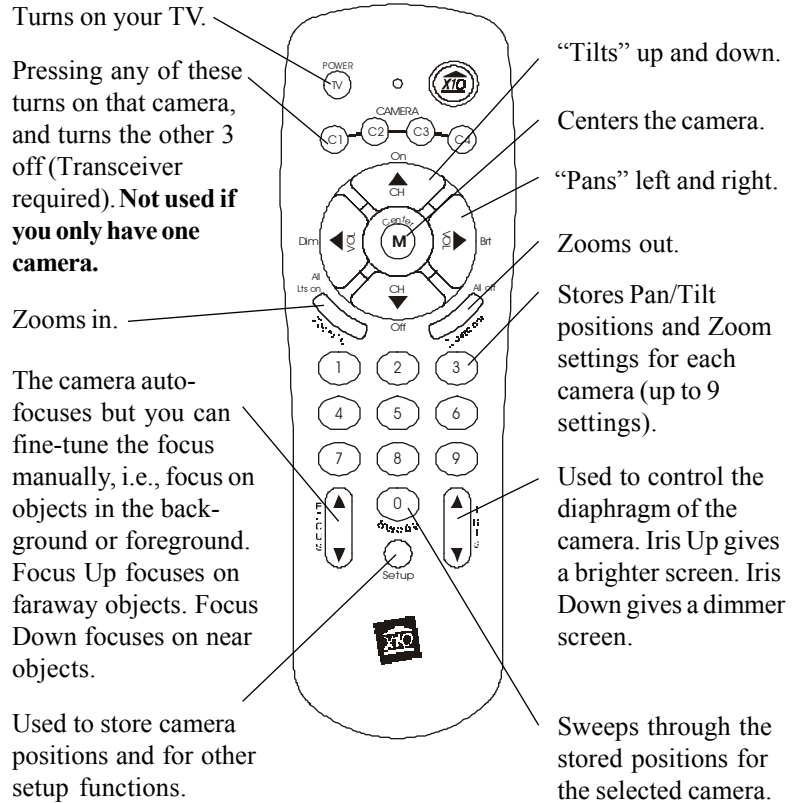

F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

LIMITED 1-YEAR WARRANTY

Please visit www.x10.com/warranty to complete your on-line warranty registration. Thank you.

For help or more information on setup, please visit: www.x10.com/support

X10.com, a Div. of X10 Wireless Technology, Inc.
For additional help, visit www.x10.com/support

www.x10.com

CR15A-04/02