Inserting the Battery

Pull out the battery tray on the side and insert the battery with the "+" side up. FOFA then immediately enters Simple Setup mode. (See Quick Start or Setting Up FOFA).



WARNING - CHOKING HAZARD Keep batteries out of the reach of Children

The FCC wants you to know

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- 1. This device may not cause harmful interference;
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, it may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control devices in accordance with the specifications in Sub-Parts B and C of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- Reorient the antenna of the radio/TV experiencing the interference.
- Relocate the equipment with respect to the radio/TV.
- Move the equipment away from the radio/TV.
- Plug the equipment into an outlet on a different electrical circuit from the radio/TV experiencing the interference.
- If necessary, consult your local dealer for additional suggestions.
- The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Limited 90-Day Warranty
This product is warranted by Melbourne Designs, LLC against manufacturing defects in material and workmanship under normal use for 90-Days from the date of purchase from Melbourne Designs. EXCEPT AS PROVIDED HEREIN, Melbourne Designs MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN Melbourne Designs SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NO LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF Melbourne Designs HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you

In the event of a product defect during the warranty period, notify Melbourne Designs LLC. Melbourne Designs will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replace parts and products, and products on which a refund is made, become the property of Melbourne Designs, LLC. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by Melbourne Designs; (c) consumables such as fuses or batteries; (d) cosmetic damage: (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation

This warranty gives you specific legal rights, and you may also have other rights

Melbourne Designs, LLC Contact through info@FindOneFindAll.com www.FindOneFindAll.com

Need more FOFA's? Looking for information? Go to

www.FindOneFindAll.com

FOFA®XD-Find One, Find All® **Key Finder & Remote Control Locators.**

For the person who has everything and loses it. sm



Thank you for purchasing Find One, Find All® $^{\rm XD}$ (or FOFA® for short), the only key finder and remote control locator with Radio Proximity Detection.(XD) FOFA is expandable to 36 unique units and doesn't require a "base" to locate the items like previous key finders. Simple to setup and use, use FOFA on your keys, wallet, remotes, cell phones, MP3 players, backpacks, or anything else that is easily misplaced.

If you can't wait to start using your FOFA's, go to Quick Start. For a more in-depth understanding of your FOFA's, see **Setting up Your FOFA's**.

Quick Start

Insert a battery into each FOFA by sliding out the battery tray on the side and inserting the battery "+" side up. You will hear a beep, then the LED will begin to flash slowly. This is the Simple Setup mode.

To set the first FOFA, press



Insert a battery into the second FOFA in the same manner as the

To set the second FOFA, press



Your FOFA's are now programmed as Items 1 & 2. That's it! Attach your FOFA's to anything you want to keep track of. Push 2 on the first FOFA to find the second one, push 1 on the second to find the first! See Using FOFA to Find Lost Items to learn more.

Find One, Find All® and FOFA® are Registered Trademarks of Melbourne Designs, LLC, Patented.