

Set Up and Operating Instructions for Remote Control Model UR47A

To setup for A/V functions:

Press and hold SETUP until the red lights stays on. Press and release TV, VCR, CBL, AUX, SAT or DVD. Enter the three digit code for your TV, VCR, etc., from the code list.

Home Control operation:

Plug in an X10 Transceiver (sold separately) and set it to Housecode A. You can control it and other X10 modules (set to Housecode A) as follows:

Press and release any of the 4 ON-OFF rocker buttons at the bottom corresponding to the X10 Module you want to control. Set the slide switch on the side of the remote to control Modules set to Unit Codes 1-4 OR 5-8.

To change the X10 Housecode:

The UR47A Remote defaults to Housecode A, to change this:

1. Press and hold SETUP until the red light stays on.
2. Press and release the number button corresponding to the Housecode you want:
(01=A, 02=B, 03=C16=P).

Note: The Housecode you choose must match the Housecode on the Transceiver and X10 Modules you are using it with.

F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control security devices in accordance with the specifications in Sub-Part B of Part 15 of *FCC Rules*, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- o Reorient the antenna of the radio/TV experiencing the interference.
- o Relocate the product with respect to the radio/TV.
- o Move the product away from the radio/TV.
- o Plug the product into an outlet on a different electrical circuit from the radio/TV experiencing the interference. If necessary, consult your local dealer for additional suggestions.

NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

X10 (USA) Inc., 91 Ruckman Rd., Closter, NJ 07624. www.x10.com