

# Set Up and Operating Instructions for Remote Control Model UR86A

## Install batteries:


Open the battery compartment on the back of the remote and insert 4 AAA alkaline batteries (not supplied). Observe polarity.

## Setup

1. Turn on the device you want to control (TV, VCR, cable box, etc.).
2. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.
3. Press and release mode button for the device you want to control. The LED blinks once.
4. Enter the 3 digit Code from the Library Code Table (separate sheet). The LED turns off after the last digit entered.
5. Point the remote at the device and press the POWER button. Your device should turn off.
6. Turn your device on and press CHANNEL+. If the device responds, setup is complete.

## PC Operation

Download and install the software from [www.x10.com/software](http://www.x10.com/software). Run the program and press the PC button to access Mouse Remote features. Follow the on screen prompts in the software and select help from the on-screen menu for more information.

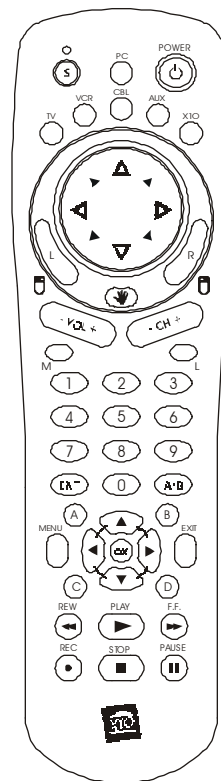

**F.C.C. CAUTION** - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control security devices in accordance with the specifications in Sub-Part B of Part 15 of *FCC Rules*, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- o Reorient the antenna of the radio/TV experiencing the interference.
- o Relocate the product with respect to the radio/TV.
- o Move the product away from the radio/TV.
- o Plug the product into an outlet on a different electrical circuit from the radio/TV experiencing the interference. If necessary, consult your local dealer for additional suggestions.

**NOTE:** NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**X10 (USA) Inc.**  
**400 Forge Way, Suite 412**  
**Rockaway, NJ 07866**  
**973-625-9355**