



# MusicTime™ Remote *For use with MusicTime software*

The MusicTime Remote works with the MusicTime Audio Sender system. The remote lets you access all the features of the MusicTime application from the comfort of your easy chair.

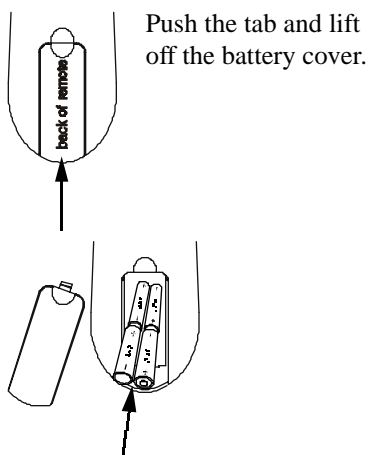

Insert four AAA alkaline batteries, taking care to match the + and - marks in the battery compartment.

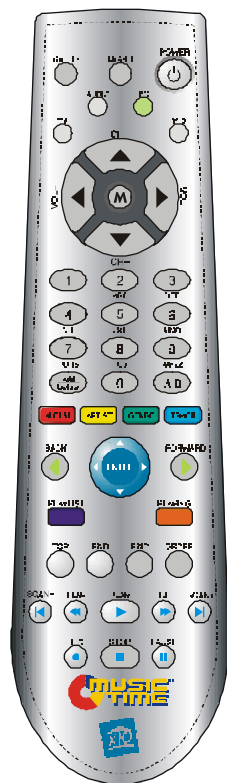

## BUTTON DESCRIPTIONS

### Indicator light

The indicator light flashes when you press any button.

### Setup

Used to setup the remote to control your TV or audio system as follows:

1. Turn on the device you want to control (TV, or Audio system).
2. Press and release mode button for the device you want to control (TV or Audio).
3. Press and hold SETUP until the green LED indicator under the button you pressed in step 2 lights steadily. Release SETUP.
4. Enter the 3 digit Code from the Library Code Table (separate sheet). The LED turns off after the last digit entered.
5. Point the remote at the device and press the POWER button. Your device should turn off.

### Learn

Learns TV/Audio codes not in the remote's library, as follows:

1. Point your existing remote at the UR89A Remote with a distance of about 1 inch between remotes.
2. Press the mode button that matches the equipment you want to learn (TV or Audio). The LED blinks once.
3. Press and hold SETUP until the green LED indicator under the button you pressed in step 2 lights steadily. Release SETUP.
4. Press and release the LEARN button. The LED blinks once.
5. Press and release the button on the UR89A Remote that you want to teach. (e.g. POWER) The LED blinks once.
6. Press the button on your existing remote that you want to learn. Hold the button until the LED on the UR89A Remote blinks off.
7. Repeat steps 5 and 6 for each button you want to learn.
8. When you've finished learning all the keys, press SETUP.

### Power

Runs and closes MusicTime. Also operates your TV/Stereo.

### PC, TV, Audio

Puts the remote into MusicTime mode, or mode to control the volume on your TV or audio system, or change TV channel.

### X10

Used for Home Control functions.

### 0-9

Selects track numbers directly.

### Add/Delete

Adds or removes tracks from your playlist.

### A/B

Selects input mode on your TV.

### Album, Artist, Genre, Track

Selects how you want to display/select your music files.

### Up, Down, Left, Right Arrows

Moves around the current list displayed. Works like a joystick.

### Enter

Opens the current selection. (Like pressing joystick button).

### Back and Forward

Moves back through previous operations, then forward again.

### Playlist

Displays your play lists.

### Playing

Displays info on the track that's playing.

### Top, End, Find, Order

Used to move around within, and organize your music files.

Top and end go to the top and end of a list. Find lets you find albums/artists/tracks by name using the ABC, DEF, etc., on the numeric buttons (like you enter names on a cell phone). Order lets you rearrange the order of albums/artists/tracks.

### Play, Stop, Pause, FF, REW, Scan+/-

Used like you would use on your CD player.

### Play

Marks a track in a currently playing CD for non inclusion in this session.

### Record

Permanently deletes a marked track from a CD.

**See the help in the MusicTime software for more information.**

**F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

**See: [http://www.x10.com/support/return\\_policy.htm](http://www.x10.com/support/return_policy.htm) for warranty info.**

**For help or more information on setup, please visit: <http://www.x10.com/support>**