

# Wrist Watch Emergency Call Button, Model WR10A

## Set Up and Operating Instructions

### Installation

The WR10A comes with a CR2016 Lithium 3V battery already installed.

1. Set the **INSTALL/RUN** switch on the Console to **INSTALL**.
2. Press the face of the WR10A and hold for 2 seconds. The Console emits a tone.
3. Set the Console's slide switch to **RUN**.
4. To set up additional WR10As (up to eight), repeat above steps.

**Note:** If you do not hear a tone, remove the battery and then press down on the face of the WR10A for 2 seconds. Refit the battery and press the face again for 2 seconds to initialize the WR10A. You can now install the WR10A as described above.



### Operation

1. Set the Console's **INSTALL/RUN** switch to **RUN**.
2. Press the face of the WR10A and hold for 1 second to trip the Panic Alarm. Press twice quickly to stop the Alarm.

### Replacing batteries

Remove the back cover and replace the battery with a CR2016 Lithium 3V battery. After replacing the battery, the following steps are necessary to determine that the Console still recognizes the WR10A.

1. Set the Console's slide switch to **RUN**.
2. Press the face of the WR10A and hold for 2 seconds. If the system trips, the Console recognized the WR10A and no further action is necessary. Press the face of the WR10A twice quickly to stop the alarm.

### If the system did not trip:

1. Set the Console's slide switch to **INSTALL**.
2. Press the face of the WR10A and hold for 2 seconds. The WR10A transmits a random code to the console. The Console acknowledges this with a beep and logs in the WR10A.
2. Set the Console's slide switch to **RUN**.

### X-10 (USA) INC. LIMITED 1-YEAR WARRANTY

X-10 (USA) Inc. warrants X-10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X-10 (USA) Inc. agrees to repair or replace, at its sole discretion, a defective X-10 product if returned to X-10 (USA) Inc. within the warranty period and with proof of purchase.

If service is required under this warranty:

1. Return the defective unit postage prepaid to X-10 (USA) Inc. at the address below.
2. Enclose a check for \$4.00 to cover postage and handling.
3. Enclose a dated proof of purchase.
4. X-10 is not responsible for shipping damage.

**F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.**

**NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**