
RF-6 English User manual

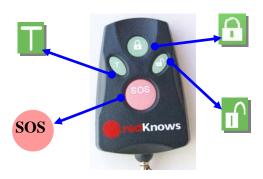

4-Key Remote Operating Instruction

Individual Button	Description
Silence key	Press this button for 1 second; it will shorten the high decibel alarm sound.
Alarm arming key	Press this key and the high decibel alarm will beep once. This indicates that the anti-burglary mode is ON or set to arm.
Alarm disarming key	Press this key and the high decibel alarm will beep twice. This indicates that the anti-burglary mode is removed or set to disarm.
SOS/Emergency key	To prevent user from pressing this button accidentally, the user have to press this key for five seconds continuously to send the signal. The Alarm system will send SMS to the owner's hand phone number and control center/Emergency contacts. Pay Attention: After system sends for SOS help, all system functions will temporary stop; according to priority help condition (except anti-thief will function normally); the system will return to normal after 5 mins. If press by mistake, you can press the disarm key 10 times to disarm the system.

FCC ID: USW-RF-6

Sizes: $59mm(1)\times39mm(w)\times11mm(h)$

Weight: 33.2g

Type of Battery: 23A

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.