


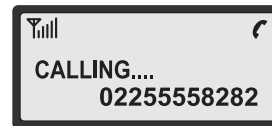 


Basic Operation



- Making Calls**
- Redial**
- Receiving Calls**
- Adjusting Volume**
- Choosing the Ring Tones**
- Message Service**
- SMS Services**

MAKING CALLS

1. Make sure your phone is turned on.
2. Pick up the handset to hear a dial tone.
When the phone fails to acquire service signal, you will hear "No Service" tone (intermittent tone).
3. Dial the number to call. The LCD window displays the number.
4. Wait for a moment for auto calling or press .
5. When the other person answers, begin conversation.
6. To end the call, replace the handset on the main unit.






NOTE1: Modifying a phone number while dialing..


- To erase the last digit entered: Press .
- To erase the entire number: Press  and hold.

NOTE2: Automatic calling

The phone is set to places a call automatically 4~10 seconds after last digit entry from the factory. To disable automatic calling or change the delay time,



1. Press , , .

2. Press ,  to select 'OFF', then press  to save.

Once automatic calling is disabled, you have to dial the number and press  to place a call.

REDIAL



Redial the last number you dialed.

1. Pick up the handset or press .
2. Press .

 
NOTE : You may not redial when there is no last number dialed stored in the memory. "NO LAST CALL!" message is displayed on the LCD.

RECEIVING CALLS

When there is an incoming call, the phone rings and blinks "Incoming Call" message on the display.

1. Simply pick up the handset or press  to answer the call.
2. To disconnect, replace the handset or press .

NOTE: When the ringer volume is set to 'Silent', the phone does not ring. Only the "Incoming Call" message blinks.

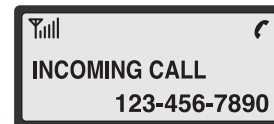



When the Caller ID service is activated.



Caller ID Display

The Caller ID feature displays the caller's number when the phone receives a call. If the caller's name and number are stored together in the phone book, the caller's name is displayed. Contact your service provider to activate this feature.

  NOTE: If the call is not answered, the phone displays the "Missed Call" message with the call arrival date and time.

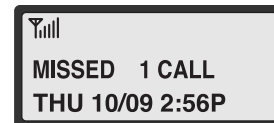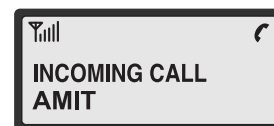

A DJUSTING VOLUMES

You can control the sound volumes including the key tone, earpiece, speaker and the ringer



Adjusting key tone volume

Press repeatedly until it reaches proper volume.



 
Adjusting external speaker volume

Press repeatedly during hands free call to adjust external speaker volume.



Adjusting earpiece volume

Pick up the handset and press repeatedly during a phone call to adjust earpiece volume.

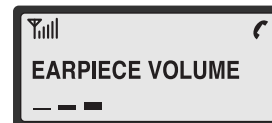

Adjusting ring volume

1. Press , , .
2. Press , to adjust ringer volume.
3. Press to save.



NOTE: If 'Silent' is selected, the phone does not ring when an incoming call comes in. Only the "INCOMING CALL" message blinks on the display.

C HOOSING THE RING TONES

You can choose from twelve different ring tones.

1. Press , , .
2. Press (or ,) to select ring type.
3. Press to save.



MESSAGE SERVICE

Message Service is network dependent feature and is available only when your service provider supports it. Check your service provider is providing message service before using this function.



 
Sending New Text Messages

1. Press . Press (New Message)
2. Write message using the keypad. Toggle between uppercase, lowercase, and numeric by pressing button.
3. Press .

NOTE: See page 18 for more information on text edit.

4. Enter destination number and press .
5. Once the destination number has been entered, the message will be sent.

NOTE: To change default message options, access Message Options menu.






Sending Saved Text Messages

1. Press , (Saved MSG).
2. Select message to resend with (or ,) and press .
3. To send the message again, press .
To edit the message press .





Received Text Message

   1. When text message arrives, 'MESSAGE! 10/12 4:04 PM' displays shortly and appears in the icon line.
 2. Press , (INBOX).
 3. Press (or ,) to select message you want to see and press .
 4. The message, arrival time and call back number (if available) display. If the message is long, it will be scrolled down in 3 seconds automatically.
To scroll up and down manually, press (or ,).
 5. If the message contains call back number and you want to make a call to that number.
Press if you want to call back.
- NOTE:** If the call back number is stored in the phonebook with a name, the name will display instead of the phone number.
6. To Forward the received Text Message to another number, press .
 7. To write a reply to sender, press .

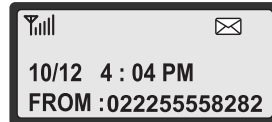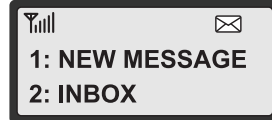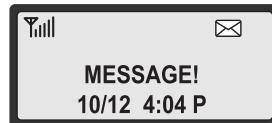


Delete Selected Text Message

  1. Press , (ERASE MSG).
2. Press (or ,) to select message you want to delete and press .
3. Press again.
4. Select 'YES' with (or ,) and press .

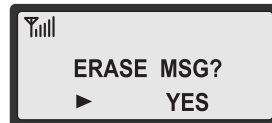

Retrieving Voice Messages

 1. When voice messages arrive, "VOICE MSG 10/12 4:04 PM" shortly appears and appears in the icon line.
2. Press , (Voice MSG) or press to view message directly
3. Press to dial voice mail service center.

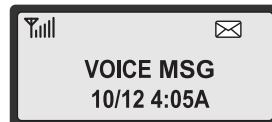

**Erasing All Messages**

1. Press ^{MESSAGE} , **7** (Erase MSG) .
2. Select 'YES' with (or *****, **#**).
3. Press ^{STORE} .

**Setting/Releasing Message Alert**

1. Press ^{MESSAGE} , **8** (MSG Option), **2** (MSG Alert).
2. Select 'ON' or 'OFF' with (or *****, **#**).
3. Press ^{STORE} .

While the message alert is set, the phone will alert the user when messages arrive.

**Saving Sent Message**

1. Press ^{MESSAGE} , **8** (MSG Option), **5** (Save Sent MSG).
2. Select "ON" or "OFF" with (or *****, **#**).
3. Press ^{STORE} .

While this option is turned on, outgoing new messages will be automatically saved. Retrieve the saved messages by accessing Saved Message Menu.

**Setting Message Priority Type**

1. Press ^{MESSAGE} , **8** (MSG Option), **4** (MSG Priority).
2. Select "NORMAL" or "URGENT" with (or *****, **#**).
3. Press ^{STORE} .

**Setting Message Auto Delete**

1. Press ^{MESSAGE} , **8** (MSG Option), **6** (Auto Delete).
2. Select "ON" or "OFF" with (or *****, **#**).
3. Press ^{STORE} .

When Auto Delete is enabled, the phone will automatically delete oldest received messages in INBOX in case of full memory.





Phonebook


- Internal Phonebook**
- Storing Number in Memory**
- Searching For An Entry in Phonebook**
- Erasing An Entry in Phonebook**
- Erasing All Entries in Phonebook**
- One-touch Dialing**
- Two-touch Dialing**

INTERNAL PHONE BOOK


Your phone has an internal "Phone Book" in which you can store up to 99 frequently used names and numbers.

STORING IN THE PHONEBOOK


1. Press ^{MENU} , **2**.
2. Enter the name by pressing the alphanumeric keypad and pressing ^{STORE}  after completed.

 
NOTE1: If you do not want to enter a name, just press ^{STORE}  here. The number will be saved as "No Name".

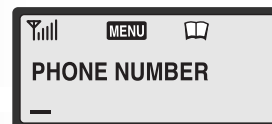


NOTE2: Name entry is limited to maximum of 16 letters.

 


How to Enter & Edit TEXTS

You can enter letters using the alphanumeric keypad. Each button has 3 to 4 letters assigned. Each stroke on the button scrolls the assigned alphabet letters and the numeric value. Stop pressing when the letter you want appears. You can switch between uppercase, lowercase, and numeric characters by pressing ^{MESSAGE} .

To enter special characters, press **1** repeatedly. For space, press **#**. To go back, press *****. A single stroke on ^{CLEAR}  will erase the last letter in line.

3. Enter the telephone number and press ^{STORE} . Up to 32 digits can be saved.
4. An empty location displays automatically. Press ^{STORE}  to save the number in the location.
5. To assign a different location, enter 2 digit location number and press ^{STORE} .

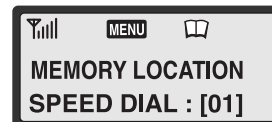

NOTE: If you select the location in which a number has already been stored, "OVERWRITE?" will be displayed. Press ^{STORE} to overwrite or press ^{CLEAR} to go back to automatic location.

6. "CONFIDENTIAL ?" will be displayed. Press ^{STORE} if no secret feature is necessary. To store the number in secret, select 'YES' by pressing ^{YES} (or *.#) and press ^{STORE}.

NOTE: Secretly saved number will not be displayed unless the lock code is entered. One or two touch-dialing secretly saved number will prompt lock code entry.



S EARCHING FOR AN ENTRY IN PHONEBOOK

You can search information stored in the phone book in several ways and make a call directly from the phonebook.



Searching by Name

1. Press ^{MENU}, 1 (Phonebook), 1 (Search), 1 (Name).

2. Enter all or part of the name and press ^{STORE}.

Example) Enter A and press ^{STORE} to find all names that start with A.

3. The phone displays the memory location numbers along with the name of the first match.

NOTE: "NO NAME MATCHES" appears when there is no name matching with your entry.

4. Press ^{YES} (or *.#) to search for the name you're looking for and press ^{STORE} to display the number.

NOTE: "ENTER LOCK CODE" appears when you try to access secretly saved number. Enter lock code and press ^{STORE}.

5. Press ^{REDIAL} to dial the number displayed to make a call.

