



User's Manual

PG130



INTRODUCTION

The Fixed Wireless phone operates through a wireless connection instead of a landline phone cable, enabling the subscriber to set up the phone at any where wireless service is available.

Axesstel GSM/GPRS Quad Band Fixed Wireless Phone provides high quality and superior performance with many features such as excellent voice quality, data service, caller ID, three-way calling, call waiting, short message service, speaker phone etc. A large 3-line monochrome graphic liquid crystal display provides user-friendly interface for quick and easy-to-understand information display.

FEATURES

1. GSM 850/900/1800/1900MHz Quad Band
2. Fast GPRS Connection, Class B, Multislot 10
3. Speaker Phone with Hands-Free Dialing
2. Signal Strength Indicator
3. Redial
4. Volume Control
5. Dust-proof Laminate Keypad
6. Battery Power Backup
7. LCD Backlit
8. One-touch, Two-touch Dialing
9. Automatic Sending
10. Phone Book
11. Short Message Service
12. Data & Fax Call via CSD & GPRS

TABLES OF CONTENTS

Safety Precautions.....	4
Checking Parts	5
Setting up Your Phone	6
Getting to Know Your Phone	10
Display Icons.....	11
Function Keys.....	12

Basic Operation

Making Calls	14
Redial.....	15
Receiving Calls	15
Adjusting Volumes	16
Choosing the Ring Tone	16
Message Service	17

Internal Phone Book

Internal Phone Book	21
Storing in phonebook	21
Searching for Entries in Phonebook	22
Erasing An Entry in Phonebook	24
Erasing All Entries in Phonebook	24
One-Touch Dialing	24

Useful Features

Call History.....	26
Mute.....	27
Selecting Time Mode.....	27
Setting the Alarm.....	29
Checking and Clearing Call Times	29

Advanced Features

Changing Greeting Message.....	31
System Reset.....	31
Restricting Use of the Phone.....	32
Locking / Unlocking the Phone.....	33
Changing the Lock Code.....	33
Language.....	33

Optional Features

Call Divert.....	35
Call Waiting.....	35
Three-Way Calling.....	35
Data and Fax Call Service.....	35

Miscellaneous

Menu Table.....	37
Specification.....	38
Conformance Statements.....	39
How To Setup Data Connection	41

SAFETY PRECAUTIONS

1. Avoid placing the phone in a dusty location, or near a source of gas or fire.
2. Don't Shake, hit or drop the phone.
3. To clean the outside of the phone, use only a soft, dry cloth. The chemicals in alcohol, benzene or acetone can damage the surface of the phone.
4. Do not twist or pull the cord out of the phone.
5. Do not disassemble the phone.
6. Do NOT use the power adaptor if:
 - The power cord is damaged.
 - The phone has been dropped or damaged in any way.
7. Use only the AXESSTEL provided adaptor for the phone. Do not use the AXESSTEL adaptor for any other purpose.
8. Use only the AXESSTEL provided antenna. Do not use the antenna for any other purpose.
9. Frequency and length of use can affect the life of the self-charging battery. Contact your customer service if the battery is not operating properly.
10. Use only the designated self-charging battery. Dispose of exhausted batteries properly. Never discard a battery in or near fire or flame.
11. Do not place the telephone near water, for example, near a bathtub, sink, wet basement, or swimming pool.

NOTE 1: The input and output voltages are indicated on the adapter.
(Input: AC 100~240V, 50~60 Hz, Output: DC 5V, 600mA)

NOTE 2: Do not insert or eject SIM card while the phone is powered on.

CHECKING THE PARTS

After unpacking your phone, make sure that you have all the parts shown below. If any piece is missing or broken, please call your customer service center.

1. Main Unit
3. Antenna
5. Power Adaptor
7. Data Cable

2. Handset
4. Battery
6. Manual



SETTING UP YOUR PHONE

Installing SIM card

1. Remove SIM bracket cover.
2. Lift SIM bracket by pulling.
3. Insert proper SIM card.
4. Put the bracket back in place.
5. Close the cover.



USING SIM CARD FOR THE FIRST TIME

1. Entering PIN code.

NOTE1: The PIN feature function can be set on/off in PIN setup menu.



NOTE2: PIN code can be changed in PIN setup menu.

2. If an incorrect PIN code is entered, an error message displays.

NOTE: There are 3 chances to enter the correct PIN code. If incorrect PIN codes are entered 3 times, the SIM card will be locked. To unlock the SIM card, contact your service provider.

3. The phone is ready to use after entering the correct PIN code.

  * Default PIN code is provided by your service provider.



Installing the phone

This phone operates by receiving DC power from the AXESSTEL power adaptor, which connects to an electrical outlet. The phone is equipped with a rechargeable battery as a back up in case of an AC power failure.

 
Desktop installation



Service Status Check

Display in the Service Area


When the phone's power is turned on, LCD will display POWER ON Image while the phone loads information from SIM card. After the loading is finished, LCD will display Greeting with date and time. The number of bars of signal strength indicator (antenna icon) indicates the strength of service signal of the area.



Display in area with no service

When there is no service signal detected in your area, no antenna bar appears. Contact your service provider for the coverage area information.

 Also check if the antenna is connected.




GETTING TO KNOW YOUR PHONE



- 1. Antenna:** Adjusting the position of antenna improves the sound quality of the call.
- 2. Message:** Press to access message related menus.
- 3. MENU:** Press to access the phone's menus.
- 4. Volume Up/Down:** Lets you adjust sound levels and scroll through the menu options and displays.
- 5. Clear:** Lets you clear your last entry.
- 6. OK:** Stores phone numbers, and any settings you select in the menu with in the phone's memory.
- 7. Speaker:** Allows you to place or receive a call without using the handset.
- 8. Power:** End or reject the call and Turn On or Off the phone.
- 9. Redial:** Allows you to redial the last.
- 10. Scroll:** Lets you scroll through the menu options and displays.

DISPLAY ICONS

Icons display on the screen to indicate what features you are using, signal strength and battery status etc...

 

Indicate the strength of the signal. More bars indicates stronger signal.



Indicates the level of battery power. The more bars, the more power. When the battery is low, the icon blinks, and an alert tone sounds.



Indicates that you are using the phone's menu.



Indicates that the alarm has been set.



Indicates that you are in the Phonebook menu.



Indicates that you have text message or a voice mail message.



 
Indicates that a voice or data call is in progress.

FUNCTION KEYS



① ②

1. Press this key to retrieve messages.
2. Press this key to display the phone's main menu.



③ ④

- 3/4. Press this key to control the volume of keypad, earpiece And speaker. In the menu mode, use this key to scroll through The menu items.



5. Clears information from display screen.
 - To erase one character from the display screen, press it once.
 - To erase all characters on the screen, press and hold.
 - To go back one step in the menu mode, press it once
6. Press this key to store a phone number in the phone book, to save menu settings.
7. The Speaker button is used to place or receive a call without using the handset. The integrated microphone and speaker on the Main unit allows hands free conversation.
8. Press this key to turn ON or OFF the phone
9. Press this key to redial the last number called or to connect a call right after dialing the number without waiting until the call is connected automatically.

⑩

⑪



- 10/11. Press this key to control the volume of keypad, earpiece And speaker. In the menu mode, use this key to scroll through The menu items. In the edit mode, use this key for special characters

Basic Operation

Making Calls
Redial
Receiving Calls
Adjusting Volumes
Choosing the Ring Tones
Message Service

MAKING CALLS

1. Make sure your phone is turned on.
2. Pick up the handset to hear a dial tone.
When the phone fails to acquire service signal, you will hear "No Service" tone (intermittent tone).
3. Dial the number to call. The LCD window displays the number.
4. Wait for a moment for auto calling or press **<Redial>** .
5. When the other person answers, begin conversation.
6. To end the call, replace the handset on the main unit.

NOTE1: Modifying a phone number while dialing.

- To erase the last digit entered: Press **<Clear>** .
- To erase the entire number: Press **<Clear>** and hold.

NOTE2: Automatic calling

The phone was set to places a call automatically 3~9 seconds after last digit entry. To disable automatic calling or change time setting, access "Auto send time" menu to change settings.

1. Press **<MENU>** , **<5>** (Configuration) , **<5>** (Auto send time).



REDIAL

Redial the last number you dialed.

1. Pick up the handset or press <SPEAKER> key.
2. Press <Redial>.

NOTE: You may not redial when there is no last number dialed stored in the memory. "Log empty!" message is displayed on the LCD.



RECEIVING CALLS

When there is an incoming call, the phone rings blinks "Incoming Call" message on the display.

1. Simply pick up the handset or press <SPEAKER> key to answer the call.
2. To disconnect, replace the handset or press <SPEAKER> key.

NOTE: When the ringer volume is set to 'Silent', the phone does not ring. Only the "Incoming Call" message blinks.

 


When the Caller ID service is activated.

Call ID Display

The Caller ID feature displays the caller's number when the phone receives a call. If the caller's name and number are stored together in the phone book, the caller's name is displayed. Contact your service provider to activate this feature.

NOTE: If the call is not answered, the phone displays the "Missed Call" message with the call arrival date and time.



ADJUSTING VOLUMES

You can control the sound volumes including the key tone, Earpiece, speaker and the ringer

Adjusting earpiece volume

Pick up the handset and press <Volume> repeatedly during a phone call to adjust earpiece volume.

Adjusting ring volume

1. Press <MENU> , <4> (Sound) , <4> (Ring Volume)
2. Press <Volume> to adjust ringer volume.
3. Press <OK> to save.

 
NOTE: If 'Silent' is selected, the phone does not ring when an incoming call comes in. Only the "INCOMING CALL" message blinks on the display.



CHOOSING THE RING TONES

You can choose from eight different ring tones.

1. Press <MENU> , <4> (Sound) , <1> (Ringing tone).
2. Press <Volume> (or <*>, <#>) to select ring type.
3. Press <OK> to save.




MESSAGE SERVICE

Message service is a network dependent feature and is available only when your service provider supports it. Make sure your service provider is providing message service before using this function.

Sending New Text Messages


1. Press **<MESSAGE>** key, **<1>**(New message).
2. Write message using the keypad. Toggle between Uppercase, lowercase, and numeric by pressing **<#>**. Press **<OK>** when finished.
3. Enter the destination number and press **<OK>**.
3. Select **<Send>** to send message or **<Save>** to save message.

 NOTE: See page 21 for more information on text edit.

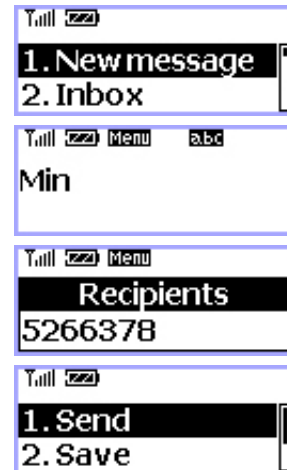

Sending Saved Text Messages

 1. Press **<MESSAGE>** key, **<3>**(Outbox).
2. Select message to resend with **<Volume>** (or **<*>**, **<#>**) and press **<OK>**.
3. Review the content of the message and press **<MENU>** to select Options
4. Select **<2>**(Edit) to edit if needed and select **<1>**(Send) to send.

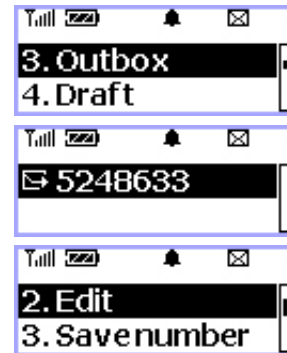

Received Text Message

1. When a new text message arrives, '1 New Message' will be displayed and Message Icon appears in the icon line.

2. Press **<MESSAGE>** key, **<2>** (Inbox) or press **<OK>** to view message directly.

3. Press **<Volume>** (or **<*>**, **<#>**) to select message you want to see and press **<OK>**.

4. The message and arrival time displays.

If the message is longer than single line, scroll up and down by pressing **<Volume>** (or **<*>**, **<#>**).

 
 
 
NOTE: If the call back number is already stored in the phonebook with a matching name, the matching name will be displayed instead of the phone number.

5. Press **<MENU>** after viewing. Different options are available.

6. Select Reply to reply message to sender.

7. Select Delete to delete message.

8. Select Forward to forward the message.




Retrieving Voice Messages

1. When voice messages arrive, "New voicemail" will be displayed and **Voicemail Icon** appears in the icon line.


2. Press **<MESSAGE>** key, **<6>**(Voicemail) or press **<OK>** to view message directly.

 3. Press **<1>** (Get voicemail) to dial voice mail service center.




Erasing Received Messages

 1. Press <MESSAGE> key, <2>(Inbox).
2. Press <MENU> and select <5> (Delete all).
3. Press <OK>.



Erasing Sent Messages

 1. Press <MESSAGE> key, <3>(Outbox).
2. Press <MENU> and select <5> (Delete all).
3. Press <OK>.

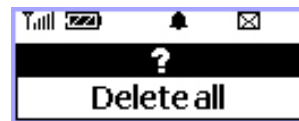

Retrieve Saved Message

 
1. Press <MESSAGE> key, <3> (Outbox).
2. Select appropriate message by scrolling.
Press <OK> to confirm.



Saving Sent Message Acknowledge

1. Press <MESSAGE> key, <8> (SMS settings),
<2> (Delivery report).
2. Select "ON" or "OFF".
3. With Delivery report set, the network will send
acknowledgement that the message was received by
the network.

NOTE: Your service provider must support Message
Ack service in order to use this feature

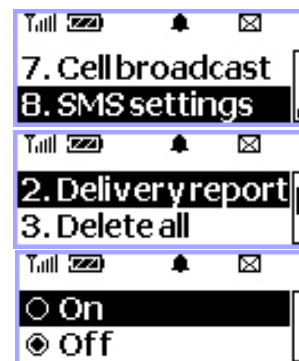

Phone book

Internal phone Book
Storing in phonebook
Searching For Entries in Phonebook
Erasing An Entry in Phonebook
Erasing All Entries in Phonebook
One-Touch Dialing

INTERNAL PHONE BOOK

Your phone has an internal "Phone Book" in which you can store up to 500 frequently used names and numbers. Or you can store to SIM card.

STORING IN THE MEMORY PHONEBOOK

1. Press **<MENU>** , **<2>** (Contacts), **<2>**(Add new name).
2. Enter the name by pressing the alphanumeric keypad and pressing **<OK>** after completed.

NOTE1: If you do not want to enter a name. just press **<OK>** here. The number will be saved as "No Name".

NOTE2: Name entry is limited to maximum of 21 letters.



How to Enter &Edit Texts

You can enter letters using the alphanumeric keypad.

Each button has 5 to 9 letters assigned. Each stroke on the button scrolls the assigned alphabet letters and the numeric value. Stop pressing when the letter you want appears. You can switch between uppercase, lowercase, and numeric characters by pressing **<#>** .

To enter special characters. Press **<*>**.

 
For space, press **<0>** . To go back, press **<Volume>** .

A single stroke on **<Clear>** will erase the last letter in line.

3. Enter the number you want and press **<OK>**.

Setting One-Touch Speed Dial

1. Press **<Menu>** , **<2>** (Contacts), **<3>** (Speed dials).
 2. Select Speed Dial location you wish to program.
Location 1 is assigned for Voicemail access number.
Up to 9 speed dials are possible.
 3. Press **<MENU>** , **<1>** (Add from contacts)
 4. Select the number you want and press **<OK>**.
- NOTE: The number must be already in phonebook in order to be assigned to speed dial.
4. Press **<MENU>** after selecting. Different options are available.

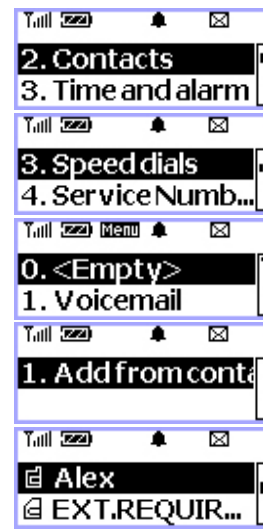


SEARCHING FOR ENTRIES IN PHONEBOOK

You can search information stored in the phone book in various way and make a call directly from the phonebook.

Searching by Name

 1. Press **<MENU>**, **<2>**(Contacts), **<1>** (Search), **<1>** (Name).
2. Enter all or part of the name and press **<OK>**.
Example) Enter A and press **<OK>** to find all names that start with A.
3. The phone displays the memory location numbers along with the name of the first match.
NOTE: "NO NAME MATCHES" appears when there is no name matching with your entry.
4. Press **<Volume>** (or **<*>**, **<#>**) to search for the name you're looking for and press **<OK>** to display the number.
NOTE: "ENTER LOCK CODE" appears when you try to Access secretly saved number. Enter lock code and press **<OK>**.
5. Press **<Redial>** to dial the number displayed to make a call.

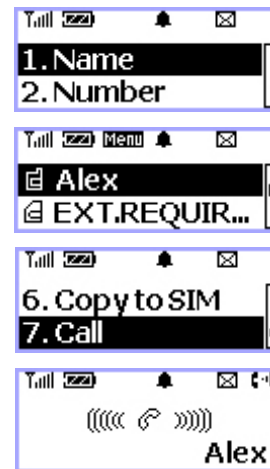


Searching by Phone Number

1. Press **<MENU>**, **<2>**(Contacts), **<1>**(Search), **<2>**(Number).
2. Enter all or part of the number you remember and press **<OK>**.
3. The phone displays the memory location and names which contain your entry.

NOTE: When there is no exact match, "Not found" will be displayed.

 4. Press **<Volume>** (or **<*>**, **<#>**) to search for the name you're looking for and press **<OK>** to display the number.
5. Press **<Redial>** to dial the number displayed.

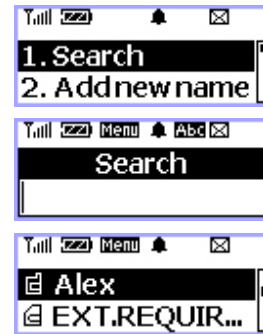

Copying phonebook entry

Copy One entry:

1. Search the entry you like to copy by pressing **<MENU>**, **<2>**(Contacts), **<1>** (Search), **<1>** (Name)
2. Select **<MENU>**, **<6>** (Copy to SIM or Phone).



Copy All entries:

1. Press **<Menu>**, **<2>**(Contacts), **<5>**(Copy all).
 2. Select **<1>** (SIM to phone) or **<2>** (Phone to SIM)
- NOTE: "Keep original" leave the original entry, but to remove the original entry, select "Move original".



3. Press **<OK>** to confirm.
4. Now you can find copy of SIM card entry in your phonebook.



NOTE: "Copy" function copies entries from selected book. That is if the Current area is set to SIM, then it will copy from SIM to Phone, and vice versa.

ERASING AN ENTRY IN PHONEBOOK

To Erase a Specific Number

 
1. Press <MENU>, <2> (Contacts), <1> (Search).
2. Search the entry that you like to erase. Press <OK> to select and press <MENU> to view options.
3. Select <5> (Delete) option.
4. Press <OK> to delete.



ERASING ALL ENTRIES IN PHONEBOOK

To Erase All Numbers in Phonebook

1. Press <MENU>, <2> (Contacts), <6> (Delete all).
2. Press <1> (Delete SIM memory) or <2> (Delete phone memory) to erase.

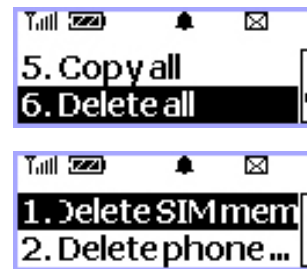


ONE-TOUCH DIALING

Memory locations 0 ~ 9 are special one-touch dialing locations. You can dial the numbers stored in 0~9 by pressing just one key.

1. Pick up the handset or press <SPEAKER>.
2. Press and hold the number of the location (0~9) containing the number to be called for a moment.
3. The name and the phone number will appear and the phone dials the number automatically.

 NOTE: Location 1 is preprogrammed as voice mail.



Useful Features

Call History
Mute
Selecting Time Mode
Setting Time Mode
Checking and Clearing Call Times
Setting Warning Alerts

CALL HISTORY

Your phone stores the last 50 outgoing calls, incoming, and missed calls combined (only when Caller ID function is activated). You can display and redial these numbers.

Redialing Outgoing Calls

1. Press <MENU>, <1> (Call log), <2> (Dialled calls)

NOTE: If there's no outgoing call history, "Log empty" displays.

2. Press <Volume> (or <*>, <#>) to select number to redial.
3. Press <Redial> to redial the number.

NOTE1: Press <MENU> to view different option. Select <1> (Details) to see time and date of the call made. Or select <3> (Save number) to save the number in phonebook.

NOTE2: To redial the last number called. Just pick up the handset and press <Redial>.



Redialing Incoming Calls


1. Press <MENU>, <1> (Call log), <3> (Received calls).

NOTE: If there's no incoming call record, "Log empty" displays.

2. Press <Volume> or <*>, <#> to select number to redial.
3. Press <Redial> to redial the number.

NOTE1: Press <MENU> to view different option. Select <1> (Details) to see time and date of the call made. Or select <3> (Store Number) to save the number in phonebook.

 NOTE2: Incoming history is available only when caller ID is activated.

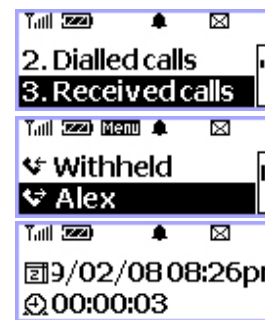

Redialing missed Calls

To display a list of missed received calls.


1. Press <MENU>, <1> (Call log), <4> (Missed calls).

NOTE: If there's no missed call record, "Log empty" displays.

3. Press <Redial> to redial the number.

NOTE1: Press <MENU> to view different option. Select <1> (Details) to see time and date of the call made. Or select <3> (Store Number) to save the number in phonebook.

 
NOTE2: Missed history is available only when caller ID is

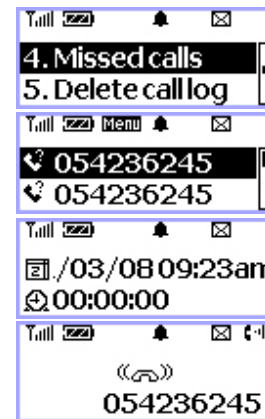

activated.

Erasing Call History

 1. Press <MENU>, <1> (Call log), <5> (Delete call log).
2. Press <1> (All calls) to delete all of call logs.

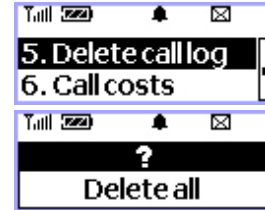

MUTE

This feature lets you mute the microphone, so that the other party cannot hear your voice or the sound of your surroundings. This function is available only during conversation.

1. Press <MENU> during conversation. Select <1> (Mute) option.
The 'MUTE' Icon will be displayed. The other party can no longer hear you, but you can hear them.
2. Press <MENU> , <1> (Unmute) again to resume the conversation.



SILENT KEY PAD

You can turn off DTMF tone during phone conversation.

 
1. During conversation, press <MENU> , <2> (DTMF off) to disable it.
2. During conversation, press <MENU> , <2> (DTMF on) again to enable key tone.

NOTE: With DTMF tone feature disabled, you cannot access an ARS (Automatic Response System).



SELECTING TIME MODE

1. Press <Menu>, <3>(Time and alarm).
2. Press <1>(Set time) to change the time displayed on the idle screen.

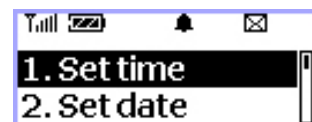

3. Press <2>(Set date) to change the date displayed on the idle screen.
4. Press <3>(Time format) to change the time format to be 12 hour or 24 hour format.

- 12 hour: Display 0-12 hours with AM or PM indicator
- 24 hour: Display 0-24 hours

 
 
5. Press <4>(Date format) to change the date format. dd/mm/yyyy, mm/dd/yyyy or yyyy/mm/dd.



SETTING THE ALARM

You can set the alarm sound daily or one time only.

1. Press <MENU>, <3>(Time and alarm), <5>(Morning alarm).
2. Press <1> (Alarm status) and set ON to enable Alarm Function.
3. Press <2> to enter time.
4. Press <3>(Alarm tone) to select the desired alarm tone.
5. Press <4>(Repeat setting) to select days.



Canceling the Alarm Time

1. Press <Menu>, <3>(Time and alarm), <5>(Morning alarm),
2. Press <1> (Alarm status) and set Off to disable Alarm Function.

FM Radio (Optional, PX310F/PX320F/PX330F only)

Using FM Radio

1. Press and hold <MENU/FM> to turn on the Radio.
2. Entering Radio Mode, Preset Channel and Frequency display on the screen.
3. Press <*> or <#> lightly to move the preset channel.
4. Press<VOLUME KEY> to change the volume.
5. To stop FM Radio, Press <CLEAR>.

Ch 0 107.1 MHz


NOTE 1: If the phone FM radio is ON and you lift the phone handset or there is an incoming call, the FM Radio stops automatically, switching to the phone mode. Also pressing <SPEAKER> to use Speaker phone stops the FM Radio.

NOTE 2: Power cord acts as FM Radio Antenna. For best reception, plug in the power cord to the phone while listening to FM Radio.

PROGRAMMING and USING PRESET

10 programmable presets are available.

 1. Press <MENU/FM> to toggle between normal and preset modes.
2. In "Preset Mode" the preset channel number and frequency appear.
3. In "Preset Mode", press <*> or <#> to change from one preset channel to another
4. In "Normal Mode", only the channel frequency appears.
Press <*> or <#> to increase or decrease the frequency.
Press and hold <*> or <#> to scan the next channel frequency.
5. In "Normal Mode", press and hold Number key to store the radio channel at the Number position.

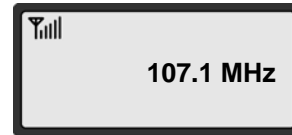

Auto Preset

Press <REDIAL> button for automatic scan of available stations. Once the scan is Performed, the phone will automatically store detected stations to 10 presets.

CHECKING AND CLEARING CALL TIMES

Checking the Last call Time

1. Press <MENU>, <1> (Call log), <7>(Call duration).
2. Press <1> (Last call) to check the last call time.

Checking Accumulated Incoming Call Time

 
1. Press <MENU>, <1> (Call log), <7>(Call duration).
2. Press <3> (Received calls) to check all of received call times.

Checking Accumulated Outgoing Call Time

1. Press <MENU>, <1> (Call log), <7> (Call duration).
2. Press <2> (Dialled calls) to check all of dialed call times.

Reset Accumulated Call Time

1. Press <MENU>, <1> (Call log), <7> (Call duration).
2. Press <5> (Clear records) to clear all of call times.

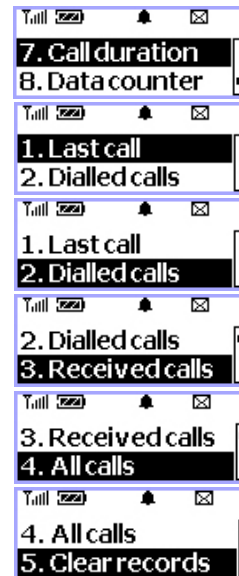

Advanced Features

**Changing Greeting Message
System Reset
Restricting Use of the Phone
Locking / Unlocking the Phone
Changing the Lock Code**

CHANGING GREETING MESSAGE

This feature lets you change the greeting message that the phone displays during standby mode.

 
1. Press <Menu>, <5> (Configuration), <1> (Greeting).
2. Enter your new greeting message with alphanumeric keys
NOTE: Press <#> to switch between capital and lower case
Example) To enter "My Phone"
Press <6>, <9> <9> <9>, <0>, <#>, <7>, <#> <#> <#>, <4> <4>, <6> <6> <6>, <6> <6>, <3> <3>.
4. Press <OK> to save change.



SYSTEM RESET


To reset your phone settings to manufacture's defaults, follow these steps:

1. Press <MENU>, <6> (Security).
2. Enter lock code.
3. Press <8> (Reset settings), <OK> to confirm.



To clear all user data, follow these steps:

 1. Press <MENU>, <6> (Security).
2. Enter lock code.
3. Press <7> (Clear Memory), <OK> to confirm.




RESTRICTING USE OF THE PHONE

You can restrict the use of the phone by unauthorized persons

Restricting Outgoing Calls

1. Press <Menu>, <5> (Configuration), <9> (Call barring).
2. Press <3> (Outgoing calls), <1> (Voice calls)
3. Select <1> (Activate).
4. Enter Network Password.

 
NOTE: If you don't know the password, Please contact your service provider to activate Outgoing Barring.

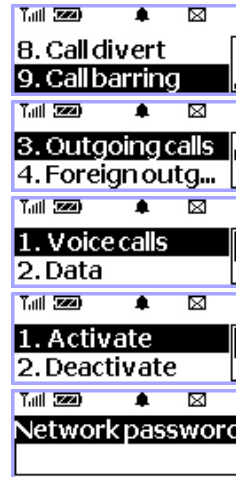

Restricting International Outgoing Calls

1. Press <Menu>, <5> (Configuration), <9> (Call barring).
2. Press <4> (Foreign outgoing calls), <1> (Voice calls)
3. Select <1> (Activate).
4. Enter Network Password.

 NOTE: If you don't know the password, Please contact your service provider to activate Outgoing Barring.

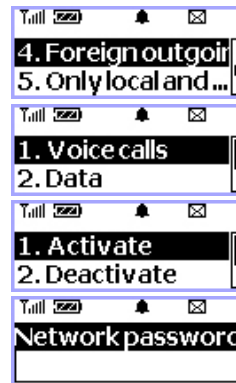

LOCKING / UNLOCKING THE PHONE


You can lock your phone so that calls cannot be made by unauthorized persons. You can still receive incoming calls. Turning the phone off does not unlock the phone; the phone stays in locked mode until you change it.

1. Press <MENU>, <6> (Security).
2. Enter lock code.
3. Press <2> (Phone lock).
4. Select 'ON' or 'OFF' by pressing <Volume> (or <*>, <#>).
5. Press <OK> to save the change.

NOTE1: When locked, the phone displays "Phone is locked".

NOTE2: When locked, you have to enter the lock code to make a call.

 NOTE3: You can still receive incoming calls.



CHANGING THE LOCK CODE

The lock code is 0000. It can be changed to any 4 digit number.

1. Press <MENU>, <6> (Security).
2. Enter lock code.
3. Press <4> (Change code), <1> (Change phone lock code).
4. Enter your new lock code.

NOTE: The lock must be four numeric digits.

5. Press <OK>.
6. Re-enter new lock code for verification.
7. Press <OK> to confirm.

NOTE: "New codes not same" displays if the second entry does not match the first entry.



LANGUAGE

You can select different language mode if available.

1. Press <MENU>, <5> (Configuration), <2> (Language).
2. Select appropriate language.



Optional Features

**Call Divert
Call Waiting
Three-way Calling / Conference Call
Data and Fax Call Service**

Call Divert

Call Divert is a feature that lets you forward your incoming calls to another phone number, even if your phone is turned off or is in no service area.

To set Call Divert, press **<MENU>**, **<5>** (Configuration), **<8>** (Call divert).
And select Call Divert options as needed.

Call Waiting

Call Waiting alerts you to a second incoming call while you are on the conversation.

When there's another incoming call, you will hear warning beep.

To enable Call Waiting, press **<MENU>**, **<5>** (Configuration), **<7>** (Call waiting).
And select Call Waiting options as needed.

Three-Way Calling

Three-Way Calling is a feature that lets you set up a three-way conversation with two different parties. While you're in conversation with a party, Press the number you want to dial. Then press **<Redial>** to connect the three parties together. Contact your service provider to activate Three-Way Calling.

Data and Fax Call Service

You can transfer data or a fax to other devices via a data cable that is connected to PC. The data cable is used to connect your phone to the PC's serial port.

To send and receive e-mail and faxes, connect to the computer and access the Internet, you need the appropriate data/fax communication software installed on your computer. Also, you have to subscribe the data service when you subscribe a network service provider.

This service varies depending on the network, so contact service provider before you start using the service.

NOTE: Please refer to Appendix C(HOW TO SET UP DATA CONNECTION FOR CSD FAX/DATA AND GPRS DATA)

Miscellaneous

**Menu Table
Specification
Conformance Statements
How To Setup Data Connection**

MENU OPTION TABLE

I	II	III	Explanation
1.Call log	1) All calls	Details/Send message/ Save number/Delete/Delete all	Shows all of call related records.
	2) Dialed calls	Details/Send message/ Save number/Delete/Delete all	Shows all of sent call records
	3) Received calls	Details/Send message/ Save number/Delete/Delete all	Shows all of received call records
	4) Missed calls	Details/Send message/ Save number/Delete/Delete all	Shows all of missed call records
	5) Delete call log	All calls/Dialed calls/ Received calls/Missed calls	Deletes all of call related records
	6) Call costs	Last call/All calls/Clear records/ Price & Unit/ Maximum cost	Shows call costs of all calls or clear and setting call related options.
	7) Call duration	Last call/Dialed calls/ Received calls/All calls/Clear records	Shows call time durations or clear it.
	8) Data counter	Last data/All data/Clear records	Shows data related records or clear it
2. Contacts	1) Search	Name/Number	Used when searching for a phone number in the phone book by name/number already stored.
	2) Add new name	Done/Insert symbol/Exit	Stores the number under a name to Phone or SIM.
	3) Speed dials	Add from contacts	Assign numbers to speed dial
	4) Service number		Directory of Service Numbers
	5) Copy all	SIM to phone/Phone to SIM	Copies all of lists to SIM or Phone.
	6) Delete all	Delete SIM memory/ Delete phone memory	Deletes all of lists in the SIM or Phone.
	7) Save To	SIM card/Phone memory/ Ask on saving	Sets the location to save the new contact
	8) Memory status		Memory usage status
3.Time and alarm	1) Set time		Sets current time
	2) Set date		Sets current date
	3) Time format	12 hour/24 hour	Sets current time format
	4) Date format	dd/mm/yyyy, mm/dd/yyyy, yyyy/mm/dd	Sets current date format
	5) Morning alarm	Alarm off/Set time/ Alarm tone/Repeat setting	Enable and set an alarm clock
	6) General alarms	Alarm off/Set time/ Alarm tone/Repeat daily	Enable and set an alarm clock daily or one time only
4.Sound	1) Ringing tone		Selects ring sound
	2) Message tone	SMS1/SMS2/SMS3/SMS4	Selects message sound
	3) Key tone	Tone/Beep/Off	Selects key tone type
	4) Ring volume	Level 0 ~ 7	Sets ring tone volume
	5) Message volume	Level 0 ~ 7	Sets message tone volume
	6) Key volume	Level 0 ~ 7	Sets key tone volume
	7) Speaker volume	Level 0 ~ 7	Sets speaker phone volume
5.Configuration	1) Greeting	Done/Insert symbol/Exit	Sets and change greeting message
	2) Language	Auto/English/Espanol	Selects language
	3) Light time-out	10,15,30 seconds/1 minute	Selects backlight time out period
	4) LCD contrast		Adjusts LCD contrast levels
	5) Auto send time	3,6,9 seconds/Off	Sets the period after that call is tried automatically
	6) Caller number	Show your number/Hide your number/Show caller number/Hide caller number/Show caller name	Sets CLIP,CLIR related options
	7) Call waiting	On/Off/Status	Sets call waiting function
	8) Call divert	Always/When no answer/When busy/When not reachable	Sets to forward incoming calls to another number
	9) Call barring	Incoming calls/Incoming calls if abroad/Outgoing calls/Foreign outgoing calls/Only local and home country/Cancel all	Sets to prohibit the call from someone who you do not want to talk
6. Security	1) Own number	Add	Sets your own number with name.
	2) Phone lock	On/Off	Locks your phone
	3) PIN code request	On/Off	Sets PIN code
	4) Change code	Change phone lock code/Change PIN2 code/	Change phone lock and pin2 code
	5) Handset call barring	Bar incoming/Bar outgoing	Enables call barring functions

	6) Fixed dialing	Fixed dial settings/Fixed dial list	Enable FDN function
	7) Clear memory		Clears user data
	9) Reset settings		Resets to default settings

MENU OPTION TABLE

I	II	III	Explanation
MESSAGE	1) New message		Creates and send new message
	2) Inbox	View/Reply/Forward/Save number/ Delete/Delete all	Shows all of received messages
	3) Outbox	View/Forward/Save number/ Delete/Delete all	Shows all of sent messages
	4) Draft	View/Edit/Delete/Delete all	Shows all of saved messages to be sent without number
	5) Template	Edit/Done/Insert symbol/	Shows 10 predefined phrases.
	6) Voicemail	Get voicemail/Change number	Gets voicemail or change the voicemail center number
	7) Cell broadcast	Receive setting/Language/ Subject list/Display on idle screen	Sets to receive CB text messages on the various topics such as traffic, weather, local district code, local hospital in the area where you are
	8) SMS settings	Message centre/Delivery report/ Delete all/Memory status	Sets several options for SMS

SPECIFICATIONS

Frequency Range	PG130	850 : TX 824 ~ 849 , RX 869 ~ 894 900 : TX 880 ~ 915 , RX 925 ~ 960 1800 : TX 1710 ~ 1785, RX 1805 ~ 1880 1900 : TX 1850 ~ 1910, RX 1930 ~ 1990
Channel Bandwidth		850 / 900 / 1800 / 1900 Quad Band
Protocol		GSM , GPRS Class B
Stability of frequency		0.1 ppm
External appearance (mm)		205 x 115 x 58 mm
Weight		504 g
Sending output		maximum 1W E.R.P(1800/1900) maximum 2W E.R.P(850/900)
Temperature of operation		-10 ~ +50 degrees Celcius
Relative humidity		10% ~ 95%
Adapter		Input: AC 100~240V 50~60Hz Output: DC 5V/600mA
Connection port		Serial port(Data/Fax)
Battery	Standby	120 Hours
	Talk	3 Hours

CONFORMANCE STATEMENTS

RF EXPOSURE INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT 'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.*Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when worn on the body, as described in this user guide, is **1.340 W/kg**. (Body worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of [http://www.fcc.gov / oet / fcc id](http://www.fcc.gov/oet/fccid) after searching on **FCC ID : PH7PG130**

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at <http://phonefacts.net>.*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

[For more information about RF exposure, please visit the FCC website at www.fcc.gov](http://www.fcc.gov)

Near-Body Operation

To maintain compliance with FCC RF exposure requirements, maintain a **2.5cm(0.98 inch)**, separation distance between the user's body and the phone, including the antenna, whether extended or retracted.

WARNING! Read this information before use

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ tv technician for help.

HOW TO SET UP DATA CONNECTION FOR CIRCUIT SWITCHED

DIGITAL FAX/DATA AND GPRS DATA

1. INTRODUCTION

For the data connection, below requirements are needed.

- SIM card from your network service provider featuring CSD or GPRS .
- PC or laptop with USB port
- Windows 2K or later version
- USB data cable included in box

NOTE This manual is for Windows XP. Setting in other windows versions is similar.

1. Extract the driver file "CP210x_VCP_Win2K_XP_S2K3.zip"


NOTE 1 Please ask the driver file at the place where you bought Phone or Terminal

NOTE 2 Download also available on the VCP(Virtual COM Port) Driver Manufacturer's Homepage:http://www.silabs.com/tgwWebApp/public/web_content/products/Microcontrollers/USB/en/mcu_vcp.htm

Version 4.40 should only be used, if not available. Email to: support@questlabs.co.kr

2. Then, many files are extracted in the directory where you unzipped.

 
3. Execute the file "CP210xVCPInstaller.exe" for installing driver.

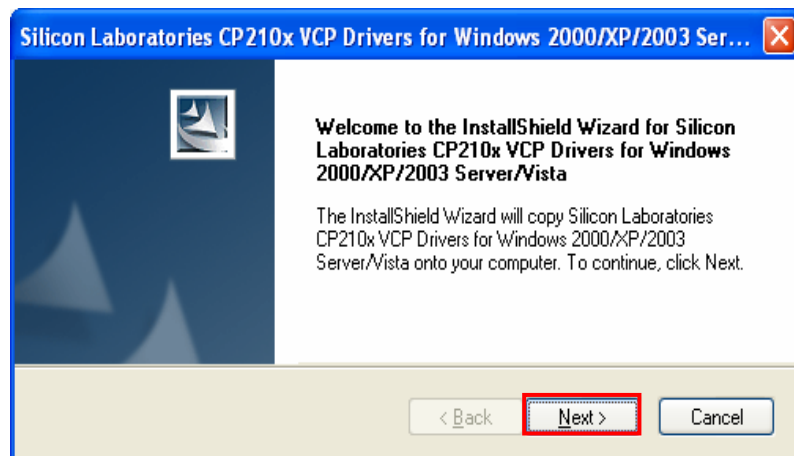

NOTE After installing driver file, you could need to reboot the PC.

2. INSTALL NEW MODEM

 
Connect the phone to PC using USB data cable, cable driver is installed automatically. After installing you can see new Ports (COM & LPT) in a Device Manager window.

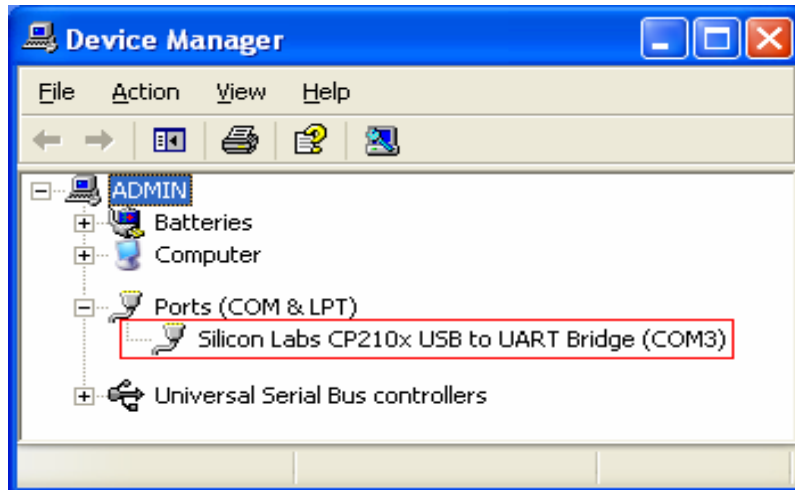

NOTE In the COM3, COM Port Number could be different on the PC Environment.

Go to the "Network Connections" menu.

 
Start button > Control Panel > Phone and Modem Options
And select the Add button from Modems from Tap menu.

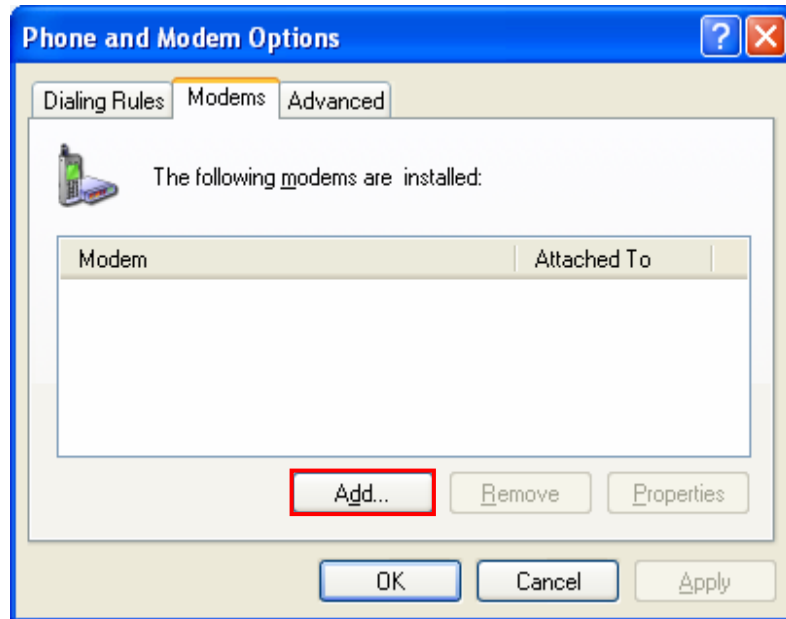


Set as shown below. And press the Next button.



 Select “[Standard Modem Types]” and “Standard 19200 bps Modem”. And press the Next button.

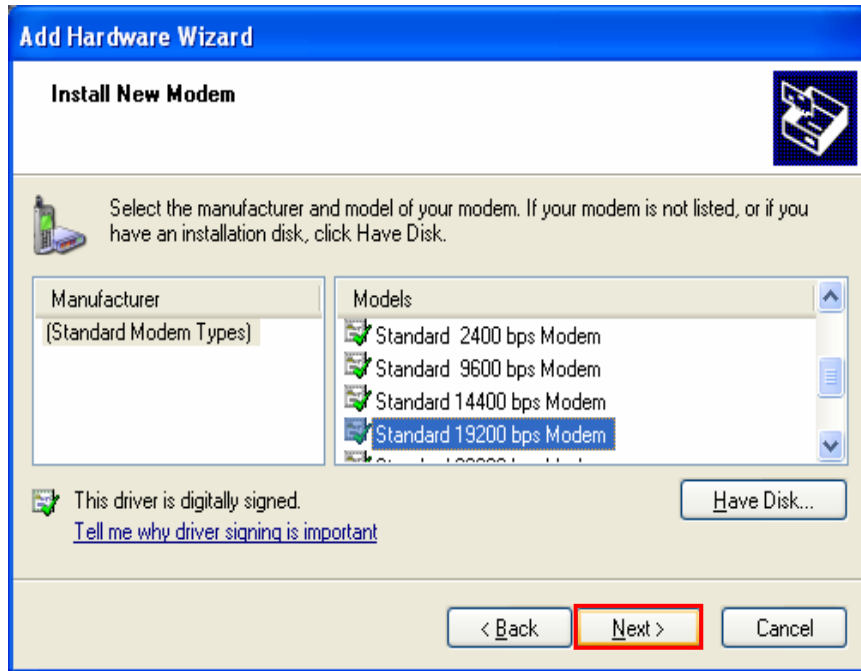


 Select a appropriate port that you have selected. This may take several minutes.

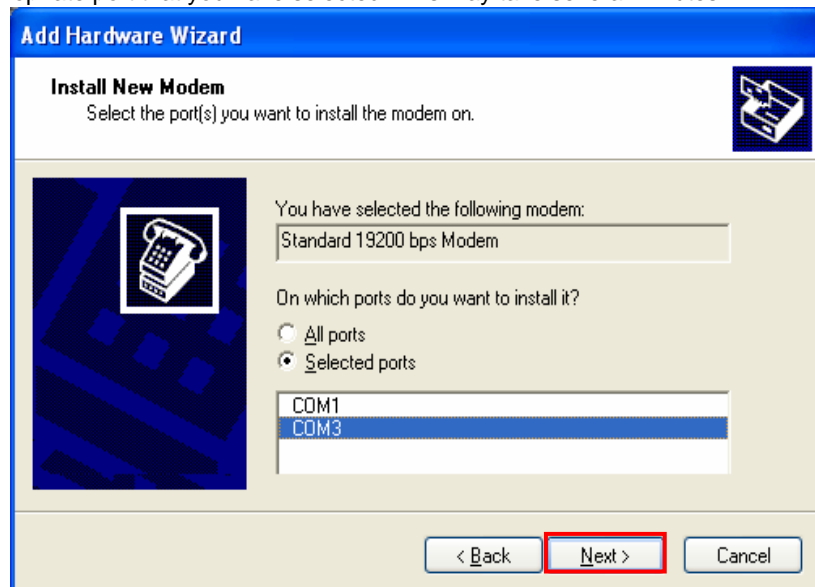


NOTE In the COM3, COM Port Number could be different on the PC Environment.

 
If you see below window, modem is installed successfully.

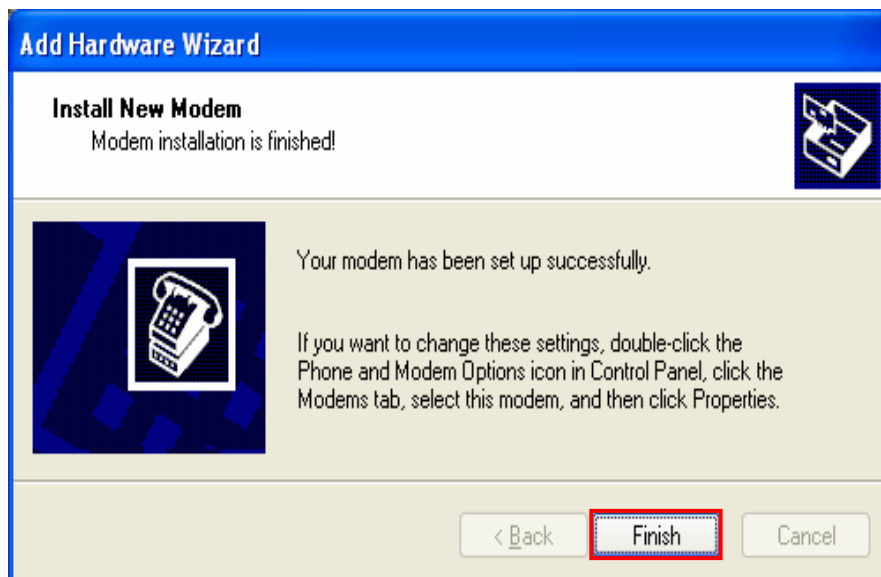

 
New modem is listed in below window.
Select the new modem, and press the Properties button for setting.

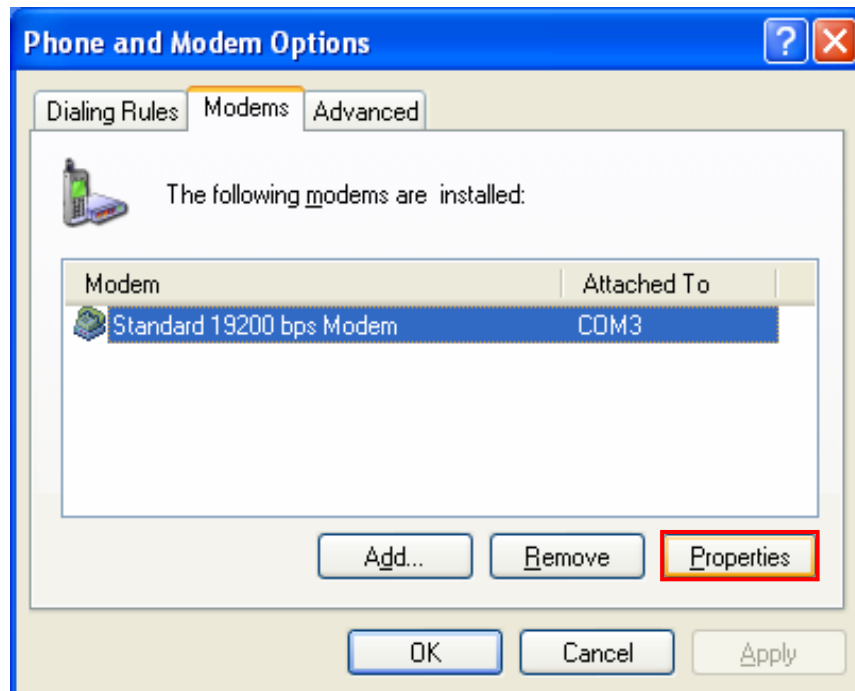

Select "Advanced" tab menu.
The **APN NAME** may be different on every Service Providers and perhaps some service providers do not require **APN NAME**. So you should check first with your Service Provider of using APN NAME. If your Service Provider requires their own APN NAME to be entered, you must have to enter below Initialization Commands exactly with changing APN NAME(Red Box) as real APN NAME provided by Service Provider. If APN NAME does not need, leave the whole Input Box in blank.

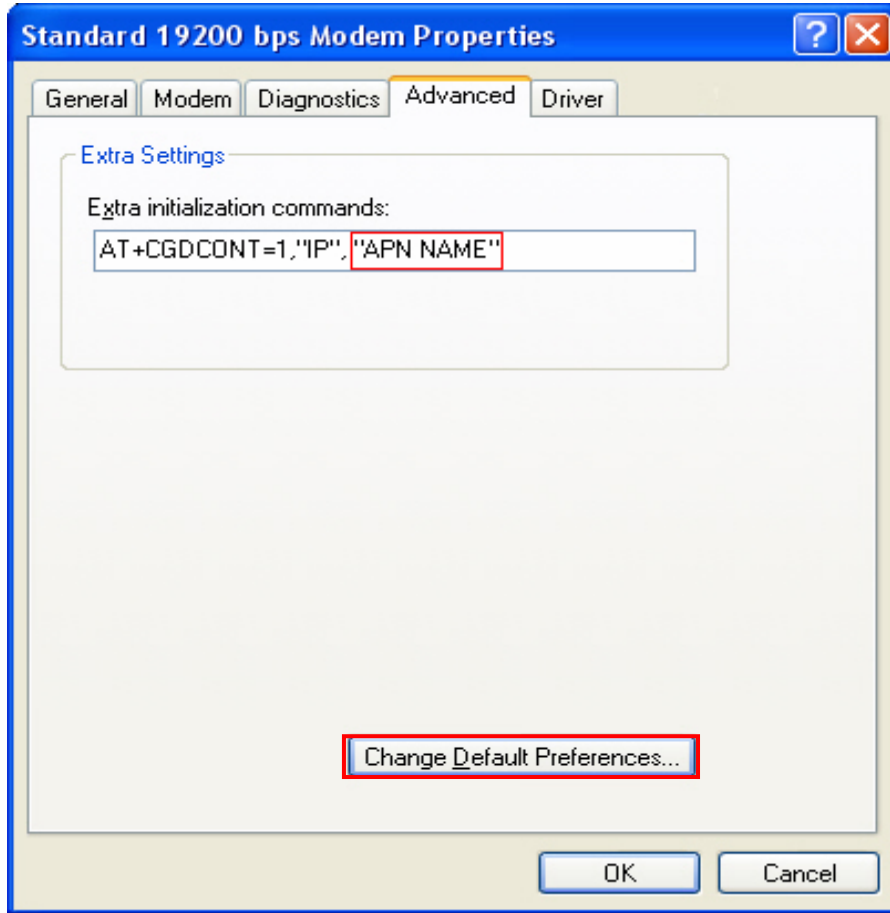 

 Select "Change Default Preferences...". And set as below window. And press the OK button.

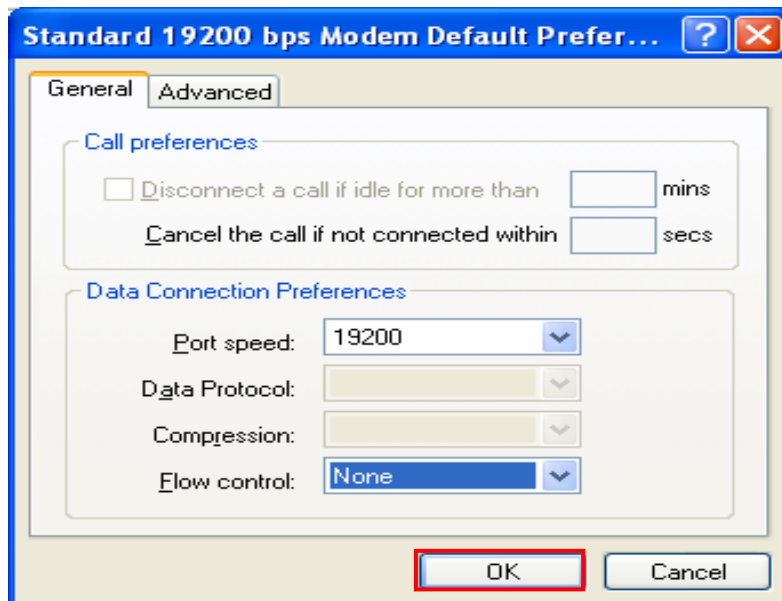


4. CREATE NEW NETWORK CONNECTION


Go to the "Create a new connection" menu.

Start button > Control Panel > Network Connections > Create a new connection

 
Select "Connect to the network at my workplace". And press the Next button.

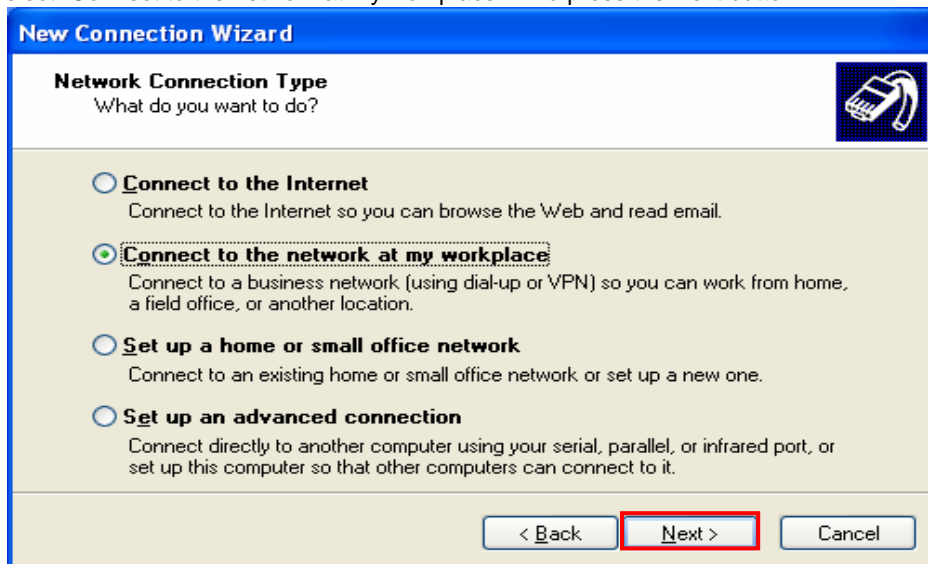

 
Select "Dial-up connection". And press the Next button.

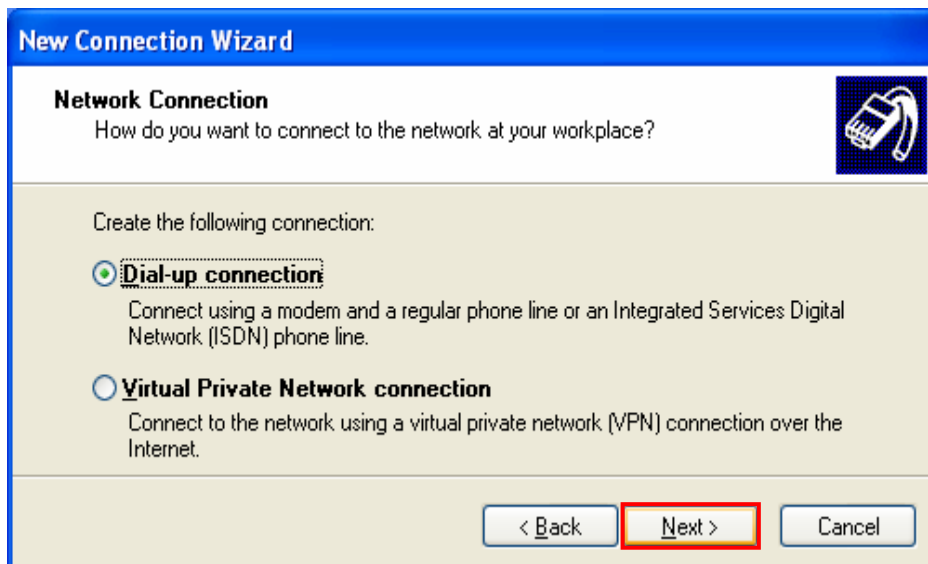

 Insert "Company name" as you want.
Press the Next button.

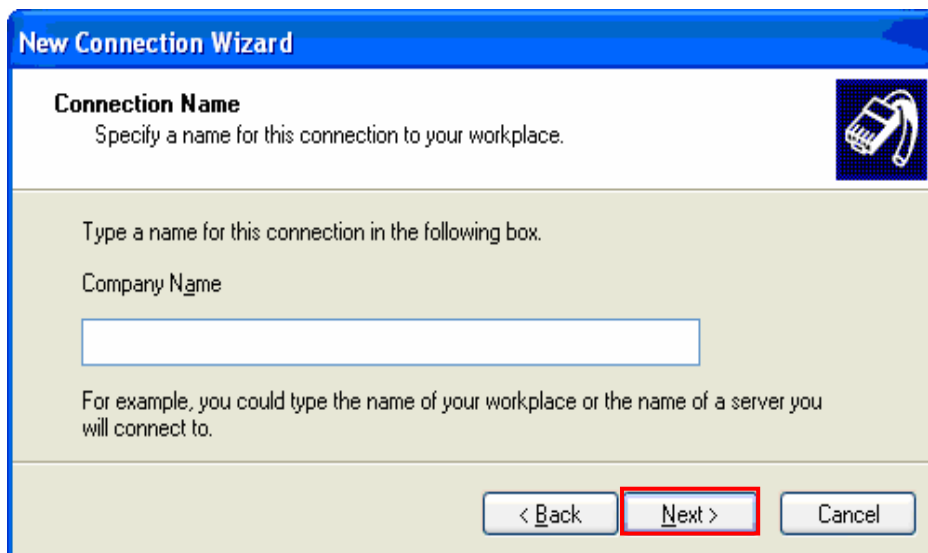

 Insert "Phone number" list in your internet access kit and press the Next button.

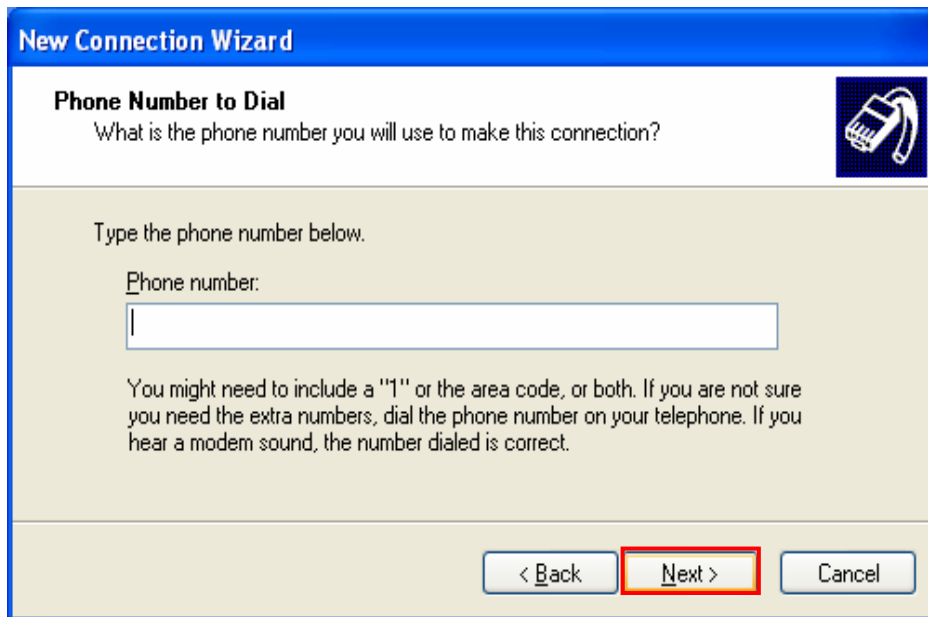


The image shows a Windows-style dialog box titled "New Connection Wizard". The main heading is "Phone Number to Dial" with a telephone handset icon to the right. Below the heading is the question "What is the phone number you will use to make this connection?". The instruction "Type the phone number below." is followed by a label "Phone number:" and an empty text input field. A note below the field reads: "You might need to include a '1' or the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct." At the bottom right, there are three buttons: "< Back", "Next >" (highlighted with a red rectangle), and "Cancel".

You can see a completing message in next window.


5. CONNECT INTERNET

Go to the "Network Connections" menu.

 
Start button > Control Panel > Network and Internet Connection > Network Connections
And choose the Connection Name which was created in the Dial-up connection.
Select "Properties".

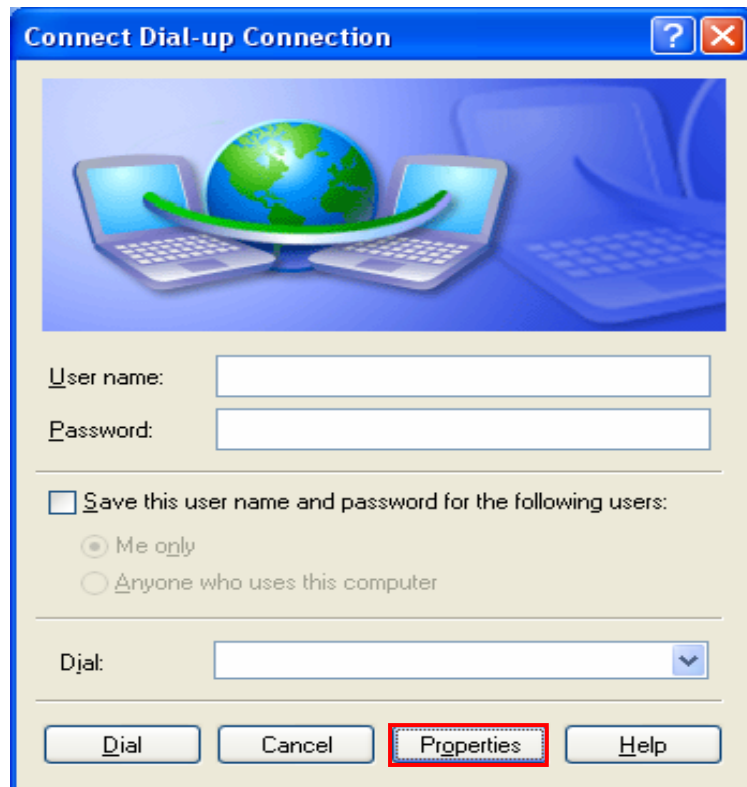

 
Select "Configure..." of General tab menu.

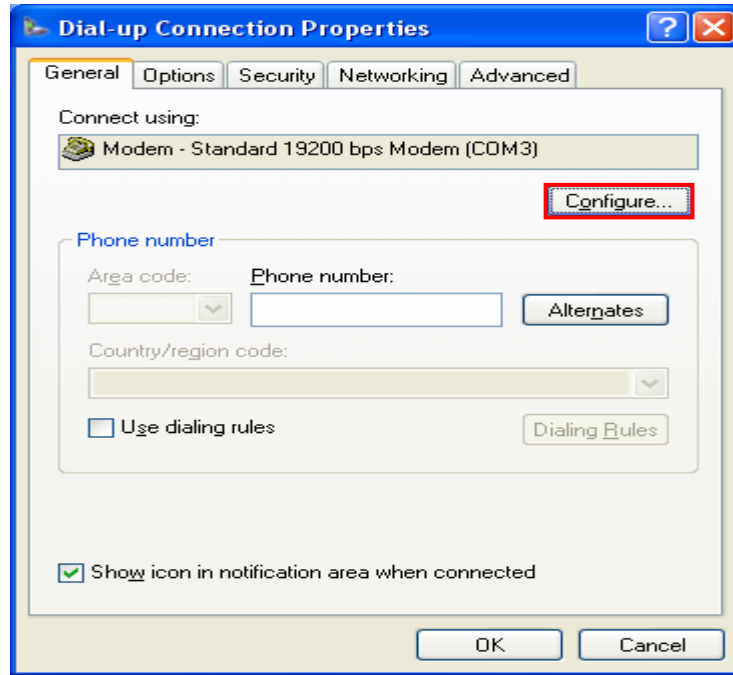

 
Set as below window. And press the OK button.

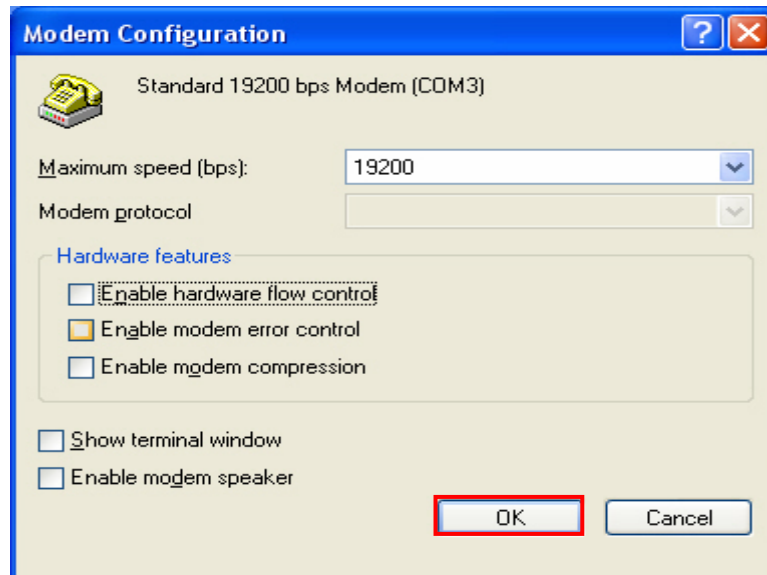

 
Select "Settings" of Networking tab menu.
And set as below window. And press the OK button.

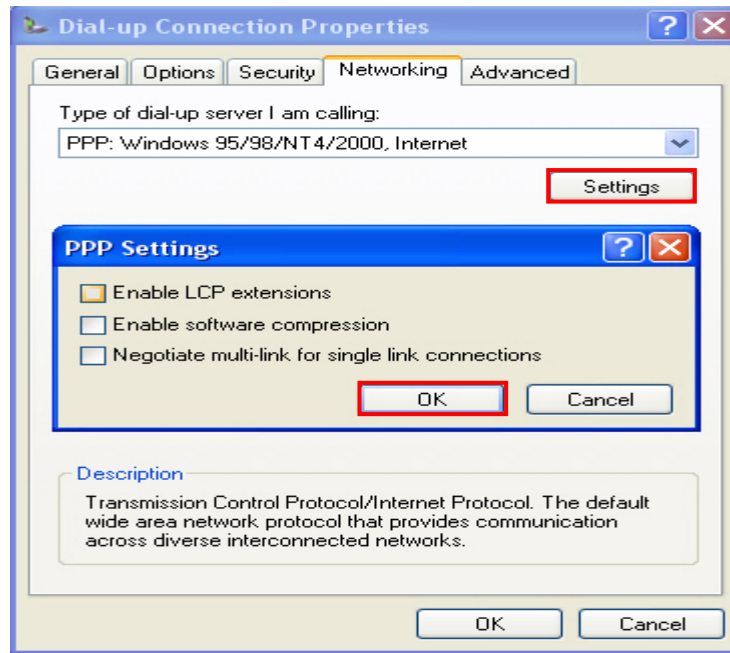

 Select "Properties" of Internet Protocol (TCP/IP)

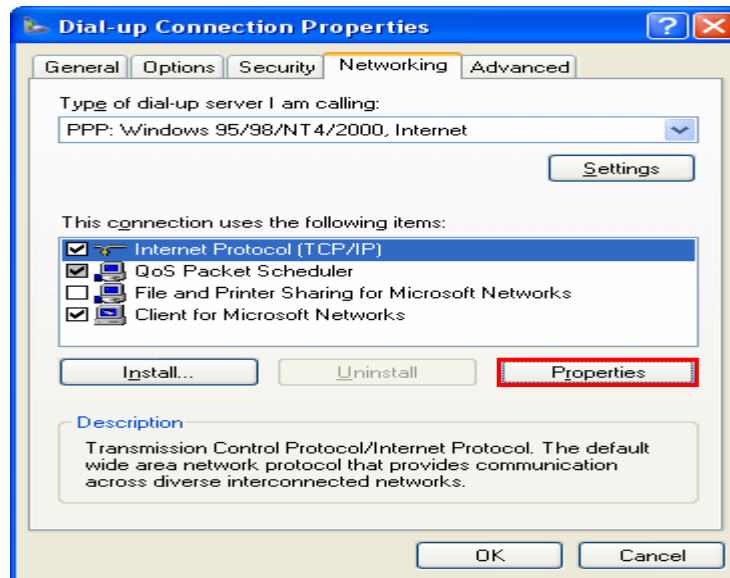

 Select "Advanced...".
And Set as below window. And press the OK button.

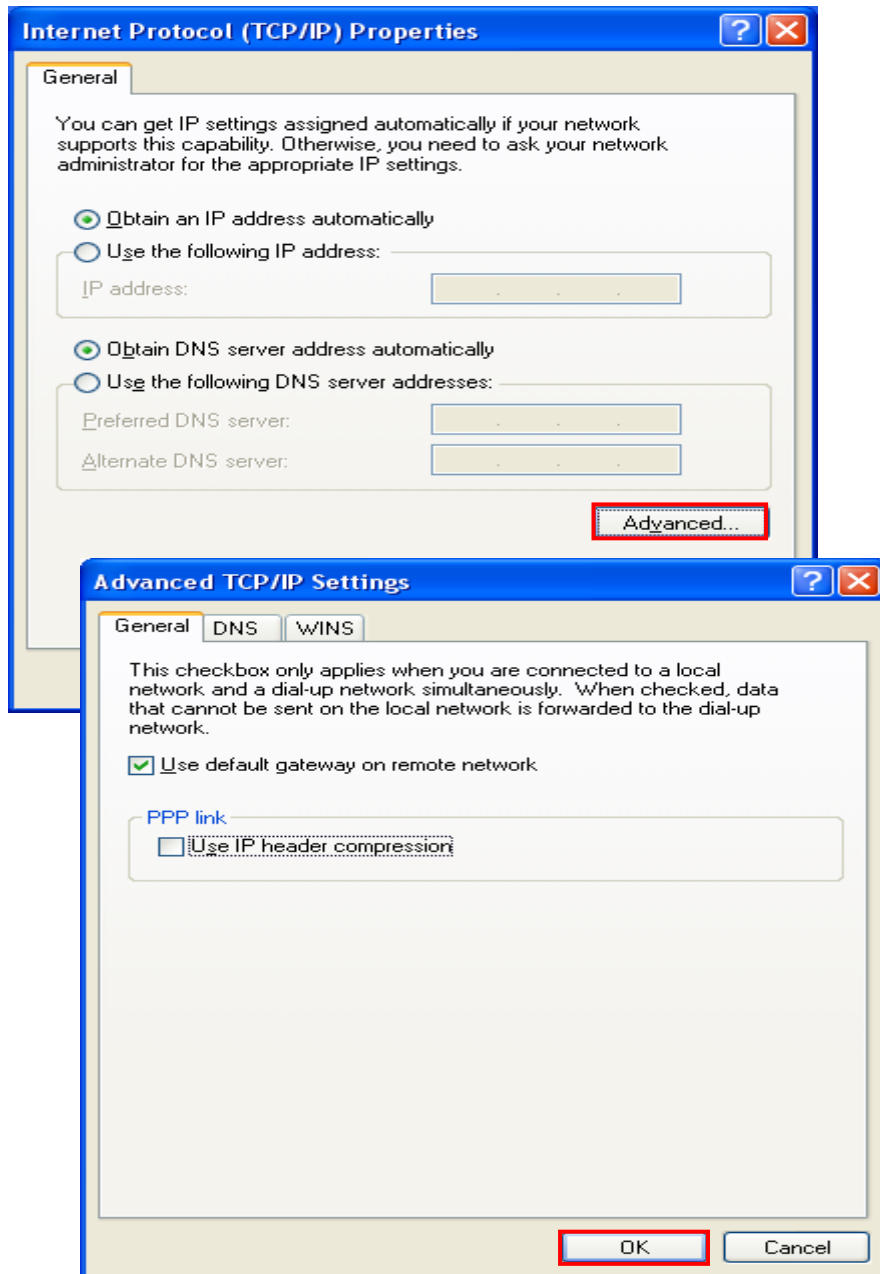

Press OK button and return to the “Connect Dial-up connection” window.

When you want the CSD (Dial-up) data connection,

You can find Username, Password, Dial number from the internet access kit that you purchased. After filling those values, press the Dial button.

When you want the GPRS data connection,

If your network service provider has the recommend setting or the access program, you should use that.

If not, you don't need to input Username, Password. Just input a dial number as “*99#”. And press the Dial button.