



## *PX300 Series Fixed Wireless Phone*

PX310 | PX320 | PX330  
PX310F | PX320F | PX330F

# User's Manual

012-355892-13228-988991

889899 754232098899 0332020202 754298  
0295 754295589899 754232098899 033202  
4032098899 0332020202 7542955899  
02098899 0332020202 754295 7527888 1031  
0332020202 754295589899 754232098899  
8940332020202 754295589899 7542320988  
54295589899 754232098899 0332020202 75  
20295 754295589899 754232098899  
0332020202 7542955898

51129-5585-9889575

20295 754295589899 754232098899 0332020  
589899 754232098899 0332020202 754295  
0295 754295589899 754232098899 033202  
4032098899 0332020202 7542955899  
02098899 0332020202 754295 7527888 1031  
54295589899 754232098899 0332020202 75  
4032098899 0332020202 754295589899 75  
02098899 0332020202 754295 7527888  
30332020202 754295589899  
4032098899 0332020202 7542955899  
02098899 0332020202 754295 7527888 1031  
54295589899 754232098899 0332020202 75  
4032098899 0332020202 754295589899 75  
02098899 0332020202 754295 7527888 1031



## **INTRODUCTION**

The Fixed Wireless phone operates through a wireless connection instead of a landline phone cable, enabling the subscriber to set up the phone anywhere wireless service is available.

Axesstel CDMA 2000 Fixed Wireless Phone provides high quality and superior performance with many features such as excellent voice quality, packet data service, speaker phone, world clock, calculator, short message service, etc. A large 3-line liquid crystal display provides a user-friendly interface for quick and easy-to-understand information display.

## **FEATURES**

1. Speaker Phone with Hands-Free Dialing
2. Signal Strength Indicator
3. Redial
4. Volume Control
5. Rubber Keypad with Backlit
6. Battery Power Backup
7. Graphic LCD Screen with Backlit
8. Speed Dialing
9. Automatic Sending
10. Phonebook
11. Short Message Service
12. World Clock and Calculator
13. Data Call Service with Speed up to 153kbps
14. Fax service (PC fax)

# TABLES OF CONTENTS

Safety Precautions.....	4
Checking the Parts .....	5
Setting up Your Phone .....	6
Getting to Know Your Phone .....	8
Display Icons .....	9
Function Keys.....	10

## Basic Operation

Making Calls .....	12
Redial.....	12
Receiving Calls .....	13
Adjusting Volumes .....	14
Choosing the Ring Tone .....	14
Message Service .....	15
FM Radio(Optional) .....	18

## Phone Book

Internal Phone Book.....	20
Storing in phonebook .....	20
Searching for Entries in Phonebook....	21
Erasing an Entry in Phonebook .....	23
Erasing All Entries in Phonebook .....	23
One-Touch Dialing .....	24
Two-Touch Dialing .....	24

## Useful Features

Call History.....	26
Displaying Your Phone Number.....	27
Setting up Your LCD.....	27
Mute.....	28
Selecting Time Mode.....	28
Setting the Alarm.....	28
Checking and Clearing Call Times.....	29
Setting Warning Alerts.....	30

## Advanced Features

Changing Greeting Message.....	32
System Reset .....	32
Restricting Use of the Phone .....	33
Locking / Unlocking the Phone .....	33
Changing the Lock Code.....	34
World Clock .....	34
Calculator.....	34

## Optional Features

Call Forwarding .....	36
Call Waiting .....	36
Three-Way Calling.....	36
Data Call Service.....	36

## Miscellaneous

Menu Table .....	38
Specification .....	39

## SAFETY PRECAUTIONS

1. Avoid placing the phone in a dusty location, or near a source of gas or fire.
2. Don't Shake, hit or drop the phone.
3. To clean the outside of the phone, use only a soft, dry cloth. The chemicals in alcohol, benzene or acetone can damage the surface of the phone.
4. Do not twist or pull the cord out of the phone.
5. Do not disassemble the phone.
6. Do NOT use the power adapter if:
  - The power cord is damaged.
  - The phone has been dropped or damaged in any way.
7. Use only the AXESSTEL provided adapter for the phone. Do not use the AXESSTEL adapter for any other purpose.
8. Use only the AXESSTEL provided antenna. Do not use the antenna for any other purpose.
9. Frequency and length of use can affect the life of the self-charging battery. Contact your customer service if the battery is not operating properly.
10. Use only the designated self-charging battery. Dispose of exhausted batteries properly. Never discard a battery in or near fire or flame.
11. Do not place the telephone near water, for example, near a bathtub, sink, wet basement, or swimming pool.


**NOTE 1:** The input and output voltages are indicated on the adapter.  
(Input: AC 100~240V, 50~60 Hz, Output: DC 5.5V, 1A)

## CHECKING THE PARTS

Once you have unpacked your phone, make sure that you have all the parts shown below. If any piece is missing or broken, please call your customer service.

1. Main Unit
2. Handset
3. Power Adapter
7. Data cable (USB - optional)

 4. User Manual
5. Antenna
6. Battery

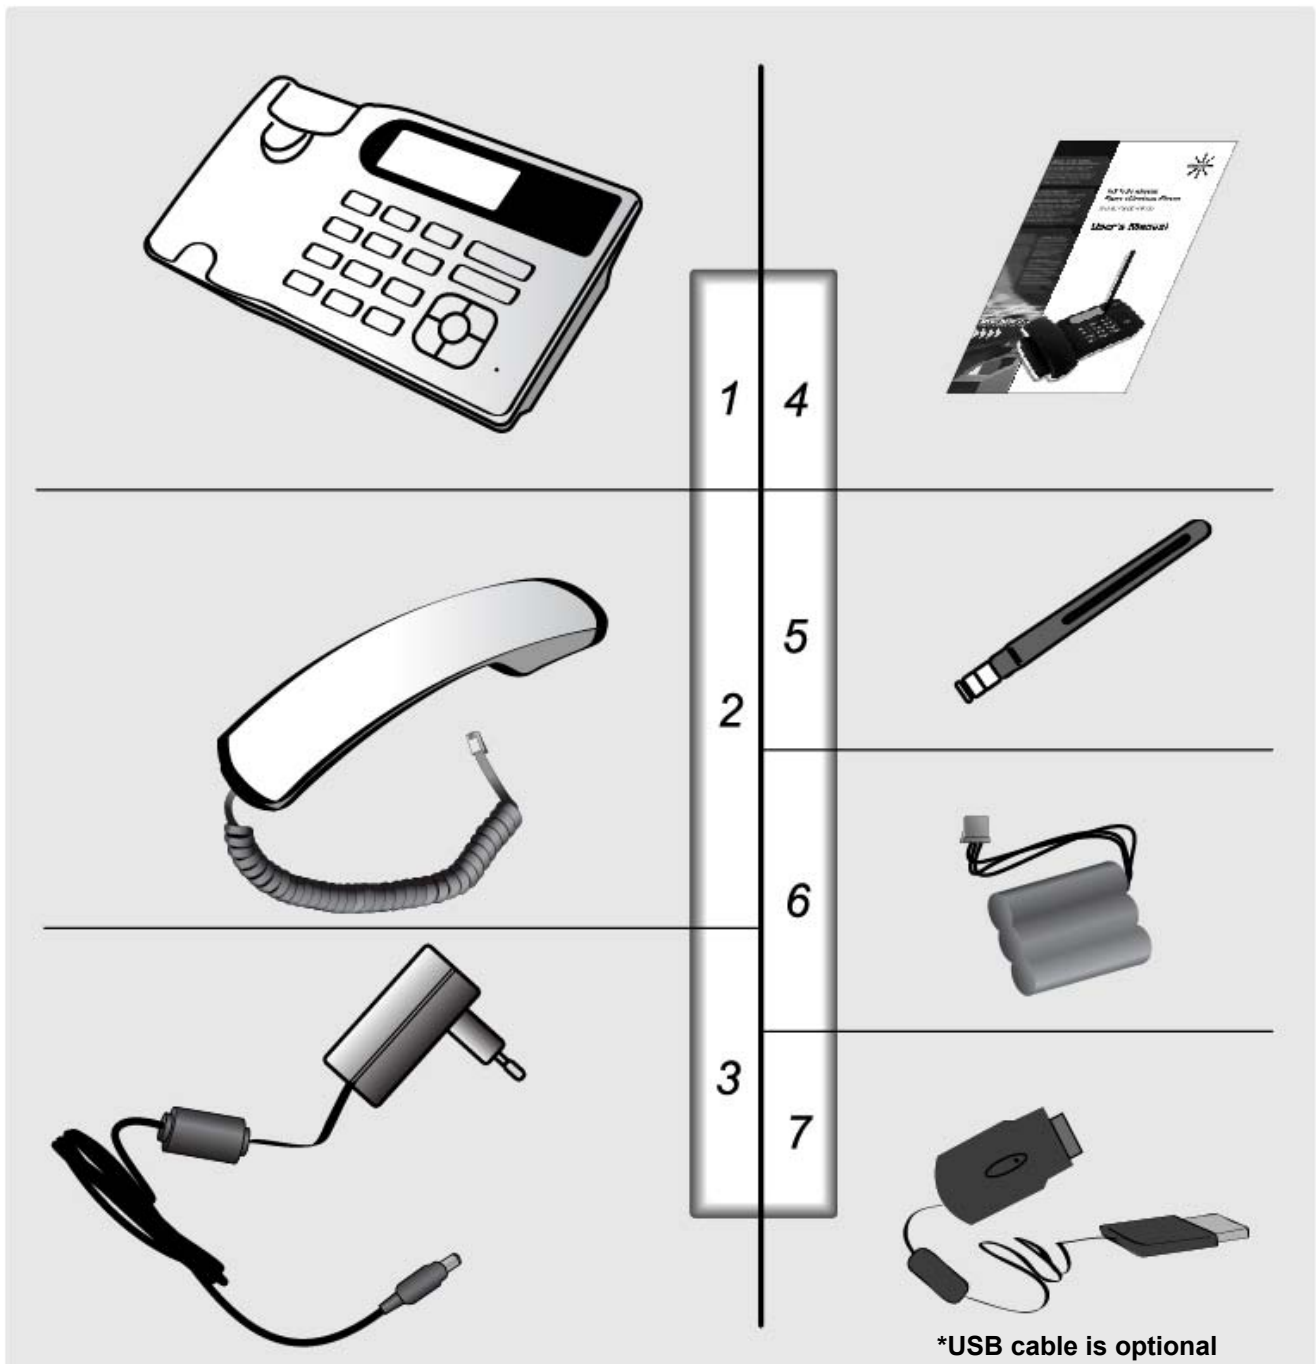

# SETTING UP YOUR PHONE

## Installing the phone

This phone operates by receiving DC power from the AXESSTEL power adapter that connects to an electrical outlet. The phone is equipped with a rechargeable battery as a back up in case of an AC power failure.

## Desktop installation

**1** Attach the handset

**2** Connect the antenna

**3** Open the battery cover and connect the battery

**4** ON/OFF power switch is located on the bottom side of the phone. Please turn on the power switch to "ON" for operation And Press and Hold Power key on the front side of the phone.

**5** Plug the Power adapter into an appropriate Wall outlet

 
# SETTING UP YOUR PHONE

## Service Status Check

### Display in the Service Area

When the power cord is connected properly, all segments of the LCD window will turn on briefly. The number of bars of signal strength indicator (antenna icon) indicates the strength of service signal of the area. The display will show the greeting with date and time.

You can change the greeting. (See page 31)

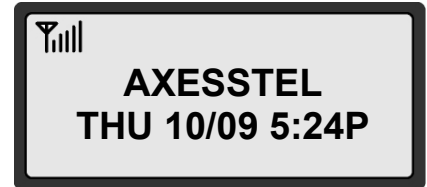

### Display in area with no service

When there is no service signal detected in your area, no antenna bar appears. Contact your service provider for the coverage area information.

Also check if the antenna is connected



## GETTING TO KNOW YOUR PHONE




- 1. Antenna:** Adjusting the position of antenna improves the sound quality of the call.
- 2. Menu/FM:** Press to access the phone's menus.  
Press and hold the key for a few seconds to start FM Radio.  
(FM is optional. PX310F/PX320F/PX330F only)
- 3. Message:** Press to retrieve messages.
- 4. Volume Key(-, +):** Let you adjust sound levels and scroll through the menu options and displays.
- 5. OK:** Stores phone numbers, and any settings you select in the menu within the phone's memory
- 6. Clear:** Lets you clear your last entry.
- 7. Redial:** Allows you to redial the last number
- 8. Power On/Off:** Press and hold the key for a few seconds to turn on or off your phone
- 9. Speaker Phone:** Turn on or off the speaker phone feature



## DISPLAY ICONS

Icons display on the screen to indicate what features you are using, e.g. signal strength, battery status and etc...

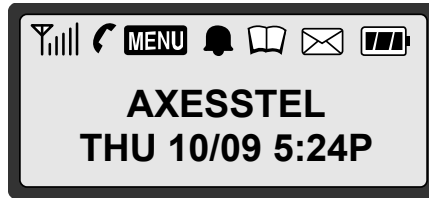 

Indicate the strength of the signal. More bars indicates stronger signal.



Indicates that a voice or data call is in progress.



Indicates that you are using the phone's menu.



Indicates that the alarm has been set.



Indicates that you are in the Phonebook menu.



Indicates that you have text message or a voice mail message.



Indicates the level of battery power. The more bars, the more power. When the battery is low, the icon blinks, and an alert tone sounds.

## FUNCTION KEYS



 
Press this key to retrieve messages.



Press this key to display the phone's main menu.

Press and Hold this key to turn on or off the FM radio.

If there is an incoming call or if the user attempts to make an outgoing call while the FM radio is on, the FM radio turns off automatically

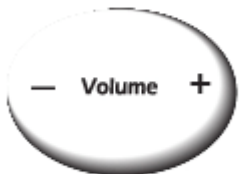

Press this key to control the volume of keypad, earpiece and speaker. In the menu mode, use this key to scroll through the menu items.



Clears information from display screen.

- To erase one character from the display screen, press it once.

- To erase all characters on the screen, press and hold.

- To go back one step in the menu mode, press it once



Press this key to store a phone number in the phone book or to save menu settings.



The Speaker button is used to place or receive a call without using the handset. The integrated microphone and speaker on the Main unit allows hands free conversation.



Press and hold this key for a few seconds to turn on or off your phone



Press this key to redial the last number called or to connect a call right after dialing the number without waiting until the call is connected automatically.

# **Basic Operation**

**Making Calls**

**Redial**

**Receiving Calls**

**Adjusting Volumes**

 
**Choosing the Ring Tones**

**Message Service**

**FM Radio(Optional)**

## MAKING CALLS

1. Make sure your phone is turned on.
2. Pick up the handset to hear a dial tone.  
When the phone fails to acquire service signal, you will hear "No Service" tone (intermittent tone).
3. Dial the number to call. The LCD window displays the number.
4. Wait for a moment for auto calling or press **<REDIAL>**.
5. When the other person answers, begin conversation.
6. To end the call, replace the handset on the main unit.

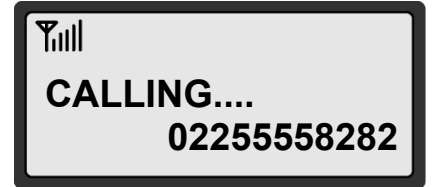

### **NOTE1:** Modifying a phone number while dialing.

- To erase the last digit entered: Press **<CLEAR>**.
- To erase the entire number: Press **<CLEAR>** and hold.
- To input symbol "+": Press **<0>** and hold

### **NOTE2:** Automatic calling

The phone was programmed to place a call automatically 4~10 seconds after last digit entry. To disable automatic calling or change the delay time.

1. Press **<MENU>** , **<0>** , **<1>**.
2. Press **<VOLUME KEY>**(or **<\*>**, **<#>**) to select different time or 'OFF', then press **<OK>** to save. Once automatic calling is disabled, you have to dial the number and press **<REDIAL>** to place a call.

## REDIAL

### **Redial the last number you dialed.**

1. Pick up the handset or press **<SPEAKER>**.
2. Press **<REDIAL>**.

 
**NOTE:** You may not redial when there is no last number dialed stored in the memory. "NO LAST CALL!" message is displayed on the LCD.

## RECEIVING CALLS

When there is an incoming call, the phone rings blinks "Incoming Call" message on the display.

1. Simply pick up the handset or press <SPEAKER> to answer the call.
2. To disconnect, replace the handset or press <SPEAKER>.

**NOTE:** When the ringer volume is set to 'Silent', the phone does not ring. Only the "Incoming Call" message blinks.


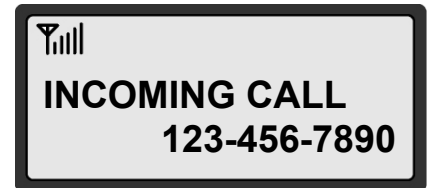


When the Caller ID service is activated.

### Call ID Display

  The Caller ID feature displays the caller's number when the phone receives a call. If the caller's name and number are linked together in the phone book, the caller's name is displayed. Contact your service provider to activate this feature.

**NOTE:** If the call is not answered, the phone displays the "Missed Call" message with the call arrival date and time.

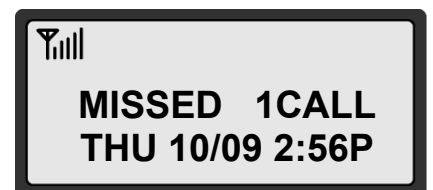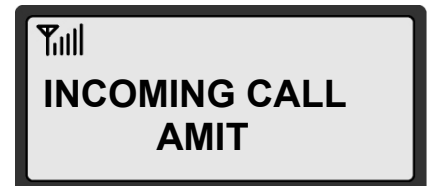

## ADJUSTING VOLUMES

You can control the sound volumes including the key tone, Earpiece, speaker and the ringer

### Adjusting key tone volume

Press <VOLUME KEY> repeatedly until it reaches proper volume.

**KEY VOLUME**

### Adjusting external speaker volume

Press <VOLUME KEY> repeatedly during hands free call to adjust external speaker volume.

**SPEAKER VOLUME**

### Adjusting earpiece volume

Pick up the handset and press <VOLUME KEY> repeatedly during a phone call to adjust earpiece volume.

### Adjusting ring volume

1. Press <MENU> , <5> , <3>.
2. Press <VOLUME KEY>(or <\*> , <#>) to adjust ringer volume.
3. Press <OK> to save.

**EARPIECE VOLUME**

**NOTE:** If 'Silent' is selected, the phone does not ring when an incoming call comes in. Only the "INCOMING CALL" message blinks on the display.

**RING VOLUME**

## CHOOSING THE RING TONES

You can choose from twenty different ring tones.

1. Press <MENU> , <5> , <2>.
2. Press <VOLUME KEY> (or <\*> , <#> ) to select ring type.
3. Press <OK> to save.

**RING TONE**  
▶ **TONE # 1**

## MESSAGE SERVICE

Message service is a network dependent feature and is available only when your service provider supports it. Check with your service provider to ensure it is providing message service before using this function.

Message memory is available up to 20 INBOX, 10 SAVED MSG, 10 DRAFT MSG.

### Sending New Text Messages

1. Press **<MESSAGE>** . Press **<1>**(New Message).
2. Write message using the keypad. Toggle between uppercase, Lowercase, and numeric by pressing **<MESSAGE>** button.
3. Press **<OK>**. Press **<2>** (Send).
4. Enter destination number and press **<OK>**.
5. Once the destination number has been entered, the message will be sent.

**NOTE:** To change default message options, access Message option menu.

**1: NEW MESSAGE**  
**2: INBOX**

**PHONE NUMBER**  
**123\_**

**HELLO\_**

### Sending Saved Text Messages

1. Press **<MESSAGE>** , **<5>**(Saved MSG).
2. Select message to resend with **<VOLUME KEY>** (or **<\*>**, **<#>**) and press **<OK>**.
3. To edit the message press **<MESSAGE>**.

 
 
 
 
**SENDING...**  
**PLEASE WAIT...**

### Sending New Text Messages using Templates

1. Press **<MESSAGE>**. Press **<4>** (Templates).
2. Press **<VOLUME KEY>**(or **<\*>**, **<#>**) to view and select the desired template.
3. Press **<OK>** to insert that template into the message body.
4. Continue to type in the rest of the message.
5. Press **<OK>**. Press **<2>** (Send).
6. Enter destination number and press **<OK>**.



## Received Text Message

1. When text message arrives, e.g. 'MESSAGE! 10/12 4:04PM' displays shortly and appears in the icon line.
2. Press **<MESSAGE>** ,<2>(Inbox).
3. Press **<VOLUME KEY>** (or **<\*>**, **<#>**) to select message you want to see and press **<OK>**.
4. The message, arrival time and call back number (if available) is displayed. If the message is long, it will be scrolled down in 3 seconds automatically.  
To scroll up and down manually, press **<VOLUME KEY>** (or **<\*>**, **<#>**).
5. If the message contains call back number and you want to make a call to that number. press **<REDIAL>** if you want to call back.  
**NOTE:** If the call back number is stored in the phonebook with a name, the name will display instead of the phone number.
6. To forward the received message to another number, press **<MENU>**.
7. To write a reply to the sender, press **<MESSAGE>**.

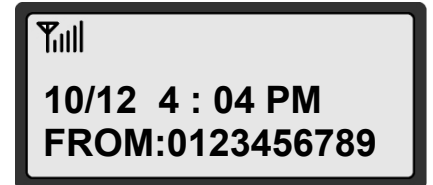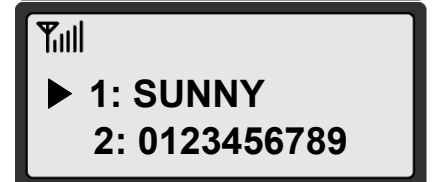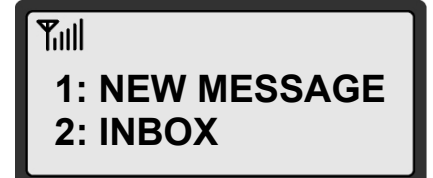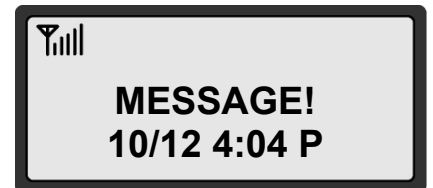


## Delete Text Message

  1. After reading the **<MESSAGE>**, Press **<VOLUME KEY>** to erase the message.
2. Press **<OK>** to confirm erase.

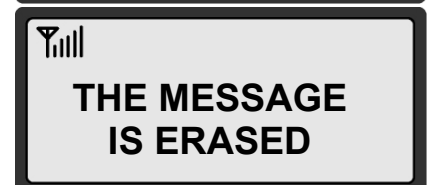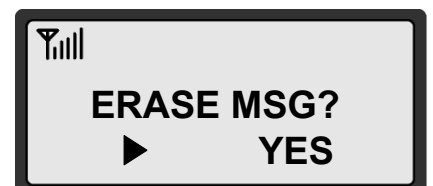

## Retrieving Voice Messages

 1. When voice messages arrive, e.g. "VOICE MSG" 10/12 4:04 PM" shortly appears and **<SMS ICON>** appears in the icon line.
2. Press **<MESSAGE>** ,<3>(Voice MSG) or press **<OK>** to view message directly.
3. Press **<REDIAL>** to dial voice mail service center.

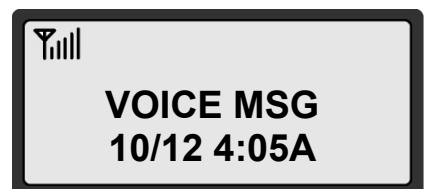

- 3: VOICE MSG ▼
- 4: TEMPLATES



### Erasing All Messages

1. Press **<MESSAGE>** , **<7>**(Erase MSG).
2. Select 'YES' with **<VOLUME KEY>** (or **<\*>**, **<#>**).
3. Press **<OK>**.



### Setting/Releasing Message Alert

1. Press **<MESSAGE>**, **<8>**(MSG Option), **<1>**(MSG Alert).
2. Select ON or OFF with **<VOLUME KEY>**(or **<\*>**, **<#>**).
3. Press **<OK>**.

**NOTE:** While the message alert is set, the phone will alert user when messages arrive.



### Saving Sent Message

1. Press **<MESSAGE>**, **<8>** (MSG Option), **<5>** (Save Sent MSG).
2. Select "ON" or "OFF" with **<VOLUME KEY>** (or **<\*>**, **<#>**).
3. Press **<OK>**.

While this option is turned on, outgoing new messages will be automatically saved. Retrieve the saved messages by accessing Saved Message Menu.

### Setting Message Priority Type

1. Press **<MESSAGE>** , **<8>** (MSG Option), **<4>** (MSG Priority).
2. Select "NORMAL" or "URGENT" with **<VOLUME KEY>** (or **<\*>**, **<#>**).
3. Press **<OK>**.

### Setting Message Auto Delete

 
1. Press **<MESSAGE>** , **<8>** (MSG Option), **<6>** (Auto Delete).
2. Select "ON" or "OFF" with **<VOLUME KEY>** (or **<\*>**, **<#>**).
3. Press **<OK>**.

When Auto Delete is enabled, the phone will automatically delete oldest received messages in INBOX in case of full memory.

## FM Radio (Optional, PX310F/PX320F/PX330F only)

### Using FM Radio

1. Press and hold **<MENU/FM>** to turn on the Radio.
2. Entering Radio Mode, Preset Channel and Frequency display on the screen.
3. Press **<\*>** or **<#>** lightly to move the preset channel.
4. Press **<VOLUME KEY>** to change the volume.
5. To stop FM Radio, Press **<CLEAR>**.

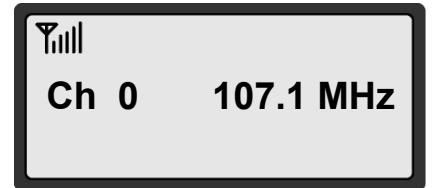


**NOTE 1:** If the phone FM radio is ON and you lift the phone handset or there is an incoming call, the FM Radio stops automatically, switching to the phone mode. Also pressing **<SPEAKER>** to use Speaker phone stops the FM Radio.

**NOTE 2:** Power cord acts as FM Radio Antenna. For best reception, plug in the power cord to the phone while listening to FM Radio.

### PROGRAMMING and USING PRESET

 10 programmable presets are available.

1. Press **<MENU/FM>** to toggle between normal and preset modes.
2. In "Preset Mode" the preset channel number and frequency appear.
3. In "Preset Mode", press **<\*>** or **<#>** to change from one preset channel to another
4. In "Normal Mode", only the channel frequency appears.  
Press **<\*>** or **<#>** to increase or decrease the frequency.  
Press and hold **<\*>** or **<#>** to scan the next channel frequency.
5. In "Normal Mode", press and hold Number key to store the radio channel at the Number position.

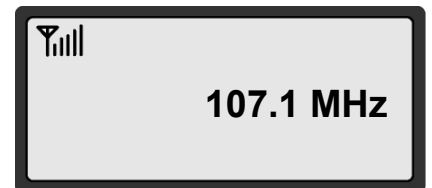

### Auto Preset

Press **<REDIAL>** button for automatic scan of available stations. Once the scan is Performed, the phone will automatically store detected stations to 10 presets.

# **Phonebook**

**Internal phonebook**

**Storing in phonebook**

**Searching for Entries in Phonebook**

**Erasing an Entry in Phonebook**

**Erasing all Entries in Phonebook**

**One-Touch Dialing**

**Two-Touch Dialing**

## INTERNAL PHONEBOOK



Your phone has an internal "Phonebook" in which you can store up to 150 frequently used names and numbers.

### STORING IN PHONEBOOK

1. Press **<MENU>**, **<1>**.
2. Enter the name by pressing the alphanumeric keypad and pressing **<OK>** after completed.

**NOTE1:** If you do not want to enter a name. just press **<OK>** here. The number will be saved as "No Name".

  **NOTE2:** Name entry is limited to maximum of 16 letters.

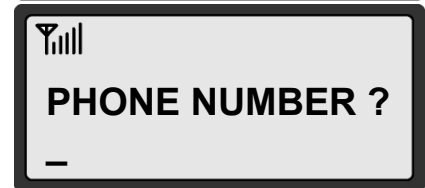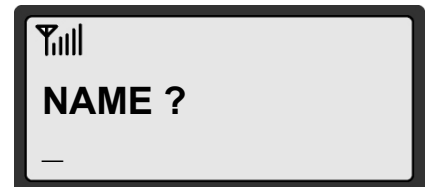

#### How to Enter & Edit Texts

You can enter letters using the alphanumeric keypad.

Each button has 3 to 4 letters assigned. Each stroke on the button scrolls the assigned alphabet letters and the numeric value. Stop pressing when the letter you want appears.

You can switch between uppercase, lowercase, and numeric characters by pressing **<MESSAGE>**.

To enter special characters. Press **<1>** repeatedly.

For space, press **<#>**. To go back, press **<\*>**.

A single stroke on **<CLEAR>** will erase the last letter in line.

 
 
3. Enter the telephone number and press **<OK>**.  
Up to 32 digits can be saved.
4. An empty location displays automatically.  
Press **<OK>** to save the number in the location.
5. To assign a different location, enter 2 digit location number and press **<OK>**.

#### NOTE:

If you select the location in which a number has already been stored, "OVERWRITE?" will be displayed. Press **<OK>** to overwrite or press to go back to automatic location.

6. "CONFIDENTIAL?" will be displays. Press **<OK>** if no secret feature is necessary. To store the number in secret, select 'YES' by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**) and press **<OK>** .

**NOTE:** Secretly saved number will not be displayed unless the lock code is entered. One or two touch-dialing secretly saved number will prompt lock code entry.

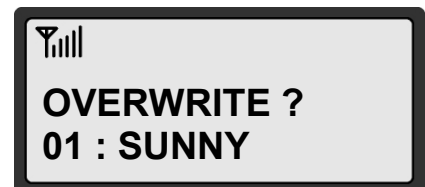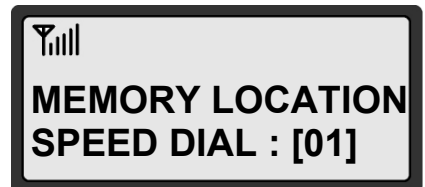

**CONFIDENTIAL ?**  
**NO**

## SEARCHING FOR ENTRIES IN PHONEBOOK

You can search information stored in the phone book in various way and make a call directly from the phonebook.

### Searching by Name

1. Press **<MENU>**, **<1>**(Phone book), **<1>** (Search), **<1>** (Name).



2. Enter all or part of the name and press **<OK>**.  
**Example)** Enter A and press **<OK>** to find all names



 
3. The phone displays the memory location numbers along with the name of the first match.

**NOTE:** "NO NAME MATCHES" appears when there is no name matching with your entry.




4. Press **<VOLUME KEY>** (or **<\*>**, **<#>**) to search for the name you're looking for and press **<OK>** to display the number.

**NOTE:** "ENTER LOCK CODE" appears when you try to Access secretly saved number. Enter lock code and press **<OK>**.

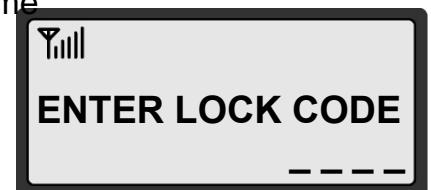

 5. Press **<REDIAL>** to dial the number displayed to make a call.

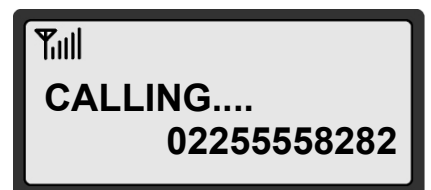

### Searching by Phone Number

1. Press **<MENU>** (Phone book), **<1>**(Search), **<2>**(Number).
2. Enter all or part of the number you remember and press **<OK>**.
3. The phone displays the memory location and names which contain your entry.



**NOTE:** “NO NAME MATCHES” appears when there is no number matching your entry.

4. Press **<VOLUME KEY>** (or **<\*>**, **<#>**) to search for the name you’re looking for and press **<OK>** to display the number.

**NOTE:** “ENTER LOCK CODE” appears when you try to access secretly saved number. Enter lock code and press **<OK>**.

5. Press **<REDIAL>** to dial the number displayed.

### Searching by Memory Location

 
1. Press **<MENU>** , **<1>** (Phonebook), **<1>** (Search), **<3>** (Location)
2. Enter the three-digit memory location. The phone displays the information of the memory location.

**NOTE:** “INVALID LOCATION!” displays when you enter location number that is empty.

3. Press **<OK>** to display the number.

**NOTE:** “ENTER LOCK CODE” appears when you try to access secretly saved number. Enter lock code and press **<OK>** .

4. Press **<REDIAL>** to dial the number displayed.

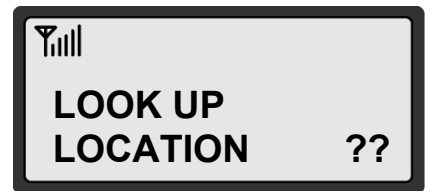


## ERASING AN ENTRY IN PHONEBOOK

### To Erase a Specific Number

1. Press **<MENU>**, **<1>** (Phonebook) and **<3>** (Erase).
2. Press one of search options, **<1>** (Name), **<2>** (Number) or **<3>** (Location).
3. Enter name, address, or phone number according to search option.
4. Select an item to erase by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**) and pressing **<OK>**.

**NOTE:** "ENTER LOCK CODE" appears when you try to access a secretly saved number.  
Enter the lock code and press **<OK>**.

 5. Press **<OK>**. again to erase.
6. Press **<OK>**. again to confirm.  
To cancel, press **<CLEAR>**.

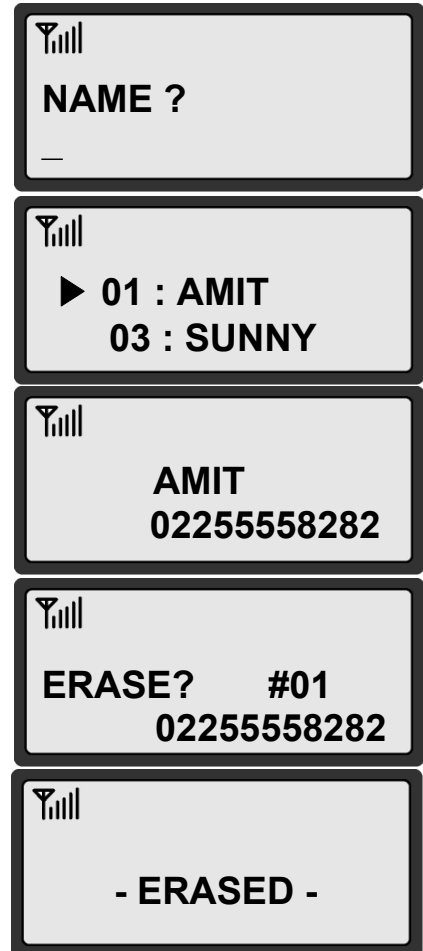


## ERASING ALL ENTRIES IN PHONEBOOK

### To Erase All Numbers in Phonebook

1. Press **<MENU>**, **<8>** (Security)
2. Enter lock code.

**NOTE:** Lock code is set as 0000 from the factory.  
To change lock code see page 33.

 3. Press **<7>**(Erase Names).
4. Press **<OK>** to confirm.


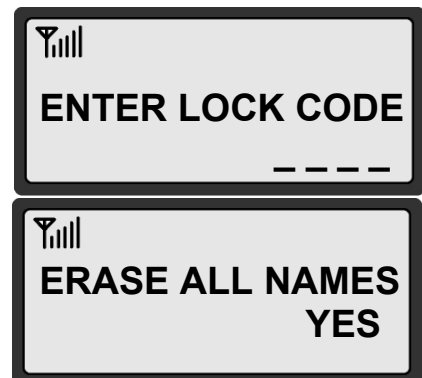


## ONE-TOUCH DIALING

Memory locations 01 ~ 09 are special one-touch dialing locations. You can dial the numbers stored in 01~09 by pressing just one key.

1. Pick up the handset or press <SPEAKER>.
2. Press and hold the number of the location (1~9) containing the number to be called for a moment.
3. The name and the phone number will appear and the phone dials the number automatically.

  **NOTE:** Location 1 may be preprogrammed as emergency number or voice mail. Please check with your service provider.

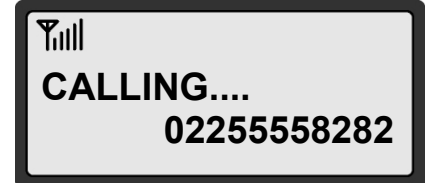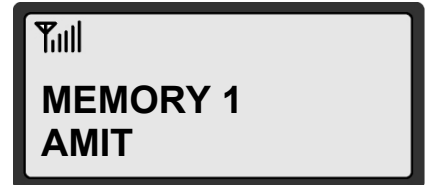

## TWO-TOUCH DIALING

Memory locations 10 ~ 99 are two-touch dialing locations. You can dial the numbers stored in 10~99 by pressing the first digit and pressing and holding the second digit.



1. Pick up the handset or press <SPEAKER>.
2. Briefly press the first digit of the memory location number, then press the second digit and hold it down for a moment.

**Example)** To dial location 23, briefly press the <2>, Then press <3> and hold for a moment.

3. The phone number stored displays and dials automatically.

**NOTE1:** When you try one-touch or two-touch dialing for the number secretly saved, the phone will prompt for Lock code entry.  
Enter the lock code to make a call.

  **NOTE2:** "EMPTY LOCATION" displays when you try one-touch or two-touch dialing with empty location number.

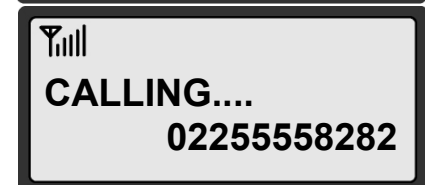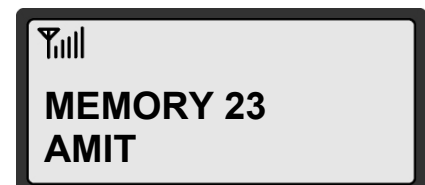



## **Useful Features**

**Call History**

**Displaying Your phone Number**

**Setting up Your LCD**

**Mute**

**Selecting Time Mode**

**Setting Time Mode**

**Checking and Clearing Call Times**

**Setting Warning Alerts**

## CALL HISTORY

Your phone stores the last 100 outgoing calls, 100 incoming calls, and 100 missed calls combined (only when Caller ID function is activated).  
You can display and redial these numbers.

### Redialing Outgoing Calls

1. Press **<MENU>**, **<3>** (Call History), **<3>** (Outgoing)

**NOTE:** If there's no outgoing call history.

"OUTGOING CALL MEMORY EMPTY!" displays.

2. Press **<VOLUME KEY>**(or **<\*>**, **<#>**) to select number to redial.

3. Press **<REDIAL>** to redial the number.

**NOTE1:** Press **<OK>** to see time and date of the call made. Then press **<REDIAL>** to redial the number or press **<OK>** again to save the number in memory

**NOTE2:** To redial the last number called. Just pick up the handset and press **<REDIAL>**.

### Redialing Incoming Calls

1. Press **<MENU>**, **<3>** (Call History), **<2>** (Incoming).

**NOTE:** If there's no incoming call record.

"INCOMING CALL MEMORY EMPTY!" displays.

2. Press **<VOLUME KEY>** or **<\*>**, **<#>** to select number to redial.

3. Press **<REDIAL>** to redial the number.

**NOTE1:** Press **<OK>** to see time and date of the call arrival. Then press **<REDIAL>** to redial the number or press **<OK>** again to save the number in memory.

**NOTE2:** Incoming history is available only when caller ID is activated.

### Redialing missed Calls

#### To display a list of missed received calls.

1. Press **<MENU>**, **<3>** (Call History), **<1>**(Missed Call).




**NOTE:** If there's no missed call record, 'MISSED CALL MEMORY EMPTY!' displays.

2. Press **<VOLUME KEY>**(or **<\*>**, **<#>**) to select number to redial.

3. Press **<REDIAL>** to redial the number.

**NOTE1:** Press **<OK>** to see time and date of the call arrival. Then press **<REDIAL>** to redial the number or press **<OK>** again to save the number in memory.

   **NOTE2:** Missed history is available only when caller ID is activated.

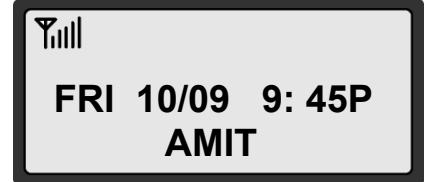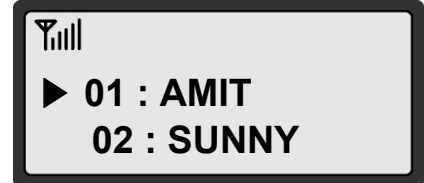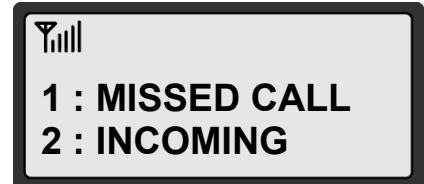

## Erasing Call History

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.

**NOTE:** Lock code is set as 0000 from the factory.  
To change lock code see page 33

3. Press **<6>** (Erase Logs).
4. Press **<1>** (Outgoing Clear).
5. Press **<OK>** to confirm.

**Erasing missed and all logs use the same steps.**

**ENTER LOCK CODE**

-----

**ERASE OUTGOING  
YES**

## Call Timer Display

1. Toggle Call Timer Display.
2. Press **<MENU>**. Press **<7>** (Configuration).
3. Press **<1>** (Call Timer).
4. Scroll to select ON or OFF.
5. Press **<OK>** to confirm.

## DISPLAYING YOUR PHONE NUMBER

### Displaying Your Phone Number

1. Press **<MENU>**, **<7>** (configuration).
2. Press **<6>** (My phone Number).

**MY PHONE NUMBER  
02255558282**

## SETTING UP YOUR LCD

### Set Timing for your LCD Back Light

1. Press **<MENU>**, **<7>** (configuration).
2. Press **<3>** (Back Light).
3. Press **<VOLUME KEY>**(or **<\*>**, **<#>**) to set how long your phone waits before the backlight turns off.

**BACK LIGHT  
▶ 10 SECONDS**

### Setting your LCD Contrast

1. Press **<MENU>**, **<7>** (configuration).
2. Press **<4>** (Contrast).
3. Press **<VOLUME KEY>** or **<\*>**, **<#>** to select contrast.

**CONTRAST**

## MUTE

 
This feature lets you mute the microphone, so that the other party cannot hear your voice or the sound of your surroundings. This function is only available during conversation.

1. Press **<MENU>**, **<1>**(Mute / Un-Mute) during conversation.  
The message 'MUTE' blinks to indicate the function is working.  
The other party can no longer hear you, but you can hear them.
2. Press **<MENU>**, **<1>** again to resume the conversation.

**MUTE**  
**02255558282**

## SELECTING TIME MODE



1. Press **<MENU>**, **<4>**(Time), **<5>**(Time Mode).
2. Select the time display mode by pressing **<VOLUME KEY>** (or **<\*>**, **<#>** ).  
AM/PM: Display 0~12 hours with A or P indicator  
24 Hour: Display 00~24 hours
3. Press **<OK>** to save the change.

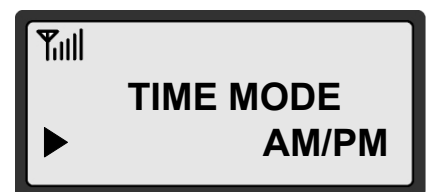

## SETTING THE ALARM

You can set the alarm sound daily or one time only.

  1. Press **<MENU>**, **<4>**(Time), **<1>**(Alarm).
2. Select "ON" by Pressing **<VOLUME KEY>** (or **<\*>**, **<#>**) and Press **<OK>**.
3. Enter alarm time and press **<OK>**.
4. Select alarm mode by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**) and press **<OK>**.  
Daily: Alarm sounds daily.  
One time: Alarm sounds once.
5. Enter the duration of the alarm by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**) and press **<OK>**.  
A bell icon appears in icon line. On alarm time, the icon and "ALARM TIME" message blinks and alarm activates. Press any key to stop the alarm.

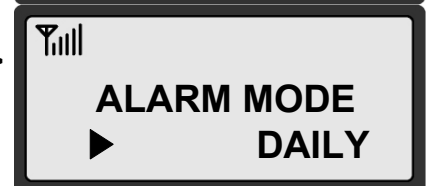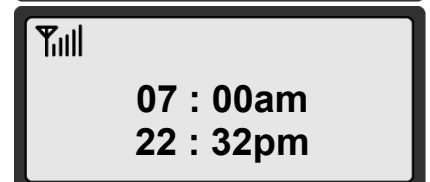

### Canceling the Alarm Time

 
1. Press **<MENU>**, **<4>**(Time), **<1>**(Alarm).
2. Select "OFF" by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**) and press **<OK>** to store the setting.

**ALARM SOUND TIME**  
**1 MINUTE**

## CHECKING AND CLEARING CALL TIMES


### Checking the Last call Time

1. Press <MENU>, <4> (Time), <2>(Last Call).
2. Press <CLEAR> to exit the display.

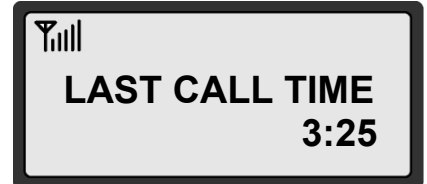


### Checking Accumulated Incoming Call Time

 1. Press <MENU>, <4> (Time), <3>(Total Time), <1> (Incoming).
2. Press <CLEAR> to exit the display.

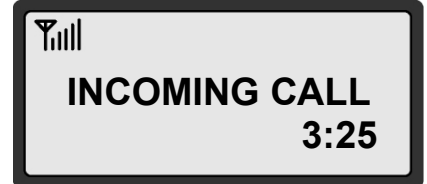


### Checking Accumulated Outgoing Call Air Time

 1. Press <MENU>, <4> (Time), <3>(Total Time), <2> (Outgoing).
2. Press <CLEAR> to exit the display.

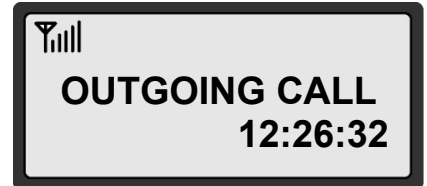

### Reset Accumulated Call Time

 1. Press <MENU>, <4> (Time), <4> (Clear Call Time).
2. Press <STORE>.

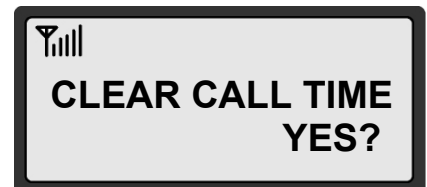

## SETTING WARNING ALERTS

You can set your phone to sound warning beeps that indicate:

- Each minute you are on a phone call
- When you are out of the service area

### Setting/Releasing 1 Minute Alert

1. Press <MENU>, <5> (Sound), <4> (1 Min Alert).
2. Select ON or OFF by pressing <VOLUME KEY>(or <\*>, <#>).
3. Press <OK>.

 
**NOTE:** When 1 minute alert is set, the phone gives alert sound each minute while you are on a phone call.



### Setting/Releasing Service Alert

1. Press <MENU>, <5> (Sound), <5>(Service Alert).
2. Select ON or OFF by pressing <VOLUME KEY> (or <\*>, <#>).
3. Press <OK>.

**NOTE:** When service alert is set, the phone gives alert sound when the phone is acquiring or loses the service signal.

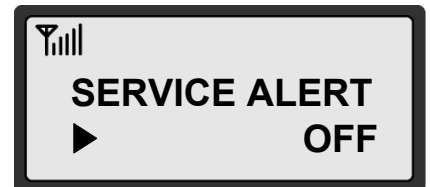

### Setting/Releasing Connection Alert

1. Press <MENU>, <5> (Sound), <7> (Connect Alert).
2. Select ON or OFF by pressing <VOLUME KEY> (or <\*>, <#>).
3. Press <OK>.

 
**NOTE:** When service alert is set, the phone gives alert sound When the call has been connected to the number dialed.



### Setting/Releasing Voice Privacy Alert

1. Press <MENU>, <5> (Sound), <8>(VP Alert).
2. Select ON or OFF by pressing <VOLUME KEY> (or <\*>, <#>).
3. Press <OK>.

**NOTE:** When Voice privacy alert is set, the phone gives alert sound when the voice privacy is on.

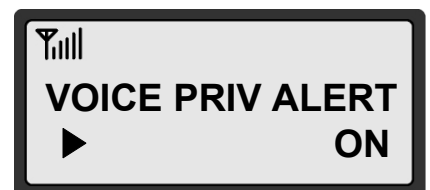

## **Advanced Features**

**Changing Greeting Message**  
**System Reset**  
**Restricting Use of the Phone**  
**Locking / Unlocking the Phone**  
**Changing the Lock Code**  
**World Clock**  
**Calculator**

## CHANGING GREETING MESSAGE

This feature lets you change the greeting message that the phone displays during standby mode.

1. Press **<MENU>**, **<7>** (Configuration).
2. Press **<2>**(Greeting). Current greeting displays.
3. Press **<OK>** to change greeting.
4. Enter your new greeting message with alphanumeric keys

**NOTE:** Press **<MESSAGE>** to switch between capital and lower case

Example) to enter "My Phone"

Press **<6>**, **<9>**, **<9>**, **<9>**, **<#>**, **<7>**, **<MESSAGE>**, **<4>**, **<4>**, **<6>**, **<6>**, **<6>**, **<6>**, **<3>**, **<3>**.

5. Press **<OK>** to save change.



## SYSTEM RESET

To reset your phone settings to manufacture's defaults, follow these steps:

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.  
**NOTE:** Lock code is set as 0000 from the factory.  
To change lock code see page 34.
3. Press **<8>** (Factory Reset).
4. Select "YES" by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**).
5. Press **<OK>**.
6. "PHONE INITIALIZATION" blinks while the phone is resetting.



To reset your phone settings to manufacture's defaults and clear all user data, follow these steps:

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.  
**NOTE:** Lock code is set as 0000 from the factory.  
To change lock code, see page 34.
3. Press **<9>** (Phone Reset).
4. Select "YES" by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**).
5. Press **<OK>**.
6. "PHONE INITIALIZATION" blinks while the phone is resetting.



## RESTRICTING USE OF THE PHONE

You can restrict the use of the phone by unauthorized persons

### Restricting Outgoing Calls

 
 
 
1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.

**NOTE:** Lock code is set as 0000 from the factory.

To change lock code, see page 34.

3. Press **<3>** (Restrict), **<1>** (Outgoing).
4. Select 'ON' by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**).
5. Press **<OK>** to save change.

In this mode, when you try to call, "OUTGOING CALL RESTRICTED" displays and no outgoing call goes through.

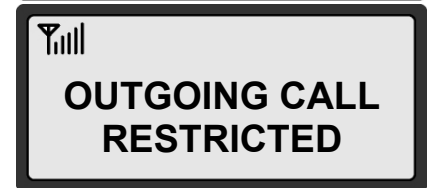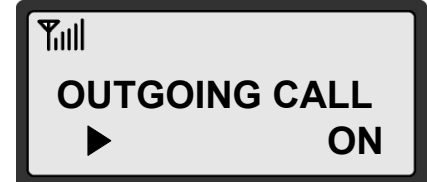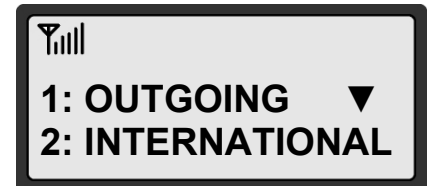

### Restricting International Calls

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.
3. Press **<3>** (Restrict), **<2>** (International).
4. Select 'ON' by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**).
5. Press **<OK>** to save change.

In this mode, when you try to make an international call (headed by 00), "INTERNATIONAL RESTRICTED" displays and no outgoing goes through.



## LOCKING / UNLOCKING THE PHONE

You can lock your phone so that calls cannot be made by unauthorized Persons. You can still receive incoming calls. Turning the phone off does not unlock the phone; the phone stays in locked mode until you change it.

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.
3. Press **<4>** (Auto Lock).
4. Select 'ON' or 'OFF' by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**).
5. Press **<OK>** to save the change.

**NOTE1:** When locked, the phone displays "LOCKED".

**NOTE2:** When locked, you have to enter the lock code to make a call.

**NOTE3:** You can still receive incoming calls.

 
- LOCKED -  
FRI 10/11 2:44P

## CHANGING THE LOCK CODE

The lock code is preset to 0000 from the factory.  
You can Change the lock code to any 4 digit number.

1. Press **<MENU>**, **<8>** (Security).
2. Enter lock code.
3. Press **<1>** (Change Code).
4. Enter your new lock code.
- NOTE:** The lock must be four numeric digits.
5. Press **<OK>**.
6. Re-enter new lock code for verification.
7. Press **<OK>** to confirm.

**NOTE:** CODE NOT MATCHED TRY AGAIN!" displays if the second entry does not match the first entry.


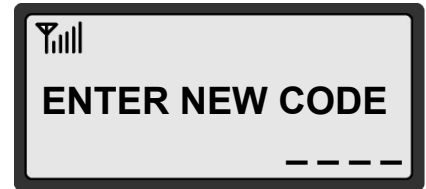


## World Clock

Allows you to check the current major cities around the world.

The screen shows the city name, current date and time.

  1. Press **<MENU>**, **<6>** (Utility), **<1>** (World Clock).
2. Select **<1>** (View Clock), the city corresponding to your time zone by pressing **<VOLUME KEY>** (or **<\*>**, **<#>**).
3. The local date and time are displayed.

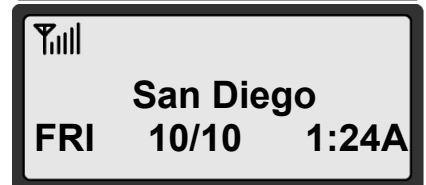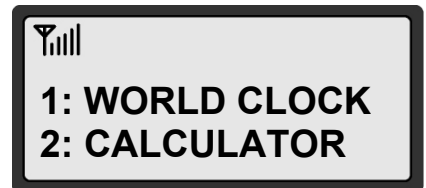

## Calculator

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

1. Press **<MENU>**, **<6>** (Utility), **<2>** (Calculator).
2. Enter the first number using the numeric keys.
3. Use **<\*>**, **<#>** to select a sign for calculation.
4. To calculate the result, press the **<OK>**.

1: WORLD CLOCK  
2: CALCULATOR

253+35  
=288

## **Optional Features**

**Call Forwarding**  
**Call Waiting**  
**Three-Way Calling**  
**Data Call Service**

## Call Forwarding

Call Forwarding is a feature that lets you forward your incoming calls to another phone number, even if your phone is turned off or is in no service area. Contact your service provider to activate Call Forwarding.

## Call Waiting

Call Waiting alerts you to a second incoming call while you are on the conversation. When there's another incoming call, you will hear warning beep. To respond to the call waiting, press **<REDIAL>** or hit shortly the hook switch once. Pressing **<REDIAL>** again or hitting the hook again will let you go back to the first call. Contact your service provider to activate Call Waiting.

## Three-Way Calling

Three-Way Calling is a feature that lets you set up a three-way conversation with two different parties. While you're in conversation with a party, hit the hook switch and place another call with the third party. Then press **<REDIAL>** or hit the hook switch again to connect the three parties together. Contact your service provider to activate Three-Way Calling.

## Data Call Service

Data call Service is a network dependent feature and is available only when your service provider supports it. Check with your service provider for availability.

Connecting your PC requires optional cable, available separately.

1. Connect the phone to your PC with the provided Axesstel USB data cable.
2. Please refer to the manual provided with the data service kit for setting up a connection on your PC.

## **Miscellaneous**

**Menu Table  
Specification**

## MENU OPTION TABLE

I	II	III	Explanation	
1. PHONEBOOK	SEARCH	NAME	Used when searching for a phone number in the phonebook by name / number / stored memory number	
		NUMBER		
		LOCATION		
	STORE		Used when storing a phone number and name in the phone book	
	ERASE	NAME	Used when erasing a phone number in the phone book	
NUMBER				
LOCATION				
2. MESSAGES	NEW MESSAGE		Send a new message	
	INBOX		Received SMS messages	
	VOICE MSG		SMS Services	
	TEMPLATES		Open pre-saved templates	
	SAVED MSG		Shows sent and failed messages	
	DRAFT MSG		Shows stored new typed messages	
	ERASE MSG		Erase received messages	
	MSG OPTION	MSG ALERT		Set message alert
		MSG ALERT TYPE		Set message alert type
		SET REMINDER		Set message reminder
		MSG PRIORITY		Set default message priority
SAVE SENT MSG			Auto-save sent messages	
AUTO DELETE			Auto-Delete received messages If INBOX is full	
EDIT TEMPLATE			Edit default templates	
3. CALL HISTORY	MISSED CALL		Stores missed incoming calls	
	INCOMING		Stores phone numbers of calls received recently	
	OUTGOING		Stores phone numbers called recently	
	ALL CALL LIST		Show all kind of call log	
4. TIME	ALARM	ON / OFF	Alarm On / Off	
	LAST CALL		Shows time duration of last call	
	TOTAL TIME	INCOMING		Shows accumulated incoming call time
		OUTGOING		Shows accumulated outgoing call time
	CLR CALL TIME		Resets accumulated call time	
	TIME MODE	AM / PM		Time: AM/PM display mode
24 HOURS			Time: 24 Hours display mode	
5. SOUND	RING TYPE	ON / OFF	Determines whether the phone alerts the incoming call with sound or only with message	
	RING TONE		Selects the ring type	
	RING VOLUME		Adjust ring volume	
	1 MIN ALERT	ON / OFF	Beeps at one minute interval during conversation	
	SERVICE ALERT	ON / OFF	Beeps when the phone is getting out of or entering service area	
	ALARM TONE		Selects alarm sound	
	CONNECT ALERT	ON / OFF	Beeps when the call is connected	
VP ALERT	ON / OFF	Beeps when the call is on voice privacy mode		
6. UTILITY	WORLD CLOCK	VIEW CLOCK	Shows time around the world	
		SET LOCATION	Set your city	
	CALCULATOR		Use the phone as Calculator	
7. CONFIGURATION	CALL TIMER	ON / OFF	Toggles call timer display	
	GREETING		Change greeting	
	BACK LIGHT	Always off/	Set timing for back light	

		10,30,60 seconds/ Always on	
	CONTRAST		Set LCD Contrast
	LANGUAGE	ENGLISH / CZECH	Select your language
	DATE FORMAT	MM/DD, DD/MM	Set date format
	MY PHONE #		Show your phone number
<b>8. SECURITY</b>	CHANGE CODE		Change Lock code
	RESTRICT	OUTGOING	Restrict outgoing calls
		INTERNATIONAL	Restrict international calls
		LONG DISTANCE	Restrict long distance calls
	AUTO LOCK	ON / OFF	Lock the phone
	VERSION		Show phone information
	ERASE LOGS	OUTGOING CLR	Erase outgoing calls history
		INCOMING CLR	Erase incoming calls history
		MISSED CLEAR	Erase missed calls history
		ALL CALL CLR	Erase all calls history
ERASE NAMES		Erase all phonebook entries	
FACTORY RESET		Reset to default settings	
PHONE RESET		Reset to default settings and clears user data	
<b>9. DATA SERVICE</b>	COM PORT	SERIAL / USB	Set port type
	DATA BAUD	19.2 / 115.2 Kbps	Set data communication speed
	SET RECEIVE	VOICE ONLY FAX ALWAYS MODEM ALWAYS	Set operation mode

## SPECIFICATIONS

Frequency Range	PX310 PX310F	Rx: 462 ~ 468 MHz Tx: 452 ~ 458 MHz
	PX320 PX320F	Rx: 869 ~ 894 MHz Tx: 824 ~ 849 MHz
	PX330 PX330F	Rx: 1930 ~ 1989 MHz Tx: 1850 ~ 1909 MHz
Channel Bandwidth	CDMA 1.23 MHz	
Stability of frequency	0.4 ppm	
External appearance (mm)	205 x 115 x 37 mm	
Weight	500 g (with battery)	
Sending output	maximum 0.23W E.R.P	
Temperature of operation	-20 ~ +50 degrees Celsius	
Relative humidity	5% ~ 90%	
Adapter	Input: AC 100~240V 50~60Hz Output: DC 5.5V/1A	
Battery	Standby	16mA (Slot Cycle Index: 2) 72 hours
	Talk	2.5 Hours

# SAR INFORMATION

## **THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \*

Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the when worn on the body , as described in this user guide, is **0.702 W/Kg** . (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can



be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on **FCC ID: PH7PX320**.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. \* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## **SAFETY INFORMATION FOR RF EXPOSURE**

### **Body worn operation**

This device was tested for typical body-worn operations with the back of the phone kept 20 mm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 20 mm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

# Safety Information

## **1 . SAFETY INFORMATION FOR FIXED WIRELESS TERMINALS**

### **.POTENTIALLY EXPLOSIVE ATMOSPHERES**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

### **INTERFERENCE TO MEDICAL DEVICES**

Certain electronic equipment may be shielded against RF signal from your wireless phone. (pacemakers, Hearing Aids, and so on) Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. RF signals may affect improperly installed or inadequately shielded electronic system in motor vehicles.

### **.EXPOSURE TO RF ENERGY**

Use only the supplied or an approved replacement antenna. Do not touch the antenna unnecessarily when the phone is in use. Do not move the antenna close to, or touching any exposed part of the body when making a call.

## **FCC Compliance Information**

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received.  
Including interference that may cause undesired operation.

# **U.S.A.**

## **U.S.FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT**

### **INFORMATION TO THE USER**

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation This equipment generates, uses, and can radiate radio frequency energy and, if Not installed and used in accordance with the instructions, may cause harmful Interference to radio communications. However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \*- Reorient or relocate the receiving antenna.
  - . Increase the separation between the equipment and receiver.
  - \*- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
  - \*- Consult the dealer or an experienced radio/TV technician for assistance.
- Changes or modification not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment. Connecting of peripherals requires the use of grounded shielded signal cables.