


## 4. Operating Menu

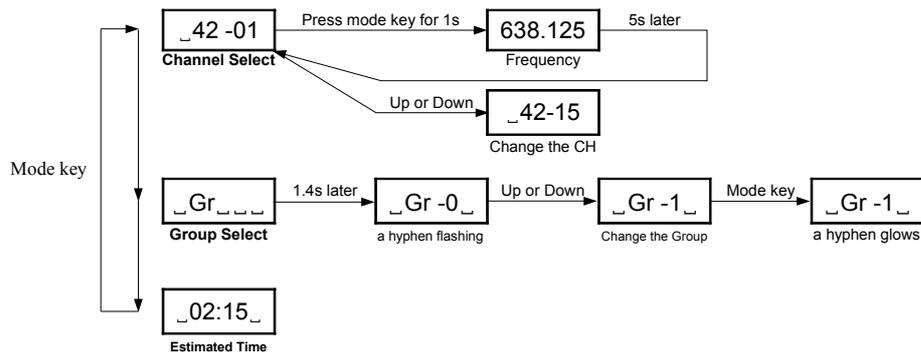

### [Channel Select mode]

Select the channel by Up or Down key.

(The frequency will be displayed by pressing a mode key for 1s)

### [Group Select mode]

1. Select the group by Up or Down key when a hyphen flashing.
2. The selected group will be enabled by pressing a mode key. (a hyphen glows)

### [Use Time]

Displays the accumulated battery use time as a rough estimate of total transmitter usage.