

AX5 Mobile phone

Trade Mark: AZUMI

WELCOME

- Congratulations on the purchase of your Azumi Mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player and ultra clear video
- You can read the manual to understand how to use your Azumi mobile phone and experience the well-established functions and simple operation method. Please use the original accessories in order to achieve the best use of your device. Azumi shall not be responsible for any damage in machinery due to use of non-original components.

Precautions for users

Before using your Azumi handset, it is important that all users read the following recommendations:

- Do not wet your Azumi phone
- Use only authorized parts
- Do not open the housing of the phone.
- If the phone or any accessory is not working properly, take it to a qualified service center.
- Using the stereo headphones or earphones for a long time (at high volume),it can cause serious damage to your hearing.
- Do not use the phone while it is charging.
- In extreme heat or cold: Avoid temperatures below -10 ° C / 14 ° F or above 40 ° C / 104 ° F.

Note: Remember to visit our website **www.azumi-mobile.com** and our Facebook page **www.facebook.com/AzumiMobile** if you have questions. Our Team is always available to answer your queries.

YOUR PHONE FUNCTIONS



CHARGE THE BATTERY

Connect this end to phone's USB port.



Tip: Charge the battery before using it for the first time. Use only AZUMI approved chargers, batteries and cables.

 
INSERT SIM AND Micro SD CARD



Please insert the SIM card according to the label on the phone. Make sure that the clipped corner of the SIM card and the metallic contacts are facing the correct direction. Slide the SIM card into the slot until it doesn't move up any further.

TURNING THE PHONE ON& OFF





Hold down the power button to turn the phone on.

Hold down the power button, then touch Power off to turn the phone off

DIM, LOCK & WAKING THE PHONE

When the power is on and you want to dim the screen, press the power button.



 
When the screen is dimmed and you want to wake the phone, press the power button and then drag the lock right.

HOME SCREEN




Touch it to enter dial pad interface

APPS



 1. Touch it to enter app tray.

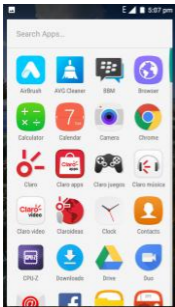

2. Touch an app to launch it

STATUS BAR

The status bar shows your phone's status and notifications. (Notifications are described on the next page.)











Notification icons

Status icons



Status icons

The following status icons may appear on your screen:

Icon	Statement	Icon	Statement
	SIM Network signal level		Headset is inserted
	Indicates battery capacity		Bluetooth is activated
	Unread messages		Wi-Fi is connected
	Missed calls		Airplane mode is activated
	Alarm is activated		USB is connected




NOTIFICATION PANEL

 
 
The notification panel is your center for new events: like new e-mail, voicemail, updates, and more.

Drag down to display notifications

Touch a notification to respond

MAKE & ANSWER A CALL

1. From the Home screen, touch 
2. Touch  to show the dial pad.
3. Dial a number, then touch  to initiate the call.

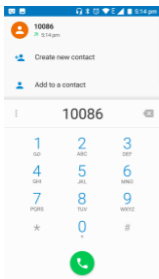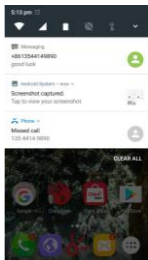

Answer a call

 
Drag  to right

Decline a call




Drag  to left

VOLUME CONTROL WHEN CALLING

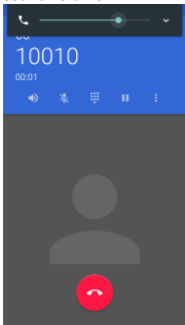Volume key is at the left side of the phone. During a conversation, you can press the volume key to tune the sound volume.



SEND A TEXT

 
1. From the Home screen, touch 
2. Touch 
3. Touch the 'To' field, then enter a recipient.
4. Touch the Type message field, then enter a message
5. Touch  Send the message

ADDING EMAIL ACCOUNTS

The first time you open Email, you are prompted to set up an email account. After that, you can configure Email to send and receive email from additional accounts.

To add an email account:

- 1) Tap the e-mail icon. In Your account interface, tap Next. In e-mail address option, enter your e-mail address. In password option, → enter your e-mail password. Tap Next.
- 2) Filling the email address and password, tap next to setup email
- 3) Tap next to enter your email.

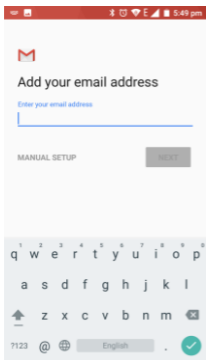

SETTINGS

The settings for various features of the phone

Get to know the settings your phone so that you can personalize them to your own requirements. Go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

Wi-Fi

You can use Wireless & Network settings to manage your SIM card, configure and manage connections to networks and devices by using Wi-Fi. You can set Bluetooth, data usage,

	airplane mode, VPN, tethering & portable hotspot and mobile networks in this interface.
Audio profiles	There are four profiles: General, Silent, Meeting and Outdoor. You can set the profiles according to different conditions.
Display	You can set Wallpapers, Auto-rotate screen, Brightness, Daydream, wireless display, Sleep and Font size in this interface.
Storage	Use the Storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.
Battery	You can view your battery status, battery level and battery use in this interface.
Apps	You can use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, to view and control services, that are currently running ,and to view the storage used by applications, etc.

Location	You can turn on Wi-Fi & mobile network location, GPS satellites, etc through this function.
Security	You can set the parameters related to security through this function.
Language & input	Use the Language & Keyboard settings to select the language for the text on your phone and for configuring the input method.
Backup & reset	You can backup your data and reset your phone in this interface.
Add account	You should add an account first before using this function.
Data & time	You can use Date & Time settings to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the network, etc.
Schedule power on&off	You should set a certain time, at which the phone would power on/off automatically.

Accessibility

Enable your installed accessibility applications and adjust related settings.

About phone

This function enables you to view some phone related information.

SET A RINGTONE



Press **Sound¬ification**, select the profiles you want to set, you can customize the ringtone and volume of incoming call, notification ringtone in this interface.

 
MULTIMEDIA

listen, watch, capture and enjoy it!

FM RADIO

1. Insert earphone, then Tap the Power icon to stop or play FM.
2. Tap the forward by 0.1 MHz or scroll the knob icon to change channel frequency. Press volume key to adjust the volume.
3. Tap Auto search, Record and Favorites icon to adjust.

MUSIC

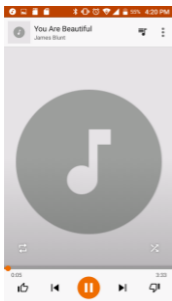


Controls

Play/Pause

Touch 

Previous/Next

Touch 

Rewind/Forward

Touch the Progress
bar

Volume adjust

Press side key

Now playing: Touch to open the current playlist.

Touch



Shuffle: Touch to shuffle the current playlist.

Touch



Repeat: Touch to repeat the current playlist; touch again to repeat the current track.

Touch



Camera

1. Launch the camera by pressing the camera icon on the home screen
2. In the camera app, tap the screen to focus on a specific area.
3. Press the camera button all the way down to take a picture.

SHOOT A VIDEO

1. Press the camera icon



2. In the Camera app, select video
3. Press the camera button to begin filming and press again to stop filming.

Calculator

1. Launch the calculator by pressing the calculator icon on the home screen.
2. In the calculator app, enter numbers and arithmetic

operators on the basic screen.

Calendar

You can use the calendar to keep track of important events. After entering the calendar function menu you can select year, month and date. Slide the Calendar screen up and down to switch month.

Sound Recorder

Use this function to record audio files. Two function icons at the bottom of the Recorder screen are corresponding to start recording and review recorded file.

Clock

The clock allows you to view time and date. You can also add an alarm, set the alarm and turn it on. Then, the alarm can ring at a specific time you set.

Gallery

Both pictures and videos taken by camera or stored in SD card can be scanned through this function.

Video player

With Videos, you can play video clips in your device (for example, the video you captured by the camera) or video files stored in compatible SD card (if inserted)



SIM1 Toolkit

STK features are provided by your service provider. If your SIM card supports STK features, you will see the STK menu. Different STK's have a different STK main menu. Please contact your service provider if the STK does not work.

Browser

To let you browse the Internet.

 
File Manager

This phone supports an SD card. You can use the File Explorer to conveniently manage various directories and files on the SD card.

USE AS MODEM VIA USB


You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files

between your phone's SD card and the computer.

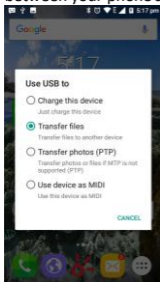

CONNECT TO Wi-Fi NETWORKS

 Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 50 meters, depending on the Wi-Fi router and your surroundings.

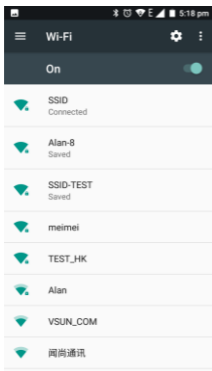

Touch Settings> WI-FI . Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

FCC Caution.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2)

this device must accept any interference received,

including interference that may cause undesired

operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved

by the party responsible for compliance could void the

user's authority to operate the equipment.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical body-worn operations with the back of the handset kept 10mm for body worn. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm for body worn. The use of belt clips, holsters and similar accessories should not contain metallic

components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations.

To comply with RF exposure requirements, a minimum separation distance of 10mm for body worn must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.