


AZUMI

User Guide


WELCOME

- Congratulations on your purchase of the AZUMI KIREI A5Q PLUS mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, Music player, Ultra clear video
- You can read the manual to understand how to use AZUMI KIREI A5Q PLUS mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. AZUMI KIREI A5Q PLUS shall not be responsible for any damage in machinery due to use of non-original components.

YOUR PHONE-FRONT VIEW

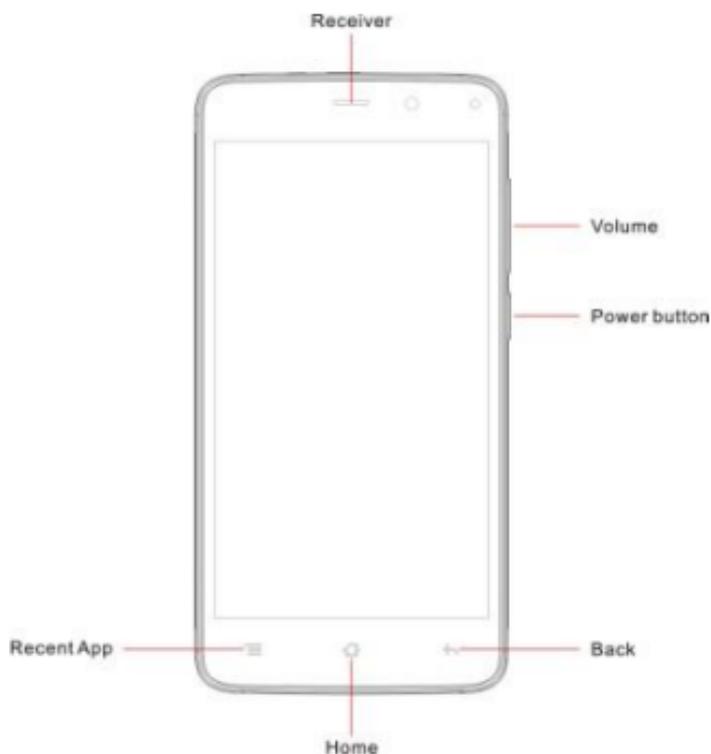

YOUR PHONE-BACK VIEW

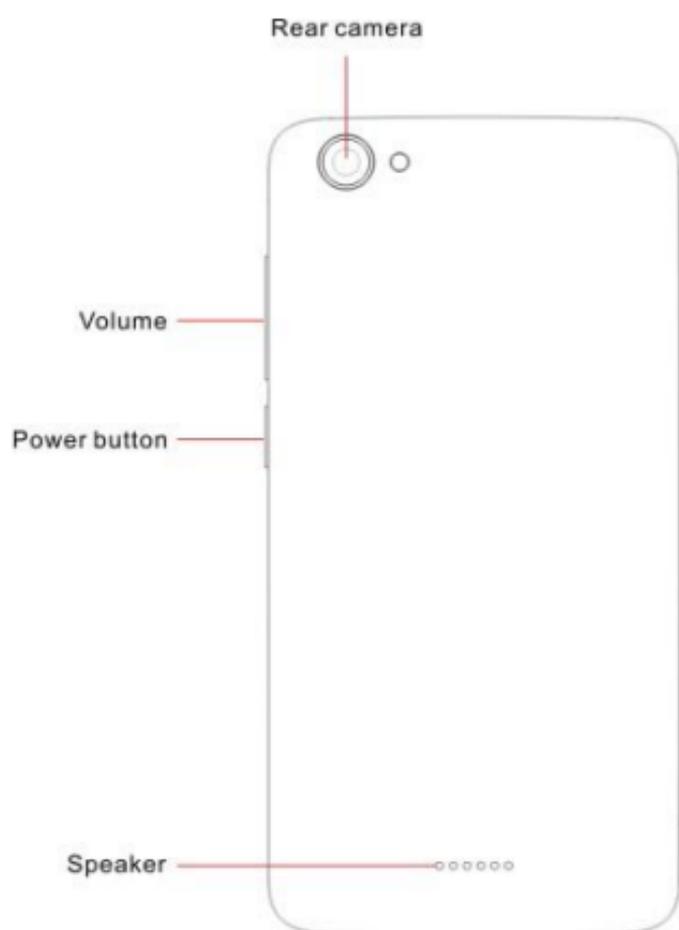


CHARGE THE BATTERY

Connect this end to phone's USB port.



Tip: Be sure to charge your phone's battery completely after inserting it in the phone for the first time.

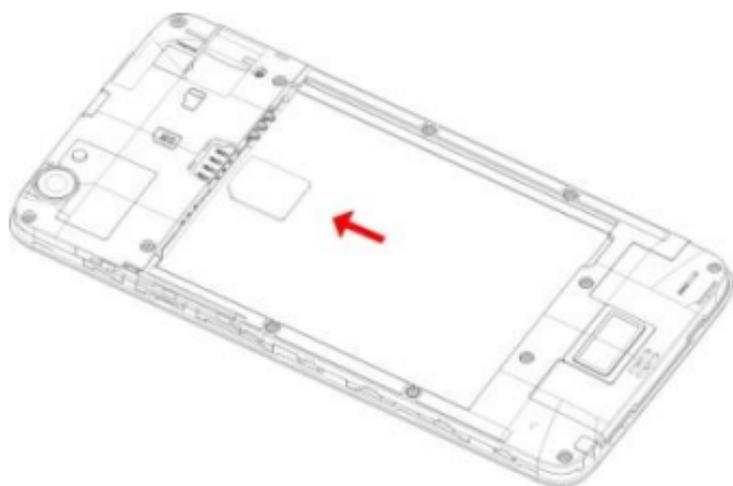

INSERT SIM AND Micro SD CARD

Please insert the SIM card(s) according to the label on the phone. Make sure that the clipped corner of the SIM card and the metallic contacts are facing the


correct direction. Slide the SIM card into the slot until it doesn't move up any further.

Micro SD card slot is above the SIM card slot. The direction in which the micro SD card has to be inserted into the designated slot is shown by a label on the phone.

Tip: For additional media storage insert a micro SD card.




TURN THE PHONE ON& OFF

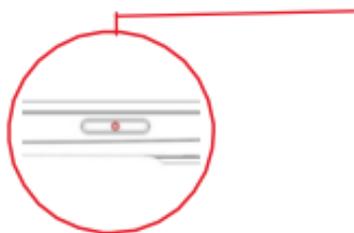


Hold down the power button to turn the phone on.

Hold down the power button, then touch Power off to turn the phone off

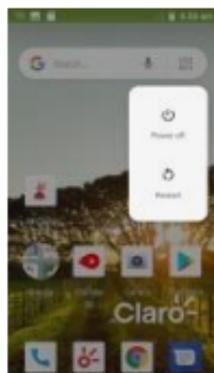

DIM LOCK & WAKE THE PHONE


When the power is on and you want to dim the screen, press the power button.

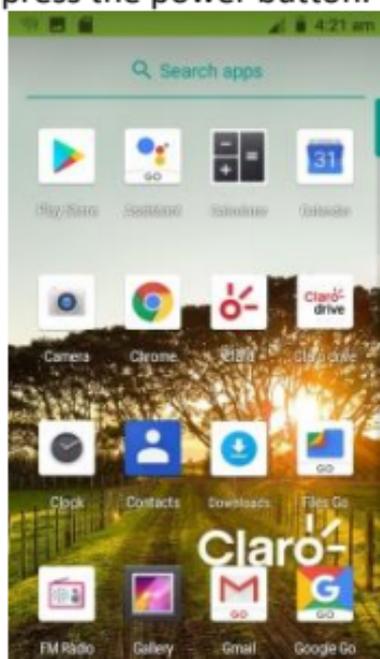

When the screen is dimmed and you want to wake the phone, press the power button and then drag the lock to the right



HOME SCREEN

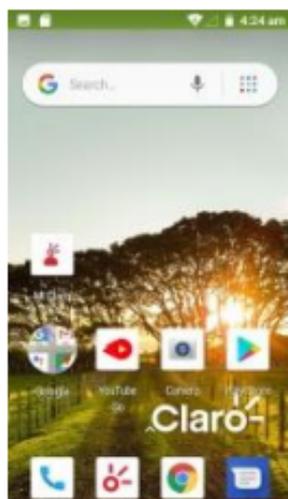

Touch and hold an empty spot to change the wallpaper

Touch it to enter web
Touch it to message

Touch it to main menu
Touch it to enter contacts
Touch it to enter dial pad interface

APPS



— Touch an app to launch it

STATUS BAR

The status bar shows your phone's status and notifications. (Notifications are described on the next page.)

Notification icons

Status icons



Status icons

The following status icons may appear on your screen:

Icon	Statement	Icon	Statement
	SIM Network signal level		Headset is inserted
	Indicates battery capacity		Bluetooth is activated
	Unread messages		Wi-Fi is connected
	Missed calls		Airplane mode is activated
	Alarm is activated		USB is connected

MAKE & ANSWER A CALL

1. From the Home screen, touch




2. Touch



Dial a number using the dial pad.

3. Touch to initiate the call

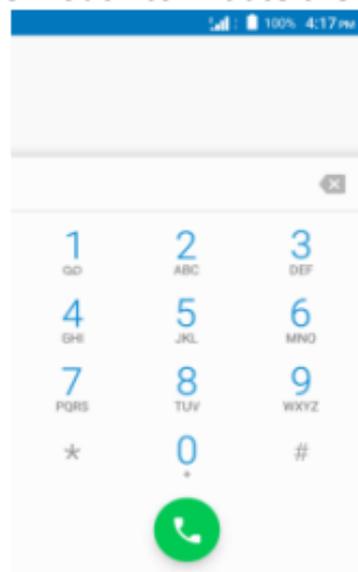

Answer a call

Drag




Decline a call

Drag



VOLUME CONTROL WHEN CALLING

Volume key is at the left side of the phone. During a conversation, you can press the volume key to tune the sound volume.

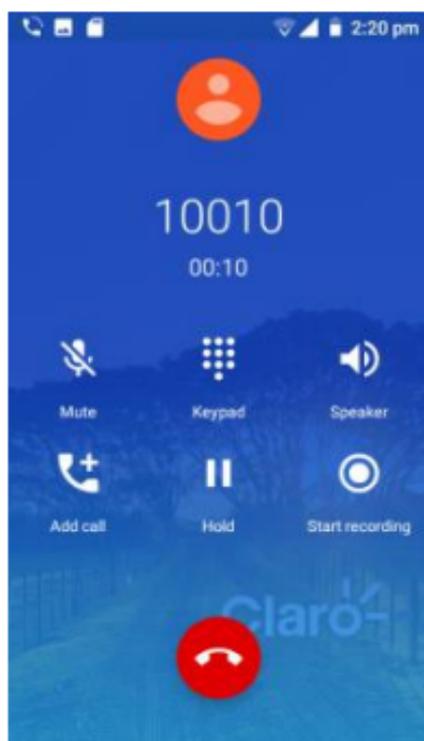

SEND A TEXT

1. From the Home screen, touch 
2. Touch 
3. Touch the To field, then enter a recipient.
4. Touch the Type message field, then enter a message
5. Touch  Send the message

SETTINGS

the settings for various features of the phone

Get to know the settings in your phone so that you can personalize them to your own requirements. Go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

Network & Internet

You can use Wireless & Network settings to manage your SIM card, configure and manage connections to networks and devices by using Wi-Fi. You also can set mobile network, data usage, hotspot & tethering , Sms service center,VPN,Emergency Alerts,Aeroplane mode in this interface.

Connected devices

You can set Bluetooth , Printing , USB in this interface

Apps& notifications

You can use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, to view and control currently running services, and to view the storage used by applications, etc.

Battery	You can view your battery status, battery level and battery use in this interface.
Audio profiles	There are four profiles: General, Silent, Meeting and Outdoor. You can set the profiles according to different conditions.
Display	You can set Wallpaper, Auto-rotate screen, Brightness, Daydream, wireless display, Sleep and Font size in this interface.
Sound	You can set Media volume, Alarm volume, Ring volume, Phone ringtone, notification sound, alarm sound in this interface.
Storage	Use the Storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.
Security & Location	You can set the parameters about security through this function, You can turn on Wi-Fi & mobile network location, GPS satellites, etc through this function.
Users & accounts	You should add account first before using this function, you can set emergency information through this function

Accessibility	Enable your installed accessibility applications and adjust related settings.
Google	You can set google Services & preferences in this interface.
System -Language & input	Use the Language & Keyboard settings to select the language for the text on your phone and for configuring the input method.
System -Gestures	You can turn on or off press the power button twice to jump to camera
System -Data & time	You can use Date & Time settings to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the network, etc.
System-Back up	You can backup your data in this interface.
System-Rese t options	You can reset your phone in this interface.

System-About phone

This function enables you to view some phone related information.

SET A RINGTONE



Press **Profiles audio**, select the profiles you want to set, you can customize the ringtone and volume of incoming call, notification ringtone in this interface.


MULTIMEDIA

listen it, watch it, capture it, enjoy it!

FM RADIO

1. Pull out the telescopic antenna or insert earphone, then Tap the Power icon to stop or play FM.
2. Tap the forward by 0.1 MHz or scroll the knob icon to change channel frequency. Press volume key to adjust the volume.
3. Tap Auto search, Record and Favorites icon to adjust.

MUSIC

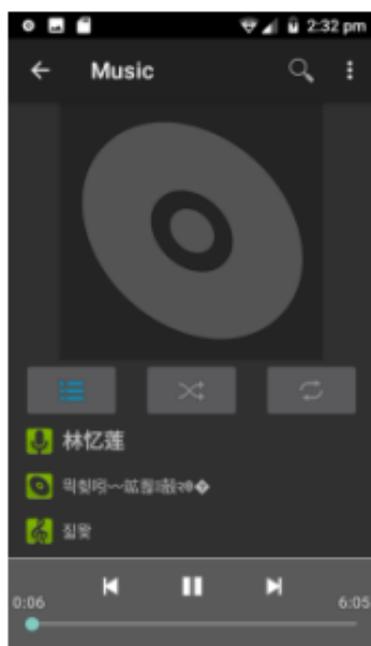

Controls

Play/Pause

Touch 

Previous/Next

Touch 

Rewind/Forward

Touch and hold 
/ 

Volume adjust

Press side key

Now playing: Touch to open the current playlist.

Touch 

Shuffle: Touch to shuffle the current playlist.

Touch 

Repeat: Touch to repeat the current playlist; touch again to repeat the current track.

Touch

 


Camera

1. Launch the camera by pressing the camera icon on the home screen
2. In the camera app, tap the screen to focus on a specific area.
3. Press the camera button all the way down to take a picture.

SHOOT A VIDEO

1. In the Camera app, select video
2. Press the camera button to begin filming and press again to stop filming.



Calculator

1. Launch the calculator by pressing the calculator icon on the home screen.
2. In the calculator app, enter numbers and arithmetic operators on the basic screen.

Calendar

You can use the calendar to keep track of important events. After entering the calendar function menu you

can select year, month and date. Slide the Calendar screen up and down to switch month.

Sound Recorder

Use this function to record audio files. Two function icons at the bottom of the Recorder screen are corresponding to start recording and review record file.

Clock

The clock allows you to view time and date. You can also add an alarm, set the alarm and turn it on. Then, the alarm can ring at a specific time you set.

Gallery

Both pictures and videos taken by camera or stored in SD card can be scanned through this function.

Video player

With Videos, you can play video clips in your device (for example, the video you captured by the camera) or video files stored in compatible SD card (if inserted)



SIM Toolkit

STK features are provided by your service provider. If your SIM card supports STK feature, you will see the STK menu. Different STK has different STK main menu. Please contact your service provider if the STK does not work.

Chrome

To let you browse the Internet.

Files Go

The phone supports the SD card. You can use the File Explorer to conveniently manage various directories and files on the SD card.


USE AS MODEM VIA USB

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone's SD card and the computer.



CONNECT TO Wi-Fi NETWORKS

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

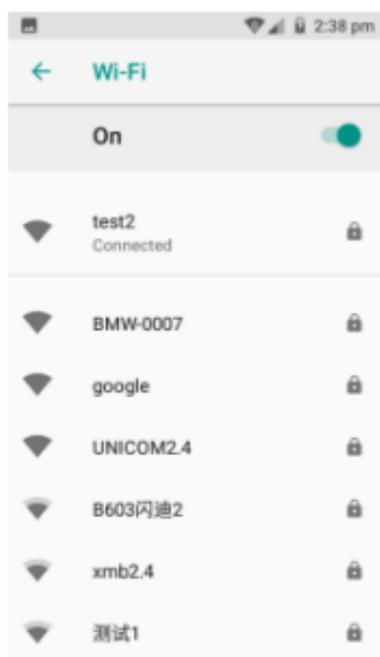

Touch Settings> Network & Internet. Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

Corriente eléctrica encendido 开机电流	180-650mA
Corriente eléctrica pantalla 屏幕电流	100-280mA

Voltaje Pantalla	屏幕电压	3.4-4.2 Vcc
Corriente eléctrica Llamada	通话电流	80-590 mA
Voltaje Llamada	通话电压	3.6-4.2 Vcc
Voltaje celular apagado	关机的电压	3.4 Vcc
Cargador de corriente ca/cc	Entrada 充电器输入电流电压	100-240Vca, 50-60Hz, 0.15A
	Salida 输出电流电压	5.0Vcc, 1000mA

1.FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Google, Google Play and other marks are trademarks of Google Inc.