

# **User's Manual of L2U Azumi**

## **Mobile Phone**

---

### **TABLE OF CONTENT**

<b>1. BASIC INFORMATION.....</b>	<b>4</b>
1.1. BRIEF INTRODUCTION.....	4
<b>2. BEFORE USE.....</b>	<b>5</b>
2.1. NAME AND EXPLANATION OF EACH PART.....	5
2.1.1. Appearance Sketch Map .....	5
2.1.2. Description of Keys .....	6
2.2. INSTALL SIM CARD AND MEMORY CARD.....	7

2.2.1.	SIM Card.....	7
2.2.2.	Memory Card.....	8
2.3.	BATTERY .....	8
2.3.1.	Install the Battery.....	8
2.3.2.	Charging.....	9
2.4.	SECURITY PASSWORD .....	9

### **3. QUICK USER GUIDE ..... 10**

3.1.	DIAL A CALL.....	10
3.2.	REJECT A CALL.....	11
3.3.	RECEIVE A CALL.....	11
3.4.	END A CALL.....	11
3.5.	EMERGENCY SERVICES .....	11
3.6.	EXTENSION SPEED DIAL.....	12
3.7.	DIALED CALLS/MISSED CALLS/RECEIVED CALLS/REJECTED CALLS .....	12
3.8.	CALL FORWARD.....	12
3.9.	CALL WAITING .....	12
3.10.	CALL BARRING.....	13
3.11.	POWER OFF THE PHONE .....	13
3.12.	T-FLASH CARD .....	13

## **4. FUNCTION MENU ..... 14**

- 4.1. SIM CLARO ..... 14
- 4.2. MESSAGE..... 14
- 4.3. CONTACTS ..... 15
- 4.4. CALL LOGS ..... 15
- 4.5. CLAROIDEAS WEBSITE ..... 17
- 4.6. MULTIMEDIA ..... 17
- 4.7. ORGANIZER ..... 19
- 4.8. GAMES ..... 22
- 4.9. SETTINGS..... 22

## **5. TEXT INPUT..... 25**

## **6. CARE AND MAINTENANCE ..... 26**

## **1. Basic Information**

### **1.1. Brief Introduction**

Thanks for selecting L2U Azumi color screen GSM digital mobile phone. Through reading the manual, you can fully know how to use L2U Azumi mobile phone, appreciate its complete function and simple operating method.

L2U Azumi color screen mobile phone is designed aiming at GSM network environment; Besides basic call functions, L2U Azumi also provides many kinds of practical functions, such as name card holder, scene mode, message, audio and video player, camera and video, alarm clock, calculator, STK, time and date, auto power-on and shut-down and etc. so that convenient for your work and leisure activities. In addition, L2U Azumi adopts personalized human-computer interface design, its complete function can meet your different requirements.

L2U Azumi color screen mobile phone accords with GSM criterion, has obtained the certification of competent authority.

The company reserves the rights to revise the contents of the manual without prior notice.

## 2. Before Use

### 2.1. Name and Explanation of Each Part

#### 2.1.1. Appearance Sketch Map



The picture is only for your reference.

### 2.1.2. Description of Keys

<b>Keys</b>	<b>Function</b>
<b>Left soft key/ Right soft key</b>	<ol style="list-style-type: none"><li>1. Execute functions that the left-down/right-down corner indicator shows.</li><li>2. In the standby mode, press Left Soft key to access Menu, Right Soft key to access Contacts.</li></ol>
<b>Navigation key</b>	On other interfaces, it equals to navigation key and direction key except for special functions.
<b>Dial key</b>	<ol style="list-style-type: none"><li>1. Press this key to dial or receive an incoming call.</li><li>2. When in the standby mode, press this key to access Dialed Calls.</li></ol>
<b>OK key</b>	In the dial panel mode, press this key to show or hide dial panel.
<b>End key</b>	<ol style="list-style-type: none"><li>1. Mainly used as power on/off.</li><li>2. Press to return to standby screen in any interface.</li></ol>

	3. End calls or reject incoming calls.
<b>Number key</b>	It is used to dial and input numbers or characters. Press and hold Number key 1 or 2 to get through the preset voice inbox.
<b>* Key</b>	On the standby interface, input *; after inputting telephone number, if you want to input extension number, please press twice asterisk key, after the display screen shows “+”, please input your extension number.
<b># Key</b>	<ol style="list-style-type: none"> <li>1. In text editing interface, press "#" key to switch text the input method.</li> <li>2. On the standby interface Press and hold "#" key to transfer the profile of Normal/Silent.</li> </ol>

## **2.2. Install SIM Card and Memory Card**

### **2.2.1. SIM Card**

**Before using the phone, you must insert valid SIM (Subscriber Identity Module) card in the phone. SIM card is provided by network supplier.**

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water or dirt.

**Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.**

### **2.2.2. Memory Card**

Aim at the T card slot and push the T card gently, and the card will be inserted correctly.

**Prompt: If the memory card is failed, please check whether it is correctly placed and good contact of metal point.**

## **2.3. Battery**

### **2.3.1. Install the Battery**

- Take off the rear cover, of the mobile.
- Make one end of battery with metal surface aim at the battery connector.
- Then gently press the battery downward using the finger, and then press



the other end to install the battery.

**Prompt: Please operate correctly to avoid damaging the battery connector.**

### **2.3.2. Charging**

Insert the charger on the charging interface at the side end of the phone.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, it means the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

**Prompt: In order to ensure normal operation of the phone, please make sure to use the designated charger.**

## **2.4. Security Password**

### **■ PIN**

PIN (Personal Identification Number) is used to prevent your SIM card from being used illegally. PIN is usually provided with SIM card together. If you input wrong PIN for continuous three times, please input PUK to unlock it. Please contact with network operations company for more details.

### **■ PIN 2**

You need to input PIN2 when entering some functions (such as call

charge); if you input wrong PIN2 for continuous three times, you need to input PUK2 to unlock it. Please contact with network operations company for more details.

#### ■ PUK

When changing the locked PIN, you need to input PUK (Personal Unlock Key). PUK is provided with SIM card together. If it is not provided, please contact with your service provider. If you input wrong PUK for continuous ten times, the SIM card can't be used again. Please contact with your service provider to buy new card. You can't change PUK. If you lose the code, please contact with your service provider.

#### ■ PUK2

When changing the locked PIN2, you need to input PUK2. If you input wrong PUK2 for continuous ten times, you can't use the functions that need PIN2. Please contact with your service provider to buy new card. You can't change PUK 2. If you lose the code, please contact with your service provider.

### **3. Quick User Guide**

#### **3.1. Dial a Call**

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key to

make a call. If you're making a long distance call, add the area code preceding the telephone number.

Press left soft key to access Options.

### **3.2. Reject a Call**

You can press End key to reject an incoming call.

### **3.3. Receive a Call**

When an incoming call arrives, the phone will give out the corresponding prompt (such as vibration, ring tone, and etc.); if network support, the phone screen will show the name and telephone number of the caller; at this time, you can press Dial key to receive an incoming call.

### **3.4. End a Call**

After finishing a call, you can press End key to end a call.

### **3.5. Emergency Services**

You can directly dial an emergency service call without SIM card.

Different network uses different emergency numbers, please consult your network operations company for more details.

### **3.6. Extension Speed Dial**

After inputting telephone number, if you want to input branch number, please press and hold “\*”, input your extension number after the display screen shows “P”. After getting through the call, it will directly dial the extension.

### **3.7. Dialed Calls/Missed Calls/Received Calls/Rejected Calls**

You can enter call log to check the relevant details of dialed calls, missed calls, received calls and rejected calls.

**Prompt: The record of incoming call from blacklist number will be saved in Rejected Calls.**

### **3.8. Call Forward**

After call forward function is started, according to different forward conditions settings (Call Forward Unconditionally, Forward Busy, Forward No Answer, Forward Can Not Reach), you can select to switch the incoming call to voice inbox or other telephone numbers.

### **3.9. Call Waiting**

After call waiting function is started, when you are calling, the other call can be put through.

### **3.10. Call Barring**

After call barring function is started, according to different restricted conditions settings (all the dialed calls, all the incoming calls, incoming calls when roaming, dialed international calls, outgoing international calls when roaming), you can restrict the call under the corresponding conditions (need to apply to network operator for business).

### **3.11. Power off the Phone**

In the standby mode, press and hold End key to power off the phone.

### **3.12. T-flash Card**

Insert the T-Flash card into phone from the background. This will expand the Flash memory of the phone.

Tap Multimedia menu, you can browse MP3, MP4, picture, video, photograph etc.

## **4. Function Menu**

### **4.1. SIM Claro**

### **4.2. Message**

Message service is actually a network service. This menu works soundly depending on the type of your SIM card and the service provided by the network operator. Therefore, please check it before applying such function.

#### **■ Write message**

Please have the service center number from the network operator before applying this function. The storage capacity of SIM card depends on its type.

#### **■ Inbox**

Save the received SMS message.

#### **■ Outbox**

Save the SMS message not sent out successfully.

#### **■ Drafts**

Save the unsent messages.

- **Sentbox**

Save the SMS message you sent successfully.

- **Templates**

Directly use the default phrases when writing the messages.

- **Broadcast message**

#### **4.3. Contacts**

This function could help you browse the name card holder, store, edit and delete the names and phone numbers in the phone and SIM card. To facilitate the management of the records, this phone sets the group function, collecting the similar items into a group. The storage capacity of the SIM card varies and the maximum storage capacity of this phone is 500.

#### **4.4. Call logs**

- **Missed calls**

Display the list of your recent missed numbers. The operation is the same as the Dialed.

- **Dialed calls**

Display the list of your recent dialed numbers.

#### ■ **Received calls**

Display the list of your recent answered numbers. The operation is the same as the Dialed.

#### ■ **Rejected calls**

Display the incoming call records in the blacklist.

#### ■ **Delete all**

You could delete all the records of the Dialed, Received, Missed and Rejected.

#### ■ **Call timers**

Display information details of SIM: Last Call, Received Calls, Dialed Calls, and All Calls. Press left soft key to "Reset".

#### ■ **GPRS counter**

Display information details of SIM: Last sent, Last received, Total sent, and Total received. Press left soft key to "Reset".



#### 4.5. Claroideas website

#### 4.6. Multimedia

##### ■ Camera

The device is equipped with a webcam with high pixels. You can take photo at any time and save the photo in the device or SIM card. Press OK key to get the picture.

**Image viewer:** Enter into image browser list.

**DV/DC mode:** Through this function menu, can switch to frame the menu camera.

**Effect:** The special effect can be classified into: normal, black and white, blue, green, yellow, red, sepia and negative.

**Settings:** Including size, quality, banding, shutter sound, auto save, storage etc.

##### ■ Video recorder

■ The device is equipped with a video capture so that you can chat with your friends through it. A driver is needed to be installed when the video capture function is used. The details can be found in driver installation guide.

**View video directory:** Enter into videos list.

**DC/DV mode:** Through this function menu, can switch to frame the menu

camera.

**Effect:** The special effect can be classified into: normal, black and white, blue, green, yellow, red, sepia and negative.

**Settings:** Including size, banding, audio, video format, storage etc.

#### ■ **Lmage**

Enter into image browser list.

#### ■ **Music**

This phone could play the MP3 stored in the phone memory and support the background play. Press the left soft key or "OK" key to enter and use the Navigation keys to operate the MP3 player. According to \* and adjust the volume # key. Press left soft key to access Options:

**Music list:** Display all the MP3 or the play list you've saved.

**Add:** To saved play list, to new play list, to music mark

**Set as ring tone:** Set the selected MP3 as the call ring or alarm ring of the incoming call.

**Shuffle:** Selected the play mode shuffle

**Repeat:** Selected the play mode repeat

**Settings:** Set the music equalizer or BT stereo output or BT stereo headset.

**Open review:** You can choose to open or close A-B answer read function

**Exit:** Return to previous menu.

## ■ **Video**

This phone supports the video format of 3GP、AVI and MP4.

Enter the video play list interface, press left soft key, you could go on the following operations.

## ■ **Recorder**

Use this function you can record or listen to your own record. The record file format: AMR, WAV.

## ■ **FM radio**

Please plug in the compatible earphone to the device and then turn on the radio. The earphone cable can be used as FM Antenna. Press the left and right navigation key to switch on a channel and a channel. Press the ok keys to stop/play broadcasting FM radio.

On the interface of the Radio playing, press left soft key you could enter the options menu .

## 4.7. **Organizer**

### ■ **Calendar**

You can use this feature to view the year, date and solar term easily. Use up/down/left/right direction key to navigator other date.

## ■ **Claro**

## ■ **Alarm**

You can edit alarm, time, ring and repeated ring mode.

In “alarm edit” mode, you can scroll up or down direction key, when the cursor goes to the desired option, press “OK”, then you can select desired settings.

## ■ **Calculator**

The function will make your device a calculator with which you can carry out simple math calculation.

## ■ **BlueTooth**

**Open/Close Bluetooth:** You can choose to “open” or “close” Bluetooth.

**Bluetooth visibility:** You can choose “show phone” or “hidden”

Bluetooth. If the Bluetooth is hidden, others cannot search your phone.

**Paired device:** You can search different Bluetooth equipments and find

compatible ones (as long as the PIN codes of two Bluetooth equipments are identical with each other, the match will be successful. The PIN code of Bluetooth earphone is different due to different type, and you can find the code in operating manual of the Bluetooth earphone.).

**Device name:** You can change the name of the phone.

**Bluetooth file storage:** You can choose bluetooth file save to phone or memory card.

**Help:** You can view the operating instruction of Bluetooth.

■ **World clock**

In the world, and can automatically display the time zone clocks.

■ **Ebook**

Documents Reader eBook

■ **Internet**

The device is compatible with WAP service. You can visit various WAP services, for instance, news, weather forecast and airlines etc. The services are specially designed for the device and are maintained by WAP service supplier.

WAP service requires network backup. You can consult the network operator or service supplier about the availability, rates and tax of WAP services.

■ **My files**

Files manager can manage the files in the phone and memory card. (make sure the card has been inserted).

## 4.8. Games

### ■ Snake

This mobile phone provides a snake game, please see the specific operation within the game operating instructions.

## 4.9. Settings

You can customize the settings, such as time and date, language, call settings etc.

### ■ Call settings

Including:

**Dual-SIM:** including Standby mode, Reply by original SIM, Set SIM name and Set dual SIM call divert.

**Call Divert:** When “call divert” function is started up, you can transfer the incoming call to voice inbox or other phone number according to the tasked “call divert” conditions.

**Call waiting:** You can start up or shut down the function. When it is started up, even when you are making a call, you can also receive another income call.

**Call Barring:** All outgoing calls, incoming calls, roaming incoming calls, international outgoing calls, roaming international outgoing calls are available.

**Hide ID:** Set the display mode of the phone number.

**Others:** The setting options include Call time minute reminder, Auto redial, Reply SMS after reject, Auto record voice call.

## ■ Phone settings

**Date & time:** You can set up the date and time on the phone as well as their display mode.

**Language settings:** You can select phone language.

**Shortcut settings:** You can set the menu when you press navigation button to enter in standby interface.

**Auto Power on/off:** You can set the time and repeat mode of power-on and power-off.

**Restore factory settings:** You can restore part of the phone settings as factory settings. The default code of restoring factory settings is: 1234.

## ■ Display

**Wallpaper Settings:** Supported: Static wallpaper and more pictures.

**Idle display settings:**

**Contrast:** Adjust the screen backlight.

**Backlight:** Adjust the backlight time.

**Keypad backlight time:** Adjust the keypad backlight time.

## ■ Security

Including:

**PIN:** Start and close of PIN code and the modification of PIN.

**Modify PIN2:** Modification of PIN2 code.

**Phone locked:** Open or close the phone lock. The default password is “9999”.

**Modify the cellphone password:** Change the phone and privacy password.

**Privacy:** Set the privacy protection. The default password is “9999”.

**Auto keypad lock:** Set the time of mobile phone automatically locked.

**Lock screen by end-key:** Choose open or closed by red key locking function.

**Mobile tracker:**

**Fixed dialing:** Start and close of the fixed dialing, and management of the fixed dialing list

**Blacklist:** Set the Settings of the blacklist and management of the list.

## ■ Profiles

The preset modes are Normal mode, Silent mode, Indoor mode. It support custom profiles, define at most 5 profiles, and users can set the parameters of the profiles.

Instruction: The preset profiles do not support delete, while the custom profiles support delete.

## More Functions

Choose one mode, to open the option menu:

**Rename:** Rename the current mode.

**Ring settings:** Set the SIM call ring and message ring.

**Adjust volume:** Adjust volume for Caller ring tone, Message ring tone,



Alarm& calendar ring tone, Call volume and Power ring tone.

**Ring type:** Set the SIM call alert and message alert, alarm & calendar remind.

**Other alert rings:** Set the other alert rings, such as Key tone, Battery low alert, Power ring tone, Dial tone.

## ■ Connections

The items are:

**Network account:** Manage internet account, and support editor and delete.

**GPRS Service:** Choose turn on or off GPRS service.

**Data connection settings:** Select to connect as needed or all the time.

**Network selection:** Select to automatically or manually connect.

## 5. Text Input

The device provides several text input modes so that you can write text or input data in your “contacts”, edit “contacts” record, search English names and write SMS and to-do list.

In “text input” mode, if you want to change the input way, you can press “#” key. The selected input way will appear on the top left of the screen.

### **Letter (Capital, Normal)**

Enter edit page, press “#” and switch the input mode to “letter”, then

press the keys on keypad, selected letters will appear on the screen.

Press the number key can get the first letter marked on the key, press twice quickly can get the second letter marked on the key. Similarly, if the letter you want to input have the same key with the former letter, please wait until the cursor appears again, then input the new letter.

For example, if you want to input “ok”, you need to press the “6” key three times continuously and get “o”, then press the key”5” twice, “ k” will appear on the screen. Press right soft key, you can delete the text you input.

### **Number**

Enter “edit” mode, press “#” key you can change the input way to “ number”. Then press the keys, number will appear on the screen. The key 0-9 separately represents the figure from 0 to 9. You can press corresponding key to get desired number. Press right soft key can delete the number you input.

## **6. Care and Maintenance**

### Maintenance of battery

- Your device is powered by a rechargeable battery. It is necessary to have the battery charged when it is going to wear out. The full performance of a new battery is achieved only when it is fully wore out.
- Unplug the charger from the electrical plug and the device when not in use.

Do not leave fully a charged battery connected to a charger over a week, since overcharging may shorten its lifetime.

·Temperature tends to affect the limit of battery to be charged. Therefore, it is necessary for the battery to be cooled or warmed before it is charged. If the temperature of batter exceeds 40°C ,the battery cannot be charged.

·Use the battery only for its intended purpose and avoid short-circuiting. Accidental short-circuiting can occur when a metallic object causes direct connection of the positive (+) and negative (-) terminals of the battery.

·Do not use damaged battery.

·Leave the battery in hot or cold places will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

·Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Care of maintenance of your device

The suggestions below will help you protect your warranty coverage.

·Keep the device and accessories out of the reach of small children.

·Keep the device dry. All types of liquids or moisture will corrode electronic circuits.

· Do not store the device in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.

·Do not attempt to open the device other than as instructed in this guide. Non-professional handling may damage the device.

- Do not use harsh chemicals or strong detergents to clean the device.
- Use only the supplied or an approved replacement attachments, for the unauthorized ones could invalidate the warranty of maintenance.

#### 1.FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use

only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.399W/Kg** and when worn on the body, as described in this user guide, is **0.277W/Kg**(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: **QRP-AZUMIL2U** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. \* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stantial margin of safety to give additional protection for the public and

to account for any variations in measurements.

### Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 15mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.