

Music Cell Phone

User Manual
Model: Q16G
Read this manual carefully before
operation.

Table of Contents

User Manual	1
Table of Contents	2
Safety and Maintenance	6
While using the cell phone, please observe following points:	6
While using battery, please observe following points:	8
While using battery charger, please observe following points:	10
Basic Knowledge	11
Your Cell Phone	12
1.1 APPEARANCE	12
1.2 KEY DESCRIPTION	13
1.3 SCREEN BACKGROUND LIGHT	14
Instructions before Use	15
2.1 INSTALL OR REMOVE THE BATTERY	15
2.2 CHARGE BATTERY	15
2.3 INSTALL SIM CARD	16
2.4 REMOVE SIM CARD	16
2.5 POWER ON/OFF	16
2.6 SECURITY PASSWORD	17
2.6.1 PIN code	17
2.6.2 PUK code	17
Basic Functions	18
3.1 DIAL PHONE	18
3.1.1 Direct dial	18
3.1.2 Quick dial from contacts list	18
3.1.3 Quick dial from dialed phone number list	18
3.2 ANSWER INCOMING CALL	19
3.3 TERMINATE CALL	19

3.4 MAKE EMERGENCY CALL	19
3.5 MAKE INTERNATIONAL LONG-DISTANCE CALL.....	20
3.6 TALK OPTIONS	20
Hold/release talk state	20
Dial second number	20
Answer second incoming call	21
Select current phone number	21
3.7 TEXT INPUT	22
3.8 SCREEN LOCK	22
Menu Functions-----	23
4.1 MESSAGING	23
1. Write Message	23
2. Inbox	24
3. Drafts	24
4. Outbox	24
5. Sent messages.....	24
6. Archive	24
7. Email	24
8. Broadcast message.....	25
9. Templates	25
10. Message settings	25
4.2 GAMES	25
4.3 SERVICES	26
4.4 UTK.....	26
4.5 PHONEBOOK	26
4.6 PORTAL IDEAS	27
4.7 CALL LOG.....	27
4.8 IDEAS BOX	29

4.9 MULTIMEDIA	29
1. TV	29
2. Camera	29
3. Image viewer	30
4. Video recorder	30
5. Video player	30
6. Photo editor	31
7. Audio player	31
8. Sound recorder	32
9. FM radio	32
4.10 ORGANIZER	33
1. Calendar	33
2. Tasks	33
3. Alarm	33
4. Notes	34
5. Calculator	34
6. Currency converter	34
7. Stopwatch	34
8. Ebook reader	34
9. Bluetooth	35
4.11 FILE MANAGER	35
4.12 SETTINGS	35
1. User profiles	35
2. Phone settings	35
3. Display	36
4. Network settings	36
5. Security settings	36
6. Connectivity	37

7. Restore Factory Settings	37
8. Sound Effects	37
FAQ	38
T-Flash Card Introduction	41
T-FLASH CARD INSTALL/REMOVE	41
T-FLASH CARD USE	41

Safety and Maintenance

While using the cell phone, please observe following points:

- Before use, please read instruction manual carefully.
- Do not power on the cell phone when use of cell phone is prohibited or it may cause interruption or danger.
- Please keep your cell phone off when you are on a plane. If functions that will automatically power on your cell phone, such as alarm clock or calendar, are setup, please check and cancel the configuration before boarding the plane.
- While using the cell phone, please keep away from heat source and high voltage environment, such as electric appliances or electric cooking devices. Please use the cell phone under normal temperature. Use it under temperature above 55°C or below -10°C may damage the phone.
- Pay attention to fire prevention. Power off the phone while near flammable materials, such as gas-filling station and fuel storage.
- Do not hold the cell phone in your hand while driving. Do not put the phone above air bag or within reach of airbag so as to prevent damage when airbag is inflated.
- Standard battery, charger and accessories approved by Novo should be used. Novo is not responsible for any consequence caused by use of third party accessories.
- Cell phone may cause interference to nearby electronic devices, so keep it away from electronic devices such as radio, PC, pacemaker and hearing aid, etc. Do not place the cell phone near credit card or

magnetic field. Please power off your cell phone in hospital and other special places according to specific regulations there.

- Keep the cell phone away from mechanic vibration or shaking. Do not hit the screen of your phone with sharp tool.
- If plastic cover or case is used for cell phone, surface coating may be damaged.
- Do not disassemble the cell phone boldly.
- Do not use benzene, thinner or alcohol to clean the cover of your cell phone. Keep your cell phone away from corrosive chemicals such as detergent. Use clean and soft cloth instead and wipe gently.
- Prevent your cell phone from insulation or places with excessive smoke or dust.
- Your cell phone is not water-proof, so please keep it dry. Do not use it in damp environment, such as bathroom. Keep it away from rain and moisture.
- If your cell phone has external antenna, do not touch the antenna when it is not necessary. Use original antenna only, for use of unauthorized antenna may cause damage to the phone.
- When you are to pull the charger away from your cell phone or cut off power supply of charger, please hold the connector tightly and then pull out. Do not drag the power cable.
- Do not rely on cell phone only as communication device for emergency, such as medical rescue.
- Keep the cell phone out of reach of children so as to avoid danger.

While using battery, please observe following points:

- Before use, please read instructions for use and as well as label on the surface of battery.
- Please charge the battery in a cool and well-ventilated room. Otherwise, high environment temperature may lead to overheat, smoking, burning, distortion or even explosion of battery.
- There are special protection circuits and devices inside battery, so do not open the battery; Otherwise it may lead to short circuit or electrolyte leak. If electrolyte enters eyes, there is danger of blindness. In such case, immediately wash eyes with clean water (Do remember not to rub the eyes with hands) and then go to hospital for treatment.
- Do not squeeze the battery and keep it away from mechanical vibration and shaking. Do not short connect the battery, for this may damage the battery and components connected to it. Short circuit may be caused by coin or clip directly connecting anode and cathode of the battery, so do not put the battery together with metal objects.
- Please keep the metal contact points and battery clean.
- Do not use damaged or depleted battery.
- The battery should be replaced when it can not meet the requirement for performance. Battery can be charged hundreds of times before it should be replaced. Battery belongs to consumables. Though it can be charged hundreds of times, its quantity of electric charge may decrease gradually. When service time (talk time and standby time) is found to have decreased, the battery shall be replaced.

- Prevent the battery from exposure to the sun or places with excessive smoke or dust. Do not use it in damp environment, such as bathroom. The battery is not waterproof; so keep it away from rain and moisture.
 - Do not put the battery in places that are too hot or too cold. Temperature above 55°C or below -10°C may affect performance of the battery.
 - Do not put the battery in fire so as to avoid explosion.
 - Do not put the battery in water so as to avoid short circuit inside, resulting in battery overheat, smoking, distortion, damage or even explosion.
 - Treat battery according to local regulations (for example, recycling). Do not treat battery as domestic garbage so as to avoid explosion and pollution.
 - Special charger should be used for this battery for charging, and charging time should not exceed 12 hours.
 - Keep battery out of reach of children to avoid danger.
- Do not place the battery in fire; follow local laws and ordinances in disposing used battery.
- Check the model number of the charger before using it to charge the mobile.
- Only use approved battery, charger and accessories applicable to the specific mobile model. Using other types of battery, charger and accessories may violate the certification or warranty terms of equipment and may result in danger.

Return waste and used batteries to the supplier or specified recovery site.

CAUTION!

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

While using battery charger, please observe following points:

- Before use, please read instructions for use and as well as label on the surface of the charger.
- Do not disassemble or modify the charger or use it when power cable is damaged; otherwise there will be electric shock or fire, or the charger may be damaged.
- Do not touch the charger with wet hands. If the charger contacts water or other liquid, immediately cut off the power supply.
- Do not short connect the charger and keep it away from mechanical vibration or shaking and direct sun shine. Do not use it in damp environment, such as bathroom. The battery charger is not waterproof; so keep it away from rain and moisture.
- Do not use the charger near electric appliances such as TV set and radio.
- When to pull out the plug, hold the charger instead of dragging the power cable so as to avoid damage of power cable.
- Keep the charger out of reach of children so as to avoid

Basic Knowledge

Thank you for choosing the GPRS function cell phone. You will know how to use this phone roundly after reading the manual.

Design this cell phone is aim at GSM/GPRS network environment, except the call function, there are basic English input mode, contacts, individuated ringtone/image, MP3 ringtone, short message, multimedia message, camera, media player, alarm, calculator, auto on/off, calendar, world clock, stopwatch, E-book, T-Flash, link internet in GPRS, keyboard lock, video recorder, etc. This cell phone interface is individuated, the function of design is perfect. It can satisfy your different demand.

Your Cell Phone

1.1 Appearance

1.2 Key description

Key	Description
Left soft key	Press the key to enter main menu. Confirm operations you have operated.
Right soft key	In the menu, press back to the previous page. In IDLE, press the key to Call log.
Send key	SIM card call. Press the key to enter SIM card dialed calls interface.
Camere key	Press the key to enter camere interface.
End key	Press to return to the IDLE. Long press to power on/off. In IDLE,press the key to lock the screen.
TV key	Press the key to enter TV interface.
Message key	In IDLE,press the key to enter messaging.
OK key	Determine the operations and enter the selected menu. In standby mode, press the key to enter Internet service.
Left key	In main menu, move the cursor left. In IDLE,press the key to enter Phonebook.
Right key	In main menu, move the cursor right. In IDLE,press the key to enter Game.
Up key	In main menu, move the cursor up. In IDLE,press the key to enter Write message.
Down key	In main menu, move the cursor down. In IDLE,press the key to enter UTK.

Num key	Enter numbers, letters and special characters.
Alt key	Input interface forced to switch capital/ small letter, but only enter once.
\$ key	In standby mode, long press this key to activate silent mode.
aA key	Press to switch capital/ small letter.
SPACE	In input interface, press this key to enter a space.
+/o 、 -/i key	In IDLE , Press alt key and +/o to raise volume . In IDLE , Press alt key and -/i to lower volume.
DEL	Edit messege,press the key to Delete characters or numbers.
Back key	Edit messege , press the key to turn to the next line.
Simb	Edit messege , press the key to enter interpunction.
IME	Edit messege , press the key to change input method.

If your cell phone is within coverage of GSM/GPRS network and has registered the network, the name of the registered network service operator will be displayed at upper part of the screen.

1.3 Screen background light

Background light can illuminate the screen. When you power on your cell phone, background light will turn on for a certain period. If no key is pressed within the period, the background light will turn off automatically so as to save battery. Setup background light brightness in [Settings] –[Display]– [LCD Backlight].

Instructions before Use

2.1 Install or remove the battery

2.1.1 Install battery

1. Aim the small button at the bottom of battery to corresponding slot at the bottom of battery bank.
2. Press battery towards the cell phone and press it until it is locked.

2.1.2 Remove the battery

Guaranteed that your handset is at the close-down condition.

Holds down at the back of the handset, the downward glide outer covering, then unloads the battery exterior top plate.

1. Holds down at the back of the handset, the downward glide outer covering, then unloads the battery exterior top plate.
2. Under covers in the chart the battery to buckle hand's position, lifts gently the battery and takes down.

2.2 Charge battery

Hold buttons at the two sides of the battery charger and then plug the charger to the charging socket at the bottom of cell phone.

Note: Please handle carefully. Do not pull out charging plug by force. This may damage your cell phone or charger.

- Before use, battery supplied with your cell phone should be completely charged.
- While charging, do not remove the battery or SIM card.

- Once battery is used up, the cell phone will shutdown automatically.

2.3 Install SIM card

- When SIM card is not used, carefully put it in a secure place.
- SIM card is easy to be damaged because of scratching or bending, so it should be used carefully.

When you perform following operations, ensure the cell phone is powered off and separated with charger. Remove the battery and put SIM card in fixer. While inserting SIM card, ensure the metal side faces downward and aim the cut-corner of SIM card at that of SIM card slot.

2.4 Remove SIM card

When you perform following operations, ensure the cell phone is powered off and separated with charger.

Remove the battery and take out SIM card from holder.

Note: SIM card is a computer chip containing protocol details, security information and personal phonebook, etc.

2.5 Power on/off

Ensure battery is properly installed.

Power on and hold [End key] button until boot screen appears.

Some SIM cards have PIN code protection. If there is prompt for input your PIN code, input your PIN code and then press [OK].

Default PIN code is 1234.

After power on, if SIM card inserted is valid, your cell phone will automatically search available network; If not, it will prompt: No SIM card is available.

To power off, hold [End key] until Sliding interface shutdown appears, then sliding shutdown.

2.6 Security password

You can use access password to avoid unauthorized use of your SIM card.

2.6.1 PIN code

PIN code is used to prevent illegal use of user's SIM card. If your cell phone has enabled PIN code protection, there will be prompt for entering PIN code. If wrong PIN code is entered for three times, SIM card will be automatically locked. You have to enter PUK code so as to unlock it. PIN code is related to SIM card instead of the cell phone, and is provided by network service operator.

2.6.2 PUK code

PUK code, referring to personal unlock code, is used to unlock SIM card that is locked because of wrong input of PIN code. If wrong input of PUK code amounts to ten times, SIM card will lose efficacy. PUK code is provided by network service operator.

Basic Functions

3.1 Dial phone

3.1.1 Direct dial

In standby state,click keyboard by the number keys to enter your phone number to call.To delete wrong input, press [Delete soft key] to delete a number before the cursor. To delete all numbers, please click [Delete softkey] until all numbers are deleted or click [Hang-on] softkey to return to standby interface directly. Once phone number to dial has been input, click [GSM softkey].

If the phone number being dialed out can be recognized by phonebook, name and icon of contact person will be displayed on dialing screen, and calling animation is displayed at the same time.

Click End call key to end a call.

3.1.2 Quick dial from contacts list

Enter the phonebook function

Select **List** to view the contacts list, and Slide the scroll bar to choose a contact, or select **Search** to search out the contact you want to call, either by name or by number,Click [GSM softkey] to dial out the number.

3.1.3 Quick dial from dialed phone number list

Click Call history key to enter dialed phone number record page.

Slide the scroll bar to select the person you want to call or the number you want to dial.

Click GSM key to dial out the number.

3.2 Answer incoming call

When there is an incoming call, incoming call animation will be displayed together with special ringtone or vibration. If phone number of the caller can be recognized, the number will be displayed on incoming call screen. If information about the number is stored in contacts, caller's name and icon will also be displayed. At the same time, specified ringtone will be played or play music or vibrate according to current settings. If caller hides his/her number or the network bans call indication, the incoming call is displayed as *****. Press [Answer soft key] to answer calls. When you want to reject the incoming call, press [End soft key] directly.

3.3 Terminate call

When there is an incoming call, press **End key** to reject the call. During the call, press **End key** to terminate current call. Call that has just been dialed can be cancelled by pressing End key.

3.4 Make emergency call

As long as you are within coverage of network, you can make emergency call even you have not registered to local network or do not have SIM card. Enter 112 and then press [GSM soft key] to make an emergency call, or enter 110 and then press [soft key] to make an emergency call

3.5 Make international long-distance call

Press [*] key until "+" sign appears before international phone number can be dialed. "+" sign tells the network you are making an international call.

Input country code, area code (without 0) and phone number and then press [GSM soft key].

Note: Some networks do not allow "+" for dialing international numbers.

3.6 Talk options

The cell phone provides some talk control functions in the process of GSM talk. Click [option] to access the talk control functions in the process of talk.

Hold/release talk state

If network supports, you can hold current talk.

Click [Options soft key] and select Hold option in the menu.

To activate held talk, Click [Options soft key] and select Hold option in the menu.

Dial second number

When you are making a call, you can dial another number.

Enter the second number or press [Contacts] option in [Options soft key] to select in phonebook and then click GSM soft key. When the second number is put through, the first call will be held automatically.

Answer second incoming call

If there is a second incoming call in the process of talk, the screen will display a second call is waiting. Call wait function is only available when the network supports this service and you have set to Enabled in Call wait menu.

Click [Answer softkey] to answer second call. When the second call is put through, the first call will be switched to hold state.

Click [End key] to terminate the second call.

Select current phone number

Information of the other side is indicated by small icon in title area of the screen.

Select the number in talking and click [Option soft key] to display following options:

Swap: Current call enters hold state, while the held call is activated.

Conference: Add held call to conference call.

End single call: Fishing one call .

End all calls: Fishing call all.

Transfer:press this key to close the current call.

New call:Dail a new call.

Phone book: press this key in this state to enter phone book.

Call history:Press the key to enter the call history.

Messaging: press this key in this state to enter message

Sound Record: Enter record state.

DTMF: May open or the closure.

Volume: Press this key to raise or lower the voice.

3.7 Text input

Depart under the center of the screen with press keyboard to switch input methods. The phone supports only keyboard input text, with press the keyboard to remove the words of the clear key.

3.8 Screen lock

You can select time for automatic keyboard lock [Settings]→[Security settings]→[Auto keypad lock], so that your cell phone can automatically locks the keyboard.

You can also press end key to unlock keyboard in standby state.

Menu Functions

You can press left soft key in standby state to enter the main menu. Once you have entered the main menu, you can select corresponding options by Arrow keys move the cursor through then pressing ok key to enter it through direction key. Press [Right soft key] or [End key] to return to standby mode.

4.1 Messaging

1. Write Message

In the edit mode, you can select edit message or MMS, and press the [options] to operate the followings:

Send to: Send the message .

Insert symbol: Insert the symbol in the message.

Input method: Select input method you want.

Edit options: include Mark text, Copy all, Cut all.

Add picture: Add picture in the MMS from phone or memory card, and also you can take picture for the MMS.

Add sound: Add sound from phone or memory card, and also you can record sound for the MMS.

Add video: Add video from phone or memory, and also record video for the MMS.

Add subject: Add subject for the MMS.

Slide options: Add a new slide behind or before the MMS.

Insert template: Insert Templates for SMS.

Advanced: You can insert contact number, contact name or bookmark in MMS or SMS by the function.

Save: Save SMS or MMS.

Details: View details of the MMS.

2. Inbox

The SMS and MMS you received are all stored in inbox. Open a SMS or MMS and press [options] key, you can call the sender, delete, copy or move the SMS or MMS and so on.

3. Drafts

Save the SMS and MMS that were not sent to drafts.

4. Outbox

Save the SMS and MMS that were sent failed to outbox.

5. Sent messages

Save the SMS and MMS that you sent when you open the function that save sent message and send and save of MMS meanwhile close the option of the conversations.

6. Archive

You can move SMS and MMS to archive from inbox and outbox.

7. Email

First, set the Email accounts, then you can send or receive e-mail. It provides two email accounts, and you also can set other email accounts.

The details as follows:

- 1). Start to create account: Input your email account address.
- 2). Select the email's protocol: select pop3 or others.
- 3). Select Data account: select data account from GPRS account.
- 4). Input receiver email's server.
- 5). Input send email's server.

- 6). Input your user name.
- 7). Input your user password.
- 8). Activate the account you set.
- 9). You can edit email and send or receiver.

8. Broadcast message

Use the menu to set the broadcast message.

9. Templates

Use the templates to the SMS or MMS.

10. Message settings

Use the menu to set text message and multimedia message. Text message setting contains SIM,Memory status,Save sent message and preferred storage.MMS setting contains Data account and Common settings.

4.2 Games

1. Java: you need download java programme by yourself.

- 1).Applications:you need setup new java software.
- 2).Java setting:you can adjust java audio,backlight and vibration.
- 3).Java default security:Set as it default.
- 4).Twitter: It's a sofeware that connects network.

2. Games: Provide two games: Magic Sushi and Puzzle.

4.3 Services

Your cell phone has WAP, Data account, China world and Multimedia downloading function, which enables users to get information needed from Internet.

1 .Internet service

Home page: Connect to home page.

Bookmarks: Enter bookmarks where have two bookmarks.

Input URL: input a web page.

last web address: Enter the last page you browsed.

Recent Pages: Enter the history page.

Stored Pages: Enter the page you stored.

Settings: It contains homepage, data account, browser options, preferences, security settings, restore browser settings.

2 .Licence manager

4.4 UTK

This function provides by the network supplier.

4.5 Phonebook

You can press the right soft key in the standby mode to enter it. Enter the function you can do the following:

Click the option: can select 'Add new contact' operation to add a new contact.

Caller groups: add the name, picture, ringtone and video of the groups then you can append the members.

Phonebook settings : you can do the following:

1. Preferred storage: Select priority storage location for a new contact.
2. Speed dial: Set speed dial from phonebook, and you can dial the contact by press and a number of key in standby mode.
3. My number: Set personal business cards and send.
4. Extra numbers: Use the menu to view the other numbers stored in the SIM card or in phone.
5. Memory status: View memory status about phone and card.
6. Copy contacts: Use the menu to copy all records between the SIM card and the phone.
7. Move contacts: Use the menu to move all records between the SIM card and the phone.
8. Delete all contacts: Use the menu to delete records from the SIM card or phone.

Note: This phone can store 1000 phone numbers.

4.6 Portal ideas

It Connects to a web site .

4.7 Call log

1. Call history

SIM call history

- 1) Missed Calls: click OK to see missed calls list
- 2) Dialed Calls: click OK to see dialled calls list
- 3) Received Calls: click OK to see received calls list

In the missed, dialed, received calls interface, press [ok key] to view the details: Type ,Number ,call time ,Call duration,times of call. Press options to operate the following: view,call,send message, save to

phonebook,add to blacklist,edit before call,delete,delete all , advanced.

2. Video call

Press ok key to enter video call interface, press[option]-[make video call] to enter dial interface, you can use the rear camera or front camera ,turn on night mode ,switch picture ,hide small picture while calling.

3. Call settings

1) SIM call settings

Enter the menu to set the followings:

Caller ID

If you choose [Hide ID]. Your phone number can't display when you make telephone calls.

Call waiting

Activate: Activate the Call waiting function.

Deactivate: Deactivate the Call waiting function.

Query Status: Query the status of the function.

Call divert:

Divert the incoming calls to the other phone number.

Call barring:

Use the menu to set the call barring. It contains outgoing calls, incoming calls, Cancel all, Change barring password.

Group list:

You can edit your group.

Advance settings:

Black list: activate blacklist mode and edit the blacklist numbers. You can't receive the calls in the list.

Auto redial : choose open ,while you make a call and the opposite

side have not receive you call , the phone call auto dial the number again until the opposite side received .The most redial number is ten.

Call time display:open or close the function, display the times when calling.

Call time reminder:open or close the function, remind with a warning tone during the calling.

Auto quick end: automatically end the calling when time is on.

Reject by SMS: set on/off.

Connect notice:set on/off.

Answer mode:you can choose any key or auto answer when headset mode

4.8 Ideas Box

It contain ten web link that you can press ok key to enter the web.

4.9 Multimedia

1.TV

Press ok key to enter TV, click option to set the local region , then press [scan] to search channel.

In TV interface

Number key: to choose different channel.

* key: to search channel.

key: to play TV in full screen.

+/o、 -/i: to adjust volume.

2.Camera

By [left softkey] to set the following related items:

Dual camera setting:you can choose back camera and front camera.

Photos:Enter the option to view the photos.

Camera: settings:Set camera shutter sound ,ev,anti-flicker, contrast,delay timer,cont.shot

Image settings:Set image size and image quality.

White balance: you can set the mode: Auto ,Daylight,Tungsten, Fluorescent,Cloudy and Incandescent six options.

Scene mode: There are two options for Auto and Night

Effect settings: In this menu, six image effects can be selected: Normal, Grayscale,Sepia, Sepia Green, Sepia Blue,Color inver.

Storage:you can store photos in phone or in memory card.

Restore default: all the camera settings to default.

3.Image viewer

The list of the photos ,press [options] to set the followings:

View,Image information,Browse style, Send,Use as, Rename,Delete,Sort by,Delete all files,Storage.

4.Video recorder

Once you have entered this function, you can recorder and set the sound recorder.

[Option soft key]: Following functions are provided for use:

Camcorder settings,Video settings,White balance,Effect settings,Storage,Restore default.

5.Video player

Press [option]-[storage] , choose the momery card, then you can see the list of video player.

In video player interface:

Ok key : pause\start the video.

Left direction key : fast reverse the video.

Right direction key : fast forward the video.

+/o, -/i: to adjust volume.

6.Photo editor

You can choose a picture from file or camera.

In photo editor interface ,you can sava the picture as other size ,send the picture in different way ,add effect ,frame or icon for the picture and other functions.

7.Audio player

Enter the Media Player interface, press [list]-[option]-[setting]-[player settings],choose memory card and save ,then you can see the list of the music, click the Options:

Play: Play the selected music.

Details: View name, Tittle ,Artist,Album and so on.

Refresh list: Refresh the list from T-flash.

Settings:It contains Player settings , Display settings and Sound effects.

In audio player interface:

Up direction key : pause\start the music.

Down direction key : stop the music.

Left direction key :go to the last music. Long press the key to fast reverse.

Right direction key :go to the next music. Long press the key to fast forward.

+/-: to adjust volume.

8.Sound recorder

Once you have entered this function, you can recorder and set the sound recorder.

[Option soft key]: Following functions are provided for use:

New Record: Record the new recorder

List : View the list of files.and Option soft key:Play, Append, Rename,

Delete, Delete all files,Use as and Send.

Settings: set storage and file format.

9.FM radio

Entered this function, you must insert the earphone.

[Option soft key]: Following functions are provided for use:

Channel List: Channel the new FM form the list.

Manual Input: You can manual the FM

Auto Search: Preset the FM by auto search.

Settings:

Background Play: This cell phone supports background play mode.

When you selected "On", you can do other operation when music is playing.

Audio quality:choose low or high.

Record storagte:choose memory card or phone.

Record : you can record while the FM turn on .

File list: the record list is stored in here.

4.10 Organizer

1.Calendar

You can use the phone's calendar to keep track of reminders, calls you need to make, meetings and birthdays. You can set the calendar to sound an alarm when it's time for you to make a call or to go to a meeting.

Press Options to the options list, you can View task, Add task, Jump to date, Go to weekly

If you want to add new Event, within the calendar submenu, use Navigation key move to the day you want or use Go to date option the current day is indicated with a frame around the day. If there is any Event set for the day, the day is changed display icon. To view the appointments, press OK to Edit and Delete

2.Tasks

In the sub-menu, select the memorandum, the memorandum can be edited. Article storage capacity is based on mobile phone set.

3.Alarm

On the handset may establish five alarm clocks, about the navigation keys may open and close the alarm clock, the motion high and low cursor input alarm clock time.

4. Notes

Add or Delete Notes, Article storage capacity is based on mobile phone set.

5. Calculator

In this menu, you can do basic calculations of addition, subtraction, multiplication and division.

Key operations:

Left navigation key: Multiplication.

Right navigation key: Division.

Up navigation key: Addition.

Down navigation key: Subtraction.

Click “=” to display calculation result.

Click [right soft key] by press keyboard to clear contents that have been entered.

6. Currency converter

Set a rate ,input a number in [local] and you will get a number in [foreign]

7. Stopwatch

It contains Typical stopwatch and nWay stopwatch.

8. Ebook reader

Enter the menu, choose the book you saved, press[options] to operate the followings: Open E-Book, Clean up bookshelf, Global settings, Book info, Delete, Delete all files, Sort by, Apply global settings, Help

9. Bluetooth

Enter the menu to set the followings: Power, Visibility, My device, Search audio device, My name, Advanced.

4.11 File manager

You can restore or delete the file where contain open, create or format the file.

4.12 Settings

1. User profiles

It provides five profiles: General, Silent, Meeting, Outdoor, My style.

Press [options] to set the followings:

Activate: Activate the profile.

Customize: It contains thirteen options: Alert type, Ring type, SIM incoming call, Ringtone volume, SIM message, Message volume, Keypad, Keypad volume, Power on, Power off, System alert.

2. Phone settings

Time and Data

Set home zone, time/data, format and Update with time zone.

Schedule Power On/Off

Choose time for Power On/Off

Language

This allows you to switch between 3 different languages and to select a language for the display texts.

Pref. Input methods

Choose preferred input method of the editor.

Delicated key

You can set the function of delicated key

Auto update of date and time:Choose on/off.

Fight mode

It default mode is Normal mode,while you take the flight ,you can start up fight mode.

3. Display

1. Wallpaper: You can select the wallpaper you like and then press [OK] key from system,user define,picture download.

2. Screen saver: select a screen saver for the phone.

3. Power on display:y select a picture for the power on.

4. Power off display:select a picture for the power off.

5. LCD backlight: set the time and Brightness of the LCD Backlight.

4.Network settings

Network Setup helps you in Network Selection, selection of Preferred Network.

5. Security settings

1. SIM security setup: use the menu to open or close the SIM lock, Fixed dial and change the password of SIM PIN. The default PIN code is 1234.

2 .Phone lock: use the menu to set the phone lock. The default password is 0000.

3. Auto keypad lock: open the mode, and then choose the waiting time.

6. Connectivity

1. Bluetooth

Enter the menu to set the followings: Power, Visibility, My device, Search audio device, My name, Advanced.

2. Conn.management

3. Data account:

GSM Data: Add or edit the GSM account.

GPRS: Add or edit the GPRS account.

4. Wi-Fi

Open the wifi ,select a wlan and input the password ,then you can surf internet by wifi.

5. Internet tethering

Open wi-fi hotspot and set a wifi password , then use another phone connect the wap and surf internet.

6. Data service

7. Restore Factory Settings

Enter the password then the phone will restore factory setting.The default password is 0000.

8. Sound Effects

Adjust the sound effect player,it contains Audio effect and Bass enhancement.

FAQ

If any problems are encountered while using the cell phone, please solve them with reference to following items. If the problems still exist, please contact dealers or service provider appointed by Novo immediately.

"Enter PIN code" appears on the screen:

Enter valid PIN code of your SIM card. Please contact network service operator immediately if you do not know the code.

"Enter PUK code" appears on the screen:

Your SIM card will be locked if you enter wrong PIN code for three times. To unlock your SIM card, you have to enter PUK code. Please contact network service operator immediately.

"Insert SIM card" appears on the screen:

Make sure SIM card is correctly installed. Check if SIM card works properly. It may have defects or faults. If so, hand it over to network service operator.

"Not in service area. Network failure." is displayed.

Check signal intensity indicator. If there is no signal, you may be in the basement or network blind area in a building. Please move to other locations to receive signal. Another situation is that you are not covered by network. You can ask your network service operator to provide network coverage.

Poor sound quality, echo or noise makes communication difficult:

Hang-up your phone and dial again. Network service operator may connect you to a line with better communication quality.

Standby time declines:

Signal at your location is weak so that the cell phone has to search signal for a long time. When you don't want to answer any call, please power off for a time being. It is also possible that the battery has been used for a long time and approaches its life-span. In this case, please replace the battery.

Cell phone fails to boot:

Check battery volume or charge the battery. Try to power on while charging. If your cell phone is put off for a long time, the battery is likely to discharge excessively. You cannot power on it in this case, and the phone will give no response for quite a long time. The phone cannot be powered on until battery is restored.

Cannot send short message:

Please check your service center number option to see if you have set up service center number or if the number is correct. Perhaps you have not open SMS service, or recipient of short message is invalid, or network service operator of your region does not support this service.

Cannot charge:

There are three possibilities: 1. Charger of your cell phone does not work properly. You can contact nearest service provider or dealer appointed by Novo; 2. Ambient temperature is not appropriate. Please change charging environment; 3. Poor contact. Please check plug of your charger.

Can not add entries into phonebook:

Phonebook is full. Please delete some useless entries.

Can not select some functions:

The service is not available or network service operator of your location does not support this service. Please contact service provider or dealer or network service operator appointed by Novo immediately.

T-Flash Card Introduction

The cell phone support T-Flash card to enlarge the storage .

Operations as follows:

T-Flash card install/remove

Take out battery first if you install the T-Flash card, move the sheet metal downwards,put the T-Flash card on it, then close the sheet metal,that is ok. If you remove it, operate as contrary operations of installing.

T-Flash card use

T-Flash as one of the memorizer of cell phone, format it when you first use, operations as follows:

1. Ensure you already installed the T-Flash card properly.
2. Press OK key into main menu, then into Documents, T-Flash , select T-Flash Format option, press OK key. Later on, restar the phone, then you can use the T-Flash card normally.

You can use T-Flash card connect with computer by the commutator, and then, can copy data from the computer.

User can check-up whether there are catalogs in the root, the catalog like these: AUDIO,VIDEO, PHOTO, SMS, BOOK, PHONEBOOK. you can create them. These directories only to keep the document, he should not show the save.

For example:

AUDIO can save these format files: amr, mid, mp3.

BOOK can save the format file: txt.

PHONEBOOK can save the contacts what exported from the cell phone.

PHOTO can save these format files: bmp, gif, jpg.

SMS can save the messages what exported from the cell phone.

VIDEO can save these format files: mp4, 3gp.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at

multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **1.15W/Kg** and when worn on the body, as described in this user guide, is **1.14W/Kg**(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is **1.14W/Kg**. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **QRP-AZUMIQ16G** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at

<http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 15mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.