





Chromebook Quick Guide

Package contents

 
Carefully unpack your box and take out the items listed below. If any of the items are missing or damaged, please contact your dealer immediately:

<ul style="list-style-type: none">• One Chromebook	<ul style="list-style-type: none">• One AC adapter
	
<ul style="list-style-type: none">• One warranty card	<ul style="list-style-type: none">• This quick guide
	

Layout

 




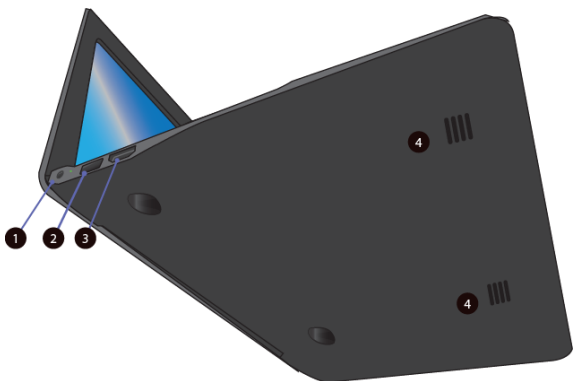





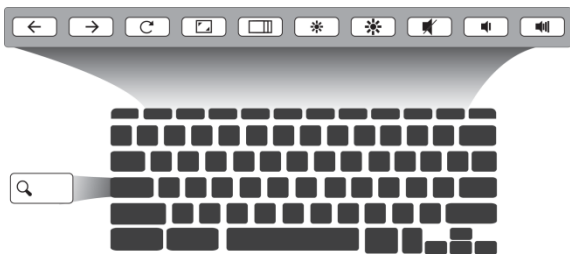


No.	Name	No.	Name
1	Microphone	5	USB 2.0 port
2	Webcam	6	Micro SD card slot
3	LCD monitor	7	Touchpad
4	Audio combo jack		



No.	Name	No.	Name
1	DC input jack	3	HDMI port
2	USB 2.0 port	4	Speaker


Function keys

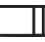

Icon	Description	Icon	Description
	Previous page		Increase screen brightness
	Next page		Mute
	Reload current page		Decrease audio volume
	Full-screen mode		Increase the volume
	Switch to next window		Search
	Decrease screen brightness		

Before powering on for the first time

 - Charge the battery with the adapter coming with your Chromebook until the charging indicator turns from red to green.

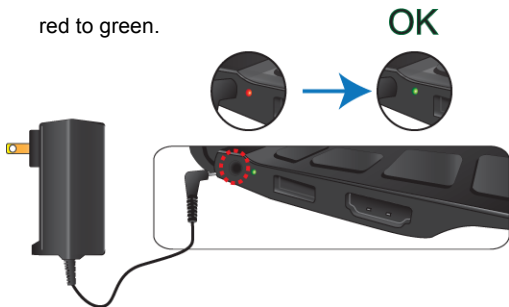

- Make sure there is a wireless network available for you to connect your Chromebook.

Note: If the only available network is a wired one, you need to acquire separately a USB internet adapter that supports Linux systems.)

Getting started

 
Step1: Turn on your Chromebook for the first time



Press the power button.

For the first time you power on your Chromebook, a

dialog will appear as shown below.

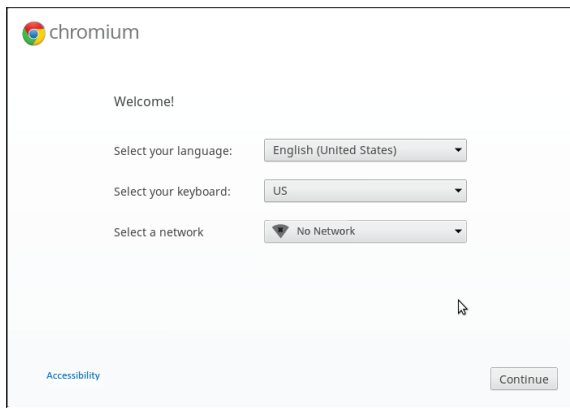


Step.2: Select your language settings

If there is more than one way to type in your language,

you may be prompted to select a keyboard input method as well.

Step3: Connect to a network

 Select a wireless network from the "Select a network" list to connect to the Internet.



If your selected network is a protected one, you will be prompted to enter your password to connect to it.


Step 4: Accept the Terms of Service

Once connected to a network, accept the Terms of Service. Your Chromebook will then automatically download any available system updates to get the latest Chrome OS features.

Step 5: Create your Google Account

Note: The first account signed in here will be set as the owner account and is the only account that will be allowed to change Chrome settings.

When you reach this step, the dialog shown below will appear on your screen.

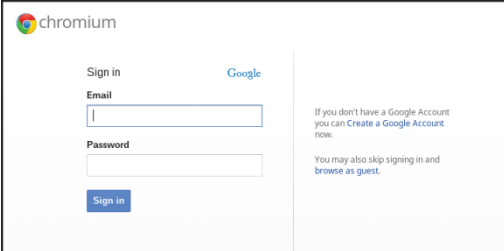

The screenshot shows the Chromium sign-in dialog. At the top left is the Chromium logo. Below it, the text "Sign in" is followed by a "Google" link. There are two input fields: "Email" and "Password". Below the "Password" field is a blue "Sign in" button. To the right of the input fields, there is text that reads: "If you don't have a Google Account you can [Create a Google Account](#) now." Below that, it says: "You may also skip signing in and [browse as guest](#)."

If you already have a Google Account, enter your username and password in the sign-in box and click on the Sign-in button.

If you don't have one, click "[Create a Google Account](#)" on the right to set up a new account.

Step 6: Set your account picture

You can use the Chromebook's built-in webcam to take a photo of yourself, or just choose an icon instead and change it later.

The desktop will be open as shown below, and you can start using your Chromebook.



Specifications

Processor	<ul style="list-style-type: none">● Rockchip RK3288 Cortex-A17 Quad Core
Memory	<ul style="list-style-type: none">● DDR3L SDRAM● 2G/1600MHz
Storage	<ul style="list-style-type: none">● eMMC for V5.0● 16G
Wireless	<ul style="list-style-type: none">● IEEE 802.11 2 X 2 MIMO a/b/g/n/ac Wireless LAN + Bluetooth + NFC NGFF Module
Display	<ul style="list-style-type: none">● EDP 1366x768 TN● 11.6" for EDP interface
Webcam	<ul style="list-style-type: none">● 720p HDTV and 1.3M
Battery	<ul style="list-style-type: none">● Polymer Battery● 2S1P,7.4V/3400mAh● >25Wh

Input/Output	<ul style="list-style-type: none"> ● 1 x 12V DC IN ● 1 x 3.6mm combo Jack ● 1 x HDMI (A-TYPE) ● 2x USB2.0 port ● 1xTF slot (Micro SD)
Speaker & Mic	<ul style="list-style-type: none"> ● 2 x Build-in speakers (Stereo) ● 1 x Internal MIC
AC-Adapter	<ul style="list-style-type: none"> ● DC Output: 12V/2A ● Input Voltage: 100 - 240VAC ● Input Frequency: 50 - 60Hz
Dimension (mm)	<ul style="list-style-type: none"> ● 204 (W) x 290 (D) x 19.3 (H)
Weight	<ul style="list-style-type: none"> ● < 1,150g (w/o adapter)