

# BAUHN®



Model Number: BW05002-5

## INSTRUCTION MANUAL

### AFTER SALES SUPPORT



USA

866-235-5029



[mp656@messageplex.com](mailto:mp656@messageplex.com)

MODEL: BW05002-5, 12/2014

# 2

YEAR WARRANTY

# Contents

Welcome	3
General Safety Instructions	4
Parts List	5
Features	6
Getting Started	7
Instructions	8
Other Useful Information	10
Warranty Card	11

# Welcome

Congratulations on choosing to buy a BAUHN® product.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 2 Year Warranty. We hope you will enjoy using your purchase for many years to come.

# General Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

- In order to prevent environmental factors (dampness, dust, food, liquid etc.) harming the Tablet Case and Keyboard (short: the product), only use it in a well ventilated, clean and dry environment, away from excessive heat or moisture.
- Keep the product away from direct sunlight or heat sources.
- Only charge the product via the supplied USB cable. Do not charge it any other way.
- In case of damage, do not disassemble, repair or modify the product yourself. Contact the after sales support line for advice on repair or replacement, or refer servicing to qualified personnel only.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the product.
- Keep the product away from sharp objects.
- Do not put any object on top of the product.
- Do not expose the product to microwaves.
- Do not twist or distort the keyboard.
- Keep the product away from oils, chemicals or any other organic liquids.
- Use water or alcohol based disinfectants for cleaning the silicone keyboard.

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

# Parts List

- 1 Holding frame for tablet
- 2 Keyboard
- 3 USB Charging cable
- 4 Power on/off switch
- 5 Bluetooth connect button
- 6 Power indicator light
- 7 Charging indicator light
- 8 Bluetooth indicator light
- 9 Capital lock indicator light
- 10 Charging interface



# Features

## Compatibility

The Keyboard can be connected to the Galaxy Tab (series), Mobile Internet Devices (MID), Smartphones, PCs and other bluetooth enabled devices. For other bluetooth enabled devices, please verify the bluetooth standard and compatibility before attempting to connect to the keyboard.

NOTE: Depending on the operating system and version of the connected device, some function keys may not work.

# Getting Started

## Before first use

- Unpack the product but keep all packaging materials until you have made sure your new Tablet Keyboard and Case is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Inspect the USB cable for damage. Do not use the product if the product or the USB cable have been damaged or are not working properly.

## Charging

Before first use, the Keyboard needs to be charged. During use, a flashing ‘power’ light indicates that the battery power is low and the device needs recharging. To charge/recharge the device:

Step 1: Connect the USB cable’s micro connection to the keyboard charging interface.

Step 2: Connect the USB cable’s regular connection to the computer’s USB interface.

Step 3: The green ‘charge’ indicator light will stay on when the keyboard is charging. Once fully charged, the green indicator light will turn off.

Step 4: After you have finished charging, disconnect the USB cable, taking care not to damage the USB interface.

## Powering on/off

- Slide the Power On/Off switch to the ‘On’ position. The blue ‘Bluetooth’ and the red ‘Power’ indicators will illuminate for 4-5 seconds and then go off.
- After use, always turn off the power to extend the battery life. Slide the Power On/Off switch to the ‘Off’ position to power off.

## Storage

- If you intend not to use the Keyboard for an extended time, make sure it is fully charged before storing it away. Storing it with a depleted battery will shorten the lifespan of the keyboard’s internal lithium battery.

 
# Instructions




## Pairing the Keyboard with an Galaxy Tab

The following instructions are for pairing the product with a Galaxy Tab.

Step 1: Slide the Power On/Off switch to the 'On' position. The blue 'Bluetooth' and the red 'Power' indicators will illuminate for 4-5 seconds and then go off.

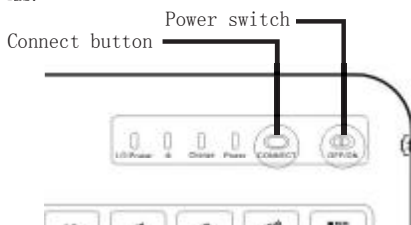Step 2: Press the 'Connect' button, the red 'Power' light will be on and the blue 'Bluetooth' light will start blinking. The Keyboard is now ready for connection to your Galaxy Tab.



Step 3: Turn on and unlock your Tablet. Go to Settings  on your Galaxy Tab home screen. Alternative, press the Icon  to get access to all your apps and choose Settings  from the list.



Select the Settings icon.

## Instructions (Cont.)

Step 4: Under 'Wireless and networks', slide the Bluetooth switch to the On position. Your tablet will automatically begin to scan for available devices.

 
 
If your Tablet does not automatically start searching for available devices, click on the

Scan icon  Scan



Slide the Bluetooth switch to the On position

Step 5: Choose the Bluetooth Keyboard shown in the list of Available devices

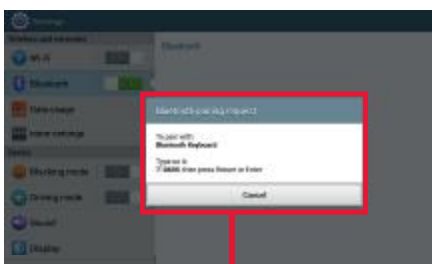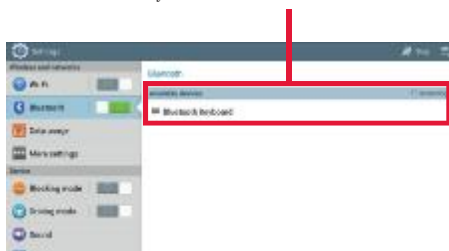

Enter the password code displayed on the screen, then press the Enter key.



Upon successful connection, the Keyboard will be listed as "Connected to input device" and the 'Bluetooth' light will stop blinking.

NOTE: Do not fold the cover of the Keyboard while it is still in use.

# Other Useful Information

## Troubleshooting guide

### Unable to connect

1. Make sure the Keyboard is within its effective working range (33ft).
2. Make sure the Keyboard is still paired. If not, pair the units again.
3. If the Keyboard is connected to any other Bluetooth products, please cancel, turn off the keyboard and pair again.
4. Check the battery power and recharge the unit, if necessary.

If none of the solutions offered above help you solve your problem, contact our after sales support line for advice.

## Responsible disposal

At the end of its working life, do not throw this device out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of computer products and dispose of it appropriately for recycling. Contact your local authorities for advice on disposal/recycling facilities in your area.

### NOTE:

“The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HANDS (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners

\*\*Images of Galaxy Tab are for demonstration purposes only. Galaxy Tab sold separately.

Galaxy Tab is a trademark of Samsung Inc..

# BAUHN®

Your details:

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_



E mail \_\_\_\_\_

Date of purchase\* \_\_\_\_\_

\* We recommend you keep the receipt with this warranty card

Location of purchase \_\_\_\_\_

Description of malfunction:

Return your completed warranty card to:

**NW Fulfilment**

**549 Heartland Drive**

**Suite E**

**Sugar Grove IL 60554**

## AFTER SALES SUPPORT



866-235-5029



mp656@messageplex.com

MODEL: BW05002-5, 12/2014

# 2

YEAR WARRANTY