

# **Mobile device    User Manual**

## **LEGAL INFORMATION**

### **All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of elemark 2 Corporation.

elemark 2Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

# Contents

<b>Getting Started</b> .....	<b>5</b>
Key Explained .....	5
Starting up .....	5
Switching Your Phone On/Off.....	6
Getting Around Your Phone .....	7
<b>Getting Connected to the Internet</b> .....	<b>8</b>
Connecting to a Wi-Fi Network.....	9
Checking the Wi-Fi Network Status .....	9
Browsing Options .....	10
Using Bookmarks .....	10
<b>Making the Most of Multimedia</b> .....	<b>10</b>
Camera.....	10
Playing Music.....	10
Gallery .....	10
Making Voice Memos .....	11
<b>Sorting out Your Phone Settings</b> .....	<b>11</b>
Bluetooth.....	11
Display Settings .....	12
Managing Your Device Memory .....	12
Setting Date and Time .....	12
Sound Settings.....	12
Apps .....	12
Security Settings .....	13
Language Settings .....	13

Reset to Factory Settings .....	13
<b>Applications .....</b>	<b>14</b>
Contacts .....	14
Clock .....	14
Calculator .....	14
Calendar.....	15
Downloads .....	15
Email .....	15
File Manager .....	15
<b>For Your Safety .....</b>	<b>15</b>
General Safety .....	15
Distraction .....	17
Product Handling .....	17
Electrical Safety.....	20
Interference .....	20
Explosive Environments .....	22
System update .....	22
Common fault diagnosis .....	23

# Getting Started











## Key Explained

Key	Function
Power Key	<ul style="list-style-type: none"><li>• Hold to power off or reboot.</li><li>• Press to switch your phone to Sleep mode.</li><li>• Press to wake up your phone.</li></ul>
Home Key	Press to return to the Home Screen from any application or screen.
Recent Key	Press to recent APP.
Back Key	Press to go to the previous screen.

## Starting up

### Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean

	Airplane mode		New message
	Battery charge		Wi-Fi network
	Meeting mode		New Wi-Fi network detected
	Silent mode		USB debugging connected
	Bluetooth icon		Alarm set

## Charging the Battery

When you first get your new phone you'll need to charge the battery.

Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

Connect the charger to a standard AC wall outlet.

Disconnect the charger when the battery is fully charged.

## Switching Your Phone On/Off

Make sure the battery is charged.

1. Hold Power Key to switch on your phone.
2. To switch it off or reboot it, hold Power Key to get the phone options. Select Power off or Reboot, and it will power off or reboot.

## Setting Up Your Phone for the First Time


When you first power on your phone after you purchase it or reset it to factory settings (see chapter Sorting out Your Phone Settings – Reset to Factory Settings), you need to do some settings before using it.

## Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time. You can start sleep mode by the following method. Press **Power Key** to switch to Sleep Mode.

## Waking Up Your Phone

Press **Power Key** to activate your screen display.

Tap the  icon, drag to the up.

**NOTE:** If you have set an unlock pattern, PIN or password for your phone (see chapter *Sorting out Your Phone Settings – Security Settings*) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

## Getting Around Your Phone

### Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

Tap the buttons, icons, or applications to select items or to open applications.

Flick the screen to scroll up, down, left or right.

Point, drag and drop to move particular items across the screen.

Double-tap the screen to zoom in/out an image.

**NOTE:** You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape.

### Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

## Choosing Your Wallpaper


Press Home Key to return to the Home Screen.

Long press blank area in the screen and select WALLPAPERS.

Tap My photos, you will enter Recent page, you can select a photo that you want setting as wallpapers. You also can swipe right from left side to select the page which you want to select photo image in.

Tap Set wallpaper.

## Adding/ Removing items to Your Home Screen

Press **Home Key**> tap  to enter the Application Program Interface

In the list of applications, touch and hold the icon until the main screen appears, move the application icon to the idle position, release the finger.

Press **Home Key** to return to the Home Screen.

Tap and hold the item you want to delete until the remove icon appears on the top of the screen.

Drag the item to the remove icon and release your finger when the item turns gray.

## Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the Internet via Wi-Fi.





## Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.


### Connecting to a Wi-Fi Network

Press **Home key**> tap >**Settings**>**Wi-Fi**.

Click  next to the Wi-Fi menu to turn it on, click  you can turn off the Wi-Fi function. Tap an access point to connect to it.


**NOTE:** If security features are implemented, you'll need to enter a password.

### Checking the Wi-Fi Network Status


You can check the Wi-Fi network by looking at the  icon in the status bar.

### Browsing the Internet

You can use your phone to get on the Internet via a Wi-Fi connection.

Press **Home Key**> tap >**Browser**.

There are different ways to open web pages:

Tap the address bar to enter the website you want to browse. Then tap  on the touch keyboard.

Tap Action Bar> Bookmarks/History and select a bookmark or history to open.

## Browsing Options

When you browse the Web, you can also do the following:

Press Action Bar> Close and select Quit to exit.

Press Action Bar> Bookmarks/History and select a bookmark or history to open.

Press Action Bar> Settings to configure browser settings.

## Using Bookmarks

If you know the Web address, you can manually add bookmarks.

To bookmark a web page, open it and tap Action Bar>**Save to bookmarks**. Give the bookmark a name and save it.

## Making the Most of Multimedia

### Camera

Your phone has camera function. Open it by pressing **Home Key**> tap



>**Camera**. Tap to take a picture. To view it, just tap the picture in the right corner of the screen.

### Playing Music

You can play digital audio files from your phone's memory in Music. Before playing music, you need to copy music files to memory.

Press **Home Key**>tap >**Music** to open the Music Screen.

Click the Music category label > music files to start playing.

### Gallery


Press **Home Key**> tap >**Gallery**. You can use Gallery to view pictures


and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact photo, and sharing with friends.


## Making Voice Memos

Sound Recorder enables you to record your voice memos.

Press **Home Key**> tap >**Sound Recorder**.

Tap  to start recording.

Tap  to stop recording.

Tap  to play back the voice recording.



Save the voice recording after stop, or tap Discard to delete the recording.

## Sorting out Your Phone Settings

### Bluetooth

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange wireless information within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.


Press **Home Key**> tap >**Settings**>**Bluetooth**.

Click  next to the Bluetooth menu to turn it on. When Bluetooth is on, the  icon will appear in the status bar.

Tap Bluetooth. Your phone will show all visible Bluetooth devices in range.

Tap the device you want to pair with and operate according to the message prompt. When both devices to be paired accept the connection, the pairing is completed.

## Display Settings

Press **Home key**> tap >**Settings**>**Display**, you can adjust the display settings as you like:

**Wallpaper:** Set the wallpaper of the phone.

**Brightness:** Adjust brightness of the screen.

**When device is rotated:**IF rotate the screen display as you rotate the phone.

**Sleep:** Set the delay for the screen to automatically turn off.

## Managing Your Device Memory

Press **Home Key**> tap >**Settings**>**Storage**.

You can view the space information in the phone storage.

## Setting Date and Time

Press **Home key**> tap >**Settings**> **Date & time**.

Tap **Automatic Date & time** and select Off if you want to set the time and date by yourself.

Set date, time and change the other options.

## Sound Settings


By pressing **Home Key**> tap >**Settings**>**Sound**. you can adjust the sound settings, such as ringtone, volume and vibrate.

## Apps

Press **Home Key**> tap >**Settings**>**Apps**.

## Security Settings


Here's how to protect your phone from unauthorized use.

Press **Home key**> tap >**Settings**>**Security**>**Screen lock** .You can select the screen lock. When power on your phone or unlock touch screen devices you will be required to input pattern/PIN/password, and etc. The following is the introduction function:

None	Disable the screen lock	PIN	Use the PIN to unlock
Swipe	Select the swipe to unlock	Password	Use the password to unlock screen
Pattern	Creating Your Screen Unlock Pattern		


## Language Settings

You can change the language of your phone system in two simple steps.

Press **Home key**> tap >**Settings**>**Language & input**>**Languages**.

Tap plus sign and elect a language from the list given, then drag this languages to the top.

## Reset to Factory Settings



Press **Home key**> tap >**Settings** >**Backup & reset**>**Factory data reset**>**RESETTABLET**>**ERASE EVERYTHING**.


**WARNING:** All your personal information and downloaded applications on your phone will be erased after the resetting.

## Applications


### Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press **Home key**> tap >Contacts. Tap  from the Contacts Screen.Enter the contact name, phone numbers, and other information, and then save it.

Tap  on the Contacts Screen.Input the contact name you want to search for.The contacts matched will be listed.


### Clock

Press **Home key**> tap >**Clock**, you can view the clock and set the alarm.

Tap the top of the screen icon can be switched to the countdown and stopwatch functions from the clock interface.

### Calculator


You can use the phone directly perform simple mathematical calculations.

- 1.Press **Home Key**> Tap >**Calculator**.
- 2.Click the button corresponding with the calculator display, perform basic arithmetic.

**TIPS:**swipe left to use scientific calculation.

## Calendar

You could check detailed date information here. You can add and view calendar of past and future task.


1. Press **Home Key**> Tap  > **Calendar**.
2. Touch Action Bar > tap New Event, enter the event information, and then click "DONE". You can add event with specific day and time.
3. Touch Action Bar > tap Settings, You can set calendar view setting, reminder settings; you can view calendar version in about calendar.

## Downloads

Press **Home key**> tap  > **Downloads**, you can view the file you downloaded from network.


## Email

You can send email to anyone who has email account with this function. This application needs Internet support.

Press **Home key**> tap  > **Email**, you can login you account in this page.

## File Manager

File manager can manage MP3, video, audio, e-books folder and so on.

1. Press **Home key**> tap  > File Manager
2. If you long press the file, you can operate copy, cut, delete, rename, share and details.

## For Your Safety

### General Safety

	Don't play the phone while driving.		Don't use at petrol stations.
--	-------------------------------------	---	-------------------------------

	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contacting with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contacting with liquids. Keep your phone dry.
	Switch off when told to in aircraft and airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.		



## **Distraction**

### **Driving**

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### **Operating Machinery**

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

## **Product Handling**

### **General Statement on Handling and Use**

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Always treat your phone and its accessories with care and keep it in a clean and dust-free place.

Do not expose your phone or its accessories to open flames or lit tobacco products.

Do not expose your phone or its accessories to liquid, moisture or high humidity.

Do not drop, throw or try to bend your phone or its accessories.

Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.

Do not paint your phone or its accessories.

Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.

Do not expose your phone or its accessories to extreme temperatures, minimum - [10] and maximum + [50] degrees Celsius.

Please check local regulations for disposal of electronic products.

Do not carry your phone in your back pocket as it could break when you sit down.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

## **Antenna**

Do not touch the antenna unnecessarily.

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

## **Air Bags**

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

## **Seizures/ Blackouts**

The phone can produce a bright or flashing light.

## **Repetitive Motion Injuries**

To minimize the risk of RSI when texting or playing games with your phone:

Do not grip the phone too tightly.

Press the buttons lightly.

Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.

Take lots of breaks to stretch and relax.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using Bluetooth stereo headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal

use.

## **Electrical Safety**

### **Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

### **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

## **Interference**

### **General Statement on Interface**

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast

pocket.

## **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

## **Medical Devices**

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

## **Hospitals**

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference to electronic

equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Petrol Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include refueling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

## **System update**

System supports firmware upgrade only from official website or server. If user uses 3rd party ROM image and/or any other root method to upgrade firmware, it will cause phone unstable and raise further security risk and pitfalls. Please be noted user should take all responsibility for all these behaviors.

## Common fault diagnosis

The faults	possible reasons
Can't turn on	1、Whether there is electricity in the battery; 2、Battery is correct.
Bad signal	Check the signal display in the status bar.
Can't charge	May be the battery discharge. Need to wait for a few minutes.
Taking pictures is not clear	Please make sure that both sides of the camera lens cleaning.

## FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which



the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.