



WLAN600
Wireless IP Phone
User Guide

Copyright Statement

All brand names are registered trademarks of their respective companies.

Disclaimer

Products and specifications are subject to change without notice.

FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

This EUT is in compliance with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C

Contents

1.	Introduction	5
2.	Getting Started.....	6
2.1.	Checking Shipment Completeness.....	6
2.2.	Installing and Removing the Battery.....	6
2.3.	Charging the Battery	8
2.4.	Keypad Definition of WLAN600	9
2.5.	Turn on/off the Power	10
2.6.	Setup to Default IP Address	10
2.7.	Switching the key-lock On/Off	10
2.8.	Adjusting the Speaker Volume	11
3.	Configuring Network Environment.....	12
3.1.	Network Configuration	12
3.1.1.	Setting Up/Modify to Static IP.....	12
3.1.2.	Setting UP/modify the DHCP Client	14
3.1.3.	Setting UP the PPPoE Settings.....	15
3.2.	Wireless Configuration	17
3.2.1.	Setting UP the Wireless Settings.....	17
3.3.	SIP Configuration	22
3.3.1.	Setting UP the Proxy Server Settings.....	22
3.3.2.	Setting UP the Outbound Proxy Settings.....	24
3.3.3.	Setting UP the User Account Settings.....	25
3.4.	SSL Configuration	27
3.5.	Using the Phone Book	29
3.5.1.	Searching Phone Book Entry: Speed Dial Key.....	29
3.5.2.	Searching Phone Book Entry: Edit Entry.....	30
3.5.3.	Searching Phone Book Entry: Erase Entry.....	32
3.5.4.	Searching Phone Book Entry: Group Setting.....	33
3.5.5.	Adding a Phone Book Entry	34
3.5.6.	Erasing Phone Book Entry: One by One	35
3.5.7.	Erasing Phone Book Entry: All	37
3.6.	Using the Call History.....	38
3.6.1.	Missed Call	38
3.6.2.	Received Call.....	40

3.6.3.	Dialed Call	42
3.6.4.	Erase Calls.....	44
3.7.	Setting	46
3.7.1.	Adjusting the Ring Volume	46
3.7.2.	Setting the Ring Melody.....	47
3.7.3.	Setting the Vibrator Mode	48
3.7.4.	Setting the Time Format	49
3.7.5.	Setting the Time Edit	50
3.7.6.	Setting the Banner.....	51
3.7.7.	Setting the Key Lock.....	52
3.7.8.	Restoring the Factory Default Settings.....	53
4.	Web Configuration Setting	54
4.1.	Configuration Parameters	54
4.2.	Login Password.....	57
4.3.	Device Information.....	58
4.4.	Network Configuration: STATIC.....	58
4.5.	Network Configuration: DHCP	59
4.6.	Network Configuration: PPPoE	59
4.7.	OutBound Proxy Configuration	60
4.8.	SIP Proxy Configuration.....	60
4.9.	Phone Book	61
4.10.	Wireless Setting.....	61
4.11.	System	62
4.12.	Update System.....	62
5.	Basic Phone Tasks	63
5.1.	Dialing a Phone Number	63
5.2.	Redialing a Phone Number	63
5.3.	Using Speed Dial.....	63
5.4.	Answering a Call	63
5.5.	Holding a Call.....	63
6.	Display Messages.....	64
6.1.	Error Messages.....	64
6.2.	Warning Messages	65

1. Introduction

This guide is designed to help you quick learn the basic and advanced features.

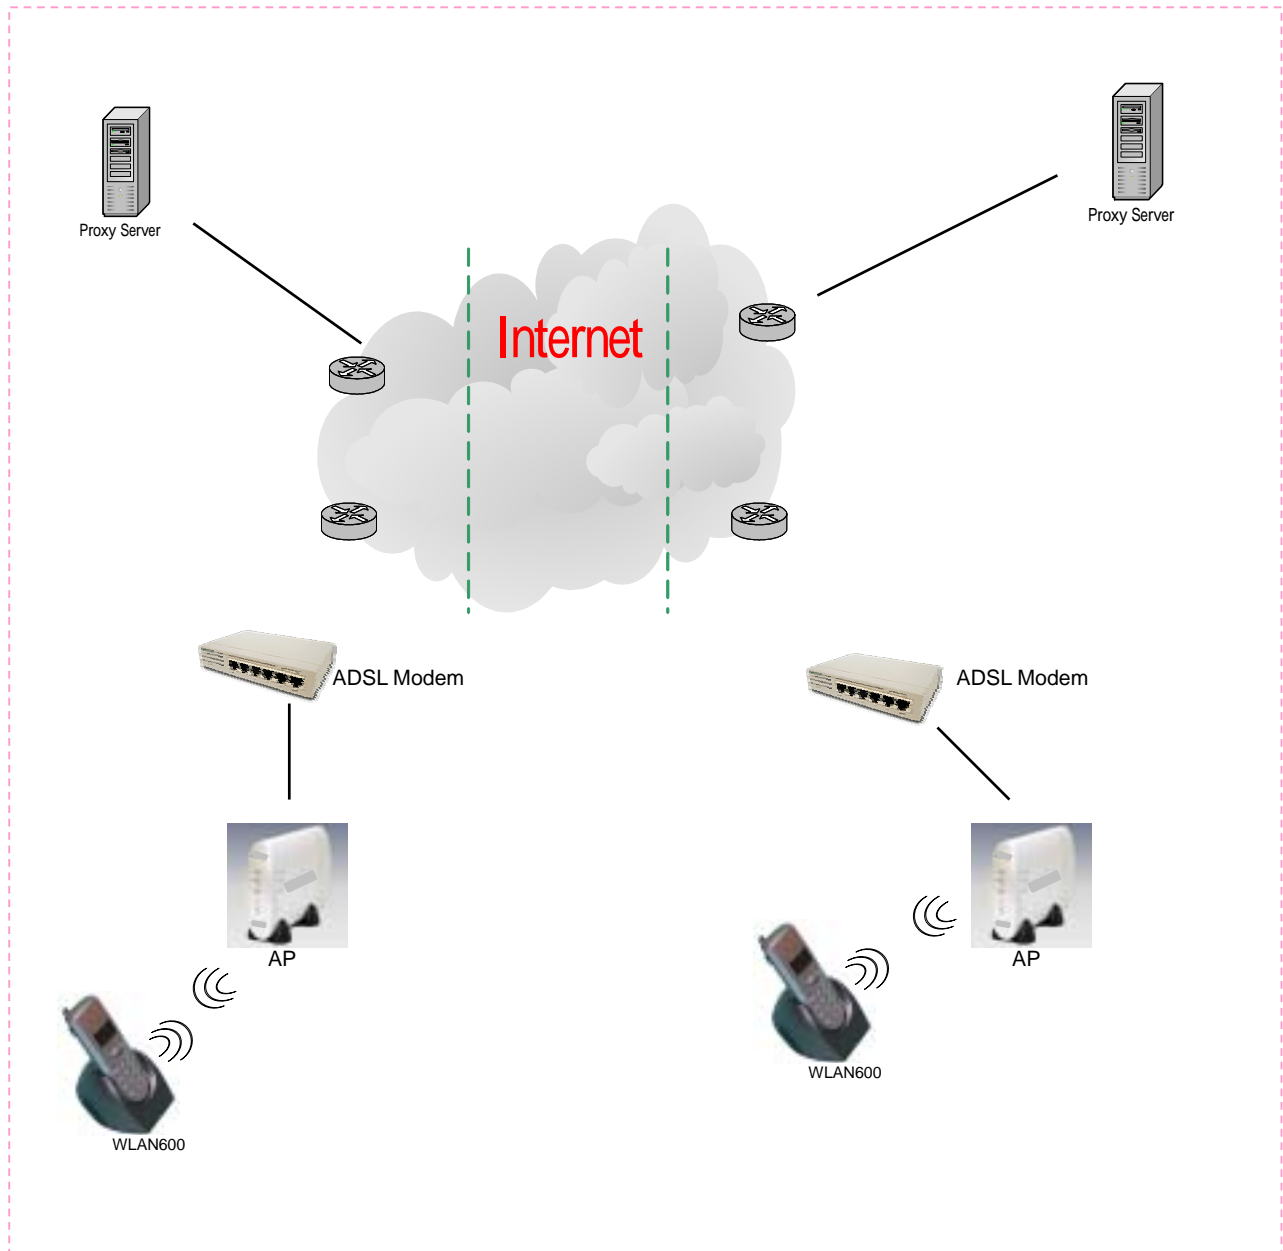 


Figure 1.1 Network connection for WLAN600

2. Getting Started

Before using the WLAN600, you must do the following:

- Check the shipment for completeness
- How install and remove the battery
- Charge the phone with the battery
- How can turn on/off the device

2.1. Checking Shipment Completeness

Check and make sure all items that are Put inside the box.

The package should contain the following:

- WLAN600 Wireless IP Phone x1
- Standard battery x1
- Power charger x1
- WLAN600 Wireless IP Phone User Manual x1

2.2. Installing and Removing the Battery

1. To install the battery :

With the back of the phone facing, slide the back cover off the phone, as Figure 2.1



Figure 2.1 back cover off the phone

2. Fasten it to the phone by pressing slightly downward on the battery until the locking catch snaps into place.



Figure 2.2 Installing or removing the Battery

3. Make sure the battery is properly installed.

To Remove the Battery:

Remember to switch the power off before removing the battery

Slide the locking latch located at the top of the battery upward and gently pull the battery away from the phone.

2.3. Charging the Battery

1. **Connect the power supply to an AC wall outlet.**
2. **Put the WLAN600 on the charger.**



Figure 2.3 Charging the phone and the Battery

When phone is turned on, the battery indicator bar blinks, displaying the current power level.

When the battery is fully charged, the battery indicator bar stops blinking.

3. **When the battery is fully charged, please remove the phone from the charger.**

2.4. Keypad Definition of WLAN600

The WLAN600 Wireless IP Phone is depicted in Figure 2.1.



Figure 2.4 WLAN600 Wireless IP Phone

Soft key 1:

Used for performing functions displayed in the tab shown above it.

Soft key 2:

Used for performing functions displayed in the tab shown above it.

Arrow keys:

Used for navigating from on function to another.

Phone on key:

Used for answer call or dialing.

Power and Phone off key:

Used as switches power ON/OFF, or ending call, reject key, or return to standby mode.

Number keys:

Used for entering numbers and characters.

Also used as Speed Dial hot keys.

2.5. Turn on/off the Power

Turning On Phone

To turn on/off the Power, Press and hold the “” key for approximately 2 seconds to turn on the phone.

The phone enters “standby” mode, the Main Screen displayed as Figure 2.5.

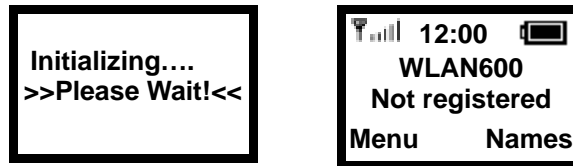 


Figure 2.5 Main Screen / Standby Mode

2.6. Setup to Default IP Address

When device is Power off.

Hold these “” + “” key over 2 seconds.

The device reset to default IP address (**192.168.0.6**).

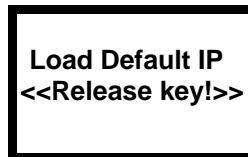 



Figure 2.6 Load default IP

2.7. Switching the key-lock On/Off

Follow these steps to switch the key- lock on/off :

1. In idle state, hold the  key over 2 seconds, or wait over 1 minute. The device will auto exchange to “Key Pad Locked” mode, as Figure 2.7.

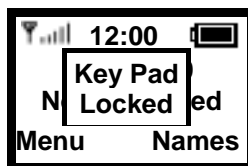 



Figure 2.7 Key Locked

2. **How turn off “key-lock”?**
Press and hold the  key over 2 seconds.
A prompt appears as shown in Figure 2.8.

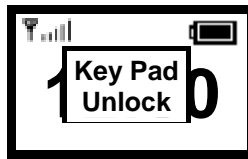 


Figure 2.8 Key Unlock

2.8. Adjusting the Speaker Volume

- During a call, increase the volume by pressing ► key.
Decrease the volume by pressing ◀ key. See Figure 2.9.

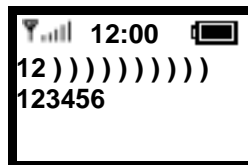 


Figure 2.8 Adjusting the Speaker Volume

3. Configuring Network Environment


























The chapter introduces/modify the Network Environment.

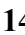
3.1. Network Configuration

This section introduces/modifies Network information.

 3.1.1. Setting Up/Modify to Static IP





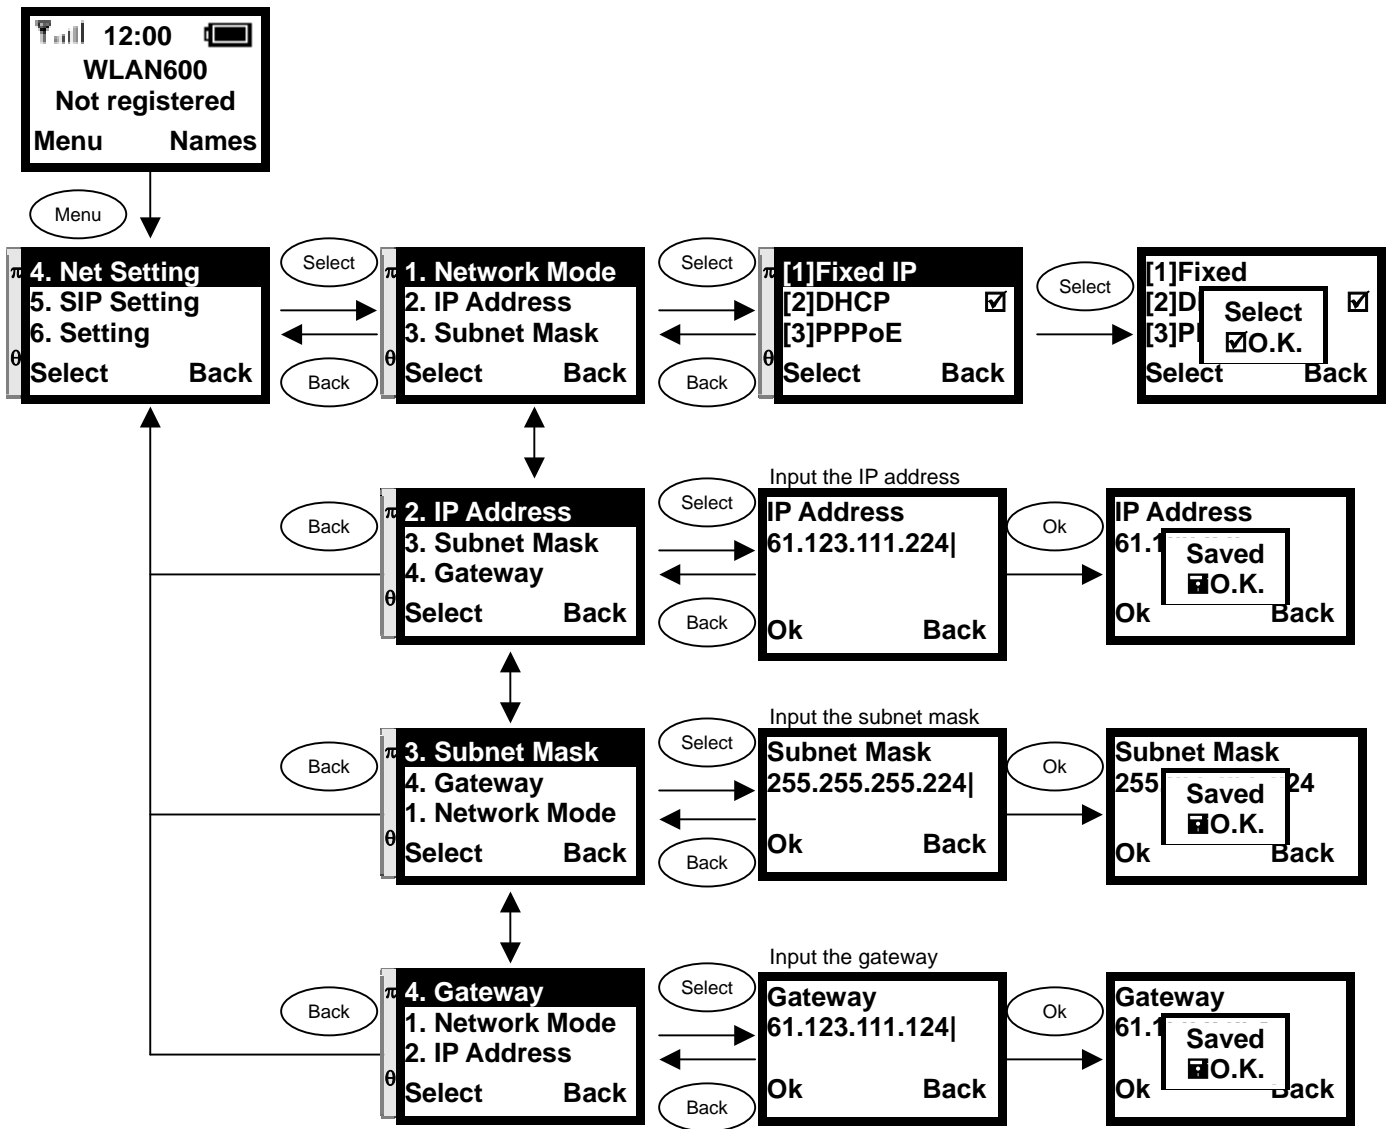





The section introduces /Modify to Static IP.


1. In Normal, press  key.
2. Press  or  key, until “Network Setting” in screen.
3. Press  key, into “Network Setting”.
4. Press  or  key, until “Network Mode” in screen.
5. Press  key, into the “Network Mode”.
6. Press  or  key, scroll to “Fixed IP”.
7. When finished these entering or editing.
Press  key, return to the “Net Setting”.
8. Press  or  key, until the “IP Address” in screen.
9. Press  key, into the “edit” mode.
10. Press  key, delete all number of last entered.
11. When finished these entering or editing.
Press  key, return to “Net Setting”.
12. Press  or  key, until “Subnet Mask” in screen.
13. Press  key, enter “edit” mode.
14. Press  key, delete all number of last entered.
15. When finished entering or editing.
Press  key, return to “Net Setting”.
16. Press  or  key, until show “Gateway” in screen.
17. Press  key, enter “edit” mode.
18. Press  key, delete all number of last entered.
19. When finished entering or editing.
Press  key, return to “Net Setting”.



3.1.2. Setting UP/modify the DHCP Client

 This section provides instructions for performing the DHCP settings. The Dynamic Host Configuration Protocol (DHCP) client provides a mechanism for allocating IP address dynamically so that addresses can be reused when hosts no longer need them.

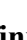

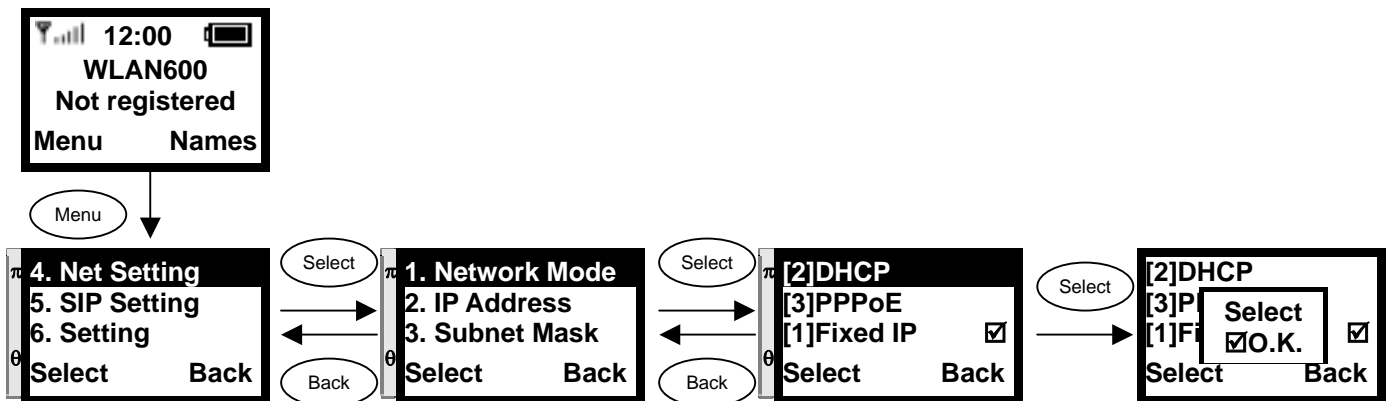







1. In idle state, press  key.
2. Press  or  key, until “Network Setting” in screen.
3. Press  key, into “Network Setting”.
4. Press  or  key, until “Network Mode” in screen.
5. Press  key, into “Network Mode”.
6. Press  or  key, scroll to “DHCP”.
7. When finished these entering or selecting. Press  key, return to “Net Setting”.

 


3.1.3. Setting UP the PPPoE Settings

This section provides instructions for performing the PPPoE settings.

The Poin-to-Poin Protocol over Ethernet (PPPoE) client provides a mechanism for allocating IP address dynamically so that addresses can be reused when hosts no longer need them.

1. In idle state, press  key.
2. Press **▲** or **▼** key, until “Net Setting” in screen.
3. Press  key, into “Net Setting”.
4. Press **▲** or **▼** key, until “Network Mode” in screen.
5. Press  key, into “Network Mode”.
6. Press **▲** or **▼** key, scroll to “PPPoE”.
7. When finished these entering or selecting.
Press  key, return to “Net Setting”.
8. Press **▲** or **▼** key, until “PPPoE Name” in screen.
9. Press  key,, enter “edit” mode.
10. Press  key, delete all number of last entered.
11. When finished these entering or selecting.
Press  key, return to “Net Setting”.
12. Press **▲** or **▼** key, until “PPPoE PWD” in screen.
13. Press  key, enter “edit” mode.
14. Press  key, delete all number of last entered.
15. When finished these entering or selecting.
Press  key, return to “Net Setting”.

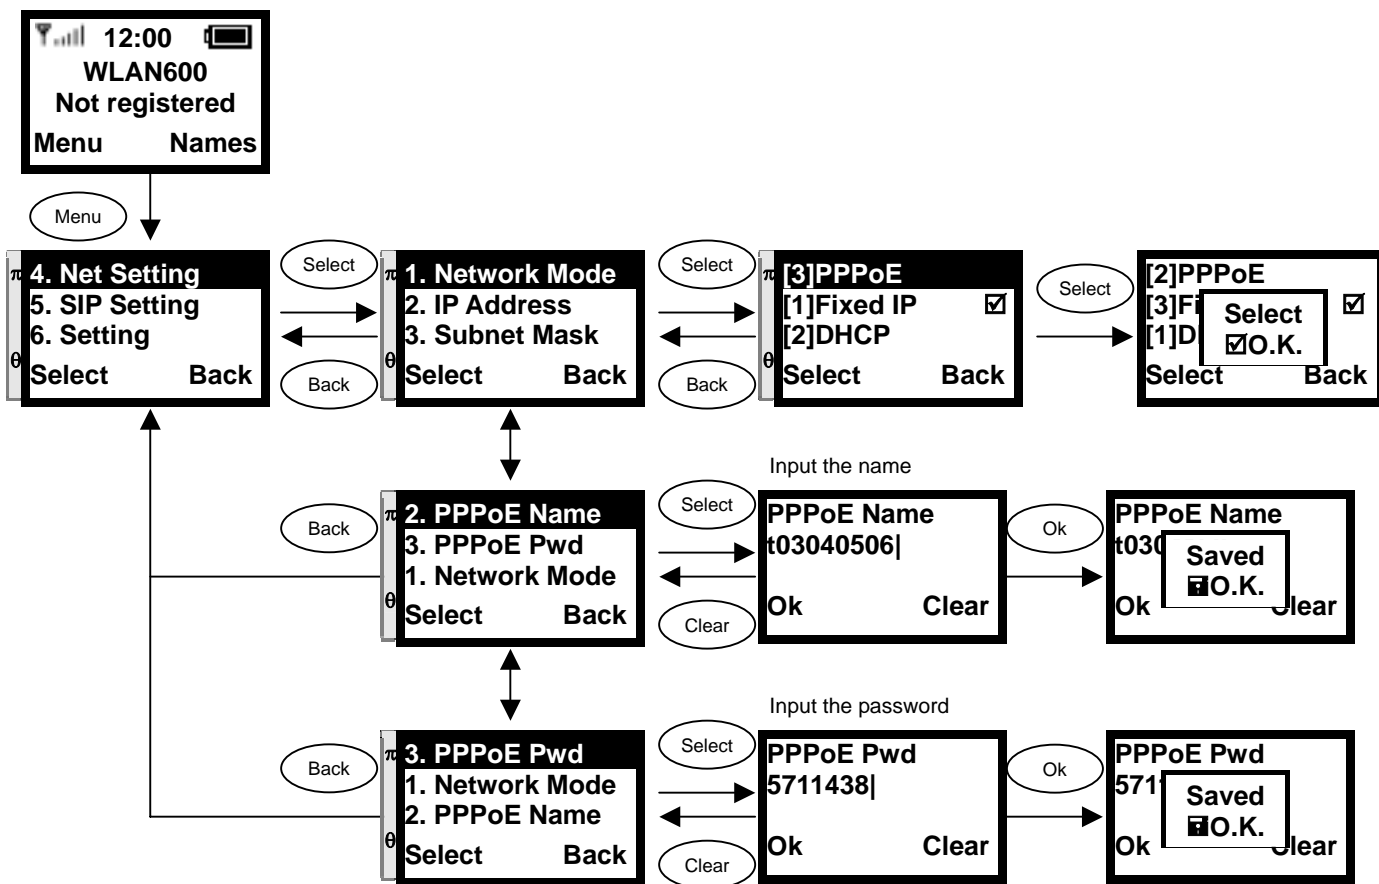

3.2. Wireless Configuration





This section provides instructions for performing the 802.11b configuring using the 802.11b Configuration submenu.

 
3.2.1. Setting UP the Wireless Settings

This section provides information about performing the following wireless settings:







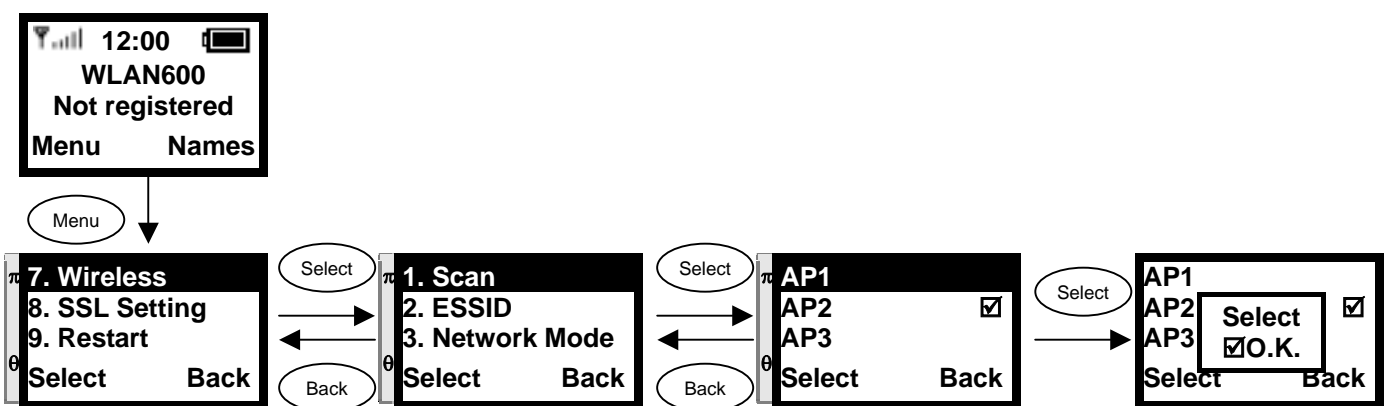








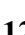

















- Scanning the Wireless Service Set Identifier
- Setting Up the Wireless Settings
- Setting Up the Wired Equivalent Privacy Keys

 
3.2.1.1. Scanning the Wireless Service Set Identifier

1. In idle state, press  key.
2. Press **▲** or **▼** key, until “Wireless” in screen.
3. Press  key, into “Wireless”.
4. Press **▲** or **▼** key, until “Scan” in screen.
5. Press  key, into “Scan”.
6. Press **▲** or **▼** key, scroll to “Service Set Identifier (SSID)”.
7. When finished these entering or selecting.
Press  key, return to “Wireless”.







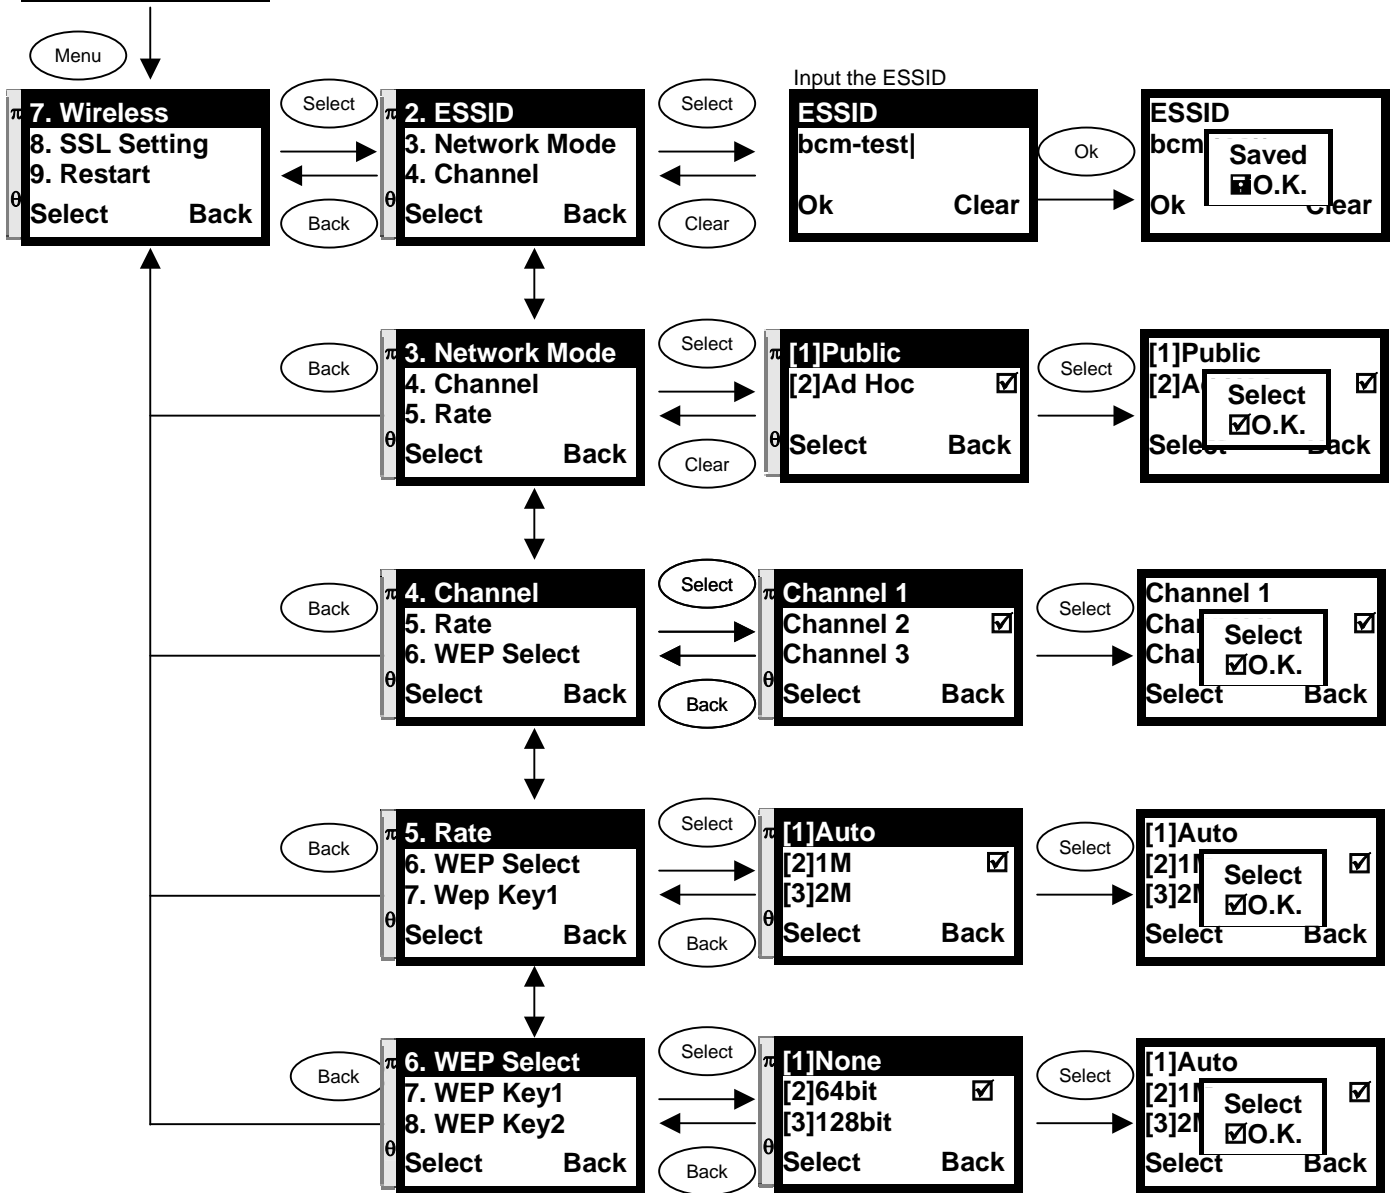














3.2.1.2. Setting Up the Wireless Settings

1. In idle state, press  key.
2. Press  or  key, until “Wireless” in screen.
3. Press  key into “Wireless”.
4. Press  or  key, until “ESSID” in screen.
5. Press  key to “edit” mode.
6. Press  key, delete all number of last entered.
7. When finished these entering or editing.
Press  key, return to “Wireless”
8. Press  or  key, until “Network Mode” in screen.
9. Press  key, into “Network Mode”.
10. Press  or  key to scroll to “Public”.
11. When finished these entering or editing.
Press  key, return to “Network Mode”.
12. Press  or  key, until “Channel” in screen.
13. Press  key, into “Channel”.
14. Press  or  key, scroll the channel numbers.
15. When finished these entering or selecting.
Press  key, return to “Wireless”
16. Press  or  key, until “Rate” in screen.
17. Press  key, into “Rate”.
18. Press  or  key, scroll the “Rate”.
19. When finished these entering or selecting.
Press  key, return to “Wireless”.
20. Press  or  key, until “WEP Select” in screen.
21. Press  key, into “WEP Setting”.
22. Press  or  key to scroll to “None”.
23. When finished these entering or selecting.
Press  key, return to “Wireless”.



3.2.1.3. Setting Up the Wired Equivalent Privacy Keys

 1. In idle state, press  key.
2. Press ▲ or ▼ key, until “Wireless” in screen.
3. Press  key, into “Wireless”.
4. Press ▲ or ▼ key until “WEP Select” in screen.
5. Press  key, into “WEP Select”.
6. Press ▲ or ▼ key, scroll to “WEP”.
7. When finished these entering or selecting.
Press  key, return to “Wireless”.
8. Press ▲ or ▼ key, until “WEP Key 1” in screen.
9. Press  key to enter the edit mode.
10. Press  key delete all number of last entered.
11. When finished these entering or selecting.
Press  key, return to “Wireless”.
12. Press ▲ or ▼ key, until “WEP Key 2” in screen.
13. Press  key, enter to “edit” mode.
14. Press  key, delete all number of last entered.
15. When finished these entering or editing.
Press  key, return to “Wireless”.
16. Press ▲ or ▼ key, until “WEP Key 3” in screen.
17. Press  key, enter to “edit” mode.
18. Press  key, delete all number of last entered..
19. When finished these entering or editing.
Press  key, return to “Wireless”.
20. Press ▲ or ▼ key, until “WEP Key 4” in screen.
21. Press  key, enter to “edit” mode.
22. Press  key, delete all number of last entered.
23. When finished these entering or editing.
Press  key, return to “Wireless”.
24. Press ▲ or ▼ key, until “Key Select” in screen.
25. Press  key, into “Key Select”.
26. Press ▲ or ▼ key, scroll the key numbers.
27. When finished these entering or selecting.
Press  key, return to “Wireless”.

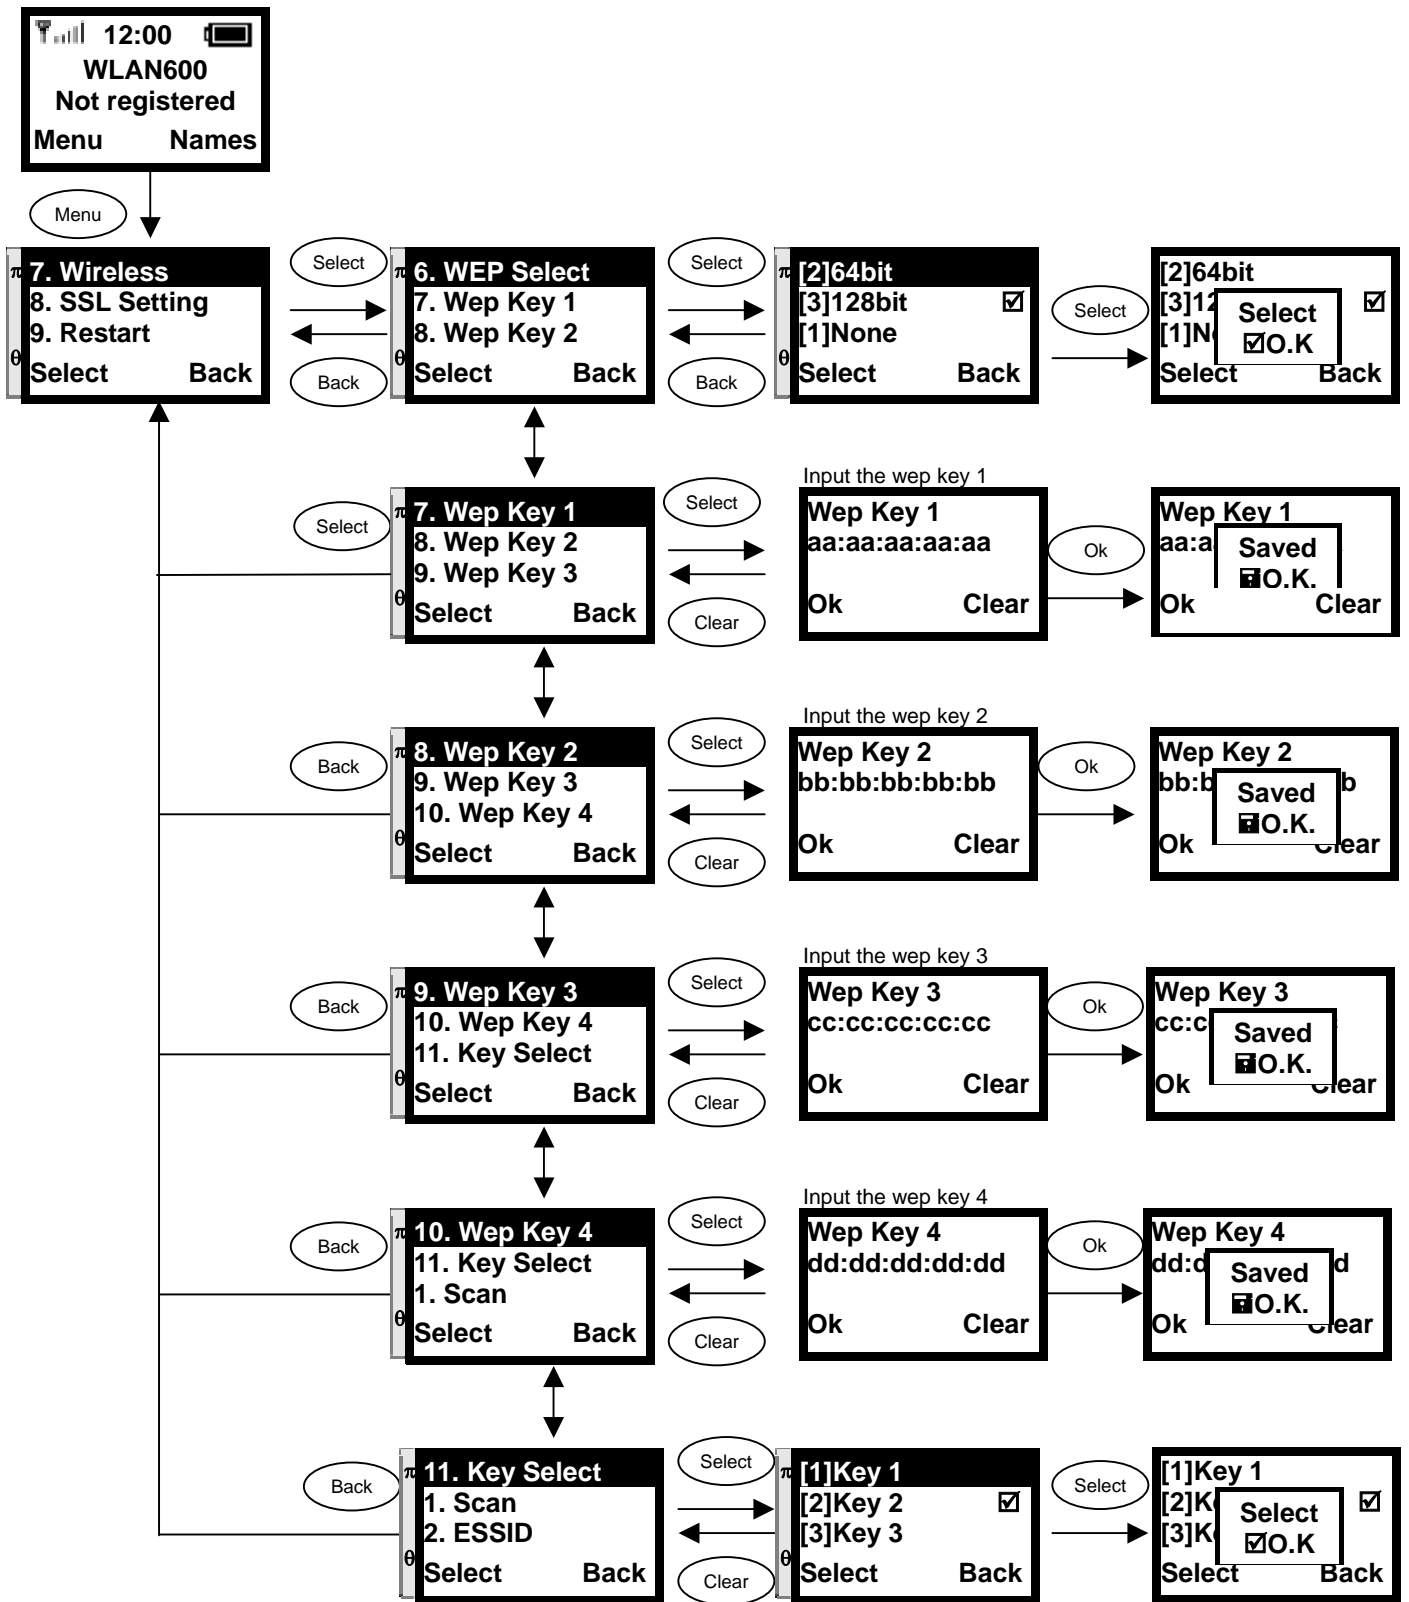




 









3.3. SIP Configuration

This section provides instructions for performing the Session Initiation Protocol (SIP) configuring using the SIP Configuration submenu.

 3.3.1. Setting UP the Proxy Server Settings





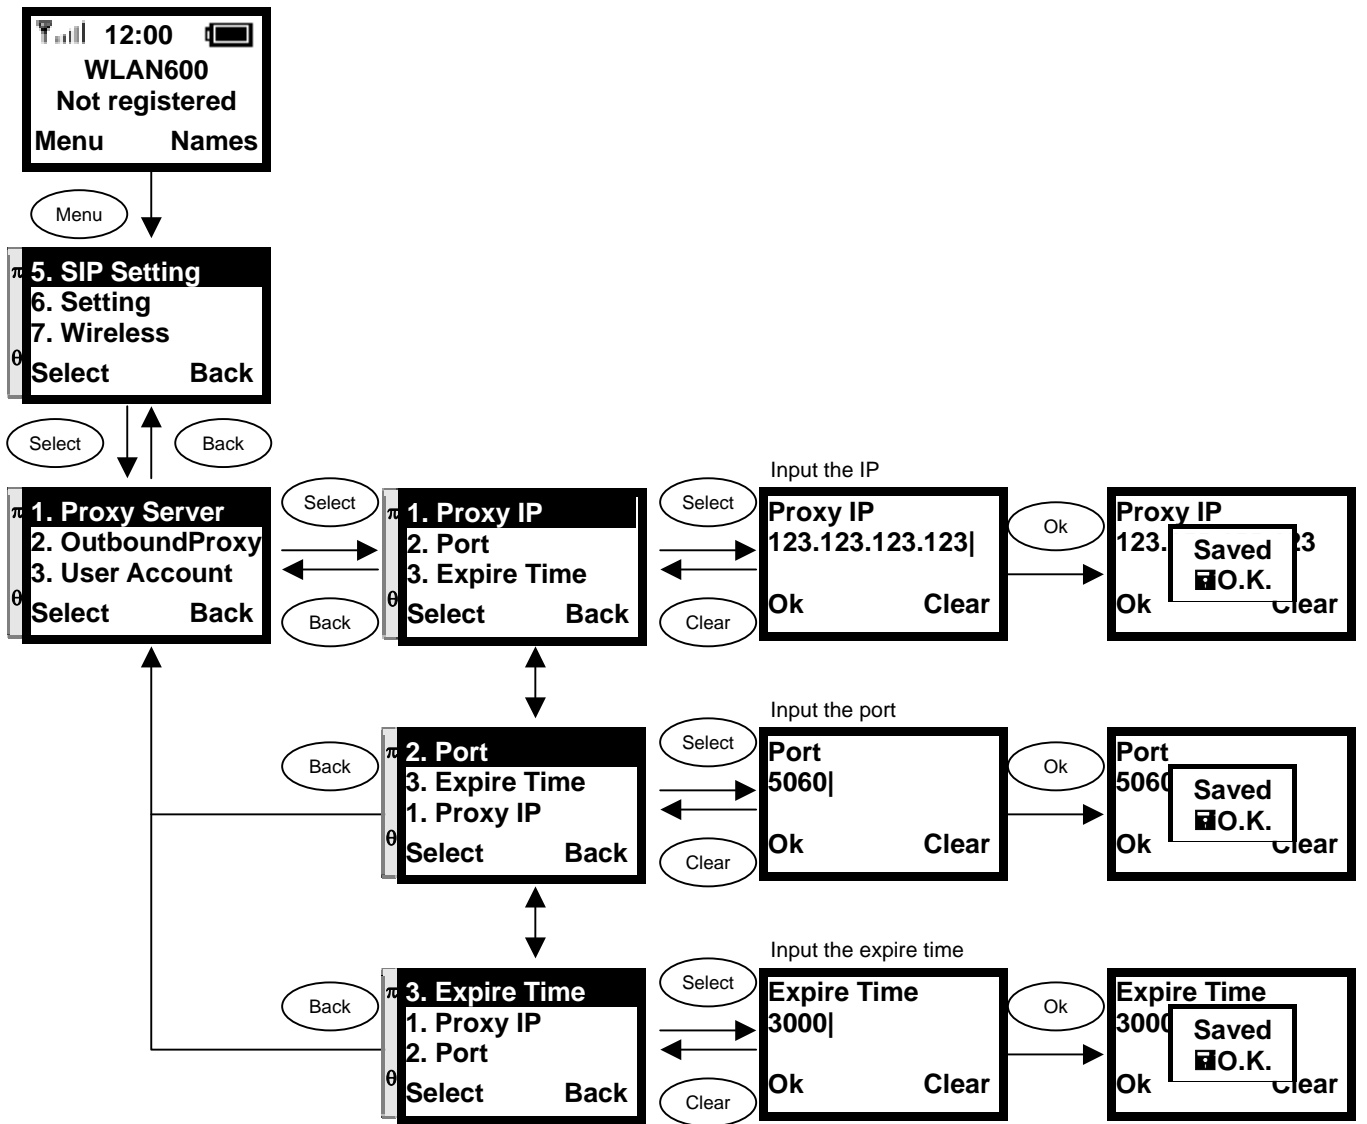






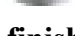





This section provides information about performing the proxy server settings.

 
1. In idle state, press  key.
2. Press ▲ or ▼ key, until “SIP Setting” in screen.
3. Press  key, into “SIP Setting”.
4. Press ▲ or ▼ key, until “Proxy Server” in screen.
5. Press  key, into “Proxy Server”.
6. Press ▲ or ▼ key, until “Proxy IP” in screen.
7. Press  key, enter to “edit” mode.
8. Press  key delete all number of last entered.
9. When finished these entering or editing.
Press  key, return to “Proxy Server”.
10. Press ▲ or ▼ key, until “Port” in screen.
11. Press  key, enter to “edit” mode.
12. Press  key, delete all number of last entered.
13. When finished these entering or editing.
Press  key, return to “Wireless”.
14. Press ▲ or ▼ key, until “Expire Time” in screen.
15. Press  key, enter to “edit” mode.
16. Press  key delete all number of last entered.
17. When finished these entering or editing.
Press  key, return to “Proxy Server”.



3.3.2. Setting UP the Outbound Proxy Settings


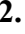





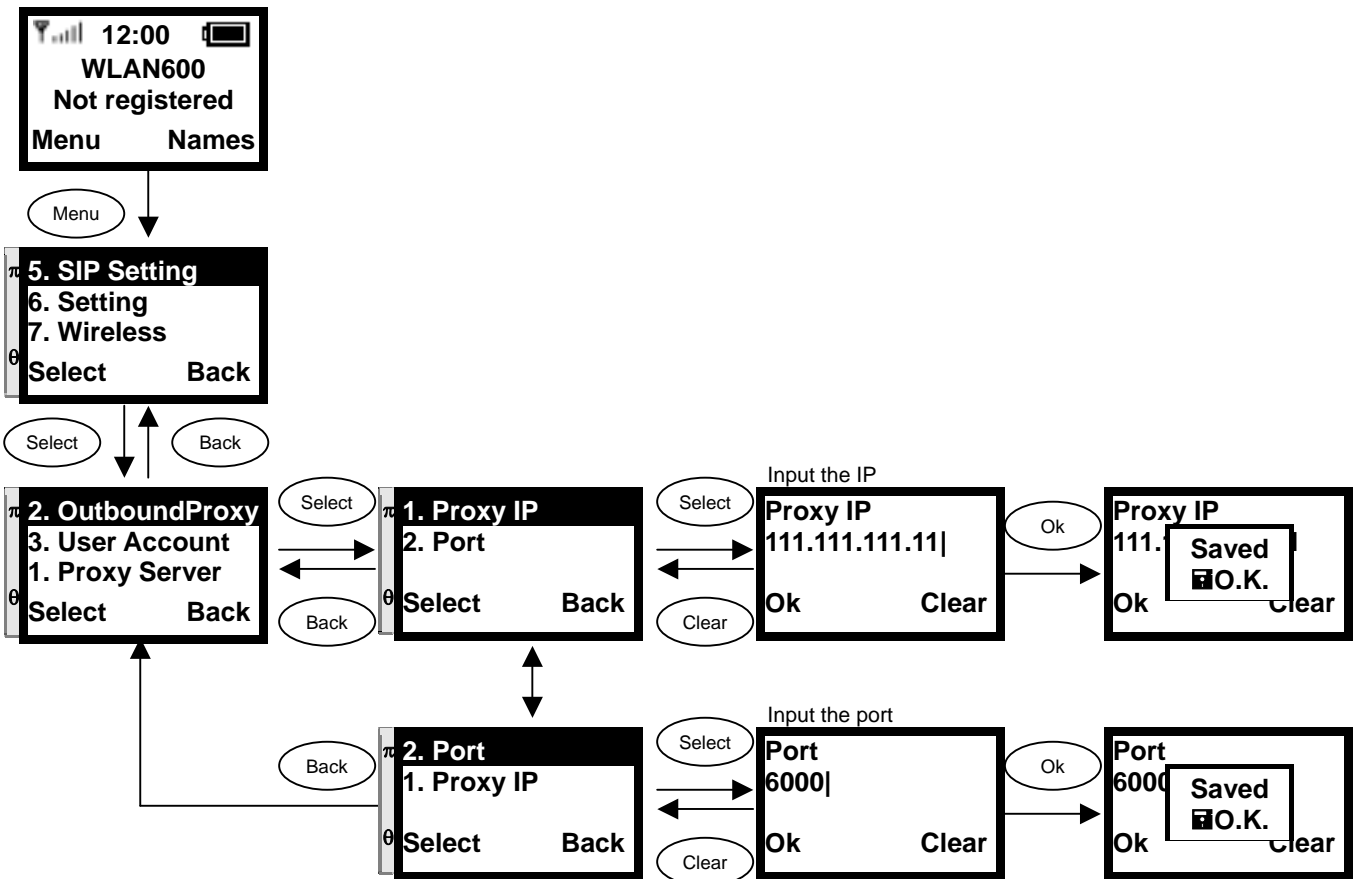








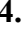

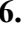



This section provides information about performing the Outbound Proxy settings.

 
1. In idle state, press  key.
2. Press  or  key, until “SIP Setting” in screen.
3. Press  key, into “SIP Setting”.
4. Press  or  key, until “Outbound Proxy” in screen.
5. Press  key, into “Outbound Proxy”..
6. Press  or  key, until “Proxy IP” in screen.
7. Press  key, enter “edit” mode.
8. Press  key, delete all number of last entered.
9. When finished these entering or editing.
Press  key, return to “Outbound Proxy”.
10. Press  or  key, until “Port” in screen.
11. Press  key, enter “edit” mode.
12. Press  key delete all number of last entered.
13. When finished these entering or editing.
Press  key, return to “Outbound Proxy”.



3.3.3. Setting UP the User Account Settings

This section provides information about performing the User Account settings.



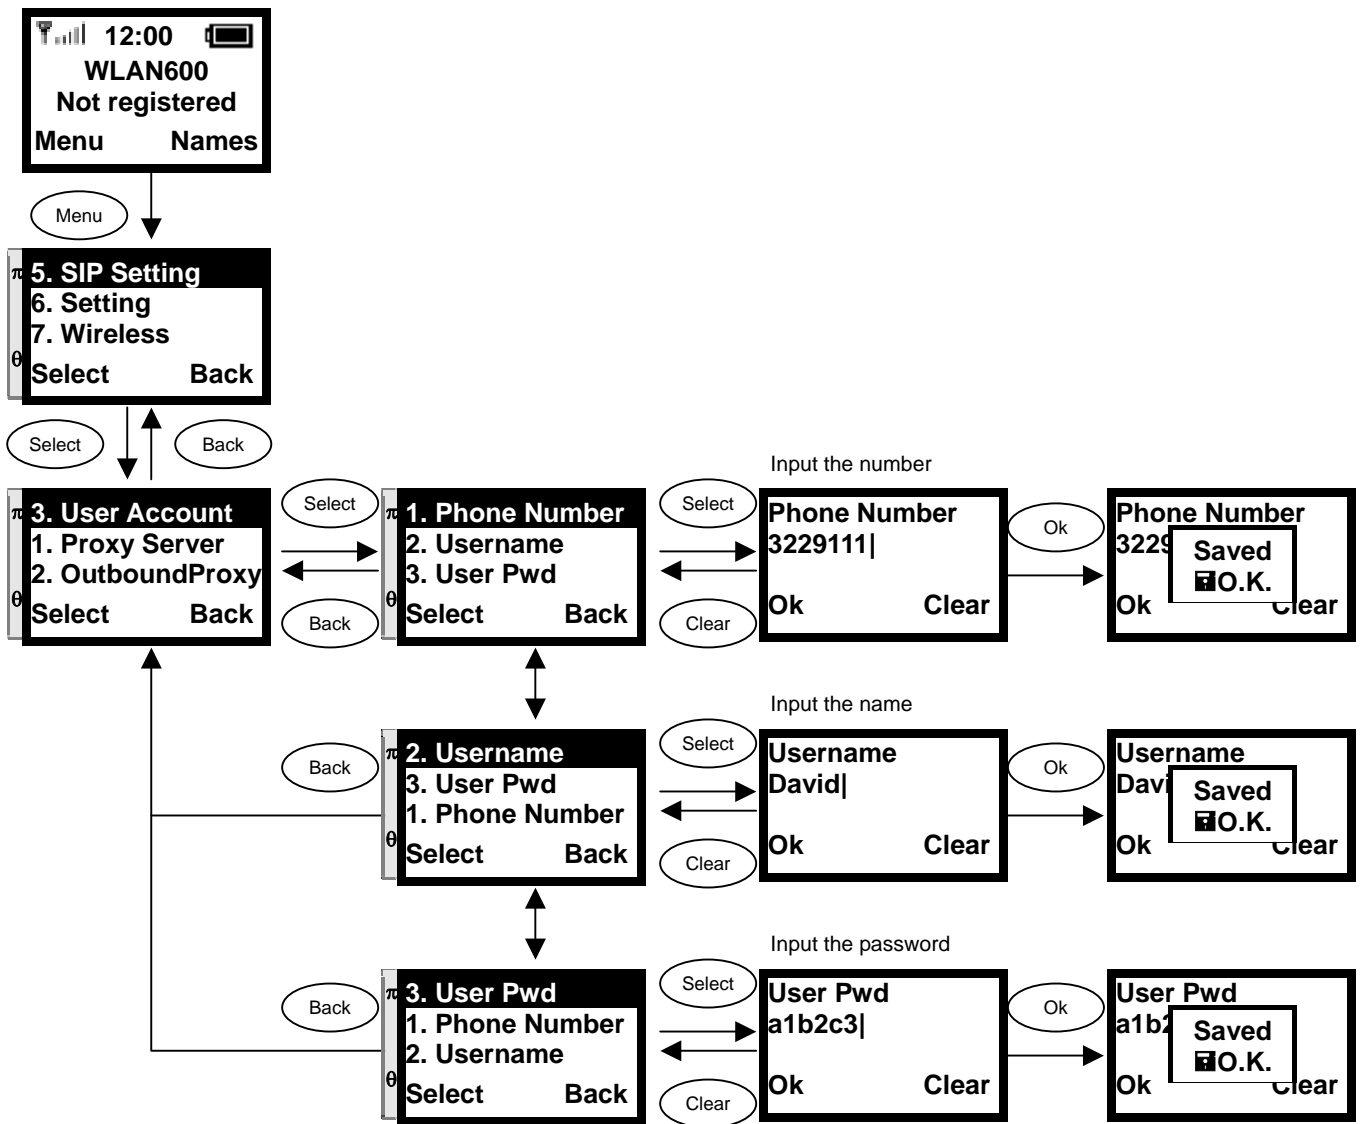







1. In idle state, press  key.
2. Press  or  key, until “SIP Setting” in screen.
3. Press  key, into “SIP Setting”..
4. Press  or  key, until “User Account” in screen.
5. Press  key, into “User Account”.
6. Press  or  key, until “Phone Number” in screen..
7. Press  key, enter “edit” mode.
8. Press  key, delete all number of last entered..
9. When finished these entering or editing.
Press  key, return to “User Account”.
10. Press  or  key, until “Username” in screen.
11. Press  key, enter “edit” mode.
12. Press  key delete all number of last entered.
13. When finished these entering or editing.
Press  key, return to “User Account”.
14. Press  or  key, until “User Pwd” in screen.
15. Press  key, enter “edit” mode.
16. Press  key, delete all number of last entered..
17. When finished these entering or editing.
Press  key, return to “User Account”.

 


3.4. SSL Configuration

This section provides instructions for performing the SSL settings.

The Secure Sockets Layer (SSL) client provides a security protocol provides data encryption, server authentication, message integrity, and optional client authentication for a TCP/IP connection

1. In idle state, press  key.
2. Press ▲ or ▼ key, until “SSL Setting” in screen.
3. Press  key, into “SSL Setting”..
4. Press ▲ or ▼ key, until “SSL Select” in screen.
5. Press  key, into “SSL Select”.
6. Press ▲ or ▼ key, scroll to “on”.
7. When finished these entering or selecting.
Press  key, return to “SSL Setting”.
8. Press ▲ or ▼ key, until “SSL Username” in screen.
9. Press  key, enter “edit” mode.
10. Press  key delete all number of last entered..
11. When finished these entering or editing.
Press  key, return to “SSL Setting”.
12. Press ▲ or ▼ key, until “SSL PWD” in screen.
13. Press  key, enter “edit” mode.
14. Press  key delete all number of last entered..
15. When finished these entering or editing.
Press  key return to “SSL Setting”.

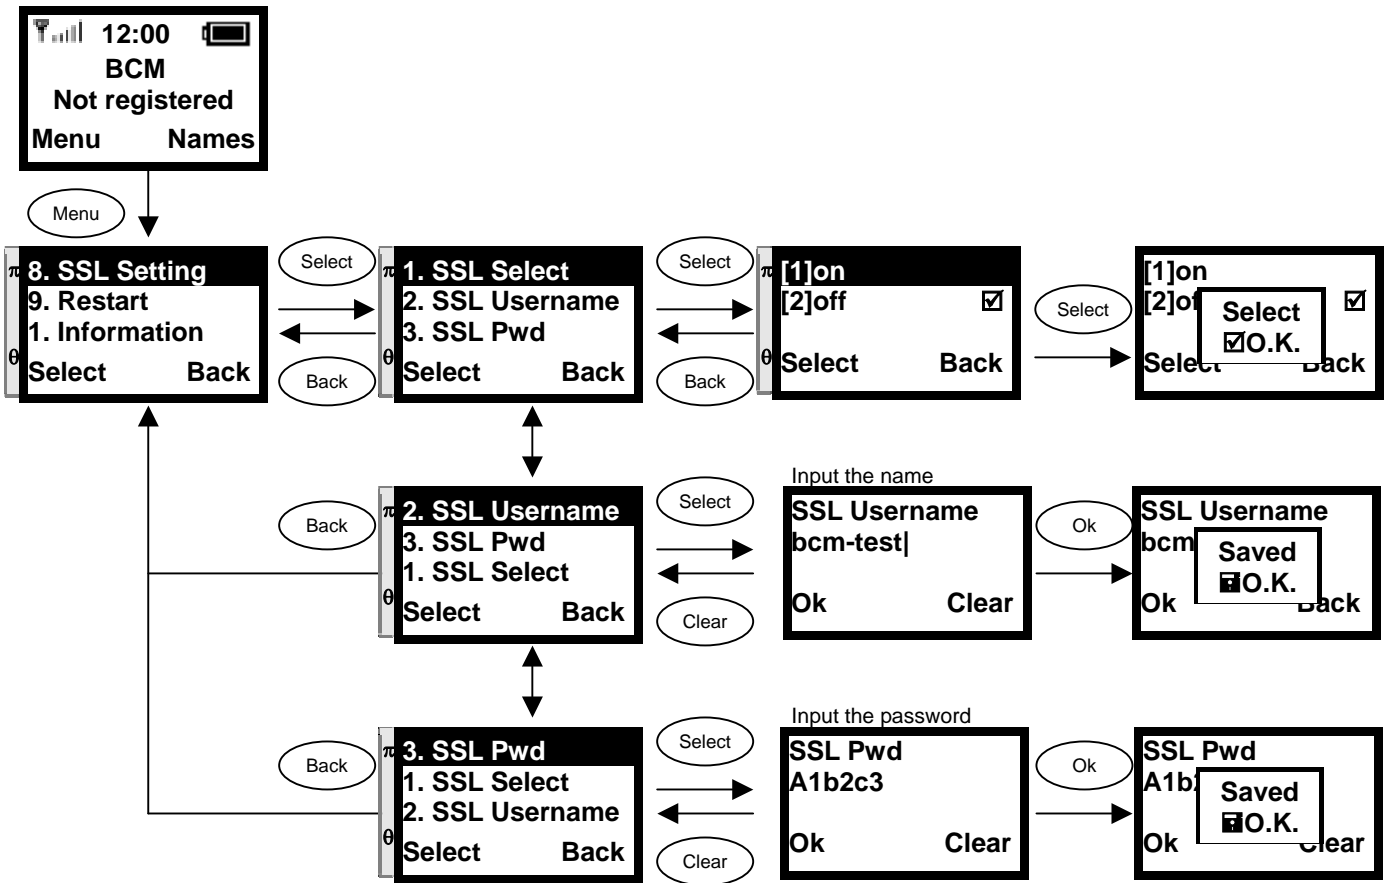
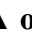









3.5. Using the Phone Book


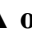





This section provides information about accessing the phone book and using its features.

 
3.5.1. Searching Phone Book Entry: Speed Dial Key

This section provides information about performing the Speed Dial settings.

1. In idle state, press  key.
2. Press  or  key, until “Phone Book” in screen.
3. Press  key, into “Phone Book Setting”
4. Press  or  key, until “Search” in screen.
5. Press  key, into “Search”
6. Press  or  key, scroll to “list of entries”.


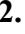



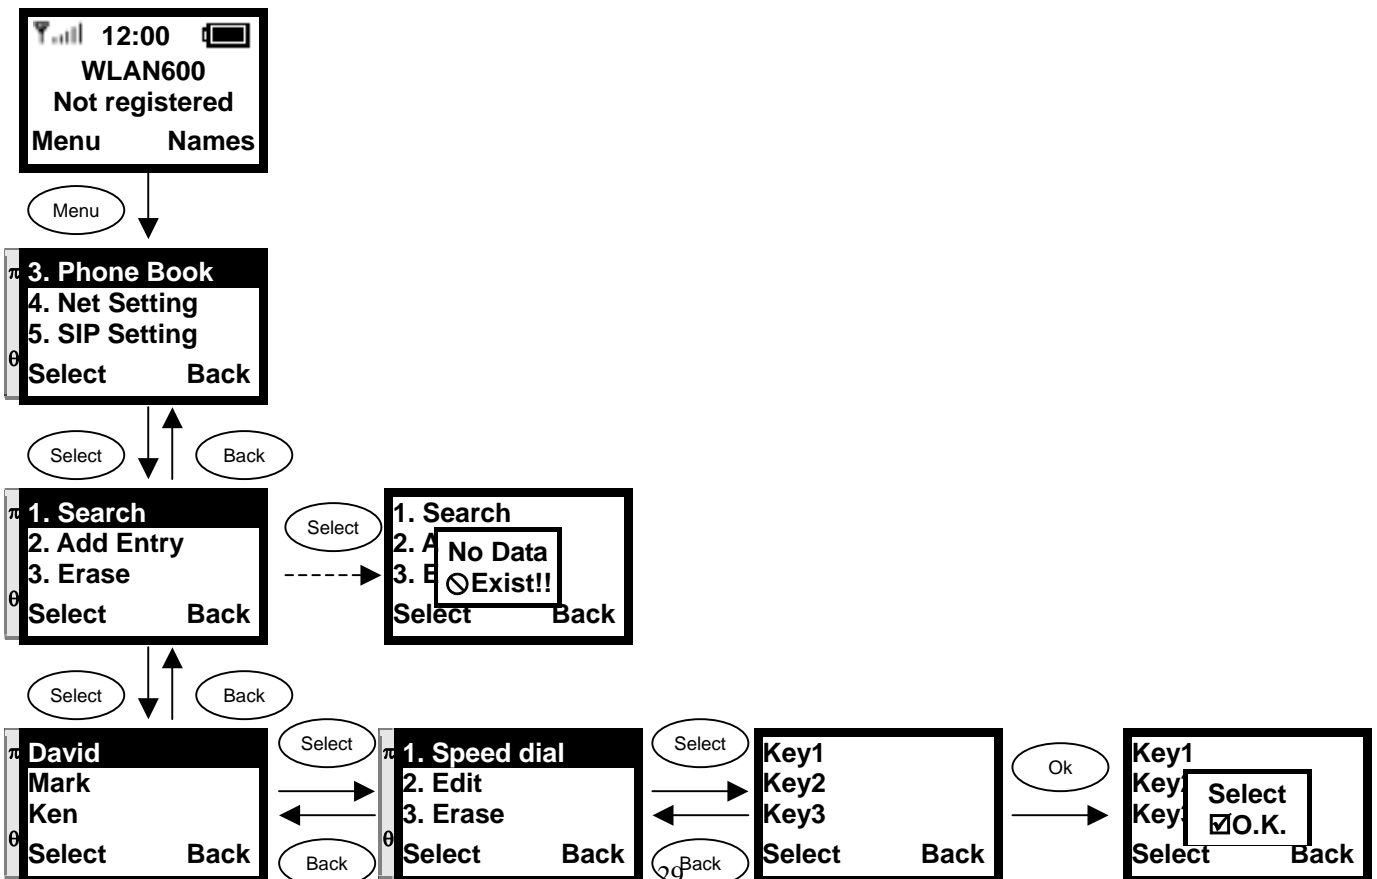



If there is no any entry, it will show “No Data Exist!” in screen.

7. Press  key, into/add the entry.
8. Press  or  key, until “Speed Dial” in screen.
9. Press  key, into “Speed Dial”.
10. Press  or  key, scroll to “key numbers”.
11. When finished these entering or selecting.
Press  key, return to “Search”.






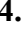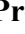






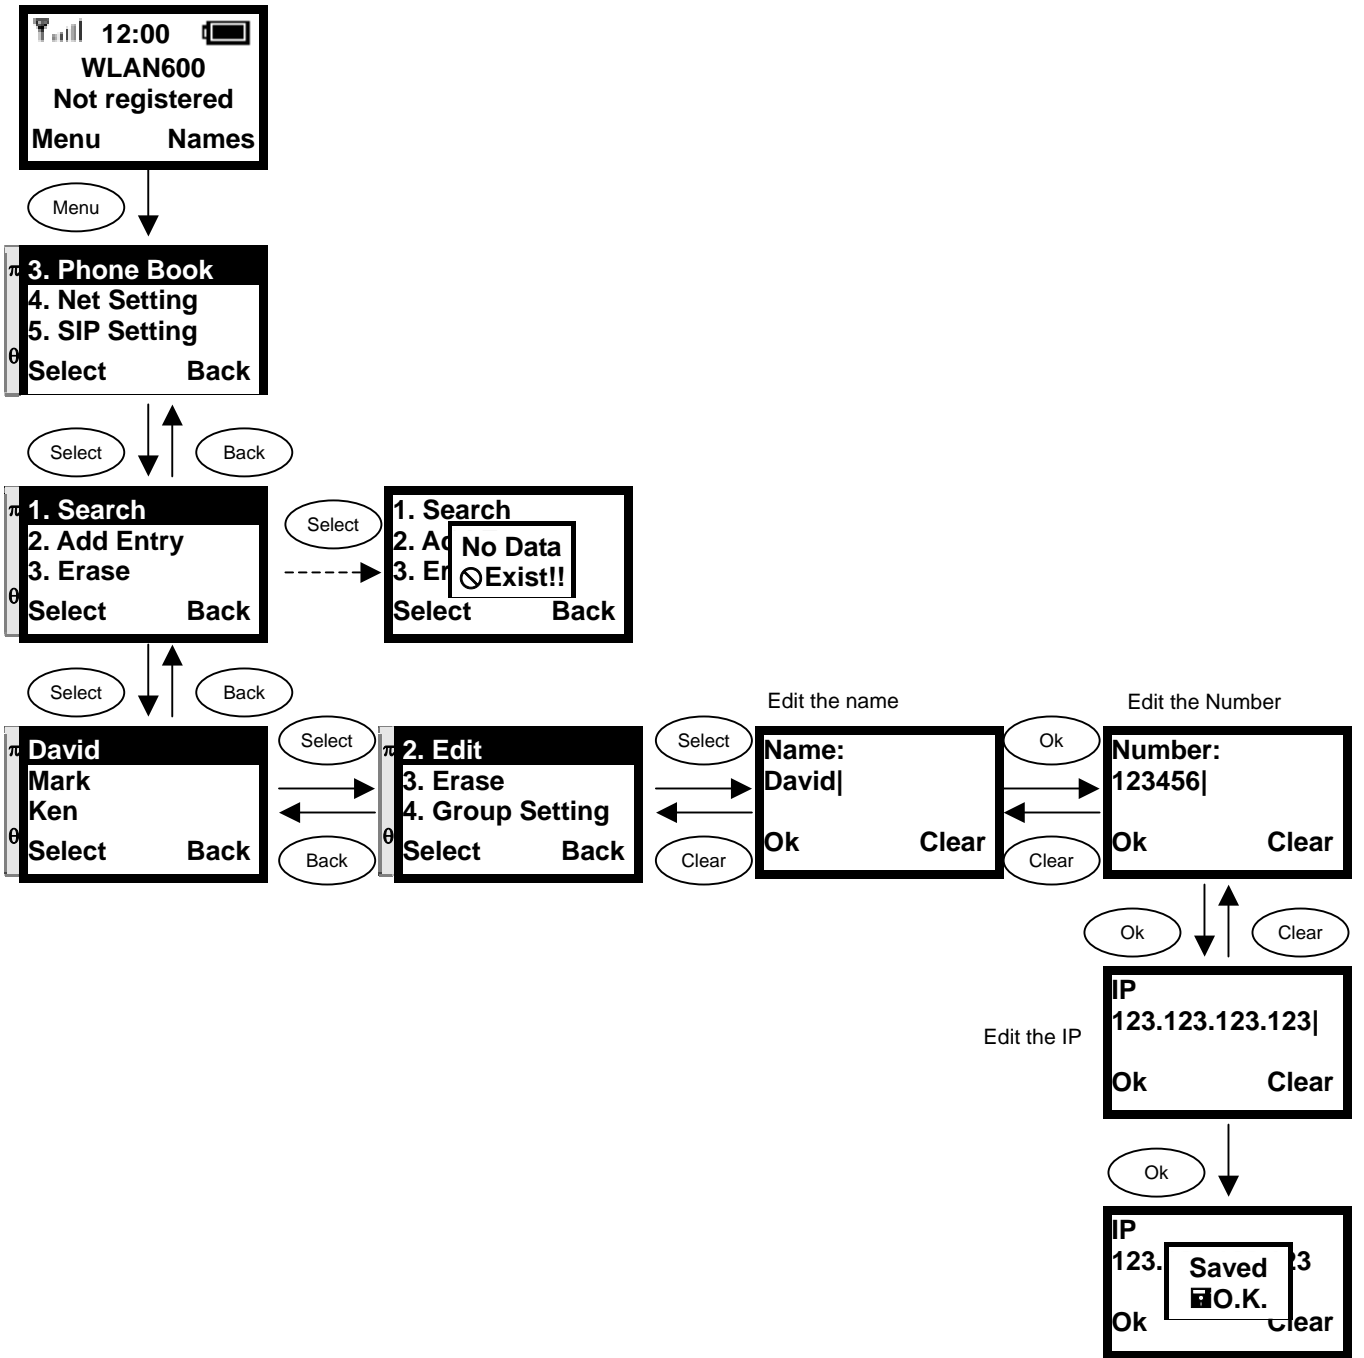 
3.5.2. Searching Phone Book Entry: Edit Entry

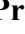This section provides information about performing the Speed Dial settings.

1. In idle state, press  key.
2. Press  or  key, until “Phone Book” in screen.
3. Press  key, into “Phone Book Setting”.
4. Press  or  key, until “Search” in screen.
5. Press  key, into “Search”.
6. Press  or  key, scroll “list of entries”.


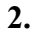







If there is no any entry, it will show “No Data Exist!” in screen.

7. Press  key, into/add the entry.
8. Press  or  key, until “Edit” screen.
9. Press  key, enter “edit name” mode.
10. Press  key, delete all number of last entered.
11. Press  key, enter “edit number” mode.
12. Press  key, delete all number of last entered.
13. Press  key, enter the “edit IP” mode.
14. Press  key, delete all number of last entered.
15. When finished these entering or editing.
Press  key, return to “Search”.


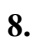







3.5.3. Searching Phone Book Entry: Erase Entry

This section provides information about performing the Erase Phone Book Entry settings.

 1. In idle state, press  key.
2. Press  or  key, until “Phone Book” in screen.
3. Press  key, into “Phone Book Setting”.
4. Press  or  key, until “Search” screen.
5. Press  key, into “Search”.
6. Press  or  key, scroll the list of entries.


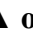




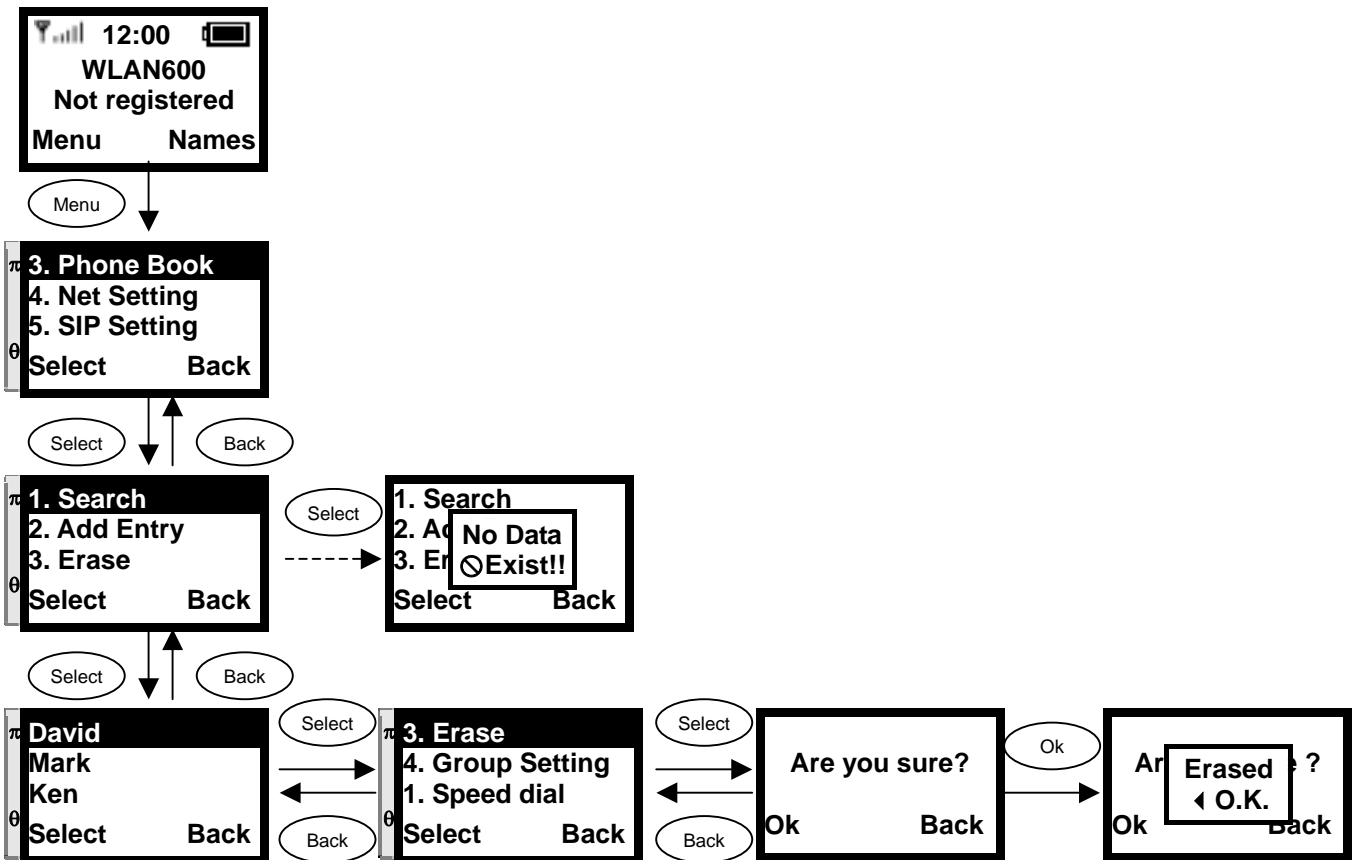


If there is no any entry, it will show “No Data Exist!” in screen

7. Press  key, into/add the entry.
8. Press  or  key, until “Erase” in screen.
9. Press  key, into “Erase”.
10. Press  key, confirm the erase entry.
11. When finished these entering or editing.
12. Press  key, return to “Search”.


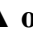







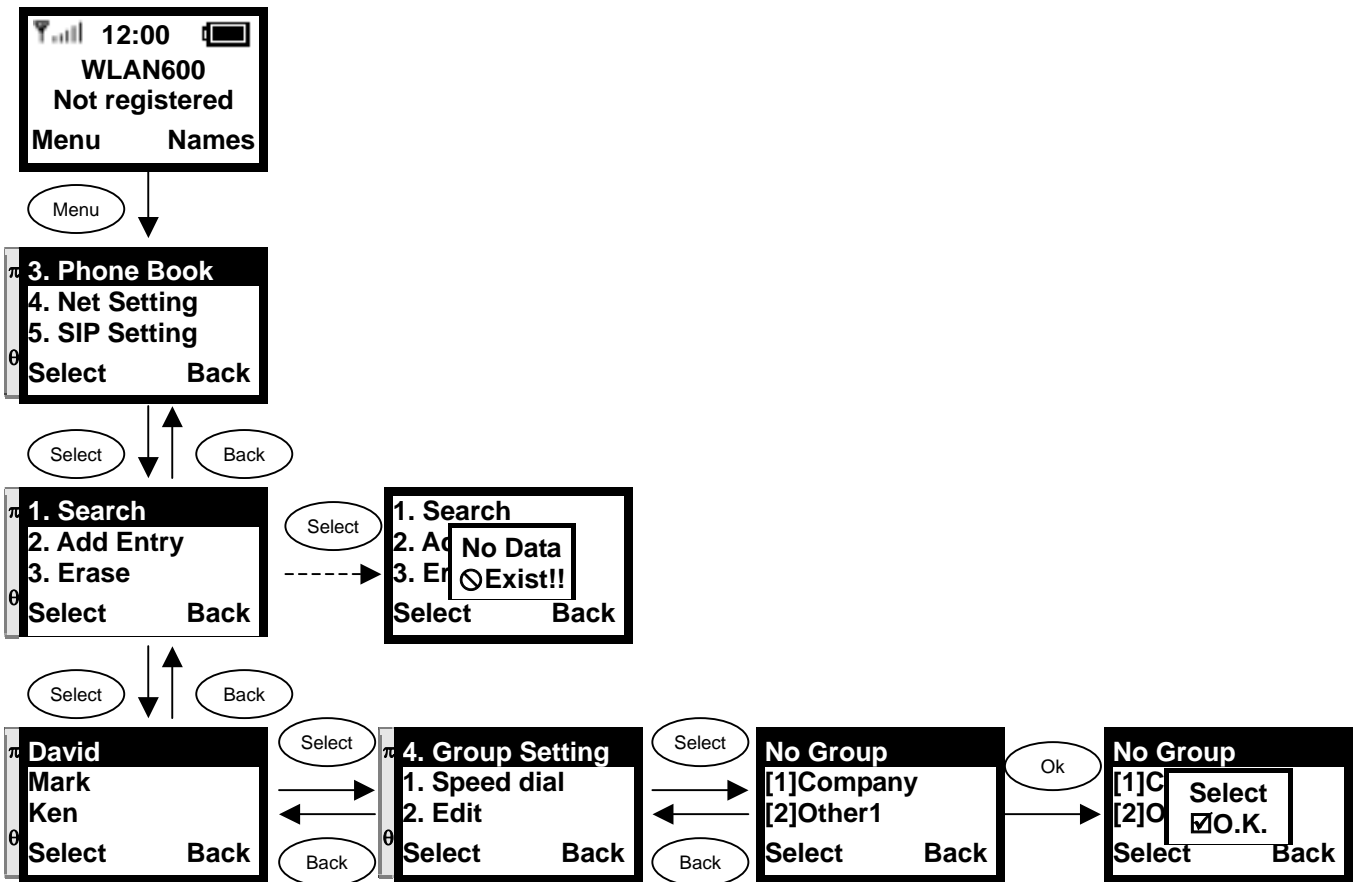 
3.5.4. Searching Phone Book Entry: Group Setting

This section provides information about performing the Phone Book Entry Group Settings.

1. In idle state, press  key.
2. Press  or  key, until “Phone Book” in screen.
3. Press  key, into “Phone Book Setting”.
4. Press  or  key, until “Search” in screen.
5. Press  key, into “Search”.
6. Press  or  key, scroll to the list of entries.












If there is no any entry, it will show “No Data Exist!” in screen.

 
7. Press  key, into/add the entry.
8. Press  or  key, until “Group Setting” in screen.
9. Press  key, into “Group Setting”.
10. Press  or  key, scroll to “Group” format.
11. When finished these entering or editing.
Press  key, return to “Group Setting”.



3.5.5. Adding a Phone Book Entry



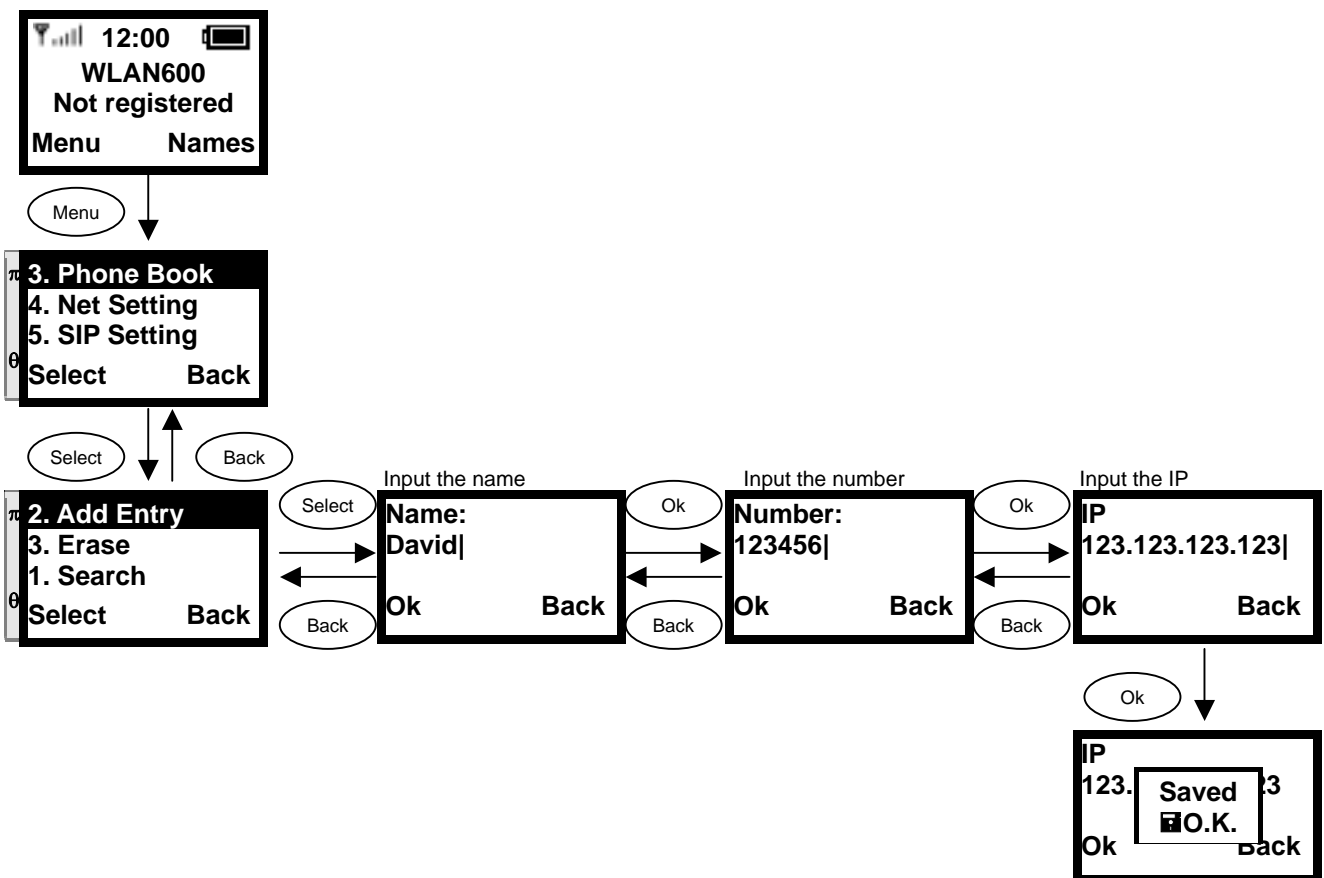

This section provides information about performing add a phone book entry settings.

1. In idle state, press  key.
2. Press  key, until “Phone Book” in screen.
3. Press  key, into “Phone Book Setting”.
4. Press  key, until “Add Entry” in screen.
5. Press  key, enter “edit name” mode.
6. Press  key, delete all number of last entered.
7. Press  key, enter “edit number” mode.
8. Press  key, delete all number of last entered.
9. Press  key, enter “edit IP” mode.
10. Press  key, delete all number of last entered.
11. When finished these entering or editing.
Press  key, return to “Add Entry”.






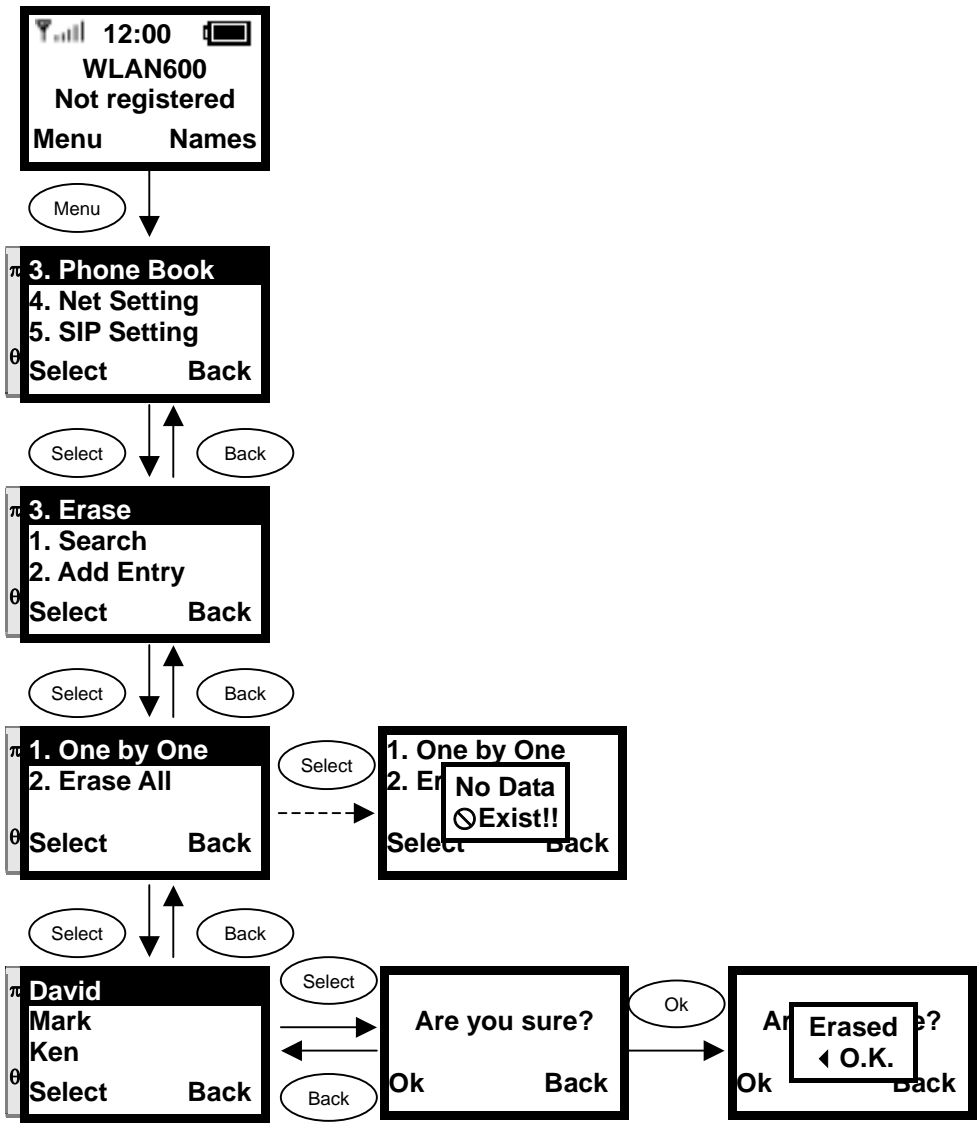 
3.5.6. Erasing Phone Book Entry: One by One

This section provides information about performing the Erase Phone Book Entry settings.

1. In idle state, press  key.
2. Press ▲ or ▼ key, until “Phone Book” in screen.
3. Press  key, into “Phone Book Setting”.
4. Press ▲ or ▼ key, until “Erase” in screen.
5. Press  key, into “Erase”.
6. Press ▲ or ▼ key, until “One by One in screen.
7. Press  key, into “One by One”.
8. Press ▲ or ▼ key, scroll to the list of entries.


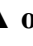
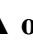









If there is no any entry, it will show “No Data Exist!” in screen

 
9. Press  key, into/add the entry.
10. Press  key, confirm the erase entry.
11. When finished these entering or editing.
Press  key, return to “Search”.



3.5.7. Erasing Phone Book Entry: All

This section provides information about performing the Erase Phone Book Entry settings.

1. In idle state, press  key.
2. Press  or  key, until “Phone Book” in screen.
3. Press  key, into “Phone Book Setting”.
4. Press  or  key, until “Erase” in screen.
5. Press  key, into “Erase”.
6. Press  or  key, until “Erase All” in screen.
7. Press  key, into “Erase All”.
8. Press  key, confirm the erase entry.
9. When finished these entering or editing.
Press  key, return to “Erase”.

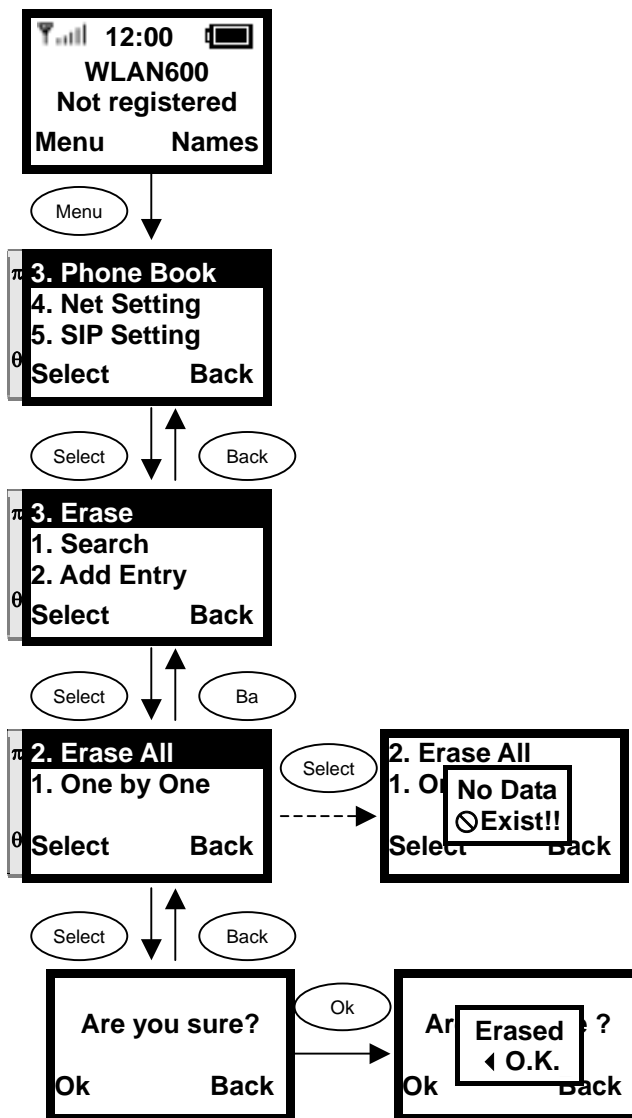



















3.6. Using the Call History

The Call History is a useful feature for checking missed calls, received calls, and dialed calls.

















3.6.1. Missed Call

 
You can check for missed calls and then edit and dial the phone numbers on the Missed Calls list.

Edit:

1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Missed Call” in screen.
5. Press  key, into “Miss Call”.
6. Press  or  key, scroll to “Missed call” number.
Or then Press  key to dial the number.
7. Press  key, edit the number.
8. Press  or  key, until “Edit Missed” in screen.
9. Press  key, enter to “edit number” mode.
10. Press  key, delete all number of last entered.
11. Press  key, enter to “edit name” mode.
12. Press  key, delete all number of last entered.
13. When finished these entering or editing.
Press  key, return to “Missed call”.

Erase:


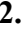


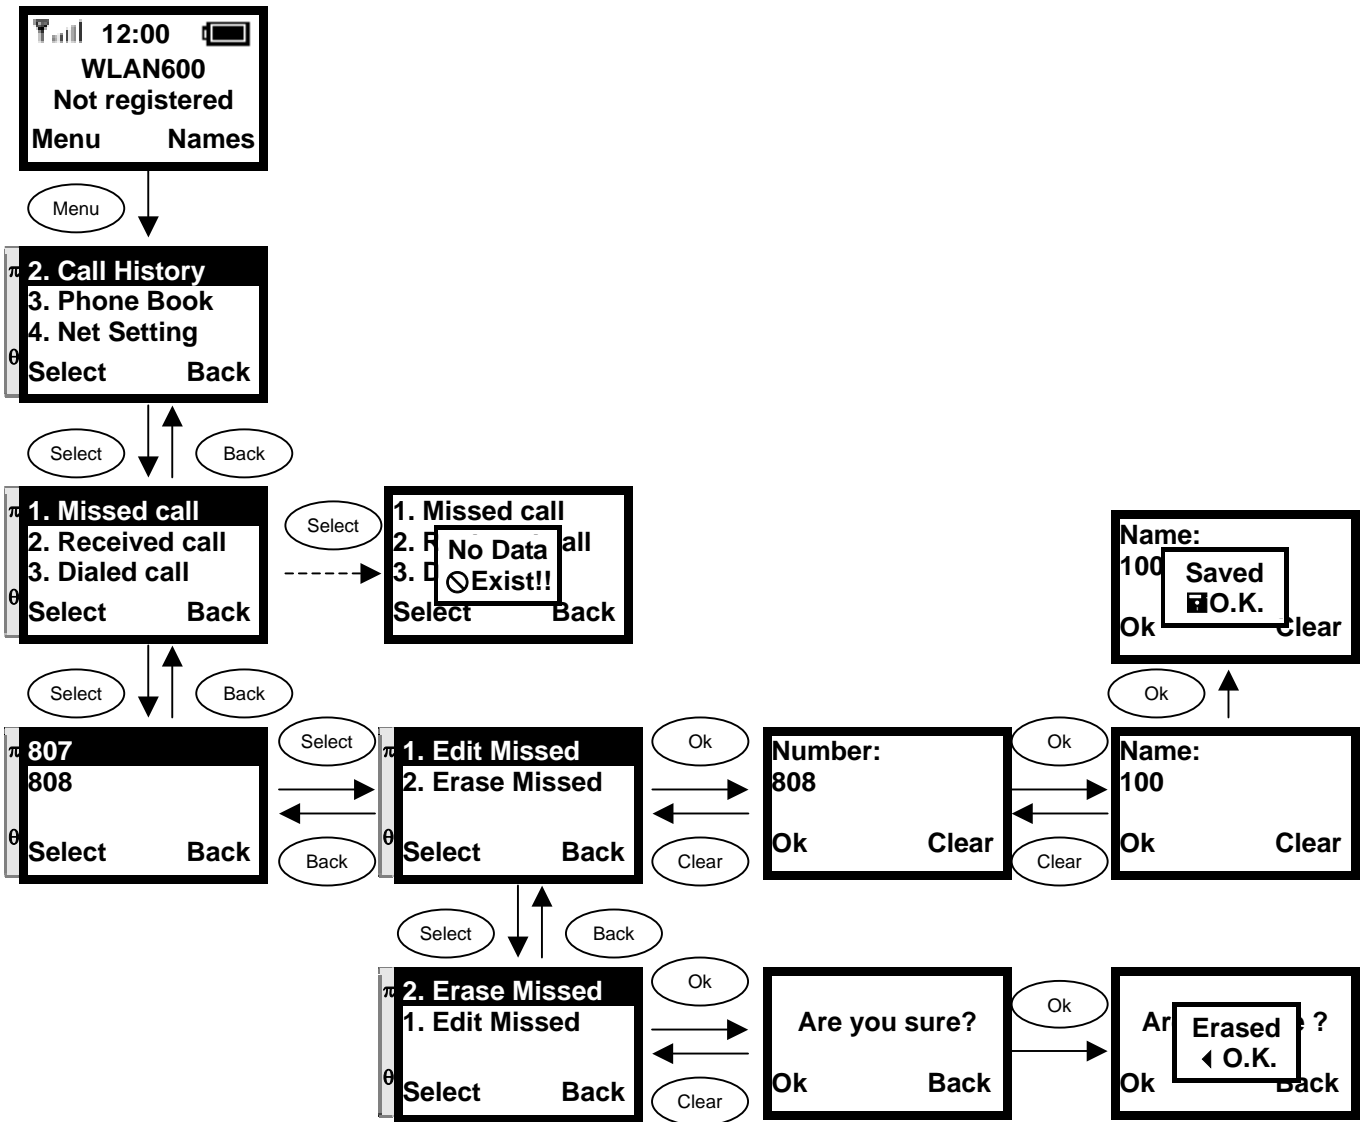













1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Missed Call” in screen.
5. Press  key, into “Missed Call”.
6. Press  or  key, scroll to “Missed call number”.
Or then Press  key to dial the number.
7. Press  key to erase the number, if necessary.
8. Press  or  key, until “Erase Missed” in screen.
9. Press  key, into “Erase Missed”.
10. Press  key, confirm the erase Miss call.
11. When finished these entering or editing.
12. Press  key, return to “Missed” call.




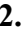





 








3.6.2. Received Call

 
You can check for Received calls and then edit and dial the phone numbers on the Missed Calls list.

Edit:

1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Received Call” in screen.
5. Press  key, into “Received Call”.
6. Press  or  key, scroll to “received call number”.
Or then Press  key to dial the number.
7. Press  key, into “edit the number”, if necessary.
8. Press  or  key, until “Edit Received” in screen.
9. Press  key, enter “edit number” mode.
10. Press  key, delete all number of last entered.
11. Press  key, enter “edit name” mode.
12. Press  key, delete all number of last entered.
13. When finished these entering or editing.
Press  key, return to “Received call”.

Erase:


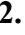


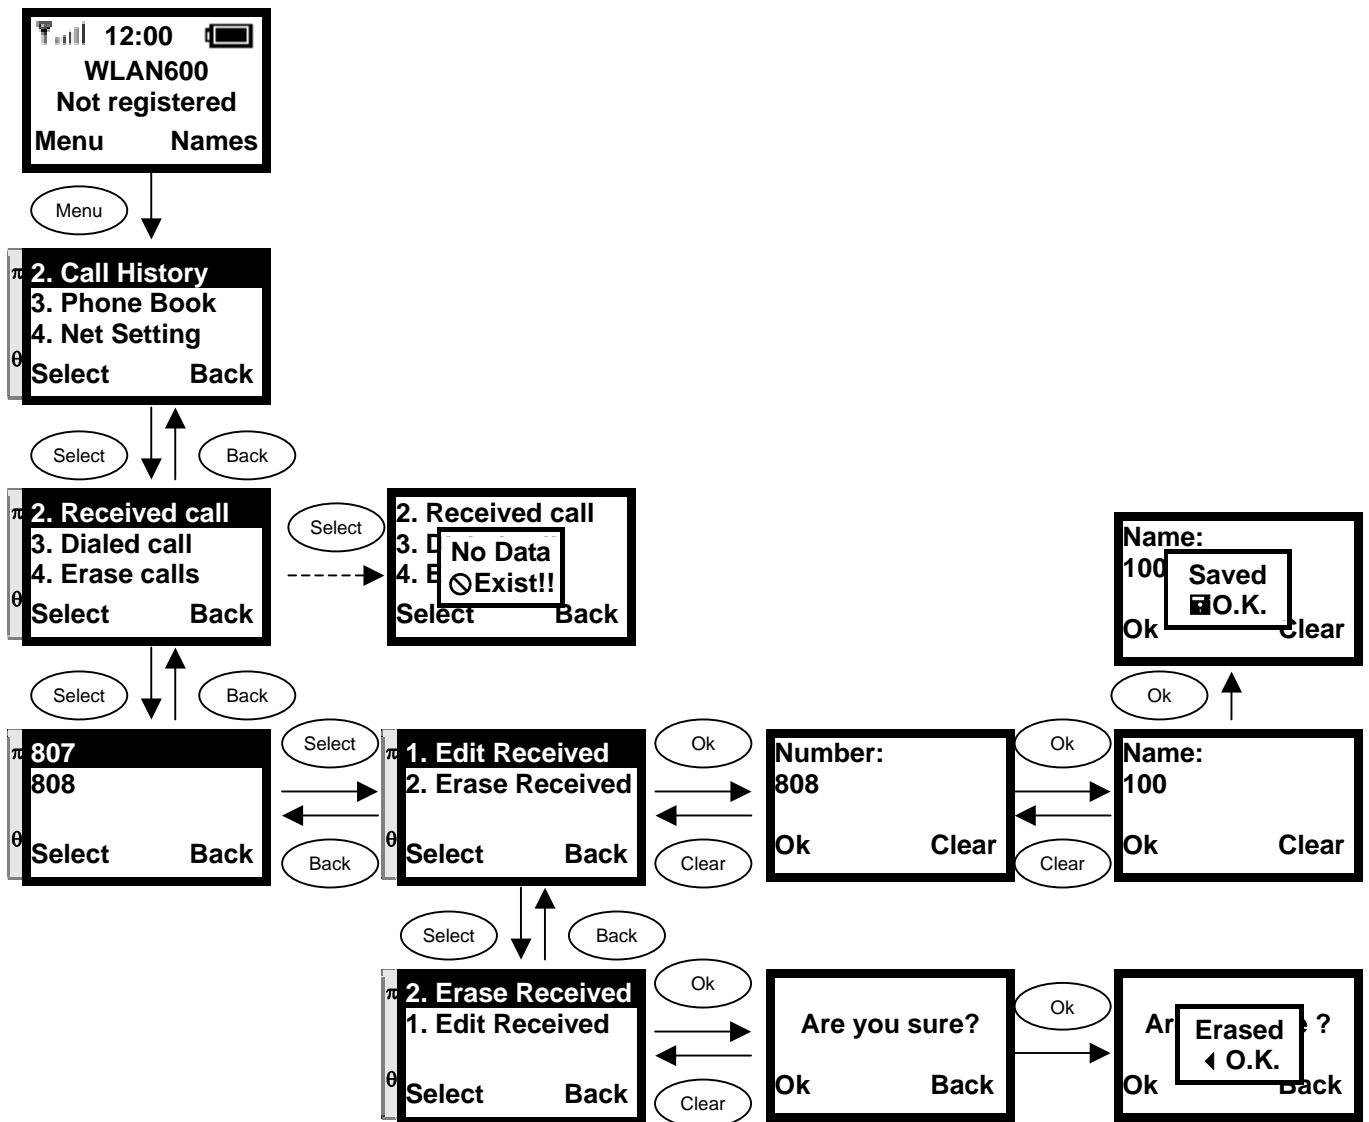













1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Received Call” in screen.
5. Press  key, into “Received Call”.
6. Press  or  key, scroll to the “Received call number”.
Or then Press  key to dial the number.
7. Press  key, erase the number, if necessary.
8. Press  or  key, until “Erase Received” in screen.
9. Press  key, into “Erase Received “.
10. Press  key, confirm the erase “Received call”.
11. When finished these entering or editing.
Press  key, return to “Received Call”.




 





 








3.6.3. Dialed Call

 
You can check for Dialed calls and then edit and dial the phone numbers on the Dialed Calls list.

Edit:

1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Dialed Call” in screen.
5. Press  key, into “Dialed Call”.
6. Press  or  key, scroll to the received call number.
Or then Press  key, dial the number, if necessary.
7. Press  key, edit the number, if necessary.
8. Press  or  key, until “Edit Dialed” in screen.
9. Press  key, enter the “edit number” mode.
10. Press  key, delete all number of last entered.
11. Press  key, enter “edit name” mode.
12. Press  key delete all number of last entered.
13. When finished these entering or editing.
Press  key, return to “Dialed call”.


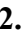




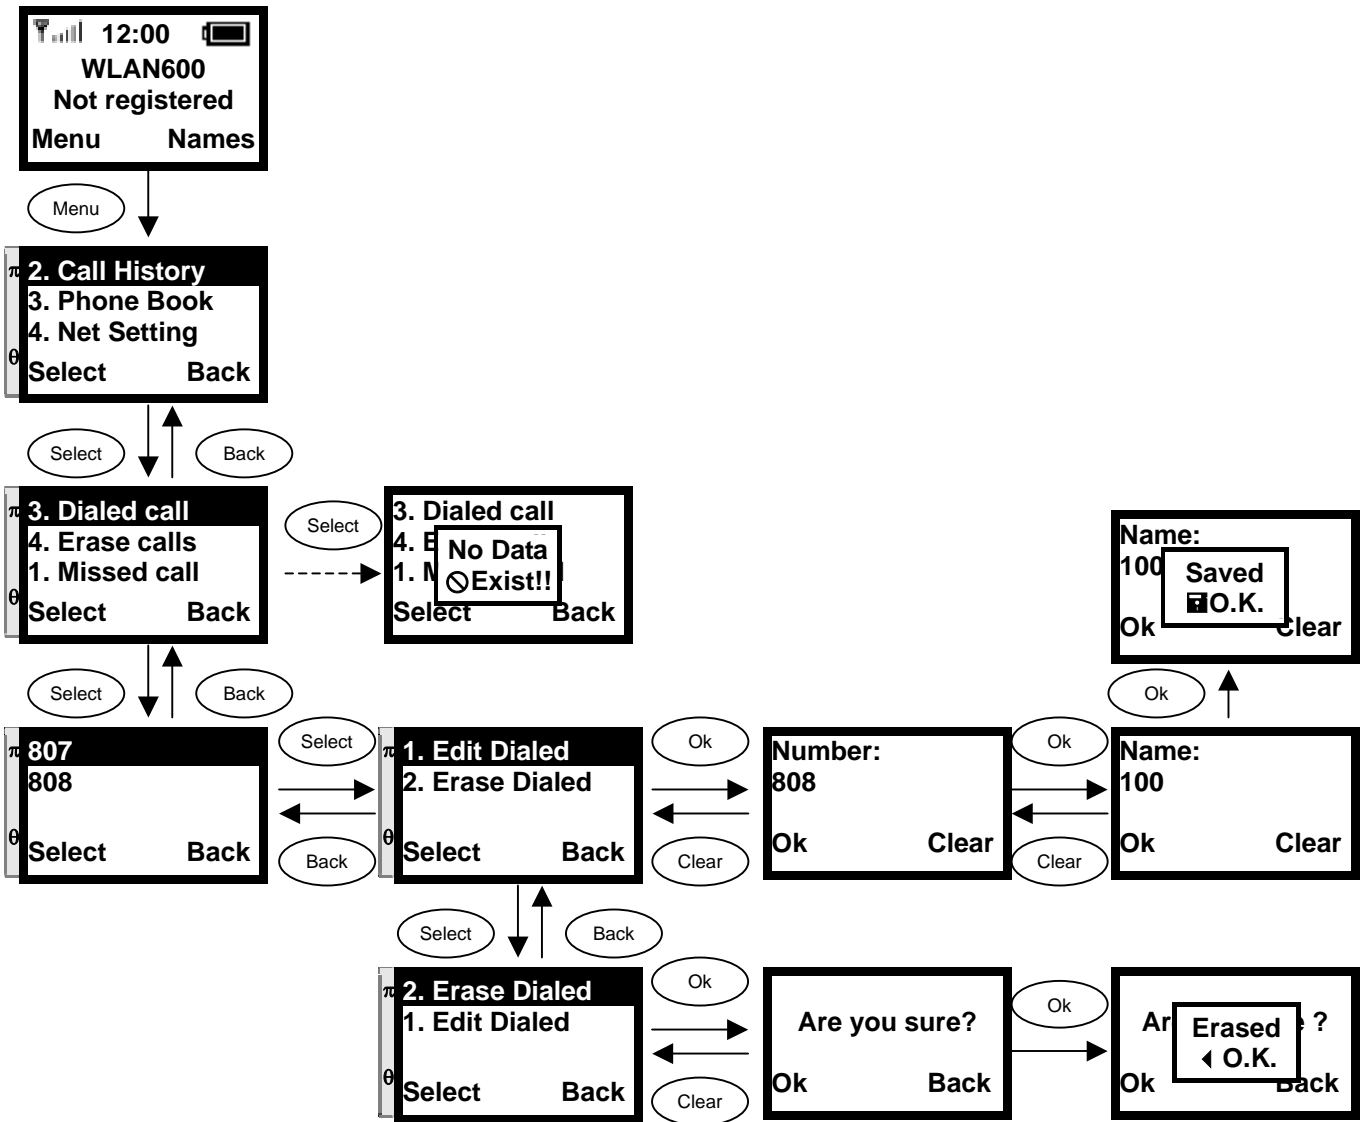





Erase:

1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Dialed Call” in screen.
5. Press  key, into “Dialed Call”.
6. Press  or  key, scroll to “Dialed call number”.
Or Press  key, dial the number, if necessary.
7. Press  key, erase the number, if necessary.
8. Press  or  key, until “Erase Dialed” in screen.
9. Press  key, into “Erase Dialed”.
10. Press  key, confirm the erase “Dialed call”.
11. When finished these entering or editing.
Press  key, return to “Dialed Call”.


 












3.6.4. Erase Calls


 










Erase All:

1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Erase Calls” in screen.
5. Press  key, into “Erase Calls”.
6. Press  or  key, scroll to “Erase All”.
7. Press  key, erase the Call History.
8. Press  key, confirm the erase “Call History”.
9. When finished these entering or editing.
Press  key, return to “Erase Calls”.


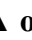










Erase Missed:


1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Erase Calls” in screen.
5. Press  key, into “Erase Calls”.
6. Press  or  key, scroll to “Erase Missed”.
7. Press  key, erase the Missed Call.
8. Press  key, confirm the erase “Missed Call”.
9. When finished these entering or editing.
Press  key, return to “Erase Calls”.

Erase Received:

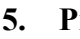1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Erase Calls” in screen.
5. Press  key, into “Erase Calls”.
6. Press  or  key, scroll to “Erase Received”.
7. Press  key to erase the Received Call.
8. Press  key, confirm the erase “Received Call”.
9. When finished these entering or editing.
Press  key, return to “Erase Calls”.

 Erase Dialed:


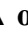

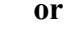


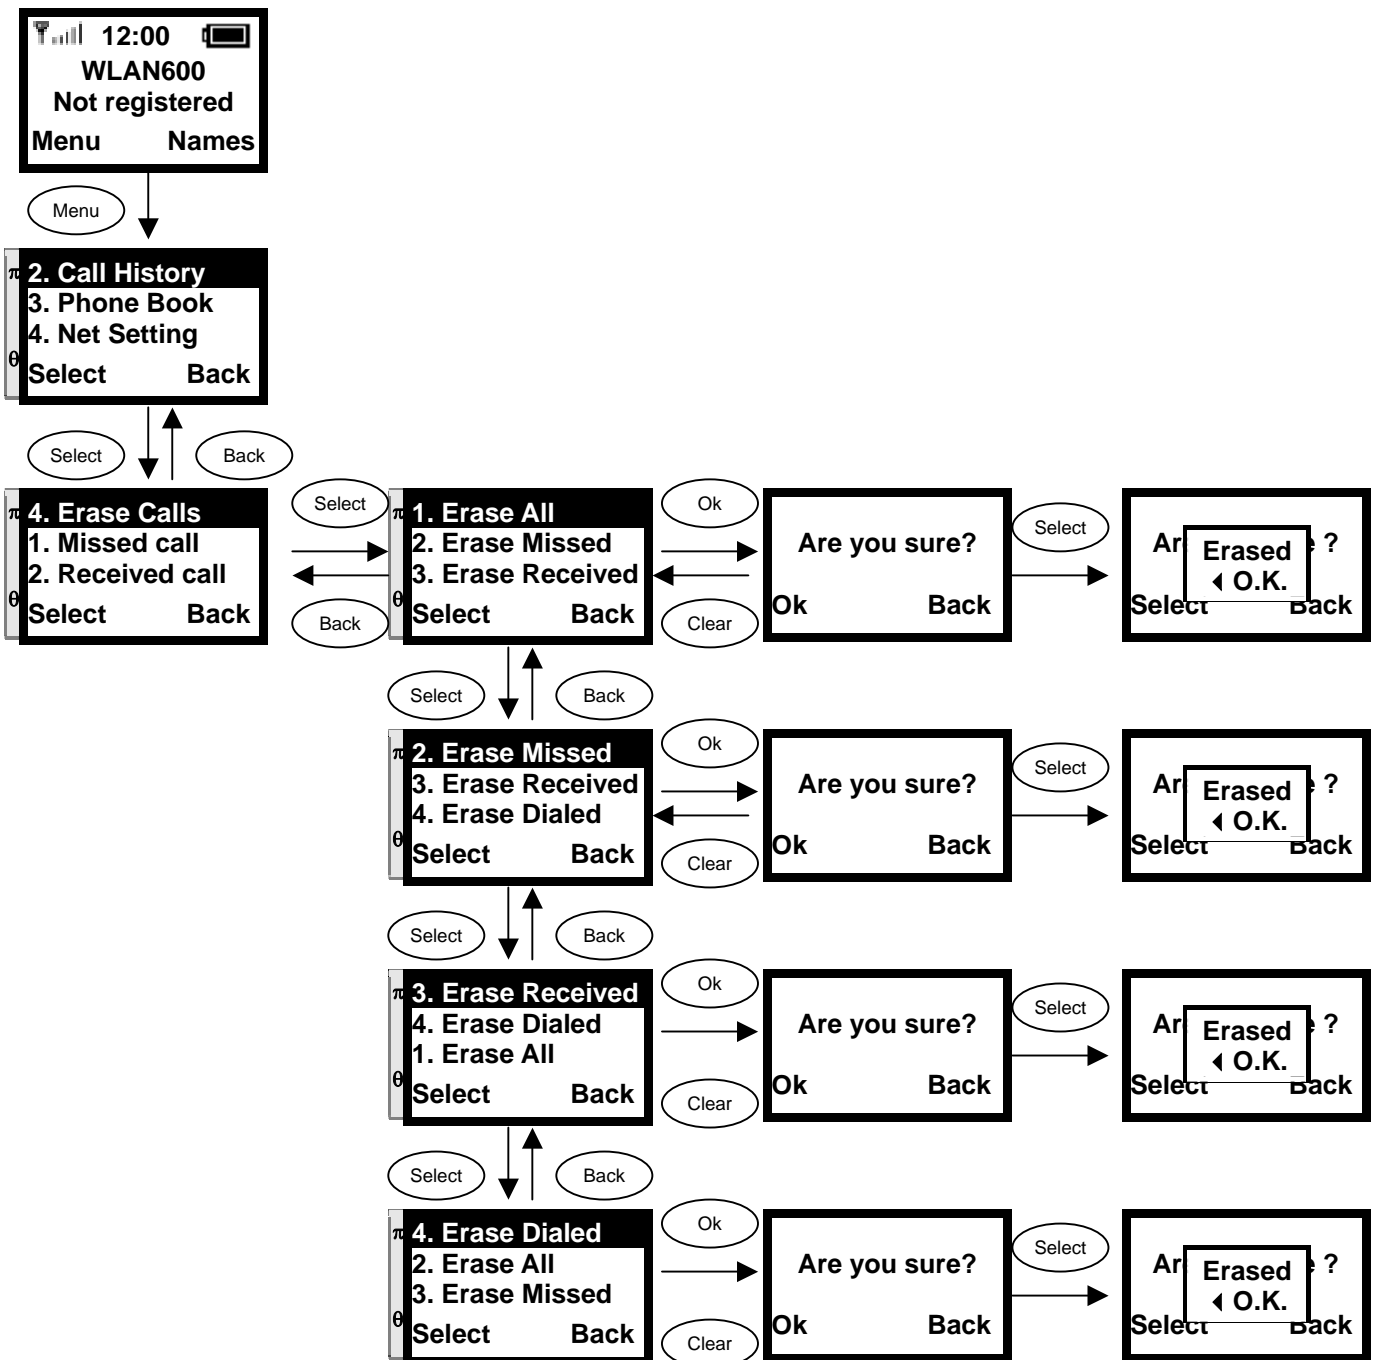



1. In idle state, press  key.
2. Press  or  key, until “Call History” in screen.
3. Press  key, into “Call History Setting”.
4. Press  or  key, until “Erase Calls” in screen.
5. Press  key, into “Erase Calls”.
6. Press  or  key, scroll to “Erase Dialed”.
7. Press  key to erase the Dialed Call.
8. Press  key, confirm the erase “Dialed Call”.
9. When finished these entering or editing.
Press  key, return to “Erase Calls”.

 


3.7. Setting







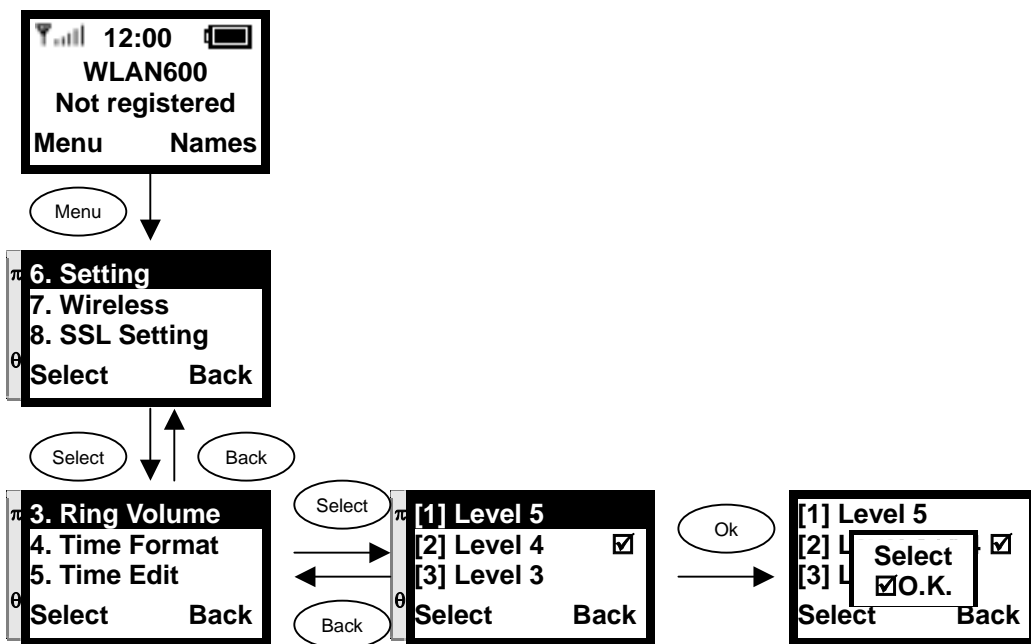



The Call History is a useful feature for checking missed calls, received calls, and dialed calls.

 
3.7.1. Adjusting the Ring Volume

1. In idle state, press  key.
2. Press  or  key, until “Setting” in screen.
3. Press  key, into “Setting”.
4. Press  or  key, until “Ring Volume” in screen.
5. Press  key, into “Ring volume”.
6. Press  or  key, scroll the Ring Volume.
7. When finished these entering or editing.
Press  key, return to “Setting”.







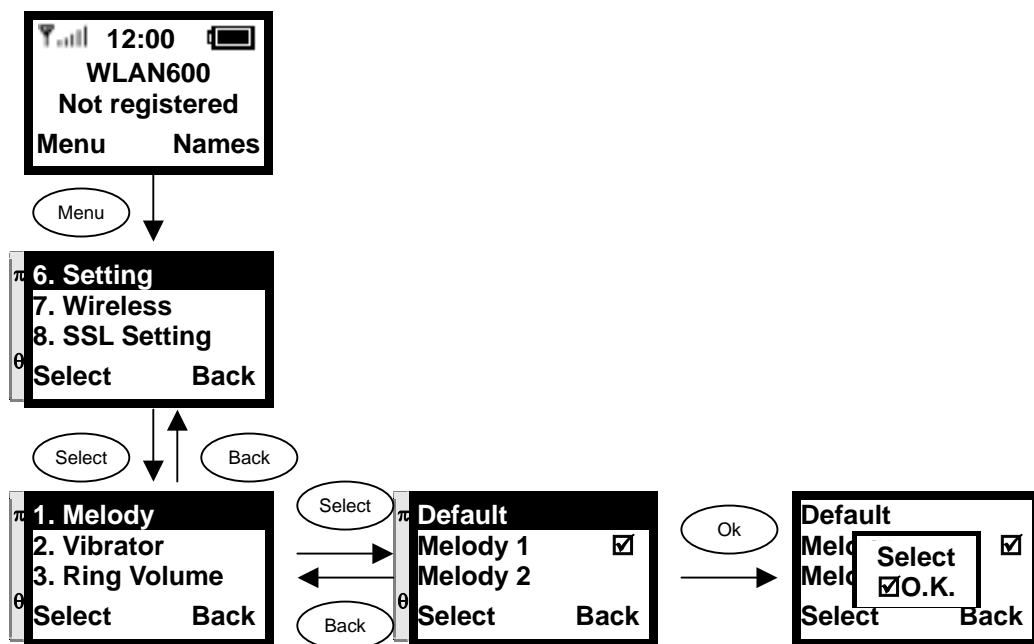






3.7.2. Setting the Ring Melody

 1. In idle state, press  key.
2. Press  or  key, until “Setting” in screen.
3. Press  key, into “Setting”.
4. Press  or  key, until “Melody” in screen.
5. Press  key, into “Melody”.
6. Press  or  key, scroll the Melody.
7. When finished these entering or editing.
Press  key, return to “Setting”.







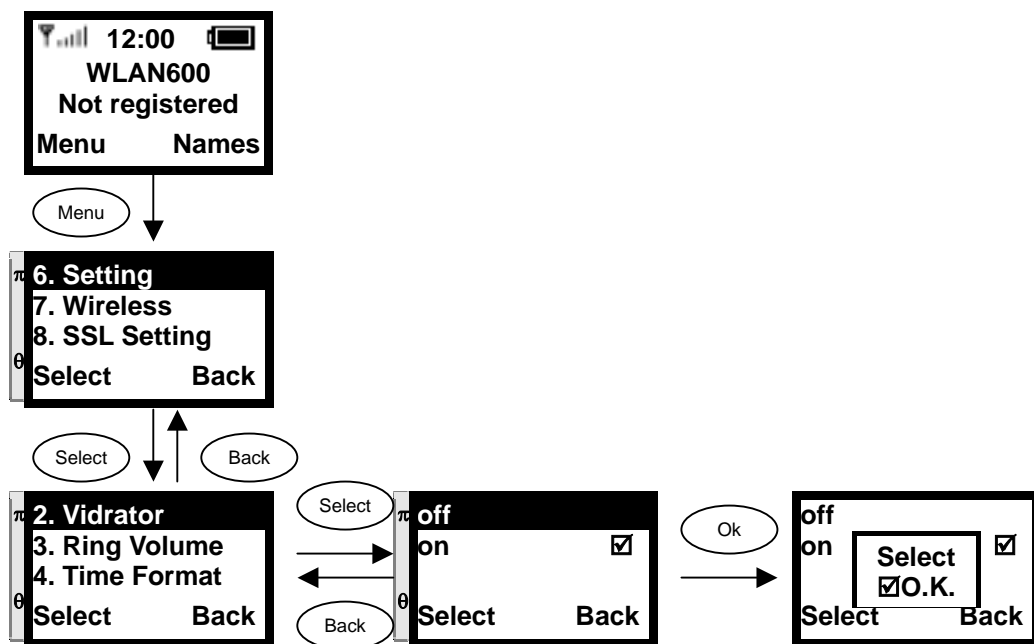






3.7.3. Setting the Vibrator Mode

 1. In idle state, press  key.
2. Press  or  key, until “Setting” in screen.
3. Press  key, into “Setting”.
4. Press  or  key, until “Vibrator” in screen.
5. Press  key, into “Vibrator”.
6. Press  or  key, scroll the Vibrator on/off.
7. When finished these entering or editing.
Press  key, return to “Setting”.







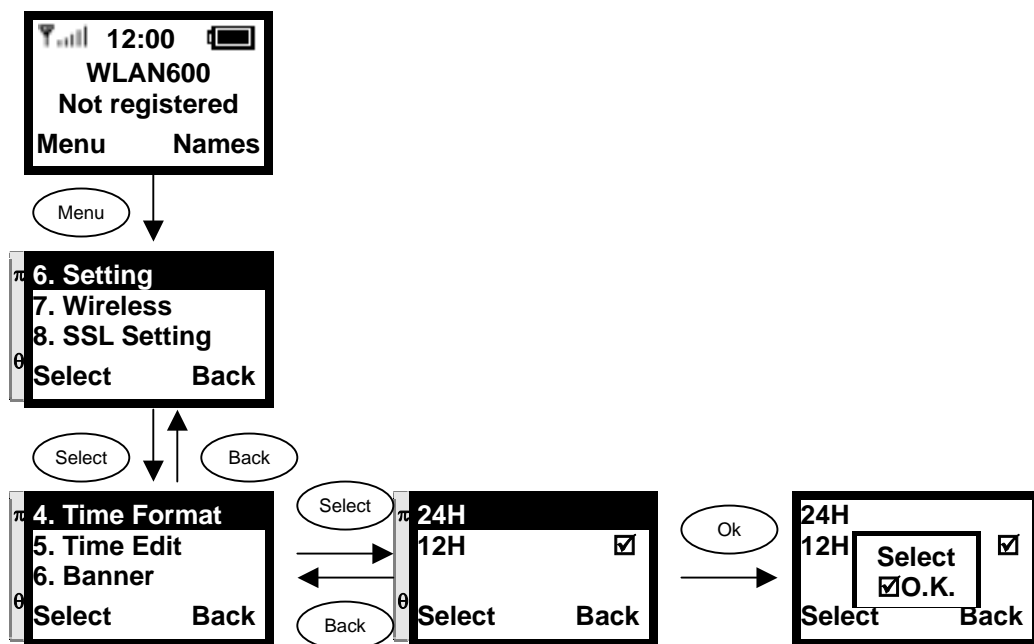






3.7.4. Setting the Time Format

 1. In idle state, press  key.
2. Press  or  key, until “Setting” in screen.
3. Press  key, into “Setting”.
4. Press  or  key, until “Time Format” in screen.
5. Press  key, into “Time Format”.
6. Press  or  key, scroll the Time Format.
7. When finished these entering or editing.
Press  key, return to “Setting”.







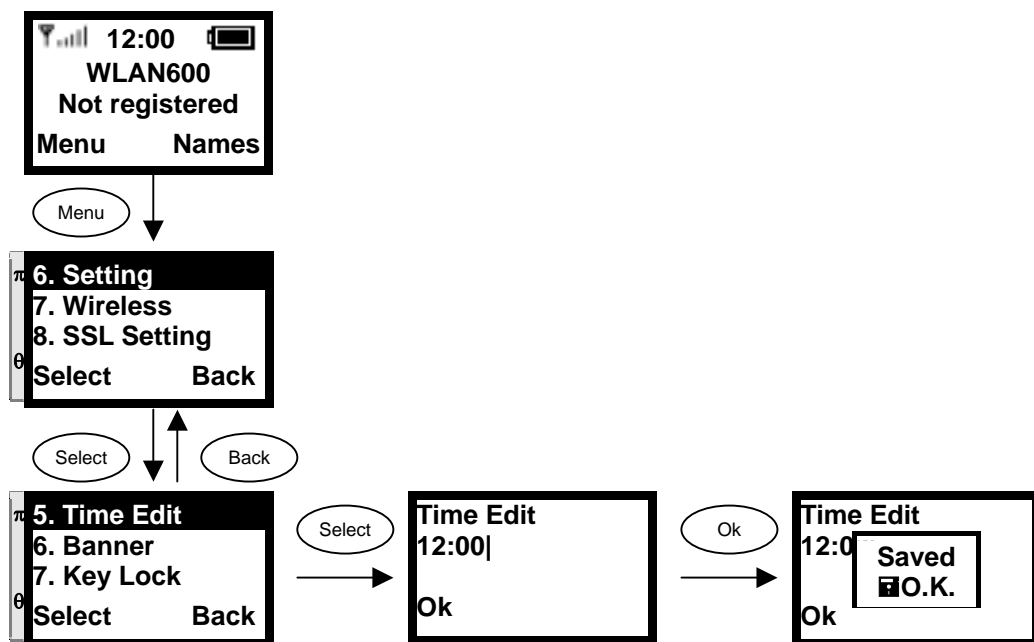




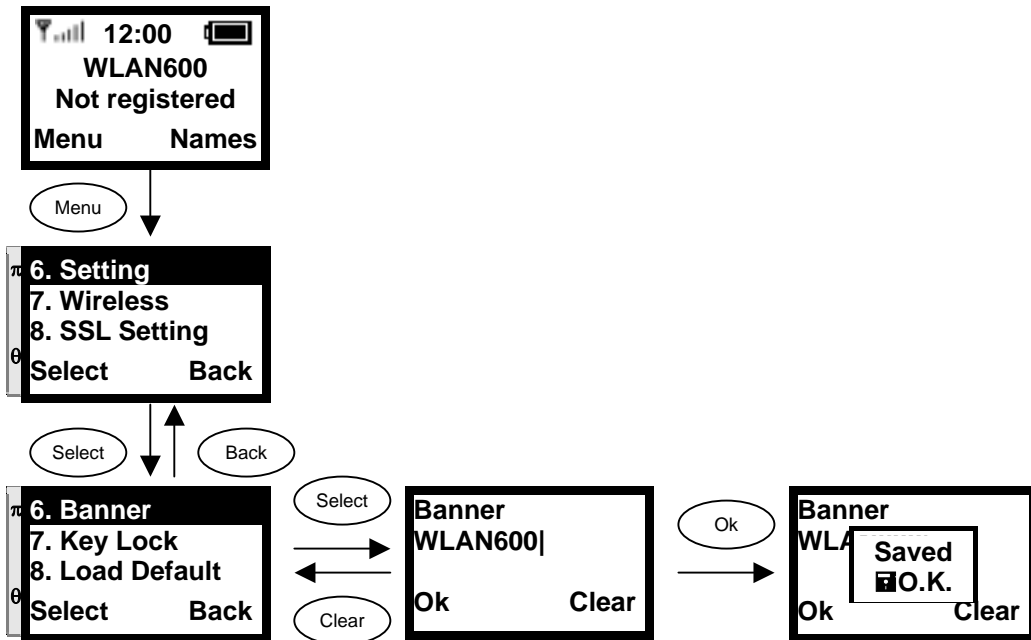 
3.7.5. Setting the Time Edit

1. In idle state, press  key.
2. Press  or  key, until “Setting” in screen.
3. Press  key, into “Setting”.
4. Press  or  key, until “Time Edit” in screen.
5. Press  key, enter “edit number” mode.
6. Press  or  key to moving the cursor when editing.
7. When finished these entering or editing.
Press  key, return to “Setting”.













 
3.7.6. Setting the Banner

1. In idle state, press  key.
2. Press  or  key, until “Setting” in screen.
3. Press  key, into “Setting”.
4. Press  or  key, until “Banner” in screen.
5. Press  key, enter “edit” mode.
6. Press  key delete all number of last entered.
7. When finished these entering or editing.
Press  key, return to “Setting”.





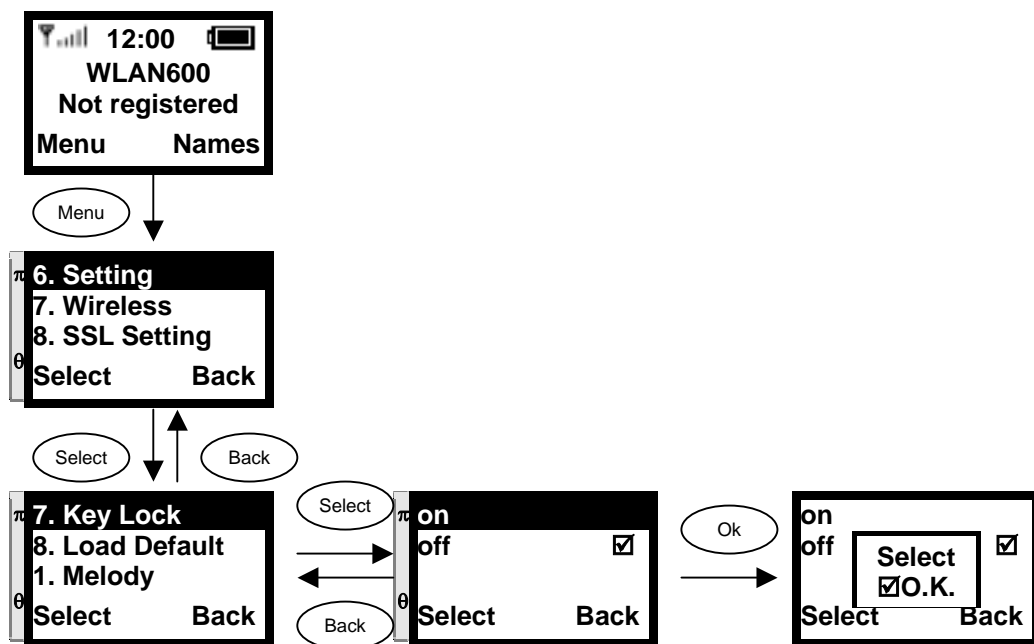


3.7.7. Setting the Key Lock.

1. In idle state, press  key.
2. Press  or  key, until “Setting” in screen.
3. Press  key, into “Setting”.
4. Press  or  key, until “Key Lock” in screen.
5. Press  key, into “Key Lock”.
6. Press  or  key, scroll the Key Lock on/off.
7. When finished these entering or editing.
Press  key, return to “Setting”.



3.7.8. Restoring the Factory Default Settings

 1. In idle state, press  key.
2. Press **▲** or **▼** key, until “Setting” in screen.
3. Press  key, into “Setting”.
4. Press **▲** or **▼** key, until “Load Default” in screen.
5. Press  key, into “Load Default”.
6. Press  key, confirm the “Load Default Factory”.
7. The device will automatically reboot when the factory default settings are restored.

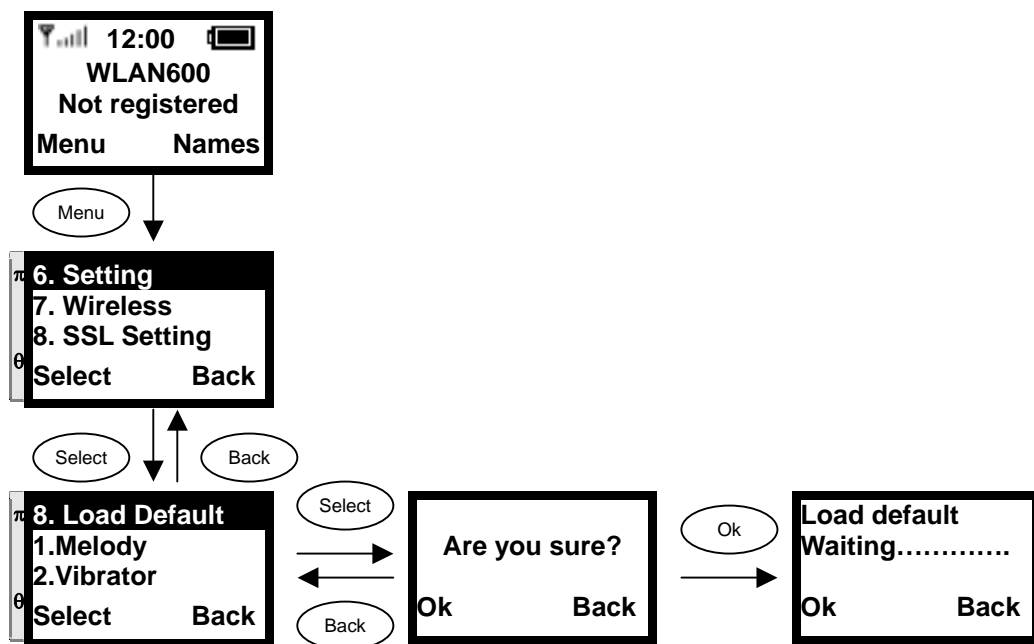

4. Web Configuration Setting

This chapter provides information that is using the web Browser to configure the WLAN600 Wireless IP Phone.

4.1. Configuration Parameters

- **Device Information**
 - ◆ **Software Version**
 - ◆ **Bootrom Version**
 - ◆ **Release Date**
 - ◆ **Ethernet Port**
 - ◆ **Telephony Port**
- **Network Configuration**
 - ◆ **Get IP Address**
 - **Static**
 - **DHCP**
 - **PPPoE**
 - ◆ **NetWork IP**
 - ◆ **NetWork Subnet Mask**
 - ◆ **NetWork Default Gateway**
 - ◆ **PPPoE Username**
 - ◆ **PPPoE Password**
 - ◆ **MAC ID**
- **OutBound Proxy Configuration**
 - ◆ **Proxy IP Address**
 - ◆ **Proxy Port**
 - ◆ **Domain Name Server**
 - **Disabled**
 - **Enabled**
 - ◆ **DNS Server IP**
 - ◆ **Second DNS Server IP**
- **SIP Proxy Configuration**
 - ◆ **Proxy IP Address**
 - ◆ **Expire Time**
 - ◆ **Registrar Username**
 - ◆ **Registrar Password**
 - ◆ **Local Name**

- ◆ Phone Number
- ◆ Registration Status
- Phone Book Setup
 - ◆ Destination Name
 - ◆ Destination Phone NO.
 - ◆ Destination IP Address
 - ◆ Use Proxy
- Wireless Setting
 - ◆ ESSID
 - ◆ Channel (1-11)
 - ◆ Mode
 - 802.11b AdHoc
 - Infrastructure
 - ◆ Rate
 - Auto
 - 1M
 - 2M
 - 5.5M
 - 11M
 - ◆ WEP
 - None
 - 64bits
 - 128bits
 - ◆ Key 1
 - ◆ Key 2
 - ◆ Key 3
 - ◆ Key 4
 - ◆ Default Key
 - Key 1
 - Key 2
 - Key 3
 - Key 4
- DSP Setting
 - ◆ Default Voice Codec
 - ◆ Out Volume(-14~14)
 - ◆ In Volume(-14~14)
 - ◆ Receive Buffer
 - Small
 - Medium
 - Large

- ◆ **Voice Frame per Packet**
 - **Small**
 - **Medium**
 - **Large**
- ◆ **DTMF RELAY**
- ◆ **DTMF Payload(0 ~ 127)**
- **System**
 - ◆ **Login Username**
 - ◆ **New Password**
 - ◆ **Confirm Password**
 - ◆ **Admin Login username**
 - ◆ **Admin New Password**
 - ◆ **Admin Confirm Password**
 - ◆ **Time Zone**
 - ◆ **Time Server**
- **Update Firmware**
 - ◆ **TFTP IP Address**
 - ◆ **File Name**
 - ◆ **Block Size**
 - ◆ **Select File**


4.2. Login Password

Users can use browsers to setup or show the information of the IP phone.

Go to <http://<ipaddress>>

Use default username “**user**” and password “**1111**” to see the settings,

Administrator use “**voipadmin**” and password “**admin**” to login.

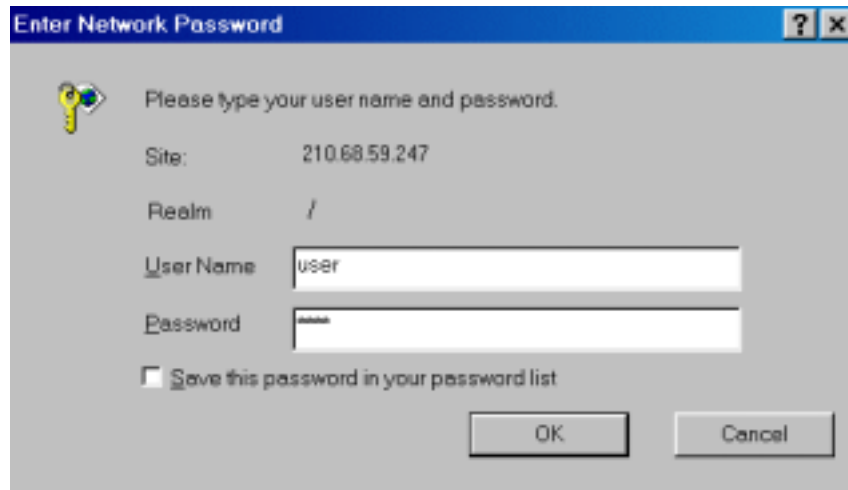

The web page is divided into several frames, each of which is related to VoIP module. It includes information, network settings, SIP proxy server settings, registrar server settings, phone book settings, voice codec settings, voice quality settings, system settings, and update settings. Users follow the procedures listed below to set up VoIP phone.

4.3. Device Information

WIFI600-S VOIP IPPhone

Device Information

Software Version	WB.00.18_1114
Bootrom Version	B.00.10
Release Date	Nov 14 2003
Ethernet Port	LAN x 1
Telephone Ports	NONE

 [Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)
[Phone Book](#) [Wireless](#) [System](#) [Update SW](#)

4.4. Network Configuration: STATIC

WIFI600-S VOIP IPPhone

Network Configuration

Get IP Address	<input type="button" value="STATIC"/> <input type="button" value="DHCP"/> <input type="button" value="PPPoE"/>
NetWork IP	<input type="text"/>
NetWork Subnet Mask	<input type="text"/>
NetWork Default Gateway	<input type="text"/>
MAC ID	000ae9014ec6

 [Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)
[Phone Book](#) [Wireless](#) [System](#) [Update SW](#)

4.5. Network Configuration: DHCP

WIFI600-S VOIP IPPhone

Network Configuration

Get IP Address	<input type="button" value="STATIC"/> <input type="button" value="DHCP"/> <input type="button" value="PPPoE"/>
NetWork IP	172.16.196.222
NetWork Subnet Mask	255.255.0.0
NetWork Default Gateway	172.16.0.1
MAC ID	000ae9014ec6

[Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)

[Phone Book](#) [Wireless](#) [System](#) [Update SW](#)

4.6. Network Configuration: PPPoE

WIFI600-S VOIP IPPhone

Network Configuration

Get IP Address	<input type="button" value="STATIC"/> <input type="button" value="DHCP"/> <input type="button" value="PPPoE"/>
NetWork IP	172.16.196.222
NetWork Subnet Mask	255.255.0.0
NetWork Default Gateway	172.16.0.1
PPPoE Username	<input type="text"/>
PPPoE Password	<input type="text"/>
MAC ID	000ae9014ec6

[Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)

[Phone Book](#) [Wireless](#) [System](#) [Update SW](#)

4.7. OutBound Proxy Configuration

WIFI600-S VOIP IPPhone

OutBound Proxy Configuration

Master Proxy IP Address	172.16.2.2
Master Proxy Port	5060
Slave Proxy IP Address	192.168.0.2
Slave Proxy Port	5060

[Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)

[Phone Book](#) [Wireless](#) [System](#) [Update SW](#)

4.8. SIP Proxy Configuration

WIFI600-S VOIP IPPhone

SIP Proxy Configuration

Proxy IP Address	172.16.2.2
------------------	------------

User Account

Registrar Username	username0
Local Name	NULL
Phone Number	200
Registration Status	Registered

[Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)

[Phone Book](#) [Wireless](#) [System](#) [Update SW](#)

4.9. Phone Book

WIFI600-S VOIP IPPhone

Add New Entry

Name.	Phone No.	Destination
<input type="text"/>	<input type="text"/>	<input type="radio"/> Use Proxy <input type="radio"/> Use IP Address <input type="text"/>

Phone Book

Name.	Phone No.	Destination
-------	-----------	-------------

Push Button To Clear Phone Book

[Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)

[Phone Book](#) [Wireless](#) [System](#) [Update S/W](#)

4.10. Wireless Setting

WIFI600-S VOIP IPPhone

Wireless Setting

Essid	<input type="text" value="DHTL"/>
Channel (1-11)	<input type="text" value="1"/>
Mode	<input type="radio"/> 802.11b AdHoc <input checked="" type="radio"/> Infrastructure
Rate	<input checked="" type="radio"/> Auto <input type="radio"/> 1M <input type="radio"/> 2M <input type="radio"/> 5.5M <input type="radio"/> 11M
WEP	None

[Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)

[Phone Book](#) [Wireless](#) [System](#) [Update S/W](#)

4.11. System

WIFI600-S VOIP IPPhone

System

Login Username	<input type="text" value="ton"/>
New Password	<input type="password"/>
Confirm Password	<input type="password"/>
Time Format	1111
Time Edit	18 : 39

[Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)

[Phone Book](#) [Wireless](#) [System](#) [Update SW](#)

4.12. Update System

WIFI600-S VOIP IPPhone

Update System

Select File

[Information](#) [Network](#) [OutBound Proxy](#) [SIP Proxy](#)



[Phone Book](#) [Wireless](#) [System](#) [Update SW](#)

5. Basic Phone Tasks



This chapter provides information about performing the following tasks:

- **Dialing a Phone Number**
- **Redialing a Number**
- **Using Speed Dial**
- **Answering a Call**
- **Holding a Call**

5.1. Dialing a Phone Number

1. In idle state, enter the phone number by using the numerical keys.
2. If you entered an incorrect number, press  key to delete it.
3. Press  key to connect your call.



5.2. Redialing a Phone Number

1. In idle state, Press  key.
The list of placed calls is displayed.
2. Scroll the phone number to dial, using π or θ key.
Press  key to make the call.



5.3. Using Speed Dial

In idle state, press and hold “Speed Dial” key call.
The number will be dialed automatically.

5.4. Answering a Call

To answer a call, press  key.
To reject a call, press  key.

5.5. Holding a Call

1. During a call, press  key to hold the call.
2. To cancel the hold, press  key.

6. Display Messages

This appendix provides a list of messages that are displayed on the user interface of the WLAN600, and contains the following sections:

- Error Messages
- Warning Messages


6.1. Error Messages

“Error messages” are displayed to let you know that an error has occurred. These “error message” may prevent you from connecting to the network or from using the phone. You may need to contact the system administrator to resolve the problem.




Error 1: No AP found (WLAN icon blinking)

 The ESSIDs set on the phone do not match any of the Service Set Identifiers (SSIDs) of the APs in the Network.

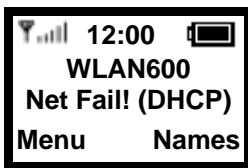

Error 2: Net Fail! (DHCP)

 The phone failed to obtain the IP address from DHCP server. or check Wireless “Wep Key”

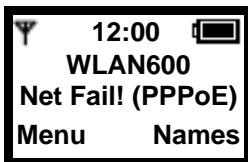


Error 3: Net Fail! (PPPoE)

The phone failed to obtain the IP address from ISP service.



Error 4: Registering to SIP proxy failed

 The phone failed to register with the SIP Proxy. Please touch your service Provide, or check SIP Contents value .

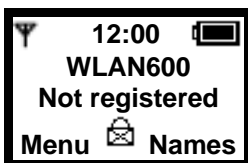

Error 5: SSL Authentication failed (lock icon)

The SSL authentication on the phone has failed. Contact your system administrator.

6.2. Warning Messages

Warning messages are displayed when the phone detects a condition that may disrupt your phone service



Warn 1: Battery Low (blinking)

The Screen has 2 states :


(1)The battery will be charging automatically after 10 sec when it runs out of power.

(2)The device is in power-off condition.



Warn 2: Battery Low (blinking)

 The battery energy level is low.

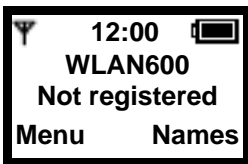

Warn 3: Weak signal detected (blinking)

The signal quality is low.