

## Table Of Contents

Owner's Guide	Installation Instructions
Arming the System ..... 3	How To Program Remote Control ..... 9
Disarming the System ..... 4	How To Program Features ..... 10
Emergency Override ..... 4	Programmable Features ..... 10 - 12
System Armed & Activated ..... 5	Wiring Diagram ..... 13
Panic ..... 5	Door Lock/Unlocking Systems ..... 14
Sensor By-Pass ..... 5	IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted.
Auxiliary Channel ..... 6	Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.
3rd Channel ..... 6	
Remote Controlled Anti-Carjack ... 6	
Anti-Carjacking ..... 7	
Valet Mode ..... 8	
LED Status Indicator ..... 8	
Auxiliary Sensor & Prewarn ..... 9	

**Arming:** Press & Release the "Lock" button

**Silent Arming:** Press & Release the "3rd" button Twice in 3 sec.

**Disarming:** Press & Release the "Unlock" button

**Silent Disarming:** Press & Release the "3rd" button Twice in 3 sec

**Emergency Override:**



**Panic:** Press & Hold the "Lock" Button for 3 Sec's, with the ignition "Off"




**Shock Sensor & Prewarn Bypass:**


- 1) Arm the alarm by, Pressing & Releasing the "Lock" button
- 2) Within 2 seconds Press & Release the "3rd" button.




**To Activate the Auxiliary Channel:** Press & Hold The "3rd" Button for 3 Seconds

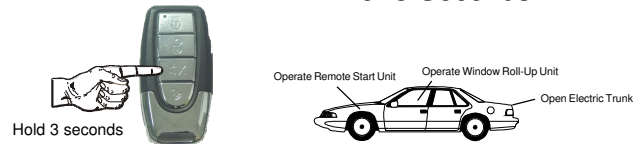

**To Activate the 3rd Channel:** Press & Hold The "4th" Button for 3 Seconds

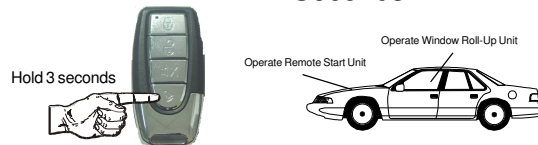


**To Activate Remote Anti-Carjack:** (programmable feature # 10)  
Press & Hold the "4th" button, for 3 Secs, with the ignition "On"

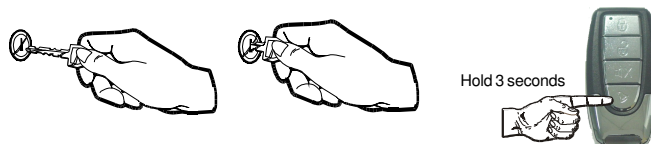


## Arming the Alarm

The system may be "Armed" by any of 3 methods:

### 1) **Remote Control Arming: Press & Release the "Lock" button**

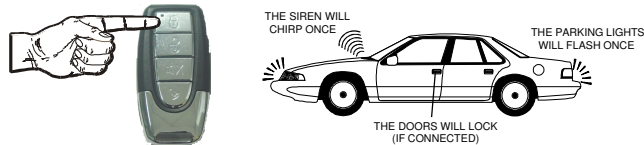

### 2) **SILENT Remote Control Arming: Press & Release the "3rd" button Twice within 3 seconds**

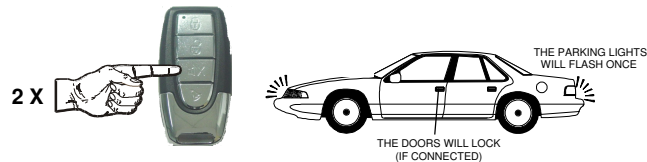

- Upon Arming:**
- The siren will chirp one time. (3 times if there is open zone)
  - The parking lights will flash once.
  - The doors will lock. (If an optional interface is connected)
  - The starter interrupt will engage.
  - The LED Status Indicator will begin to flash slowly.

- If a zone is open, (for example a car door), when arming, the alarm will still arm, but will bypass the open zone until the zone is secured (siren will chirp 3 times).

### 3) **To Passively Arm: Turn Ignition "Off", Then Close all Doors.**

Automatic "Last Door Arming" is a programmable feature which allows the alarm to arm itself and, if desired, lock the doors upon arming.

If on, anytime the ignition is turned off, and then a door is opened and closed:

- The Siren will chirp once to confirm arming countdown has begun.
- The LED Status Indicator will begin to flash rapidly.

Thirty seconds later:

- The siren will chirp & the lights will flash once.
- The LED Status Indicator will begin to flash slowly.
- The starter interrupt will engage.

- The alarm is now fully armed. The doors will lock at this time, if programmed to do so, and if the vehicle is equipped.

- The system can not Last Door Arm if a protected zone is open. Should a vehicle door be opened during the arming countdown, the countdown will stop and start over again when the door is closed.

**AUTO REARM** (programmable) allows the Alarm to Rearm itself, if it is Disarmed.