

Joy 1.8 3G

User Manual

FCC ID: YHLBLUJOY3G

Content

1	Welcome	3
2	Your phone.....	4
2.1	Phone overview.....	4
2.2	Functions of Keys	5
3	Getting started.....	6
3.1	Installing the SIM Cards and the Battery	6
3.2	Linking to the Network.....	6
4	Input method	6
4.1	Icons for Input Methods.....	6
4.2	To Shift Entry Methods.....	6
4.3	Inserting a Symbol	6
5	Using the Menus.....	7
5.1	Contacts	7
5.2	Message	7
5.3	Call logs	7

5.4	Multimedia.....	8
5.5	Settings.....	9
5.6	Web	10
5.7	Audio player.....	10
5.8	Organizer.....	11

1 Welcome

Thank you for purchasing this cellular phone.

To guarantee your cellular phone works properly, please follow the instructions in this manual to prevent any possible incidents or malfunctions.

Follow all safety warnings to avoid injury or property damage.

Screen displays and illustrations in this user’s manual are designed to help you operate your phone to its optimum performance.

We continuously strive to improve our products. Therefore, we reserve the rights to revise this user manual or withdraw it at any time without prior notice.

2 Your phone

2.1 Phone overview



2.2 Functions of Keys

1	Earpiece	9	Ending/Power key
2	Display	10	# key
3	Left soft key	11	Camera
4	Dial/Answer key	12	Speaker
5	Keypad	13	The battery cover
6	* key		
7	Navigation key		
8	Right soft key		

Number keys, * key and # key

Press number keys 0 through 9 to input or edit state to input numbers and characters;

The # key and the * key represent different functions in different states or different function menus.

Hold the # key up to 2s in standby state to activate or deactivate the silent mode.

Press the # key in edit state to switch between input methods.

Pressing the * key in edit status to select a symbol.

Press * key twice can input "+" in standby interface. When the symbol "+" appears, press the * key quickly to input "P" or "W". "P" and "W" are used for calling the extension; "+" are used for dialing an international call.

3 Getting started

3.1 Installing the SIM Cards and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

3.2 Linking to the Network

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

4 Input method

This mobile phone provides multiple input methods, including English input and numeric input. You can use these input methods when editing the phonebook, short messages, files and so on.

4.1 Icons for Input Methods

After you enter an edit window such as a window for editing the phonebook, short messages or the memorandum, an icon is displayed to indicate the current input method:

4.2 To Shift Entry Methods

Press the # key to switch between input methods.

4.3 Inserting a Symbol

Press the * key to enter the **Select symbol** interface, use direction keys to select a symbol you want.

5 Using the Menus

5.1 Contacts

You can store the name and telephone number in the phone memory or the SIM card.

Up to 1000 pairs of numbers and names can be stored in the phone memory. The storage capacity of the SIM card is determined by the type of the card.

5.2 Message

Send SMS or MMS to the selected item.

5.3 Call logs

Through this function, you can view a list of missed calls, dialed calls and received calls etc.

Delete all

You can delete the latest call records. Choose **Delete call logs** and then select to delete all the numbers in the call history, or delete only the numbers in the missed calls list, the dialed calls list or the received calls list.

Call timers

Choose **call timers** to view the last call time, the total time of all dialed calls and the total time of all received calls, and/or to reset all the time.

GPRS counter

Access this menu to view the sent or received GPRS volume or to reset counter.

5.4 Multimedia

Camera

The phone is provided with a camera, which supports the photographing functions. Roll the phone to align the camera to the picture and then press OK key to capture photos. Pictures will be saved in the file system of the phone or the memory card. In the capture interface, you can press up or down direction key to zoom in and zoom out; left or right direction key to settings.

Image browser

You can view the pictures or images through this function.

Video player

Use this function to play video files. By pressing the direction key can you control the playing process of video player: play/pause (ok key), fast forward (press right direction key) and rewind (press left direction key). In video player interface, you can press up or down key to tune volume.

FM radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. In FM radio interface, you can press up or down key to tune volume, press ok key to play/pause the playing process of the current channel, press left or right key to switch last/next channel.

Sound recorder

You can record MP3, AMR & WAV format audio files through this function. The AMR takes the

compression algorithm. So in the same memory condition, it has longer recording time than WAV. Press **OK** key to start Recording.

5.5 Settings

Date & time

Set the date format, the time format, and detail time of the location.

Language settings

Users can access this item to choose the language.

Display

Users can access this item to set wallpaper, screen saver, contrast, power on/off display, keypad backlight time, auto keypad lock etc.

Call settings

Dual-SIM: Dual-SIM refers to two SIM card slots, and the two cards can standby at the same time or set one of them to display on the idle screen.

Security

This function provides you with related settings about safety use.

Connections

Contact the network operator to obtain the following network services:

Network selection: Set Network selection mode to Automatic or Manual. Automatic is recommended. When Network selection mode is set to Automatic, the mobile phone will prefer the network where the SIM card is registered. When Network selection mode is set to Manual, you need to select the network operator's network where the SIM card is registered.

Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into four scenarios: Normal, Silent, Meeting, Indoor and Outdoor. When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode.

Auto power on/off

Users can access this item to set the auto power on/off schedule.

Restore factory settings

Use this function to restore factory settings. The preset password is 1122.

5.6 Web

This function enables you to view the internet. Your phone will ask you with existed way. You can start to view only by starting corresponding way.

5.7 Audio player

Use this function to play audio files. By pressing the direction key can you control the playing process of

audio player: play/pause (ok key), switch to last song/next song (press left or right direction key). In audio player interface, you can press up or down key to tune volume.

5.8 Organizer

File manager

The phone supports the Memory card. The capacity of the Memory card is selectable. You can use the file manager to conveniently manage various directories and files on the Memory card.

Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked.

Alarm

Five alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set.

Calculator

The calculator can add, subtract, multiply and divide to use the calculator.

Stopwatch

You can specify a timer that can be started and stopped.

Bluetooth

With Bluetooth, you can make a wireless connection to other compatible devices, such as mobile phones, computers, headsets and car kits. You can use the Bluetooth to send images, video clips, music, sound clips and notes, and transfer files from your compatible pc.

FCC Regulations:

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

▶ RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.184W/kg and when worn on the body, as described in this user guide, is 1.259W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: YHLBLUJOY3G

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.0cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.0 cm from your body when the phone is switched on.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.