

Studio Selfie LTE

USER MANUAL

Table of Contents

Safety Information	4
Appearance and Key Function	7
Introduction.....	10
Navigation Buttons.....	13
Notifications Bar	14
Call Functions.....	17
Contacts.....	20
Messaging.....	25
Bluetooth & Wi-Fi	28
Gmail	35
Play Store.....	37
Camera	39
Gallery	42
Play Music.....	44

Sound Recorder	46
Calendar	48
Clock	50
Settings	53
Storage	61
Troubleshooting	62
Federal Communications Commission (FCC) Statement	65
RF Exposure Information (SAR)	66
Hearing Aid Compatibility Information	67
Hearing Aid Compatibility Rating	67
Industry Canada Statement	68
RF Radiation Exposure Statement	69

Safety Information

Please carefully read the terms below:

Use Safely

- Do not use the phone in situations where it might cause danger.

Transportation Safety

- Please observe all transportation laws and regulations.
- Please drive with both hands on the wheel.

PLEASE DRIVE RESPONSIBLY - DO NOT TEXT AND DRIVE

Hospital Safety

- Please follow hospital rules and limitations.
- Please turn off your mobile phone when near medical instruments.

Airport Safety

- Remember to follow all airport and flight safety regulations.
- Please do not use your phone during flight.

Chemical Warning

- Do not use your mobile phone around fuels or chemicals.

Temperature Warning

- Do not subject your phone to extreme temperature conditions.

Water Hazard

- Your phone is not waterproof. Keep your phone away from water or liquid to avoid damage.

Emergency Calls

- Make sure your mobile phone is switched on and in a service area. In home screen, tap the phone key and dial the emergency number.

Accessories and Battery

- Use only Blu authorized battery and accessories.

Information Backup

- Remember to keep a written record of all important information.

Battery Safety and Precautions

- For better performance and longer battery life, it is recommended that you charge the battery fully before using the mobile phone for the first time.
- The optimum performance of a new battery is typically achieved after two or three complete charge cycles.

Note: Keep in mind that continuous overcharging will affect long term battery life.

- While charging, keep the mobile phone out the reach of children.

- Store the device in a cool and dry place away from direct sunlight and water.
- Do not expose device to extreme temperatures.
- Avoid using the charger near or around liquids. If the charger comes in contact with water or any liquids, immediately unplug it from the outlet to reduce the risk of overheating, charger malfunction, electric shock, or fire.

Cleaning and Maintenance

- Avoid using the handset and accessories in excessively moist areas to avoid malfunction.
- Use a soft, dry cloth to clean the handset, battery, and charger.
- Do not use alcohol, thinner, benzene, or any other solvent to clean the handset.

Appearance and Key Function



No.	Item	Description
1	Earphone Jack	Connects to stereo headphones.
2	Earpiece	Receives audio on incoming calls.
3	Front camera	A 5-megapixel camera for video chats and self-portrait images.
4	Flash LED	Provides additional lighting when taking pictures.
5	Touchscreen	5" IPS capacitive touchscreen.
6	Microphone	Records audio.
7	Micro USB	Connects to a computer via a USB cable. Also serves as the charging port for the AC adapter.
8	Volume buttons	Increases and decreases the phone volume.
9	Power button	<ul style="list-style-type: none"> • Long press to turn the phone on. • When your phone is turned on, you can do the following: <ul style="list-style-type: none"> ➤ Press to turn the screen off. Press it again to turn the screen on. ➤ Press and hold to open the <i>Phone options</i> menu. Tap Power off to turn the phone off.

No.	Item	Description
10	Rear camera	A 5-megapixel camera for taking high resolution images.
11	Speaker	Emits audio.
12	Nano SIM slot	Accepts a nano SIM card.
13	microSD card slot	Insert a microSD card into the slot.

Introduction

Installation of the SIM Card

Warning: Please keep the nano SIM card out of the reach of children. The nano SIM card and its contact are easily damaged due to scratching or bending. Please use caution when carrying, installing or taking out the nano SIM card.


Note: Please contact your cellular phone service provider directly to obtain your nano SIM card.

To insert the nano SIM card:

1. Remove the back cover.




2. Remove the battery.

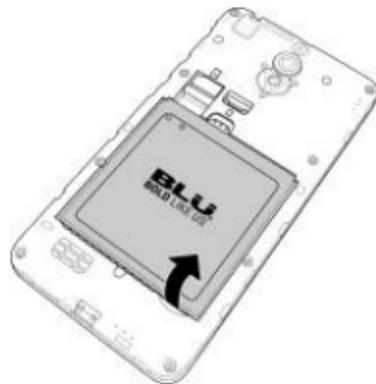


3. Insert the nano SIM card into the SIM card slot.


For additional storage capacity, insert microSD card into the memory card slot.

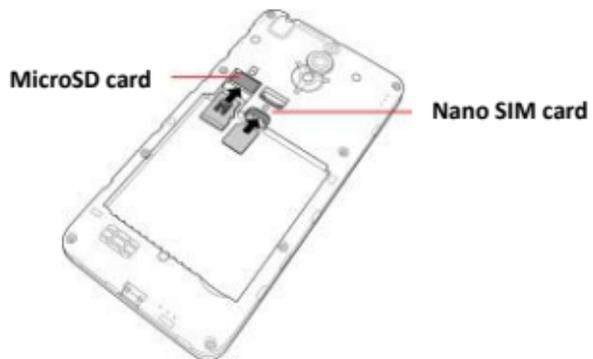

4. Install the battery.

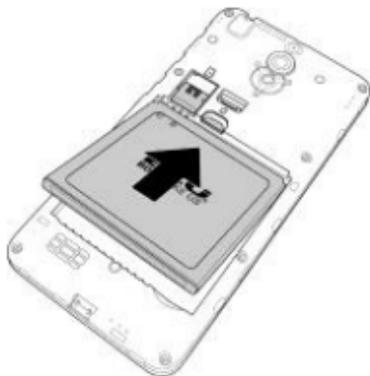

5. Replace the back cover and power on your device.

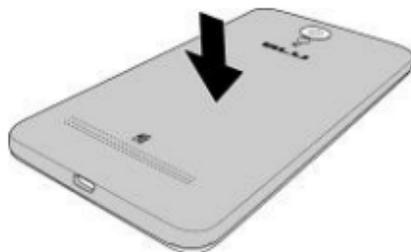

Power On and Off

On - Please ensure the nano SIM card has been properly inserted into the phone. Long press the **Power** button to turn the phone on.

Off - In standby mode, press and hold the **Power** button until the *Power options* menu appears. Tap **Power off** to turn the phone off.

Security

You may set a security lock feature as a security measure for the phone. For further information regarding password locks, password revision and other functions please enter into the security option in system settings.

Navigation Buttons

At the bottom of screens, no matter what you're doing, you'll always find the navigation bar with three buttons. On device, it looks like this:



Back

Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further.



Home

Opens the central Home screen. To open Google Now, swipe up.



Overview

Opens a list of thumbnail images of screens you've worked with recently. To open one, tap it. To remove a screen from the list, do one of the following:



- swipe it left or right.
 - tap **X**.
-

Notifications Bar

The notification bar is located on the top of the screen which contains useful and important information regarding your phone and the applications that are installed.



On the notification bar, several icons will appear such as network signal bar, battery indicator, data indicator, Bluetooth, and Wi-Fi. You may slide the notification bar down with your finger to display any pending notifications or actions.

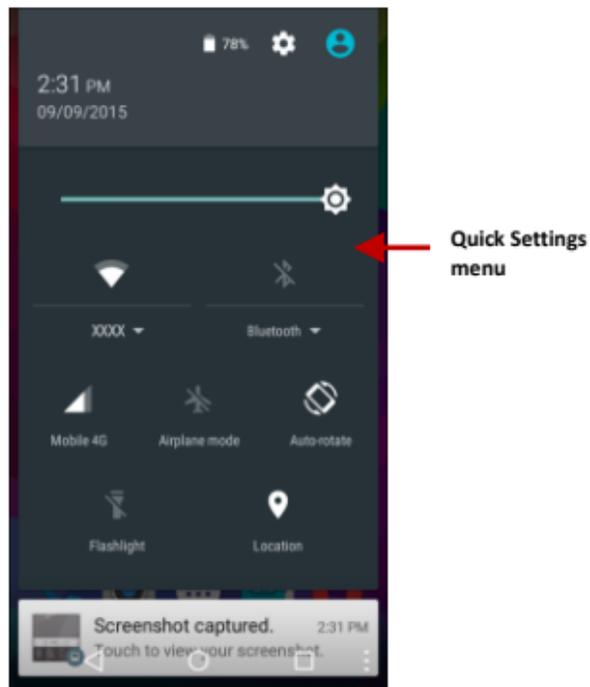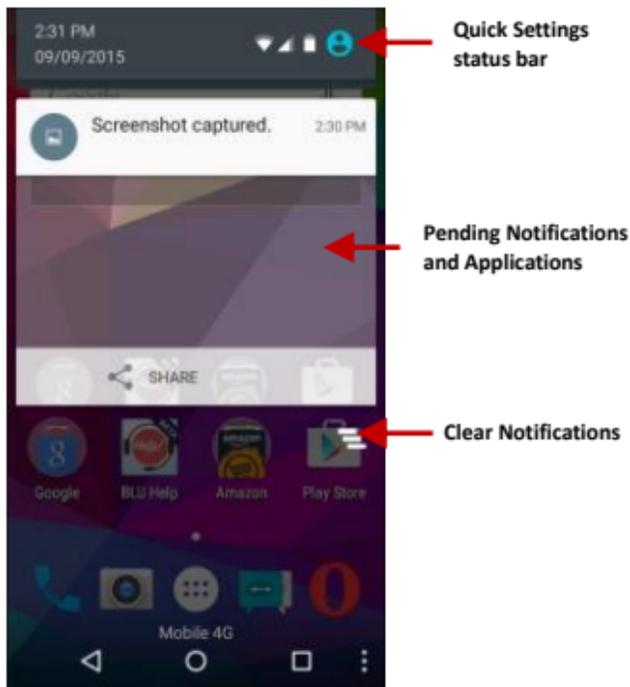

Notification Panel

The notification panel displays the device activity status and notifications. It also provides shortcuts to different phone settings for quick access.

- Slide the status bar downwards to open the notifications panel. Then tap a notification to view its content.
- To access the Quick Settings menu, tap the Quick Settings status bar () at the top of the screen or drag the Quick Settings status bar () downwards.

Note: To clear all notifications and close the notification panel, tap the clear notification icon () on the bottom right of the screen.

Call Functions



From the home screen, tap **Phone** (.

Making Call

1. Tap  to open the dial keyboard. At the dial keyboard, enter the phone number.
 - You may also press and hold the 0 key to add a (+) sign when adding an international dialing prefix.
2. Tap  to make the call.
 - If dialing an extension, you may tap  to open the interface and enter the number of the extension.
3. Tap  to end the call.

Answering Call

When an incoming call is received and you want to answer the call, tap  and drag it to the right (.

You can also do the following:

- To reject the call, tap  and drag it to the left (.
- To reject the call by sending a text message, tap  and drag it upwards (.

Call Logs

Every telephone number called and received will be saved in the phones call log.


- To view the call log, tap the **RECENTS** tab. To view all numbers in the call log, tap **View full call history**. When the number appears on the list, tap **CALL BACK** to make a call or tap **DETAILS** to view details.
- To delete one call log, choose one number and tap **DETAILS**. Then tap  to delete the selected call log.
- To clear the call logs, tap  > **Clear call log**.

Call Options


There are different options that can be used in the call log and dialing interface.

On the main screen, you can do the following:

- To enter the Settings page, tap  > **Settings** and then adjust the general settings, lookup of unknown phone number, or configure the call settings.
- To import/export contacts from the SIM card or the internal memory, tap  > **Import/export** and select the desired option. Then follow the on-screen instructions to complete the process.
- To access the speed dial list, tap the **SPEED DIAL** tab.
- To browse the contact lists, tap the **CONTACTS** tab.

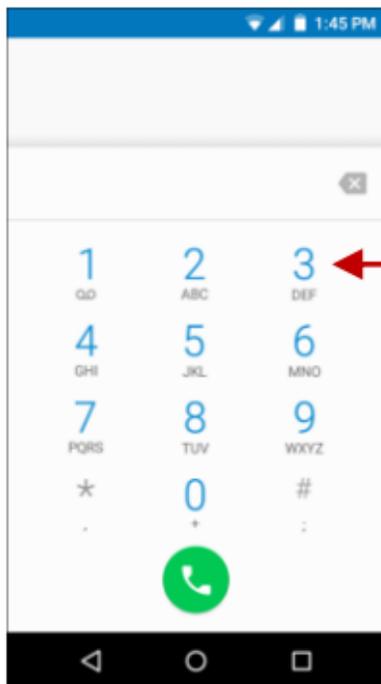

Dial keyboard

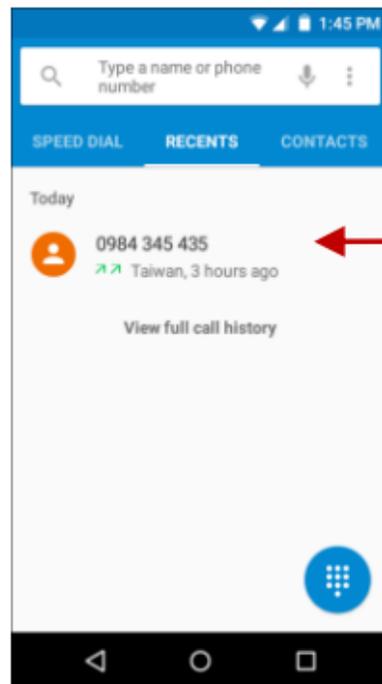


Call Log History

Contacts

From the home screen, tap  > **Contacts** ()



- The default display is the phone contacts and SIM card contacts.
- The contacts are organized alphabetically by default.

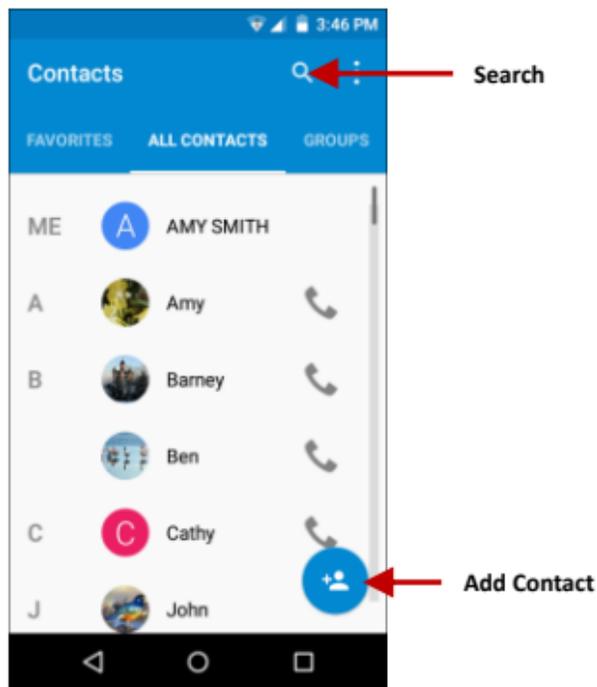

Tap the Search icon  to enter the contact search interface. Any numbers or letters associated with any of the contacts saved in the list will be shown in the search results.

Adding New Contact

1. Tap the add contact icon () to add a new contact.
2. When adding a new contact for the first time on your phone, you can specify which account to save your contacts.
3. You may enter different contact details which include adding a picture, name, telephone number, email, address, and other options.
4. Tap **Add new contact** to save contact.

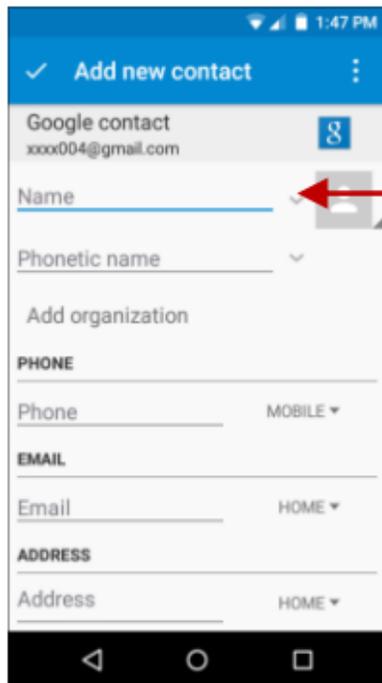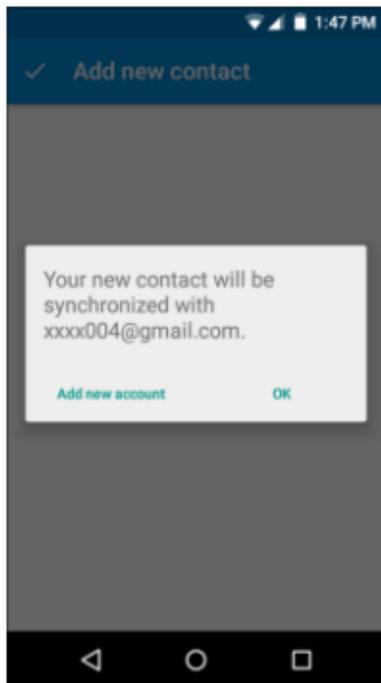

Contact information entry field

Deleting Contacts

1. From the home screen, tap  > **Contacts** () to enter the phonebook.
2. Tap  to access the Contacts menu.
3. Tap **Delete** and scroll to select which contact(s) you wish to delete.
4. Tap  to delete the selected contact(s). A confirmation message appears, tap **OK** to confirm.

Note: You may also search for an individual contact in the phonebook. Once the contact is found, tap  to edit the contact profile or tap  > **Delete** to delete the contact from the phonebook.

Importing/Exporting Contacts

The phone allows you to import or export contacts to synchronize information between different storage types that include the SIM card, memory card, and your phone.

To import or export contacts:

1. From the home screen, tap  > **Contacts** () to enter the phonebook.
2. Tap  > **Import/export**.
3. Select the desired import/export option.
4. Follow the on-screen instructions to complete the import/export process.

Messaging




You may use this function to exchange text messages and multimedia messages with your family and friends. The messages to and from the same contact or phone number will be saved into a single conversation so you may see the entire message history conveniently.

From the home screen, tap **Messaging** ()

Sending SMS


1. Tap  to create a new message.
2. In the **To** field, enter the recipient's phone number.
 - To add recipients from Contacts, tap  and select the desired contact(s). Then tap  to confirm the selection.
 - To add group contacts, tap  and tap then select the desired group(s). Then tap  to confirm the selection.
3. Compose your message.
4. Tap  to send your message.

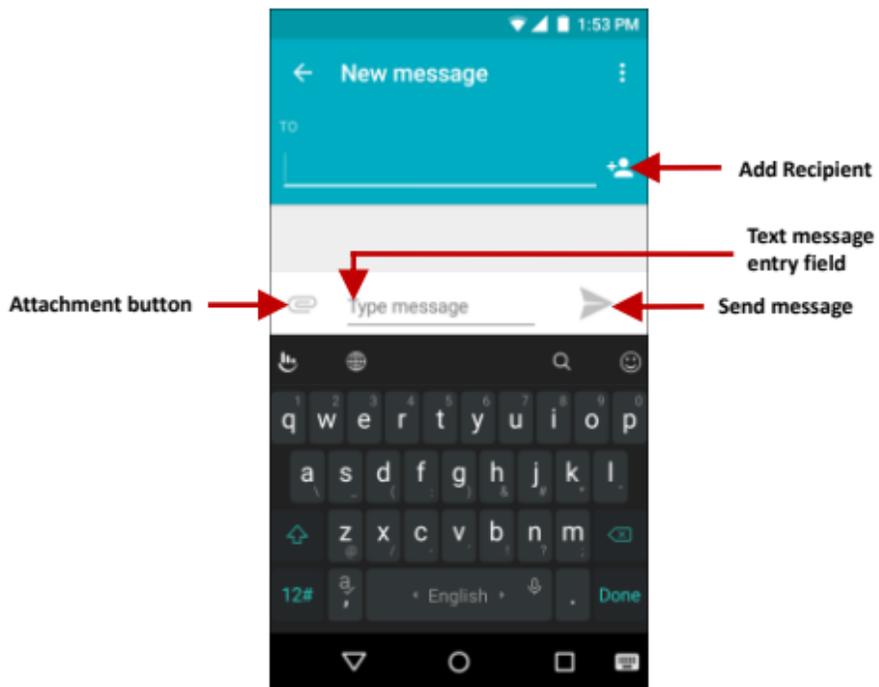

Sending MMS

When creating message, the default message style is SMS. The message will automatically convert to MMS when adding an attachment.

1. Tap  to create a new message.
2. On the *Compose* screen, tap . Then select one of the following attachment options:

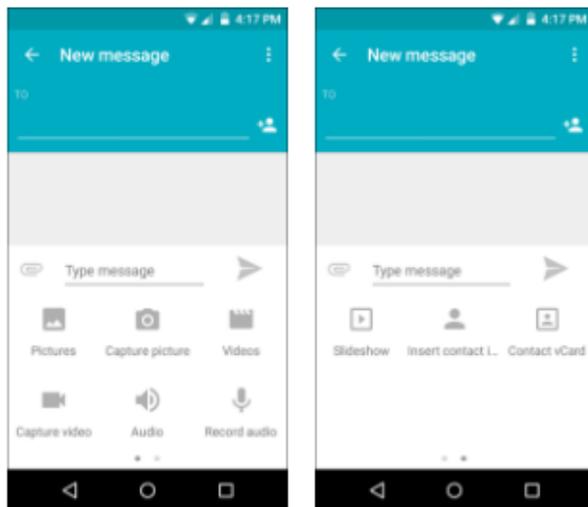

3. Tap  to send an MMS message.


Bluetooth & Wi-Fi

Bluetooth is a short-range wireless communications technology that devices can use to exchange information and connect to different types of devices which include headsets and other devices.



Turning Bluetooth On

1. From the home screen, tap  > **Settings** () > **Bluetooth**. To enable Bluetooth function, set it to **On**.
 - The Bluetooth icon  will appear in the notification bar. The Bluetooth will then start to scan for all devices within its range and will display all available devices in a list.
2. In Bluetooth settings, all the devices found will displayed in a list. Tap a device from the list and follow the on-screen instructions to pair with the device.

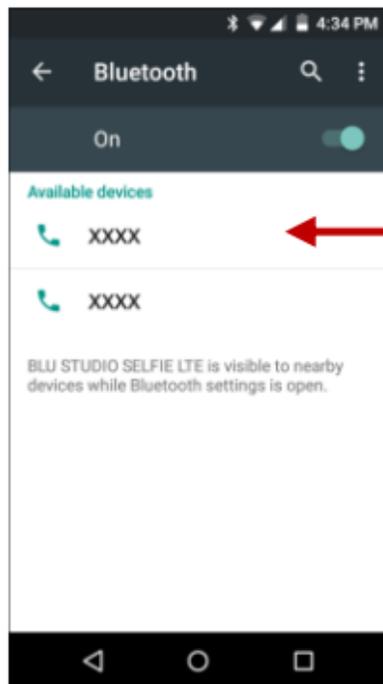


List of available
Bluetooth devices

Turning Wi-Fi On

1. From the home screen, tap  > **Settings**  > **Wi-Fi**. To enable Wi-Fi function, set it to **On**.
2. Tap on the desired Wi-Fi network to be connected.

Note: Unsecured networks can be connected to directly and connecting to secured networks require a password or credentials prior to connection.

To display the advanced options, tap  > **Advanced** and configure the necessary settings.

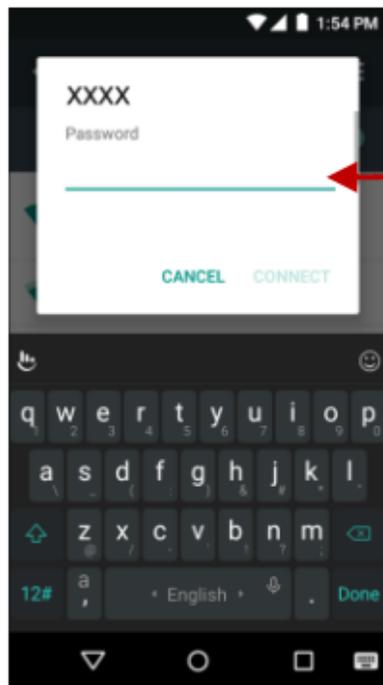

Attempt to connect
to a secured network

Downloads




The download section of the phone keeps files you download from Gmail or other sources (excluding Google Play books, videos, magazines, and other media.)


From the home screen, tap  > **Downloads** (.

Then do the following:

- To view the file, tap the file to view it in full screen.
- To sort the file, tap  and select one of the sort options (**by name**, **by date modified**, or **by size**).
- To switch the grid view, tap  > **Grid view**.
- To delete the file from the list, tap and hold the file(s) that you want to delete and then tap .

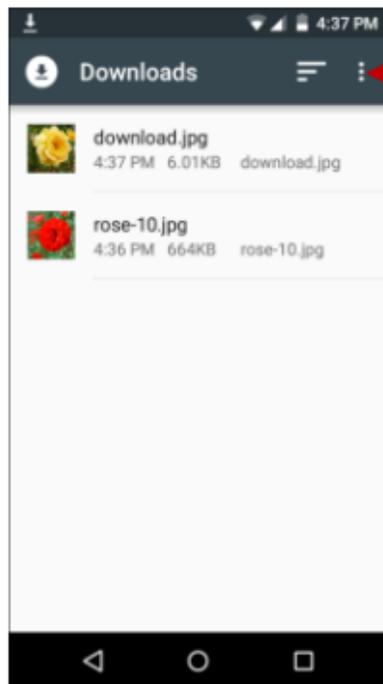

Sort the file
or switch to
grid view

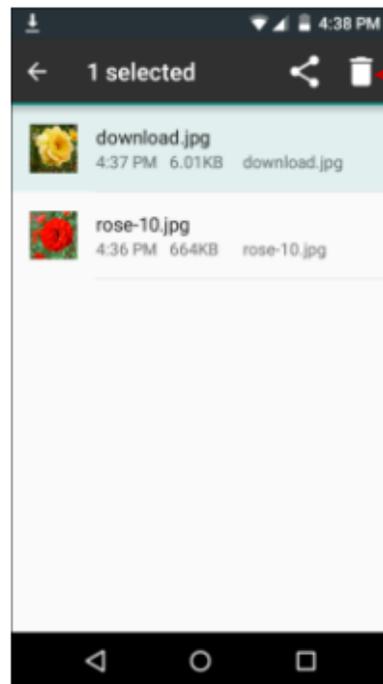

Share or delete the
selected file

Opera Browser

Download the fast, safe and easy-to-use browser for your Android phone.

From the home screen, tap **Opera** ()

Quick Access Tab

History

- Show your browsing history.

Speed Dial

- Displays your favorite sites, bookmarks, and saved pages as a gallery of images. Add folders or reorganize your Speed Dial with the swipe of a finger.

Discover



- Get recommendations for top stories, arts, business, entertainment, and other popular categories based on your preferences.

More Options

Tap  to access the Opera browser options.

- Opera Turbo: Set the switch to **ON** to enable Opera Turbo function that allows the device loads pages faster.
- History (): Show your browsing history.
- Find on page (): Search current page.

- Share page (🔗): Select to share the current page.
- Close (📄): Close all pages of opened and Opera browser.
- Downloads (⬇️): View the downloaded files and give you option to open or delete the selected file.
- Settings (⚙️): Configure the browser settings.

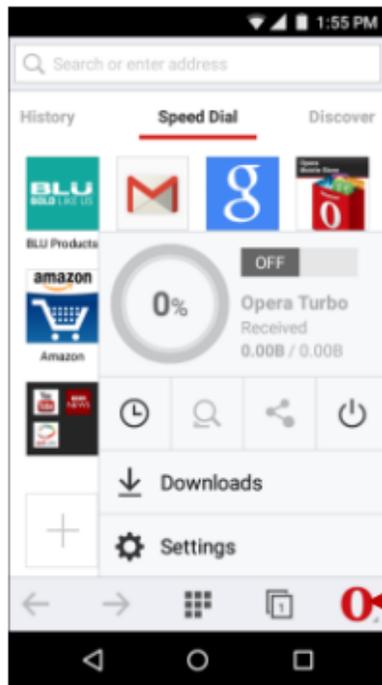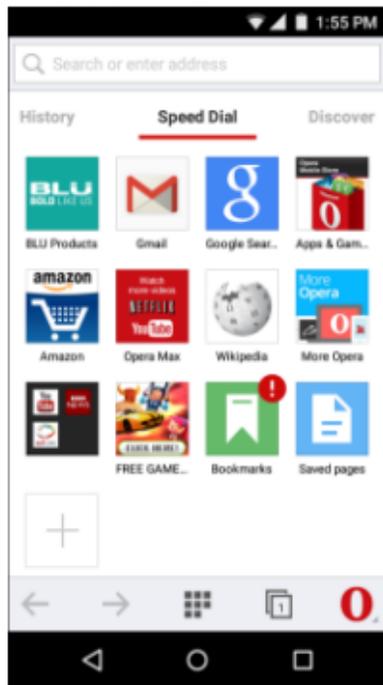

Opera browser options

Gmail

Gmail is Google's free email service. To access the Gmail program, tap  > **Gmail** (). Then sign in with your existing account or follow the on-screen instructions to create a new account.

Note: In order to keep accounts streamlined with Google services, your Gmail account user name and password will be used for some Google programs which include: Google Play Store, Google Drive, Google Photos, Google +, and Google Wallet.



Sending Email

1. Tap  to create a new email.
2. In the **To** field, enter the recipient's email address.
3. Enter a subject.
4. Compose your message.
 - Tap  to add an attachment.
5. Tap  to send the email.

Replying Email

1. Tap an email to read.
2. Tap  to reply or tap  > **Reply all** to reply the email.
3. Compose your message.

4. Tap  to send the email.

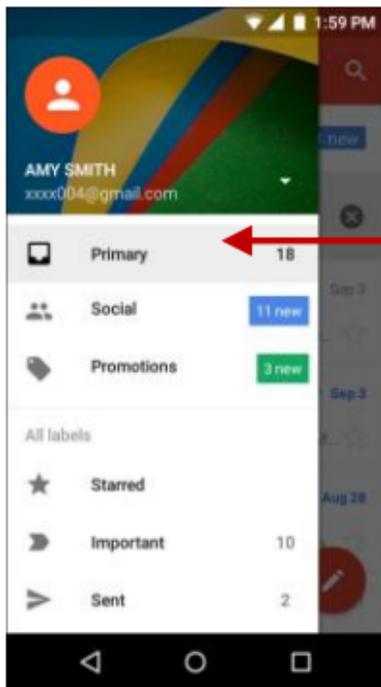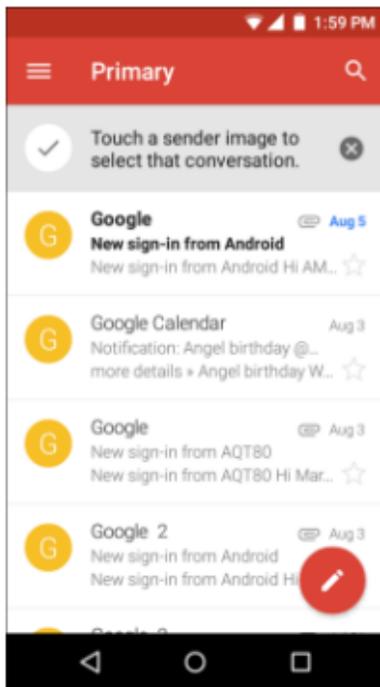

The Gmail inbox is separated by default in three different categories.

These categories include primary inbox, social inbox where all your Facebook, Twitter, and social media emails are separated to and your Promotions inbox where all your commercial emails are separated.

You may add or delete other categories in Gmail settings.

Play Store



Google Play allows you to download music, movies, and games directly to your device. To access the Google Play Store, tap  > **Play Store** (.

Note: You need to log in to your Google account when configuring the phone for the first time.


Installing Application

1. Browse through the categories or enter the name on the search text box to find your desired application.
2. Tap an application.
3. Tap **INSTALL** (for free applications) or the **price** (for paid application).
4. Follow the on-screen instructions to complete the installation.

Opening Installed Application

1. Tap  > **My apps**.
2. Tap the desired application, then tap **OPEN**.

Note: You can also open the application by tapping  and then tap the icon of the newly installed application.

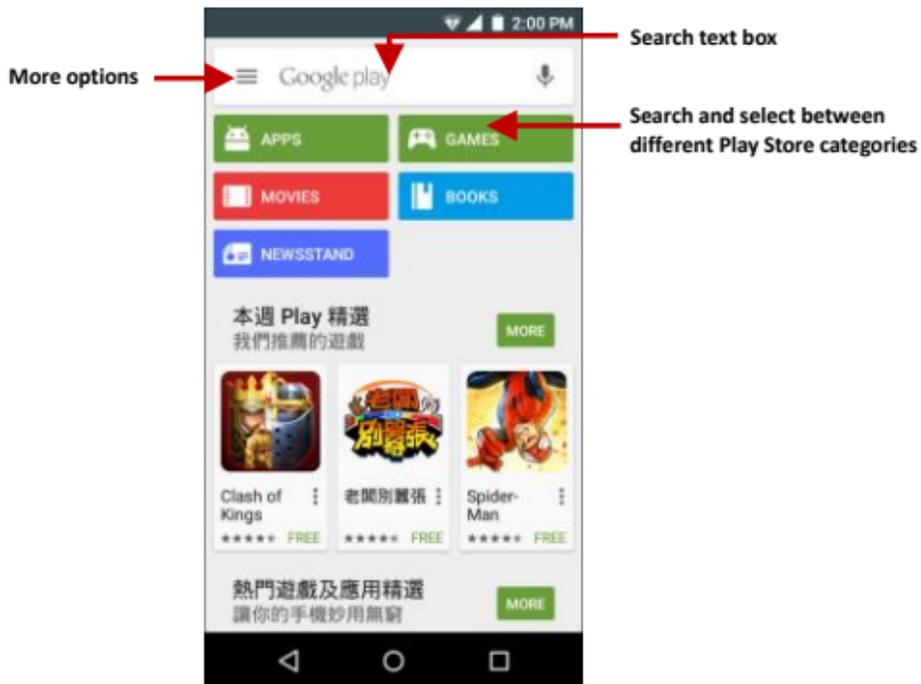

Camera



Prior to use: Insert SD card before using the camera or video camera. All photos or videos taken by the phone are typically stored in the memory card for large storage capacity of images and videos.

From the home screen, tap **Camera** ()

Taking Pictures and Recording Videos

Take Pictures

1. Aim the subject that the picture will be taken.
2. Tap  to capture the picture.
 - After taking the picture, the file will be saved in the cameras gallery folder.

Record Videos

1. Tap  and select  to switch to Video mode.
2. Tap  to start recording.
 - While recording, tap  to pause the recording. To resume, tap .
3. Tap  to stop recording.


Take Panorama Shots

1. Tap  and select  to switch to Panorama mode.
2. Tap  to take the shot.
3. Move the device in one direction. The device automatically starts shooting when it detects the panorama direction.
4. Move the device slowly and follow the shooting direction as shown on the screen.
5. When the shooting guide reaches the end of the shooting point, the shooting ends. To manually stop shooting, tap .

Camera Settings

To adjust the various settings for the camera, do the following:


- Tap  to switch to the front camera. Then  tap to switch back to the rear camera.
- Tap  to enable the face detection function. When the function is enabled, the beautification function will also be turned on and the  icon becomes blue (.
- Tap  to adjust the camera settings including shutter sound, flash mode, and other options.

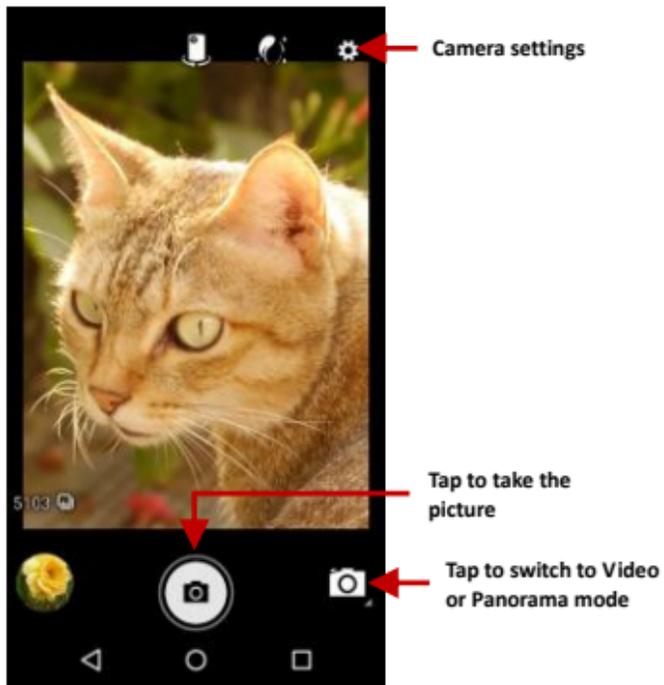

Gallery



From the home screen, tap  > Gallery ()

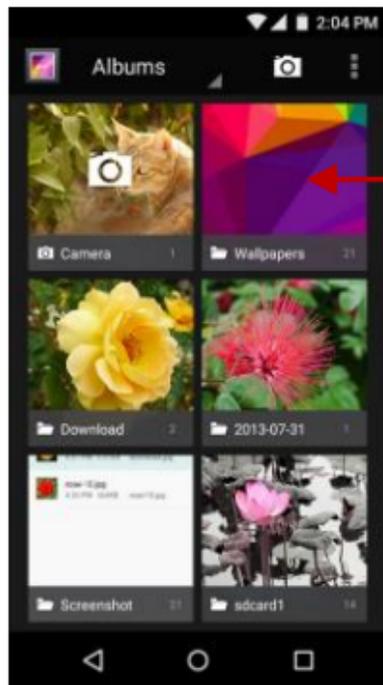

Pictures and videos are stored in separate albums



Share or access the Settings menu

Edit button

Viewing Pictures and Videos

- Tap an image to view the picture or video in full screen. To play a video clip, tap .
- To view other pictures or videos, slide your finger to the left or right.
- To zoom in on the image, move your two fingers apart from each other at the location of the screen where you want to zoom in.

Editing Image

To edit the image, tap . Then select the desired edit option. When finished editing, tap **SAVE**.

Sharing Pictures and Videos

To share the file, tap  and select one of the sharing applications.

More Options

To delete the photo, play slideshow, edit an image, and access more options, tap .

Play Music

From the home screen, tap  > **Play Music** (.

Playing Song


1. Tap  > **My Library** to open the music library.
2. Select a category.
3. Tap a folder on the selected category and then tap a song. The song begins playing.

Adding Song to Playlist

1. Select the song. Then tap  next to the song you want to add to a playlist.
2. Tap **Add to playlist**.
3. Tap **NEW PLAYLIST**.
4. Enter a name and tap **CREATE PLAYLIST**. The playlist is created.

Removing Song from Playlist

1. Tap  > **My Library** and select **PLAYLISTS** tab.
2. Tap the playlist that you want to access.
3. Tap  next to the song you want to delete.
4. Tap **Remove from playlist**.

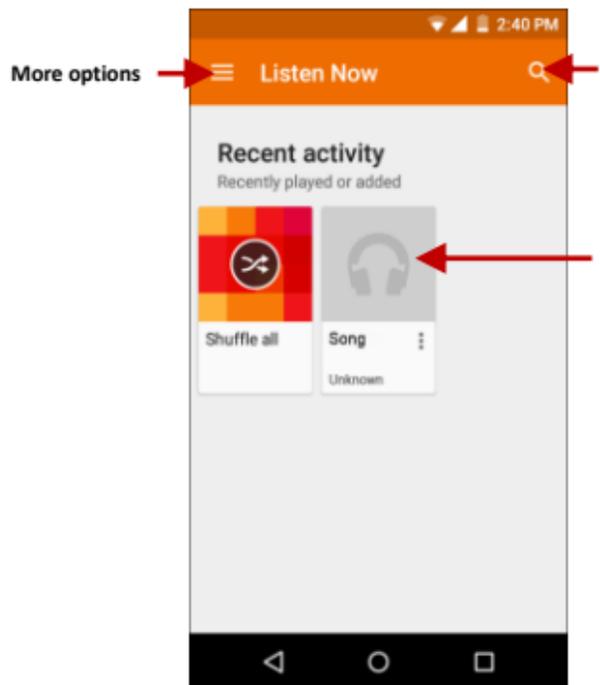


Tap to search a song, album, or artist.

More options

Available music album

Available songs

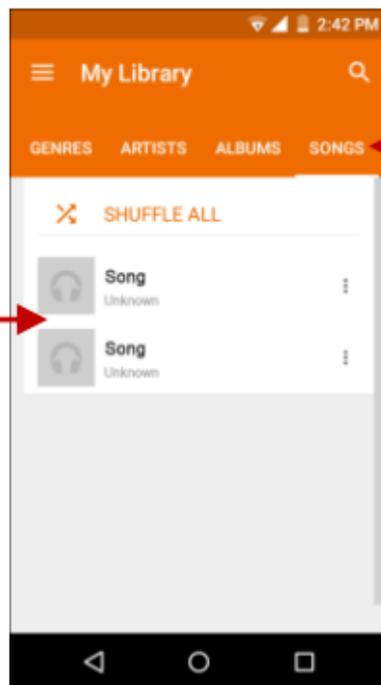

Category list

Sound Recorder




You may send any recorded audio via Bluetooth or MMS and also have the option to make any recorded audio the phone's default ring tone.

From the home screen, tap  > **Sound Recorder** ()

Recording Audio File

1. Tap  to record the audio.
 - To pause the recording, tap . Tap  to resume.
2. Tap  to stop recording.
3. Tap **Done** > **OK** to save the file.
 - To play the audio file before saving it, tap .

Note: Keep the phone's microphone near the sound source.

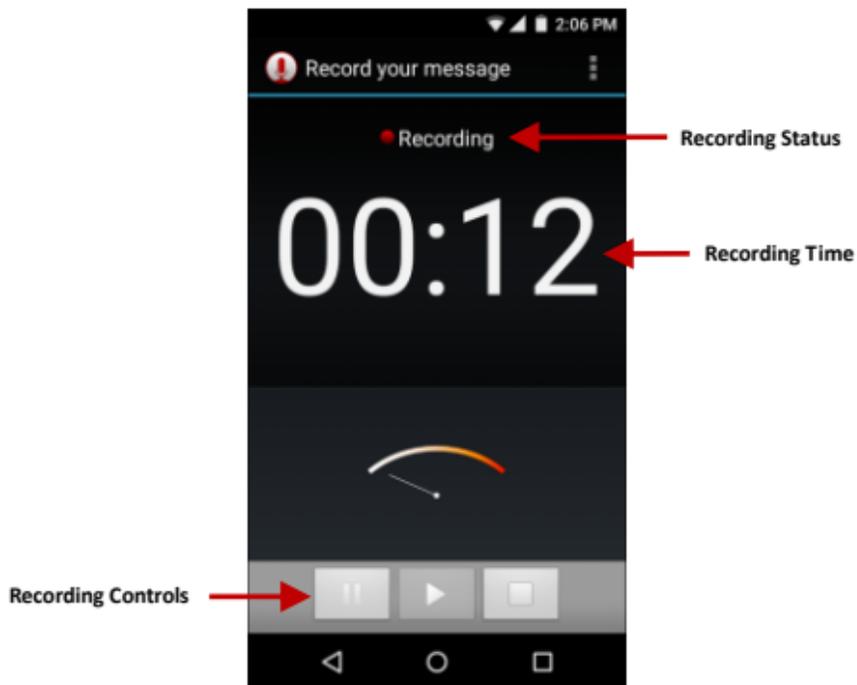

Note: You can specify to save all recordings into the memory card. Please ensure the microSD card is installed and specify the storage location to the memory card (tap  > **Storage location** > **SD card**) prior to recording.

Calendar



The calendar helps keep track of your life's most important moments in one application.

From the home screen, tap  > **Calendar** (.


Creating Event

1. Tap  to create an event.
2. Enter the new event details, including event tile, location, start date/time, and other options.
3. Tap **DONE** to save the settings.

Switching Calendar View

1. Tap .
2. Select the desired calendar view (**Day**, **Week**, **Month**, **Agenda**, or **Year**).
3. To switch view, do the following:
 - In **Day** or **Week** view, swipe left/right to go to the next or previous day/week.
 - In **Month** or **Agenda** view, scroll up/down to go to the next or previous month/agenda.
 - In **Year** view, scroll up/down to go to the next or previous year. To go to the next or previous month, simply scroll up/down.


Switch view mode

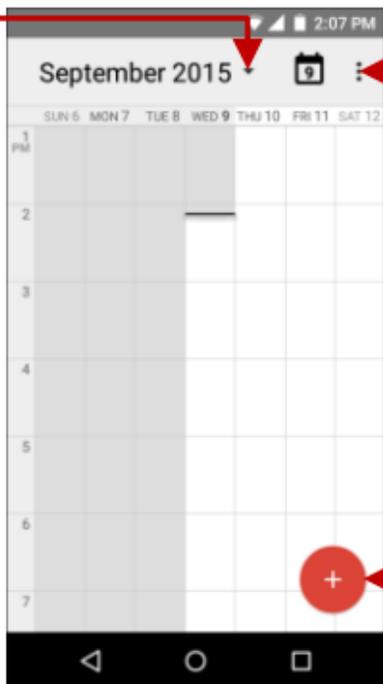

Tap to refresh or access more options.

Enter the new event details

Tap to create a new event

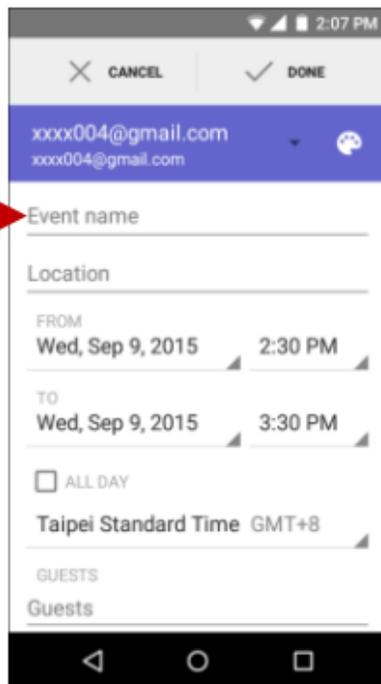

Clock

With Clock, you can use your device to set alarms, view your favorite cities local time, add timers, and run a stopwatch.

From the home screen, tap  > **Clock** (.

Viewing Current Time of Other Cities

1. Tap the  tab.
2. Tap  and select the desired cities.
3. When finished selecting, tap  to view the current time of the selected cities resume.

Creating New Alarm

1. Tap the  tab.
2. Tap  to add a new alarm.
3. Set the time and then tap **OK**. By default, the alarm is automatically set to **On**.
4. To configure the new alarm settings, do the following:
 - To enable the repeat mode, check the **Repeat** check box. Then select the desired day(s).
 - To set the alarm sound, tap . Then select the desired alarm sound and tap **OK**.
 - To enable the device vibrates when the alarm goes off, check the **Vibrate** checkbox.


- To add a label for the alarm, tap **Label**. Enter the name and tap **OK**.

Using Timer Function

1. Tap the  tab.
2. Set the length of the timer.
3. Tap  to begin the timer.
4. Tap  to pause the timer. To resume, tap .

Using Stopwatch Function


1. Tap the  tab.
2. Tap  to start the stopwatch.
 - To record a lap while the watch is running, tap . Tap  again to record another new lap.
3. Tap  to pause the stopwatch. To resume, tap .
4. Tap  to reset the stopwatch.

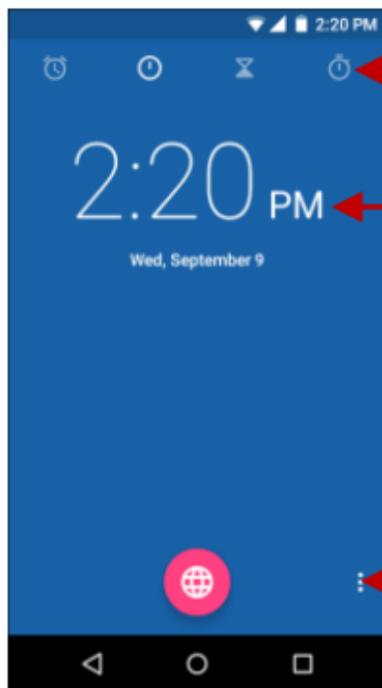

Function (Alarm /
Time / Timer /
Stopwatch)

Current time

Tap to switch to
night mode or
access Settings
page

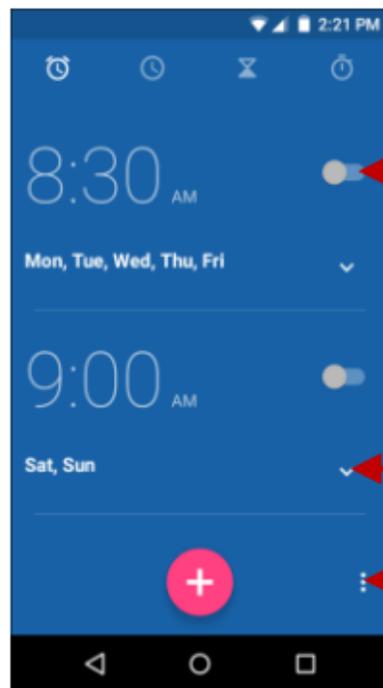

Slide the switch to
the right to turn
the alarm on

Tap to edit the
alarm settings or
delete the alarm.

Tap to access
Settings page

Settings

From the home screen, tap  > **Settings** ().

Wireless & Networks



Wi-Fi

Manage Wi-Fi connections.

- When this function is enabled, the device will automatically search for available networks. Any unsecured network can be used directly and any secured network requires a password or credentials prior to connection.



Bluetooth

Manage Bluetooth connections.

- When this function is enabled, the device will automatically scan for any nearby discoverable Bluetooth-enabled devices. Tap the device you want to connect to.



Data Usage

View and configure data usage used by the applications.

- To view both mobile and Wi-Fi data usage, tap  > **Show Wi-Fi**.



More

Configure other wireless and network options.

- The available options: Airplane mode, Default SMS app, Tethering & portable hotspot, VPN, Cellular networks, Mobile plan, and Emergency broadcasts.

Note: When in Airplane mode, all network connections will be turned off automatically.

Device



Display

Configure the display settings.

- The available options: Brightness level, Adaptive brightness, Wallpaper, Sleep, Daydream, Ambient display, Font size, and When device is rotated.



Sound & notification

Configure the sound and notification settings.

- The available options: Media volume, Alarm volume, Ring volume, Also vibrate for calls, Interruptions, Phone ringtone, Default notification ringtone, Other sounds, When device is locked, App notifications, and Notification access.



Storage

View and manage the phone memory or installed memory card.

- Specify the preferred installed location for the new applications.
- View the phone memory and the memory card usage.
- Unmount the memory card for safe removal.
- Erases all data stored on the memory card.



Battery

View the battery usage.

- To enable the battery saver function, tap  > **Battery saver** > **On**.

Note: The battery saver function will turn off automatically when your device is charging.



Apps

Manage applications.

- Check installed and running applications.
- Tap **FORCE STOP** to stop the running application.
- Tap **UNINSTALL** to uninstall the application.
- TAP **MOVE TO SD CARD** to move the related data of the installed application to the memory card.



Users

Manage user profiles.

- Tap **Add user** to add a new user. A confirmation message appears, tap **OK** to confirm.

Personal



Location

Specify the method to determine the current location.

- Set the Location setting to **On** to enable this function.
- When the function is enabled, on **Mode** options, select the desired location mode settings. The available options: High accuracy, Battery saving, Device only, or Accelerated location.



Security

Configure the security settings, including the screen security, SIM lock setting, app security password, device administration, credential storage, and other advanced settings.

- Tap **Screen lock** to set the lock screen. Available options: None, Swipe, Pattern, PIN, or Password.
Note: If you select **Pattern**, **PIN**, or **Password**, follow the on-screen instructions to complete the setup.
- Tap **Owner info** to show the owner information on the lock screen.
- Tap **Set up SIM/RUIM card lock** to lock the SIM card or change the SIM PIN code.



Accounts

Manage your Google or other accounts.

- Tap **Add account** to add a new account. Follow the on-screen instructions to complete the account setup.



Language & input

Configure the language and input settings, including language, spell check function, personal dictionary, keyboard and input methods, speech, and pointer speed settings.

- Tap **Language** to set the on-screen display language for your device.
- Tap **Spell checker** and set the setting to **On** to enable this function. Then select the desired spell checker type options.
- Tap **Personal dictionary** to add or edit words to the dictionary.
- Tap **Current Keyboard** to set the default input method.



Backup & reset

Back up your device data to Google servers or reset all parameters to the factory default settings.

- Tap **Back up my data** and set the setting to **On** to enable back up app data, Wi-Fi passwords, and other settings to Google servers.
- Tap **Backup account** to set the Google account used to back up data.
- Tap **Automatic restore** and set the setting to **On** to enable the system to restore the backed

up setting and data when reinstalling an application.

- Tap **Factory data reset** to reset all parameters to the factory default settings.

System



Date & time

Adjust the current date and time settings.

- Tap **Automatic date & time** and set the setting to **On** to use the network provided date and time.

Note: To manually set the date and time, set the **Automatic date & time** setting to **Off**. Then tap **Set date** or **Set time** and adjust the necessary settings.

- Tap **Automatic time zone** and set the setting to **On** to use the network provided time zone. .

Note: To manually set the time zone, set the **Automatic time zone** setting to **Off**. Then tap **Select time zone** and select the time zone of your current location.

- Tap **Use 24-hour format** and set the setting to **On** to set the clock to 24-hour format.
- Tap **Choose date format** to select your desired date format.



Scheduled power on and off

Set the schedule to let the device to automatically turn on or off.

- On the **Scheduled power on** or **Scheduled power off** option, tap the time to adjust the time. Then set the setting to **On** to activate this function.
- Tap  to view the repeat mode setting. Check the **Repeat** check box to enable the repeat mode and select the desired day(s). Tap  to reset the repeat mode to **EVERY DAY**.



Accessibility

Configure the accessibility settings, including the services, system, and display settings.

- Tap **TalkBack** and set the setting to **On** to activate this function. When this function is activated, your device provides spoken feedback to help blind and low-vision users.
- Tap **Captions** and set the setting to **On** to enable the system to display subtitles where available. You can also change the language, text size, and caption style settings.
- Tap **Large text** and set the setting to **On** to enable the system to use a larger font size.
- Tap **Power button ends call** and set the setting to **On** to enable the system to end a call by pressing the **Power** button.
- Tap **Speak passwords** and set the setting to **On** to enable the system to read aloud passwords as you type.



Printing

Manage the print services.

- Tap the desired print service from the list. Then set the setting to **On** to enable the service. To

add a new printer, tap  > **Add printer**.





About device

Check for firmware updates. You can also view the device and legal information.

Storage

Connect your phone to a computer using a USB cable. Once connected, a connection interface will appear. Tap the USB notification bar (🔌) to access the **USB computer connection** menu. Then select the desired setting.

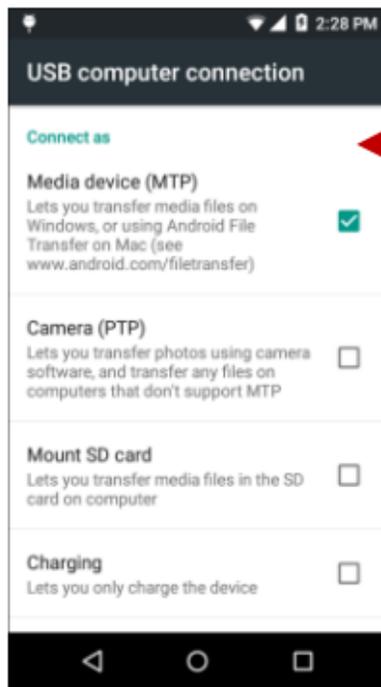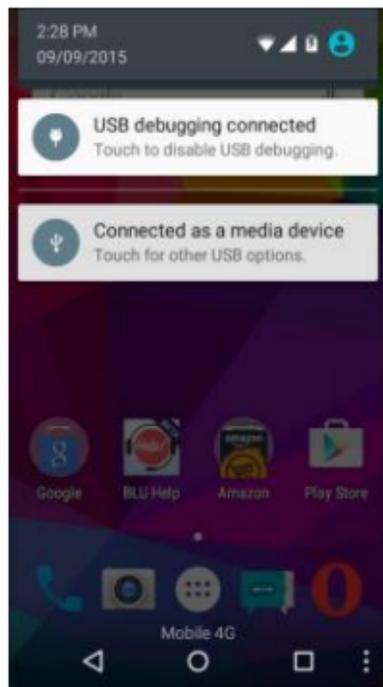

USB connection options:

- **Media device (MTP):** Transfer media files
- **Camera (PTP):** Transfer photos using camera software
- **Mount SD card:** Transfer media file in the memory card
- **Charging:** Charge the device only

Troubleshooting

Below is a list of common problems that may occur when using your mobile phone. Try these easy troubleshooting steps to resolve any type of issues you may encounter.

The phone does not power on

- Press and hold the **Power** button until the startup sequence appears on the display.
- Check the battery level and ensure there is sufficient charge.

The phone does not respond after several minutes

- Press and hold the **Power** button until the device powers off and reboots.

The phone powers off by itself

- Check if the screen lock of the phone is enabled.
- Check if the phone needs to be charged.

The battery won't charge

- Check if the battery is already fully charged.
- Double check if the charger connector is properly connected to the phone.

The standby time is too short

- Please keep in mind that standby time relates directly to phone usage (Internet, Text, Voice Calls, Maps, etc.). To reduce the battery usage, close the applications you do not use.
- Battery typically has to be replaced after a year of use.

The phone cannot connect to the network (Voice or Data)

- Verify if you have active service with your service provider.
- Contact your local network service provider and verify if you are within its network coverage area.

The phone displays a SIM Error

- Make sure the nano SIM card is properly inserted and in its intended slot.
- Make sure that the nano SIM card is not damaged or scratched.

The PIN code was entered incorrectly three times

- The nano SIM card will automatically be locked and you will need to enter the PUK code (PIN Unlock Code). Please contact your local service provider to obtain the PUK.

I cannot make calls

- Make sure that the number you dialed is correct and tap the dial key () to make the call.
- Use the full national area code when dialing out of your area or when abroad, use country-specific international access codes.

I cannot receive calls

- Make sure that your phone is connected to a network.

The caller ID does not display on incoming calls

- Contact your local network service provider and verify you have the caller ID feature enabled on your account or verify if the caller may have blocked his number from appearing.

The caller cannot leave a voicemail message

- Contact your local network service provider and verify if the voicemail service is active on your account or check if the network is busy.

The phone does not connect to the internet

- Ensure with your service provider that your account has the appropriate internet/data plan enabled.
- Ensure the internet APN settings are configured (Carrier dependent).

Text Messages cannot be sent / received

- Ensure the text messaging is enabled with your service provider.
- Ensure the APN settings are configured (Carrier dependent).

The information provided in this user manual is subject to change without notice and BLU Products reserves the right to modify the manual at any given time. BLU Products has made every effort to ensure that this user manual is accurate and disclaims responsibility and liability for any inaccuracies or omissions. Some software, user interface, and elements may vary depending on final version.

Federal Communications Commission (FCC) Statement

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause interference and 2) this device must accept any interference, including interference that may cause undesired operation of the device.

RF Exposure Information (SAR)

This equipment is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

SAR compliance for body-worn operation is based on a separation distance of 10mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10mm between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and uses such body-worn accessory, should be avoided.

This device's maximum SAR values as reported to the FCC are:

- Head : 0.922 W/kg@1g
- Body : 1.049 W/kg@1g

Hearing Aid Compatibility Information

This phone has been tested and rated for use with hearing aids for some of the wireless technologies it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Hearing Aid Compatibility Rating

This model handset was designed to comply with the requirements set forth in Section 20.19 of the Federal Communication Commission's (FCC) rules governing hearing aid compatibility (HAC), for the reduction of RF interference and magnetic coupling (T-coil) to hearing aids. The Microphone (M) rating and T-coil (T) rating is defined and labeled on the handset box. Devices meeting HAC compliance must have a minimum M3 and/or T3 rating or above as defined by the FCC in accordance with the latest ANSI Standard C63.19. The (M) rating refers to

lower RF emission levels of the handset. The (T) rating refers to the magnetic coupling between the handset and the T-coil compatible hearing aid. Some hearing aids are also provided an (M) rating, and are more immune than others to interference. To determine the (M) rating of your hearing aid, please contact your hearing health professional.

Industry Canada Statement

This device complies with RSS-247 of Industry Canada. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Avis d'industrie Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et, and
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

RF Radiation Exposure Statement

For body worn operation, this phone has been tested and meets RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.0 cm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

Déclaration de l'exposition aux radiations RF

Pour le fonctionnement du corps, ce téléphone a été testé et répond aux directives d'exposition RF lorsqu'il est utilisé avec un accessoire qui ne contient pas de métal et qui place le combiné d'un minimum de 1,0 cm du corps. Utilisation d'autres accessoires peut ne pas assurer le respect des directives d'exposition RF.