 





Your phone

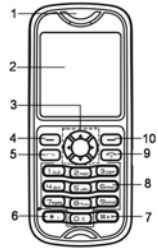








1. Earpiece
2. Screen
3. Navigation keys
4. Left soft key
5. Call/Answer key
6. * key
7. # key
8. Number keys
9. End/Power key
10. Right soft key
11. Charger jack




Keys and Functions

Press...	To...
	<ul style="list-style-type: none">• Make a call.• Answer a call.• Access Dialed calls in standby mode.
	<ul style="list-style-type: none">• Power the phone on or off (by pressing and holding the key for about 3s).• End or reject a call.• Return to the standby mode.
	<ul style="list-style-type: none">• Access Menu in standby mode.• Select a highlighted item.


User Guide

Press...	To...
	<ul style="list-style-type: none">• Access Contacts in standby mode.• Return to the previous menu.
	<ul style="list-style-type: none">• Access the Alarm clock () in standby mode.• Access Call Records () in standby mode.• Access the Calculator () in standby mode.• Increase the volume () or decrease the volume () during a call.


User Guide

Press...	To...
 	<ul style="list-style-type: none">• Enter numbers, letters, and symbols.• Enter + in standby mode (by pressing and holding the 0 key for about 3s).• Call the voicemail in standby mode (by pressing and holding the 1 key for about 3s).• Speed-dial phone numbers in standby mode (by pressing and holding the desired key 2–9 for about 3s).• Select a submenu item labeled with the corresponding number.
	<ul style="list-style-type: none">• Enter * (by pressing the key) or enter P (by pressing and holding the key) in standby mode.• Display the symbol list in any input mode.








User Guide

Press...	To...
	<ul style="list-style-type: none">• Enter #.• Lock the keypad in standby mode (by pressing and holding the key for about 3s).• Switch between input methods in text editing mode.



 






If the phone cannot be powered on after you press and hold , the battery may run out of power. In that case, charge the phone for about five minutes (during this period, the charging icon may not be displayed on the screen), and then power on the phone again.

Screen Icons

 
Icon	Indicates...
	Signal strength.
	New text messages.
	Roaming.
	Call forwarding enabled.
	Alarms enabled.
	Keypad locked.
	Battery power level.

User Guide

	Standard profile activated.
	Conference profile activated.
	Outdoor profile activated.
	Mute profile activated.
	Customize profile activated.
	Frequency modulation (FM) radio launched.
	Missed calls.

Installing the SIM Card

Before installing the Subscriber Identification Module (SIM) card, ensure that your phone is powered off. When inserting the SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.

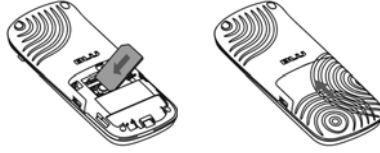

Removing the SIM Card

Before removing the SIM card, ensure that your phone is powered off.



If the phone does not work properly or if crashes occur, you can press and hold the battery reset button on the right side of the SIM card slot until the phone is powered on again.

Charging the Battery


To charge the battery, do the following:








1. Connect the charger to an alternating current (AC) power socket.
2. Connect the charger to the charger jack on the phone.
3. Wait until the battery is completely charged.

When the battery is being charged, an animated charging icon is displayed on the screen. When the charging icon becomes static, the battery is fully charged.

4. Disconnect the charger from the phone.
5. Disconnect the charger from the AC power socket.


Working with the Function Menus


1. In standby menu, press  (Menu).



2. Press  to select the desired function menu.
3. Press  (**Select**) to access the selected menu.
4. Select a submenu in either of the following ways:
Press /  to scroll to the desired submenu.
Press the number keys corresponding to the serial number of the submenu.
5. Press  (**Select**) to display the submenu.
6. Press  (**Back**) to return to the previous menu or exit the function menu.
To return directly to the standby mode, press .

Making a Call

1. In standby mode, enter the phone number.

To make an international call, press and hold  to enter the plus sign (+), and then enter the country code or region code, area code, and phone number in sequence.

To dial an extension number, enter the phone number, press and hold  to enter P, and then enter the extension number.

2. Press  to dial the number.
3. Press  to end the call.



1. You can also make a call from call logs, contacts, and messages.

2. During a call, press to adjust the volume.

Answering a Call

When there is an incoming call, you can do the following:

- Press to answer it.
- Press (**Options**), and then select **Accept** to answer it.
- Press (**Reject**) or to reject it.

If the **Any key answer** function is enabled, you can press any key except and to answer a call.

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (0000) into any numeric string of four to eight digits. If you forget the phone code, contact your service provider.




PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks a blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, consult your service provider.

If you enter an incorrect PIN a pre-defined number of consecutive times, the phone prompts you to enter the PUK. If you enter an incorrect PUK a


pre-defined number of consecutive times, the SIM card becomes permanently invalid. In that case, contact your service provider for a new SIM card.

Locking the Keypad


To lock the keypad, press and hold  in standby mode for about 3s. To unlock the keypad, press  and then  in succession.

If the **keypad lock** function is enabled and if the phone is in standby mode for a preset period, the phone locks the keypad automatically.





When the keypad is locked, you can press  to answer a call or make an emergency call.

Changing the Text Input Modes

The indicator of the current text input mode is displayed in the upper left corner of the screen. You can press  to change the text input mode.

Indicator	Text Input Mode
ABC, Abc and abc	Multi-tap input mode
Eng	Predictive input mode
123	Number input mode





You can press  (Delete) once to delete the last entered character. You can also press and hold  (Delete) for about 3s to delete all the entered characters at once.

Multi-tap Input Mode

To enter text in multi-tap input mode, press the key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.






 

- Press  consecutively to enter commonly used punctuations.
- Press  once to enter a space and twice to enter 0.

Predictive Input Mode

To enter text in predictive input mode, do the following:

1. Press each key once according to the spelling sequence of the desired word.




The phone displays candidate words.

2. Press  to scroll to the desired word.
You can press  to switch a selected letter between the upper case and the lower case.
3. Press  to enter the word.
- Press  to display commonly used punctuations.
 - Press  once to enter a space.

Entering a Digit

- In “123” input mode, directly press the number key labeled with the desired digit.
- In multi-tap input mode, press a number key consecutively until the desired digit appears on the screen.

Entering a Symbol

1. Press  to display the symbol list.
2. Press  to scroll to the desired symbol.
3. Press  to enter the symbol.

FM Radio





The headset cable functions as an antenna as well. To ensure good reception of radio programs, do not disconnect the headset from the phone or severely bend the headset cable.

To use the FM radio, do the following:

1. Connect a compatible headset to the phone.

2. Select **Menu > Applications > FM radio** to launch the FM radio.

3. On the **FM radio** screen, you can do as follows:

- Press  to change the channel
- Press and hold  for about 3s to make the phone automatically search for channels.
- Press the number key corresponding to the serial number of a channel to listen to the programs on the channel.
- Press  to adjust the volume.
- Press  (**Options**) to view or set the channel list, search for channels, set a frequency, change the Radio Data System (RDS), or turn off the FM radio.

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.

- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations.

User Guide

Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if

User Guide

using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may

cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being

charged, to prevent any danger caused by lightning.

- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable

level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of

the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.

User Guide

- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.

- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can

get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and

disconnect it from the charger.

- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not

rely solely on the device for essential communications.

FCC Regulations:

- This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

User Guide

interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

User Guide

- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

▶ RF Exposure Information (SAR)

- This mobile phone meets the government's requirements for exposure to radio waves.
- This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.
- The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency

User Guide

bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

- The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.884 W/kg and when worn on the body, as described in this user guide, is 0.712W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

User Guide

- While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.
- The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: YHLBLUULTRA.
- For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure

User Guide

guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.